



**EVOTECH**®  
P E R F O R M A N C E

**Installation Instructions**





## KAWASAKI Z800 2013 DUAL LOAD CRASH PROTECTION

**Product Reference - 11117**


### Kit Contents


- |   |                                    |
|---|------------------------------------|
| <b>A</b> 1 x R/H Bobbin Bracket           | <b>H</b> 1 x Central Crush Tube    |
| <b>B</b> 1 x R/H Bobbin Spacer (Shortest) | <b>I</b> 1 x M12 x 600mm Spindle   |
| <b>C</b> 1 x Horn Bracket                 | <b>J</b> 2 x Bobbin Heads          |
| <b>D</b> 1 x C'Sink M6 x 16 Screw         | <b>K</b> 2 x M12 Nyloc Nuts        |
| <b>E</b> 1 x L/H Bobbin Bracket           | <b>L</b> 2 x M12 Washers           |
| <b>F</b> 1 x L/H Bobbin Spacer (Longest)  | <b>M</b> 4 x M8 x 55 Cap Head Bolt |
| <b>G</b> 1 x Radiator Bracket             |                                    |

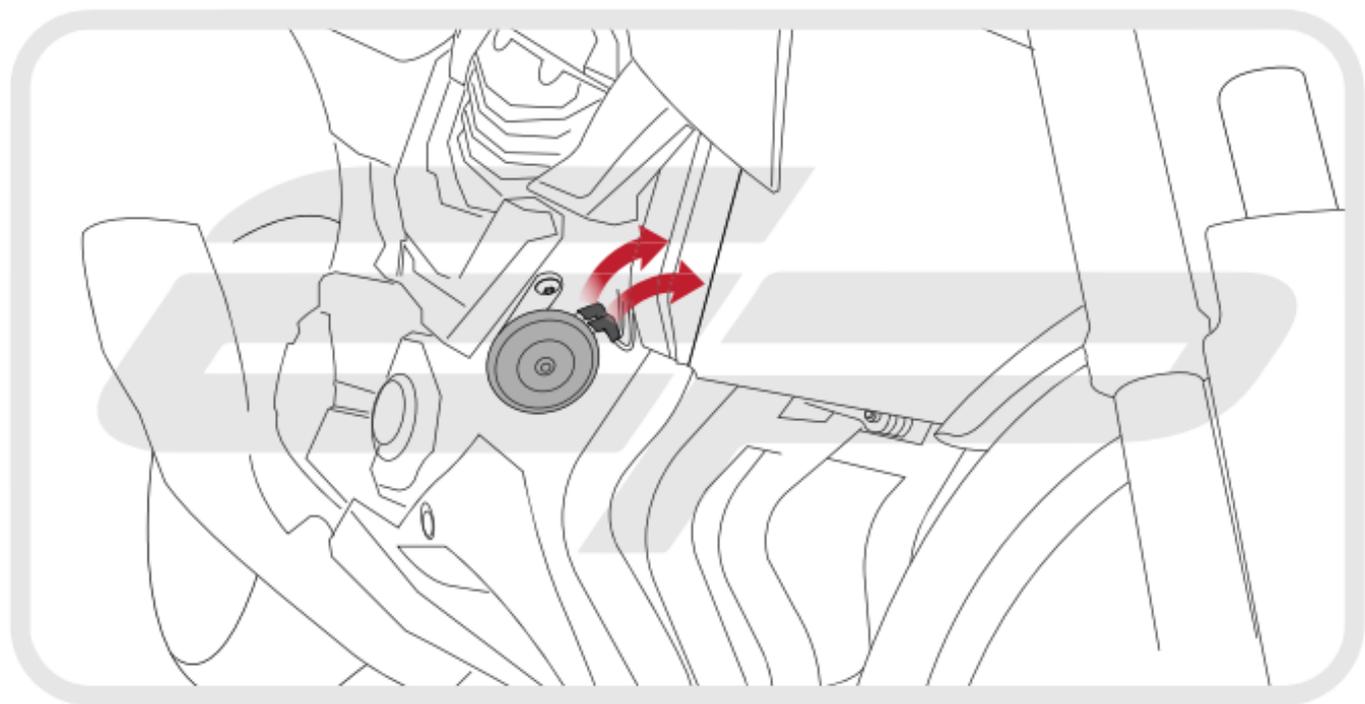

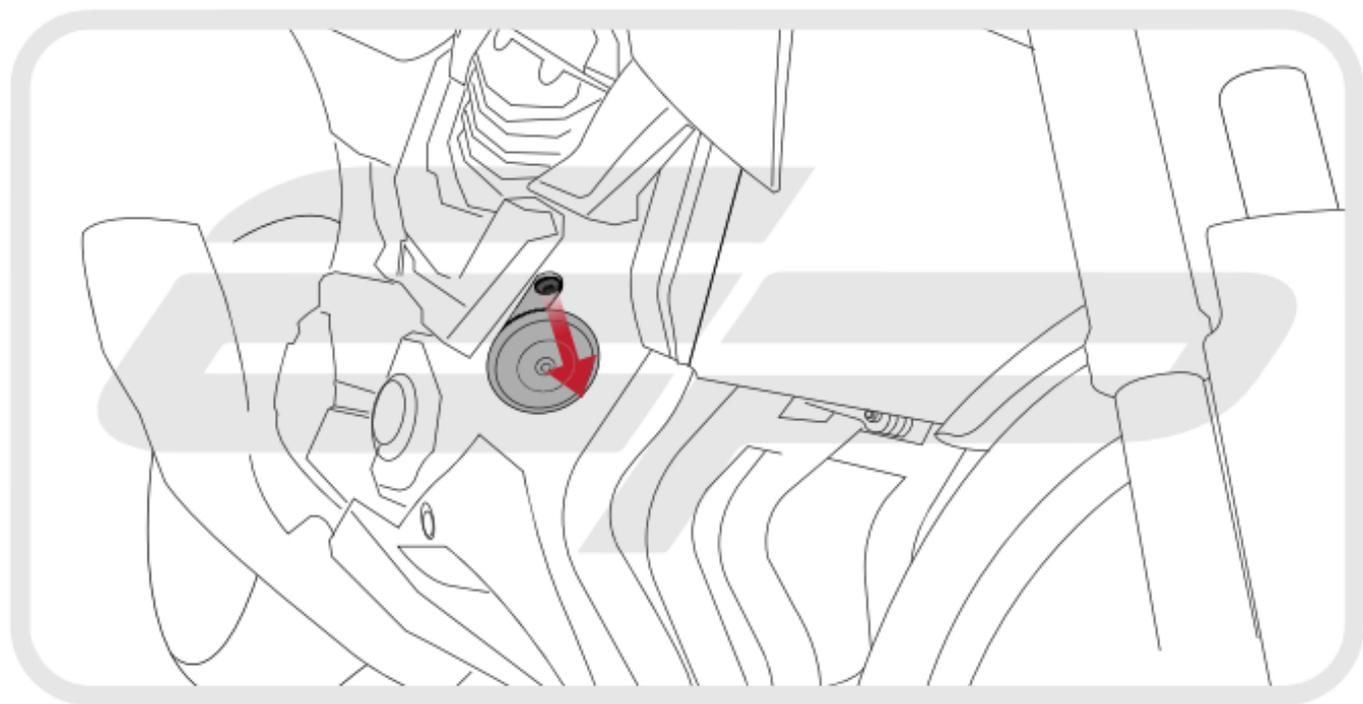


**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E

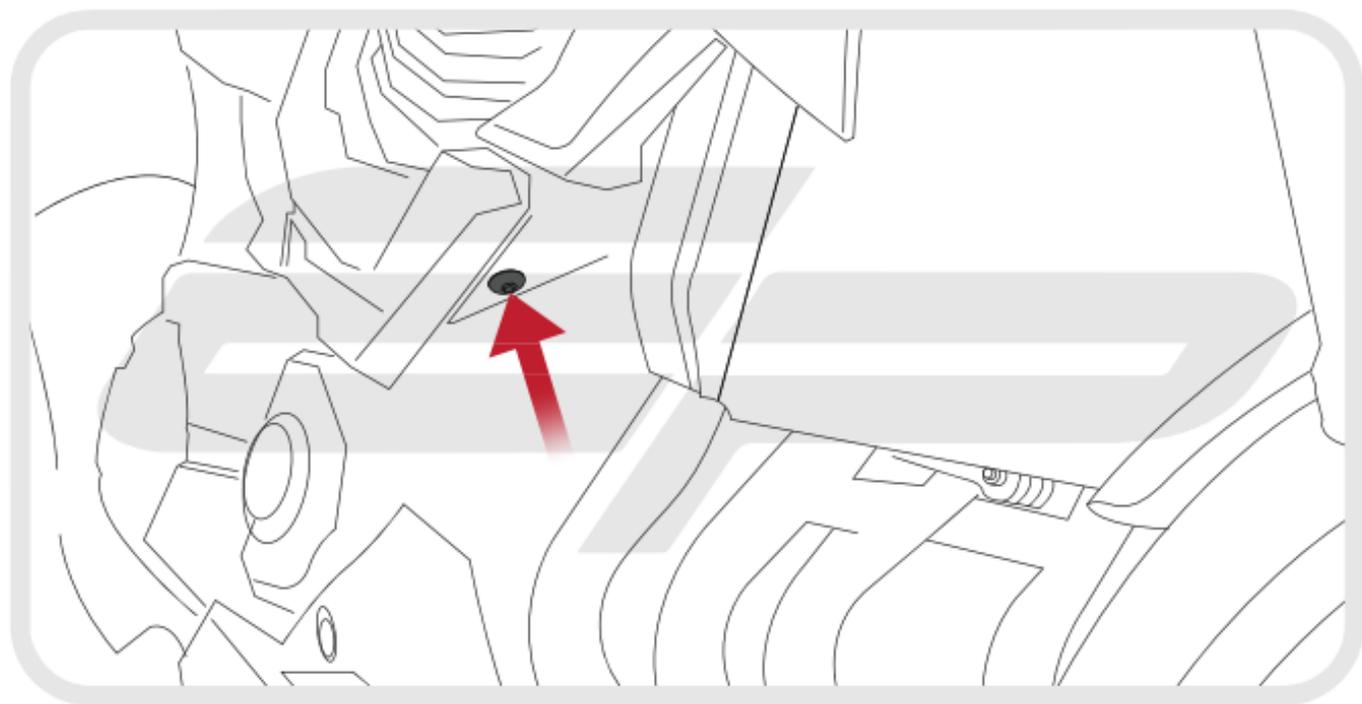


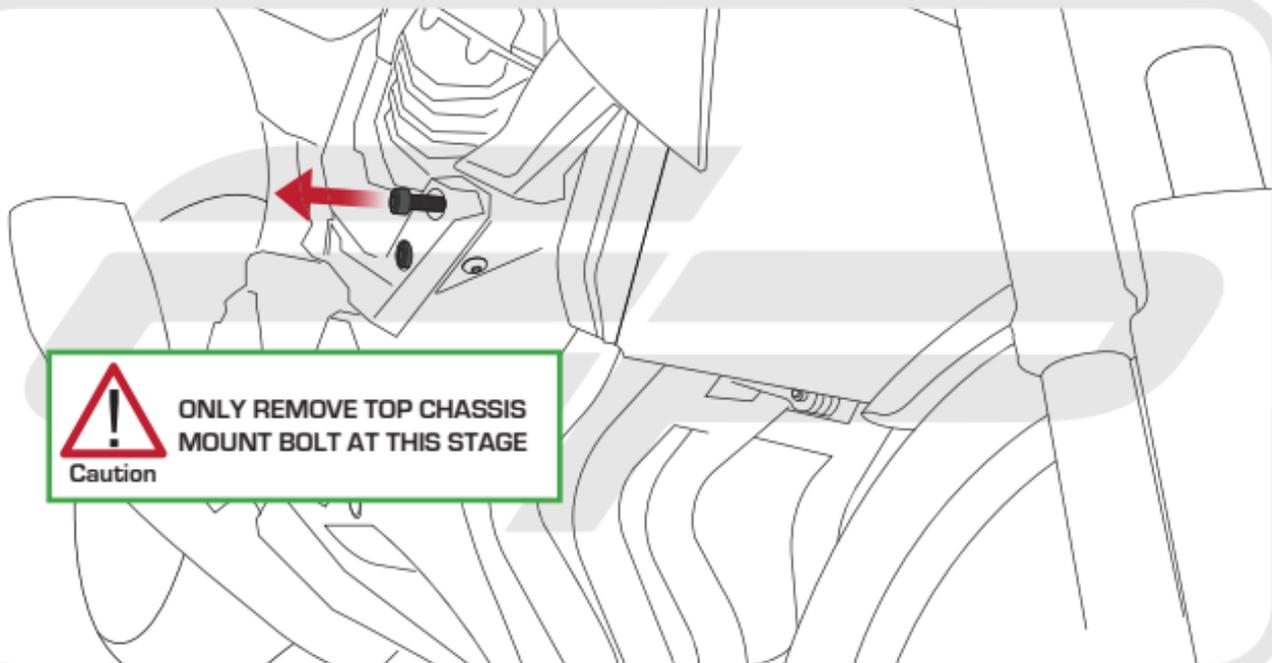


Caution

**ONLY REMOVE TOP CHASSIS  
MOUNT BOLT AT THIS STAGE**

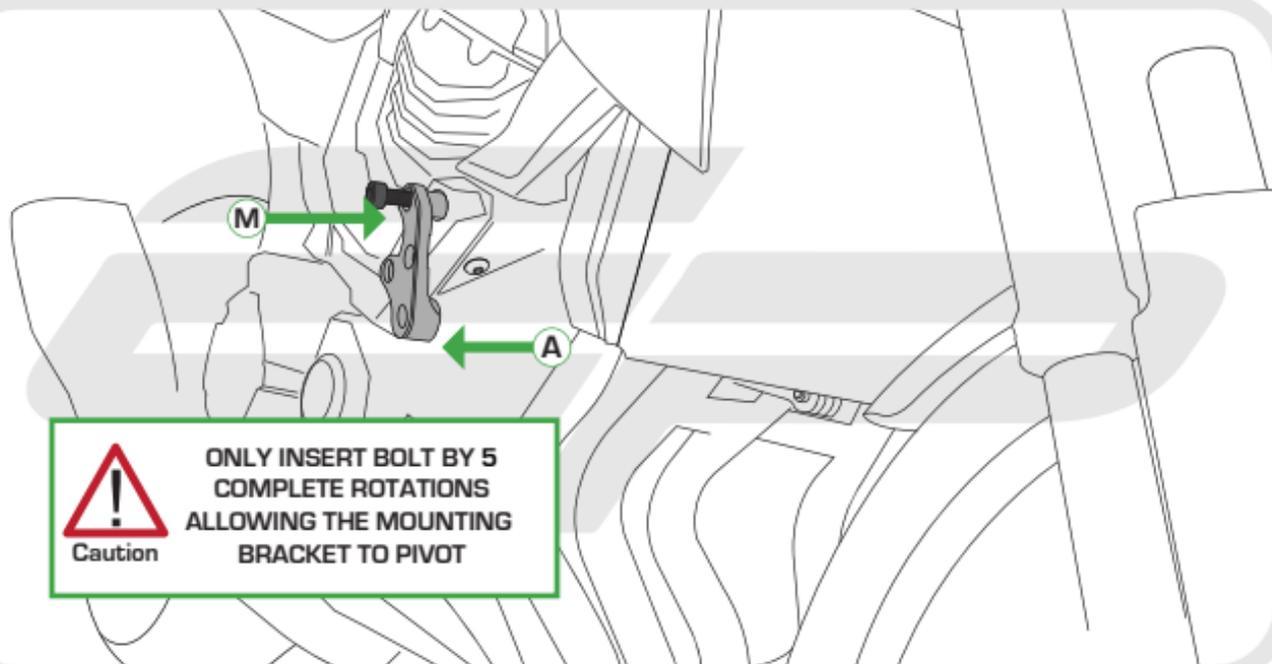

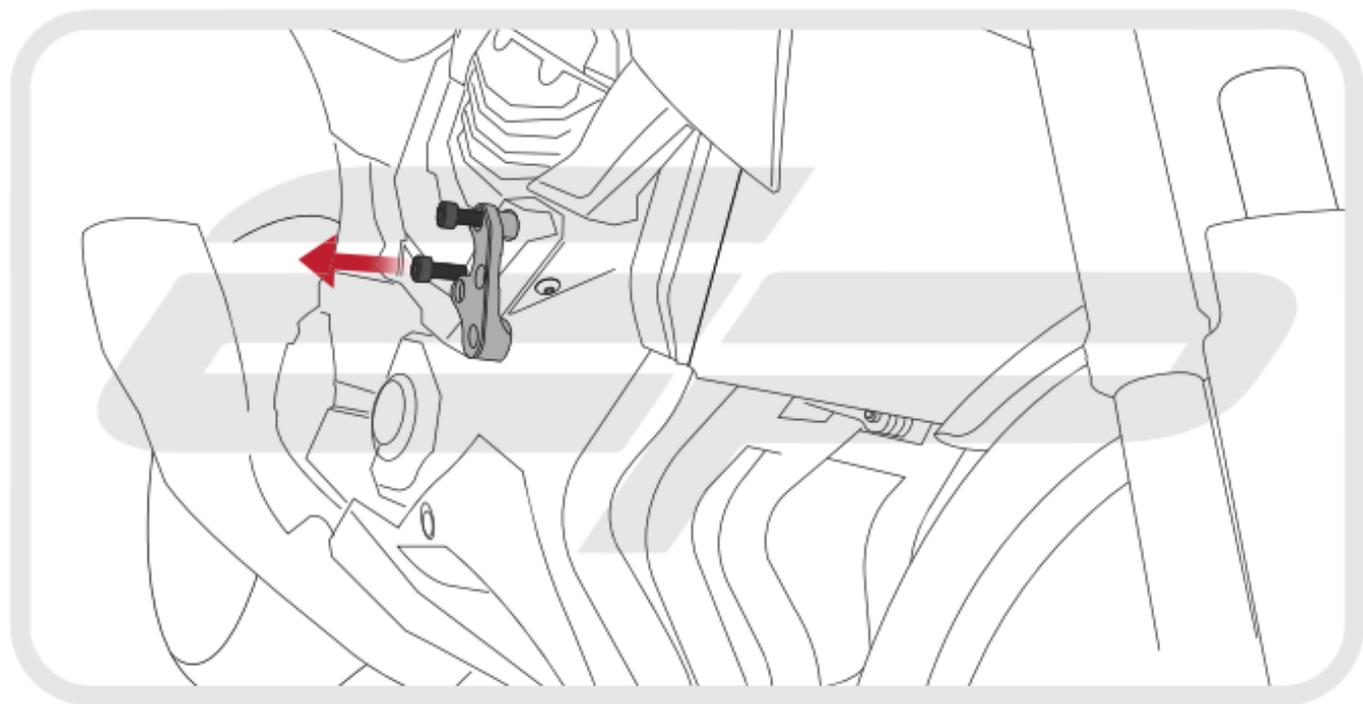

**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E

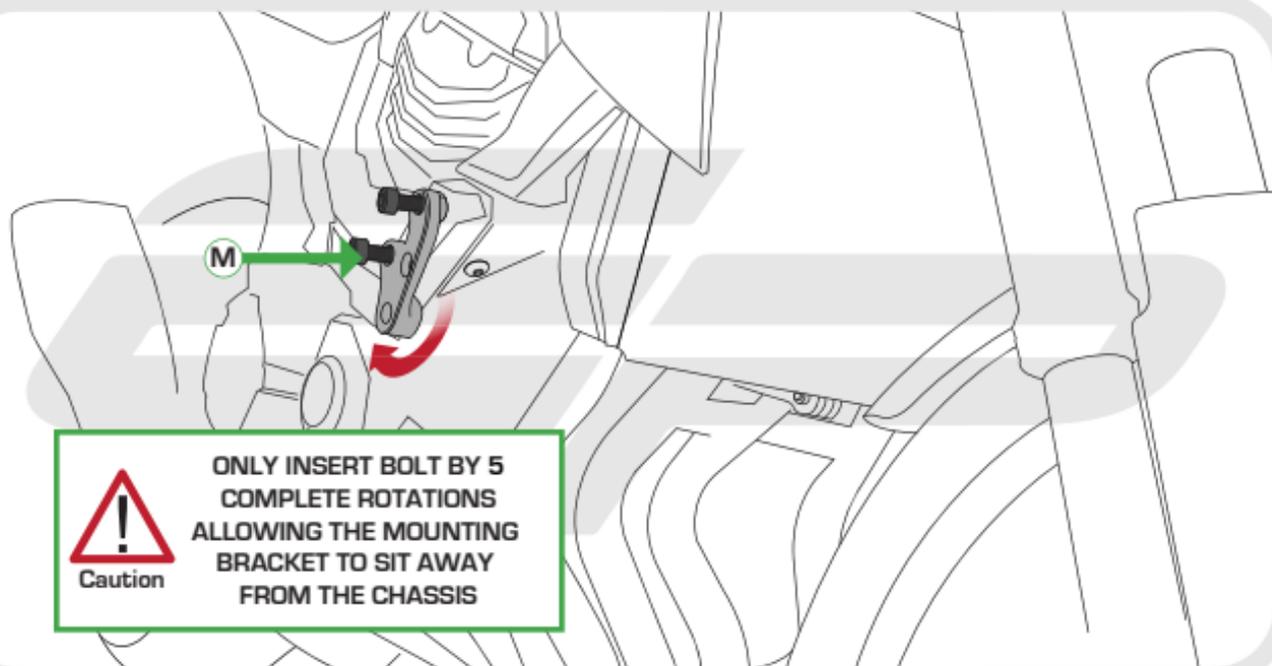

Caution

**ONLY INSERT BOLT BY 5  
COMPLETE ROTATIONS  
ALLOWING THE MOUNTING  
BRACKET TO SIT AWAY  
FROM THE CHASSIS**



Caution

**ONLY REMOVE TOP CHASSIS  
MOUNT BOLT AT THIS STAGE**






Caution

**ONLY INSERT BOLT BY 5  
COMPLETE ROTATIONS  
ALLOWING THE MOUNTING  
BRACKET TO PIVOT**

E


M

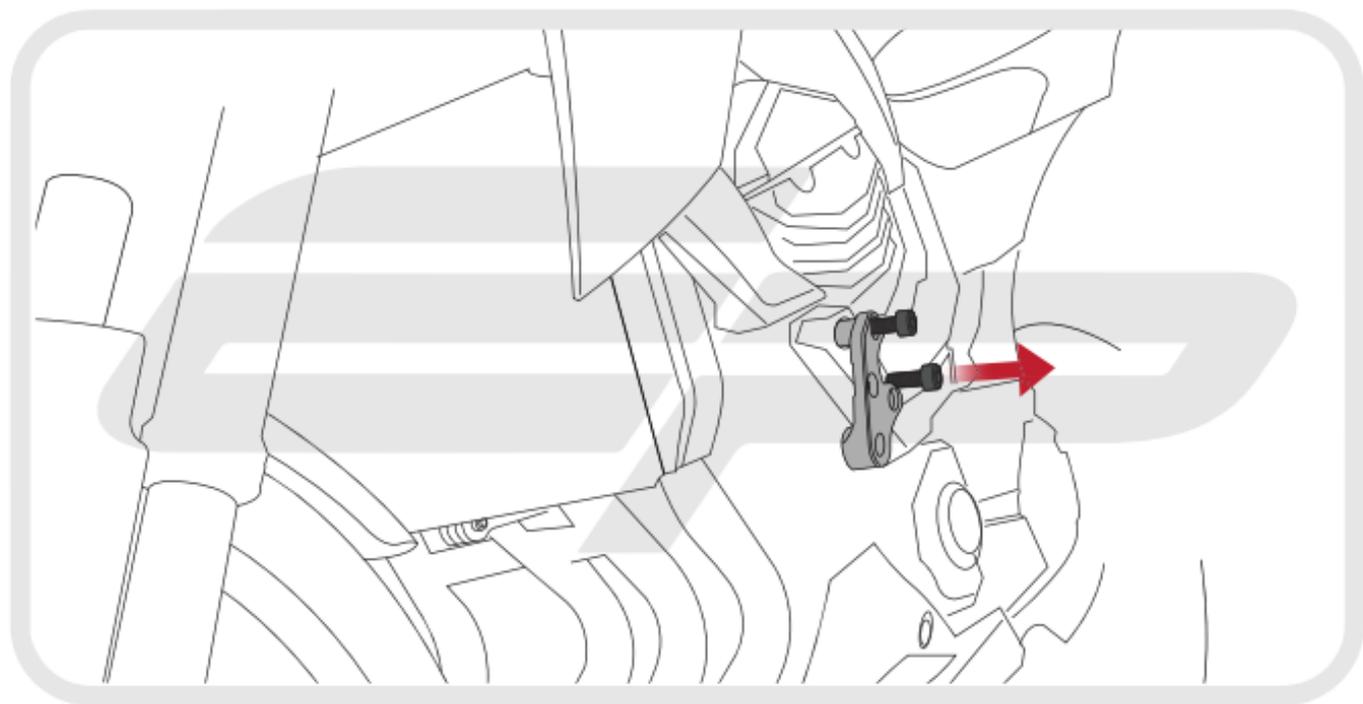





Caution

**ONLY INSERT BOLT BY 5  
COMPLETE ROTATIONS  
ALLOWING THE MOUNTING  
BRACKET TO SIT AWAY  
FROM THE CHASSIS**

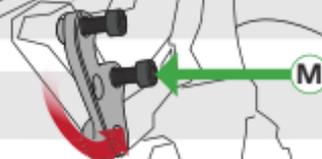

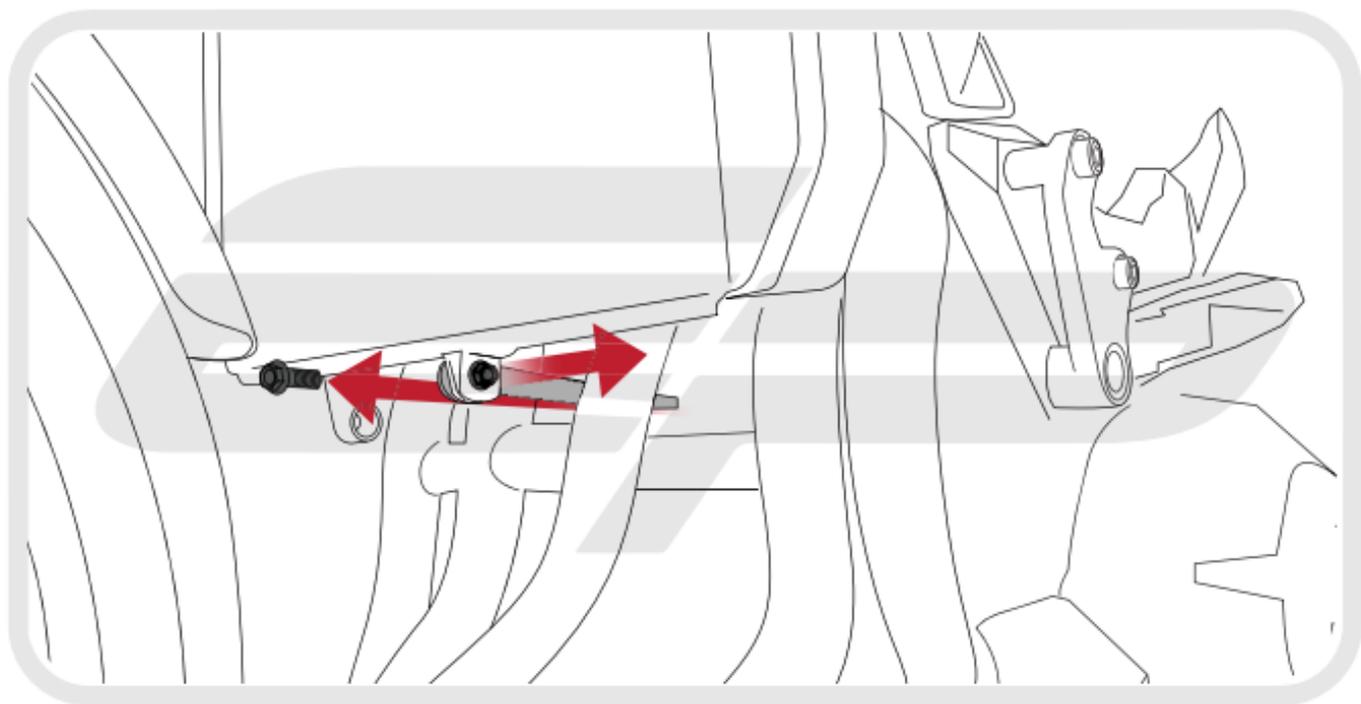


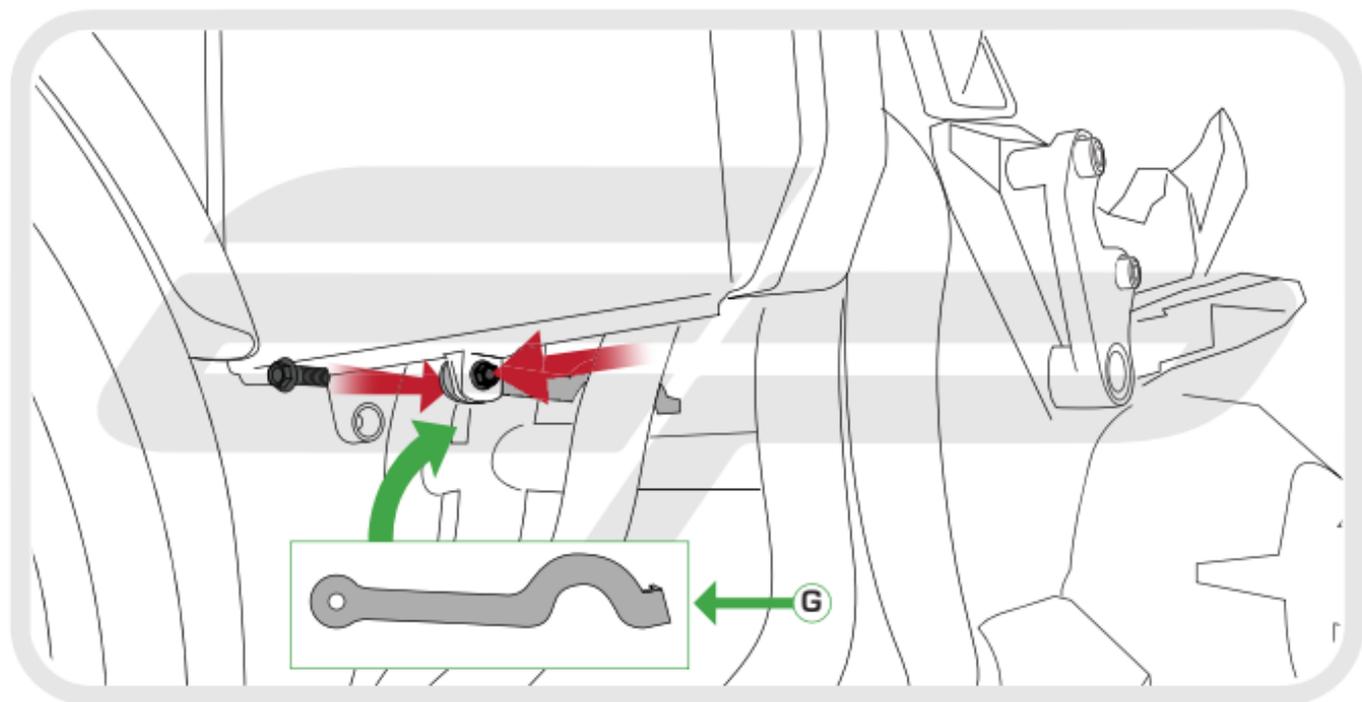






Caution

**TORQUE SETTINGS**  
**MANUFACTURERS**  
**RECOMMENDATIONS**

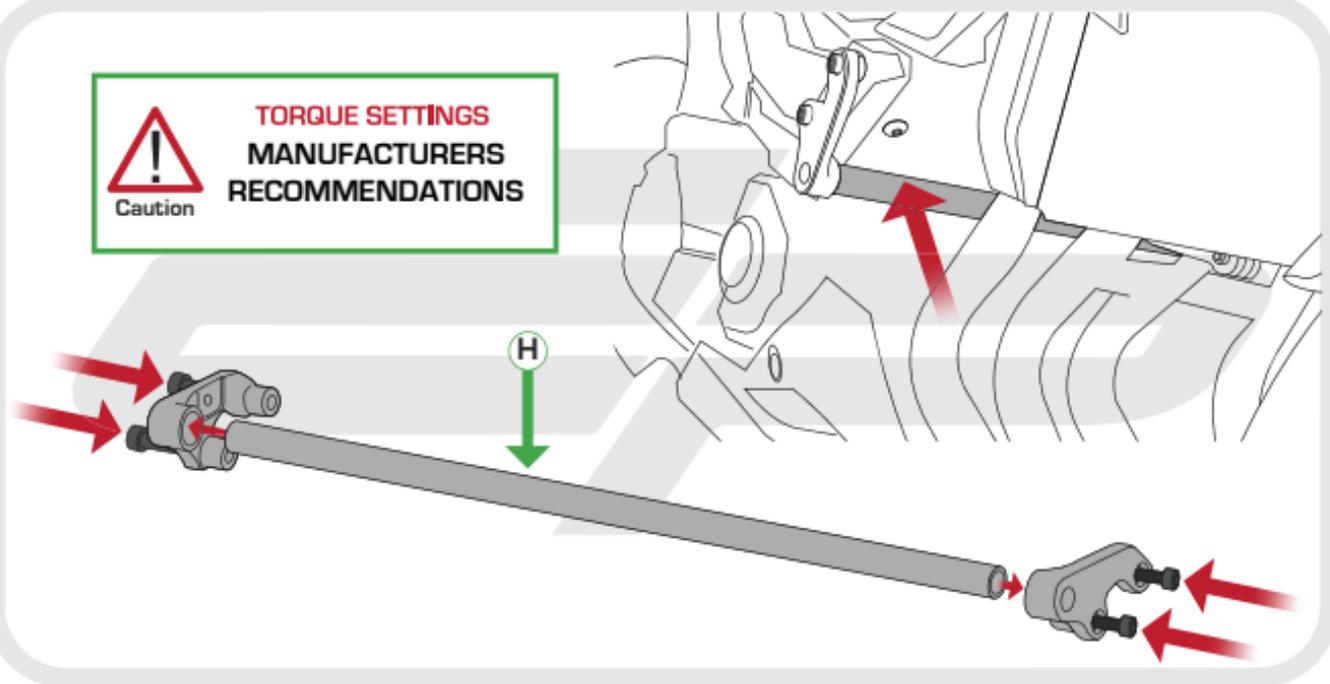


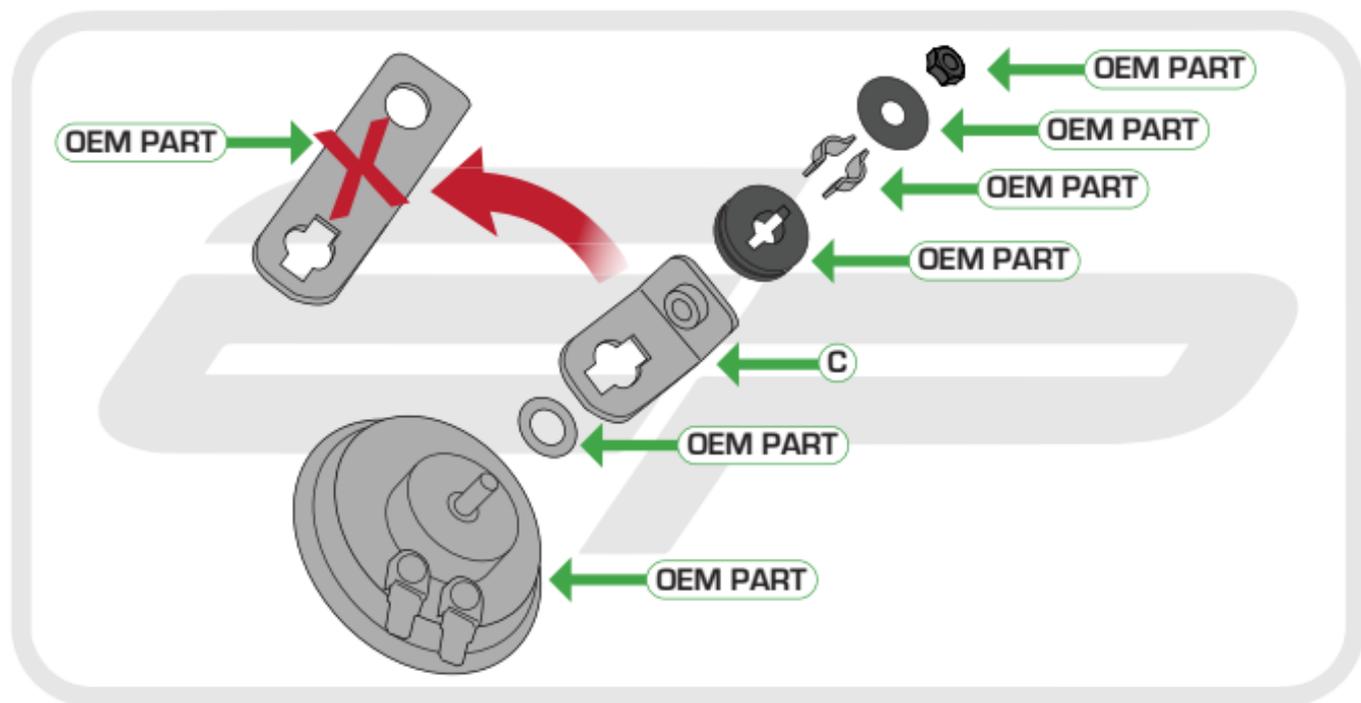

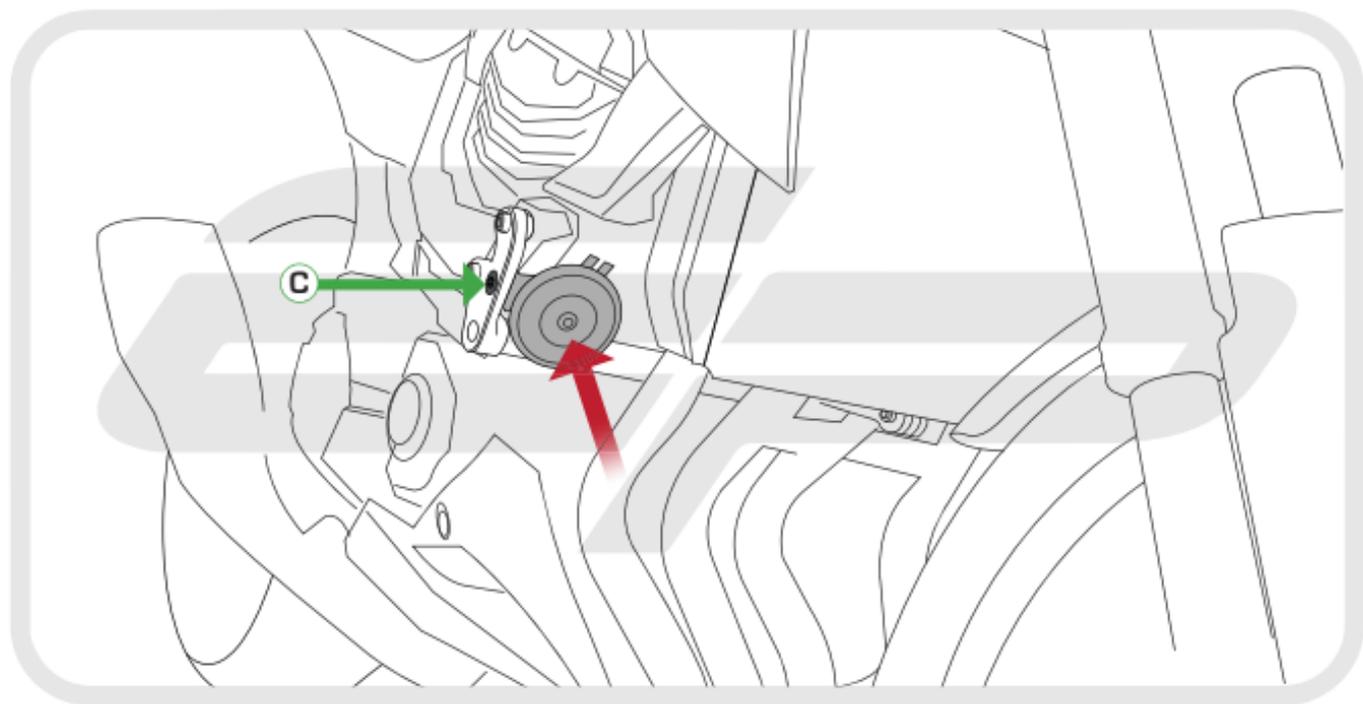

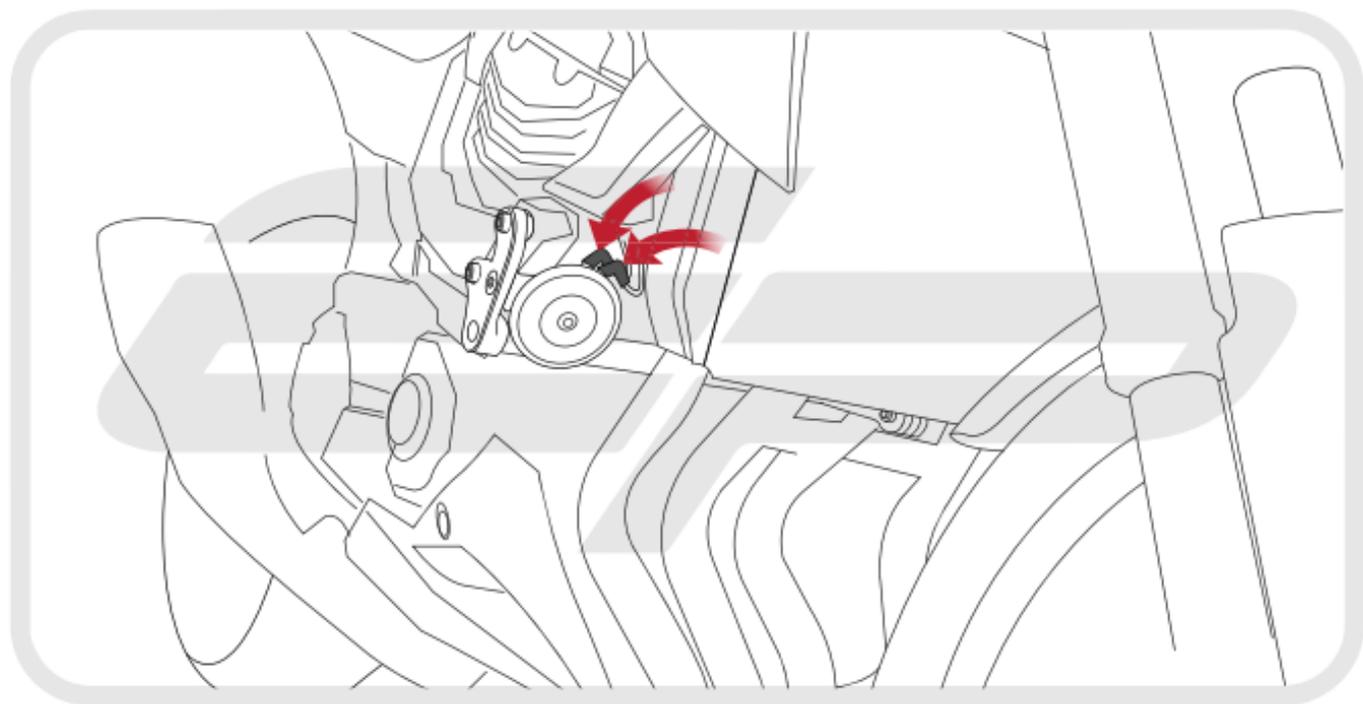

**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E

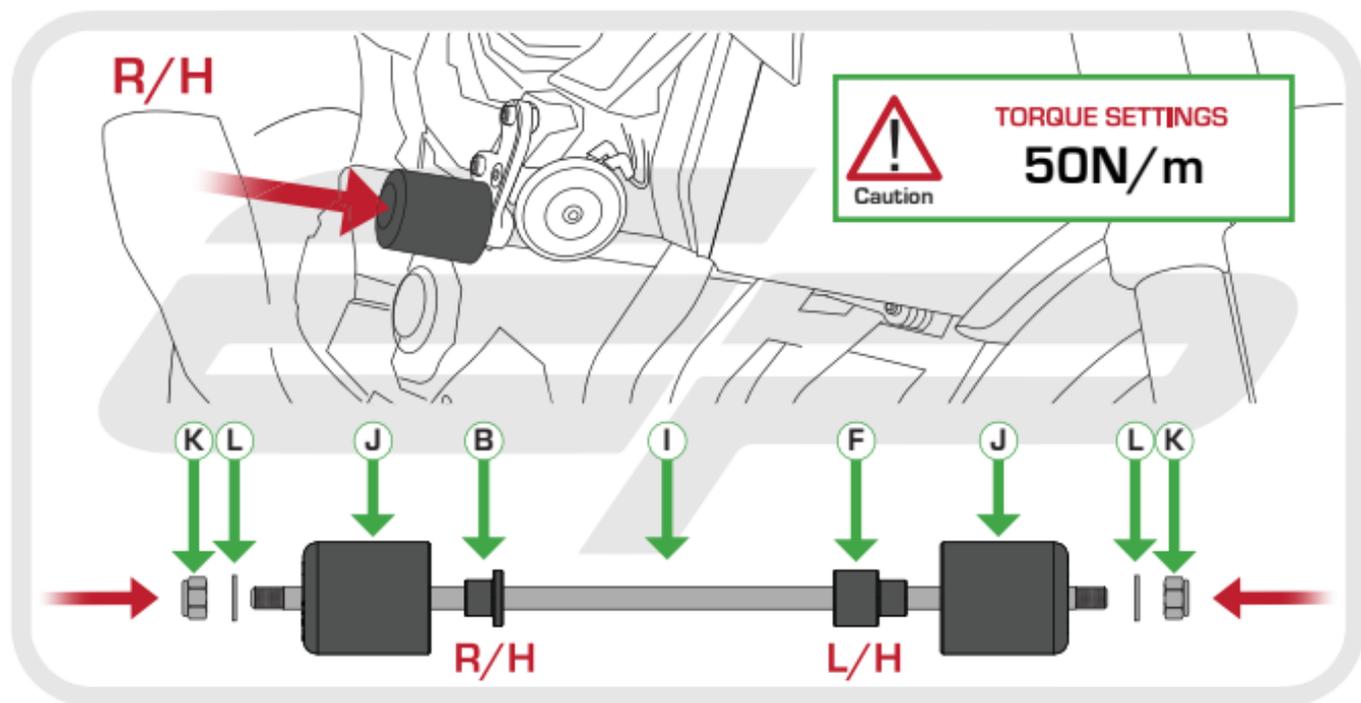



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)