



EVOTECH®
P E R F O R M A N C E

Suzuki GSXR1000

Crash protection


Installation Instructions




Product No: PRN013581

Kit Contents


- | | |
|--------------------------------------|--------------------------------------|
| (A) 1 x L/H Bracket | (I) 1 x M10 x 55 x 1.25 Caphead Bolt |
| (B) 1 x R/H Bracket | (J) 2 x M6 x 45 Caphead Bolts |
| (C) 1 x Bobbin Spacer (Shortest) | (K) 2 x M12 x 75 x 1.25 Caphead Bolt |
| (D) 1 x Bobbin Spacer (Longest) | (L) 2 x M12 Washers |
| (E) 1 x Neoprene (Large) | (M) 2 x Polyurathane Washers |
| (F) 1 x Neoprene (Medium) | (N) 2 x Bobbin Heads |
| (G) 1 x Neoprene (Small) | |
| (H) 1 x M10 x 60 x 1.25 Caphead Bolt | |

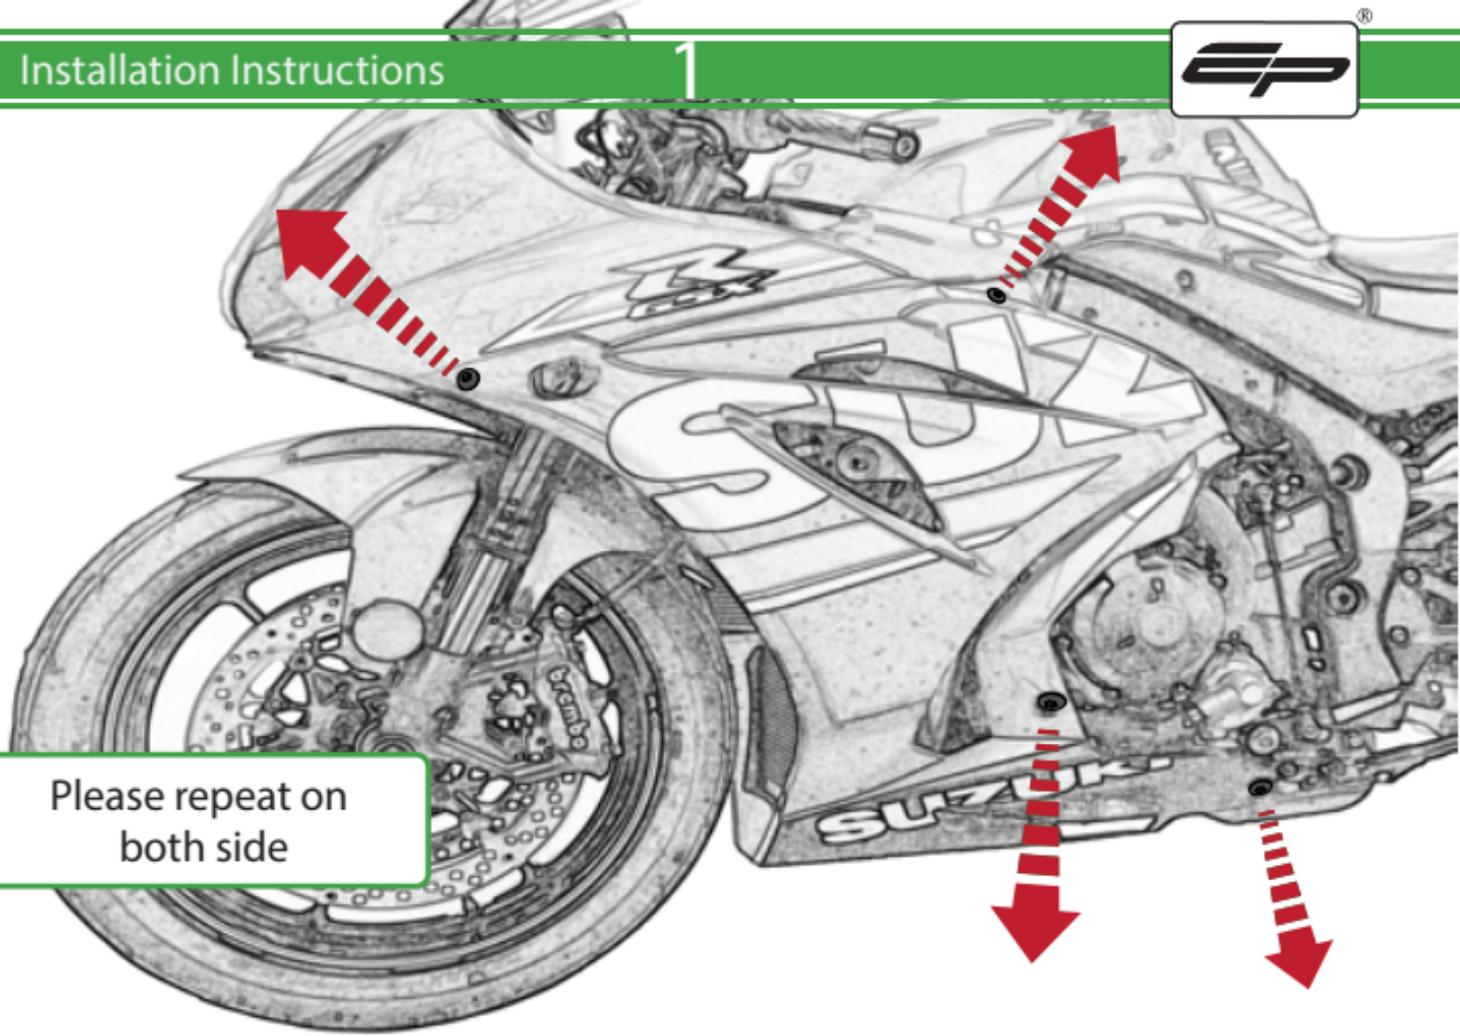

Please repeat on both side

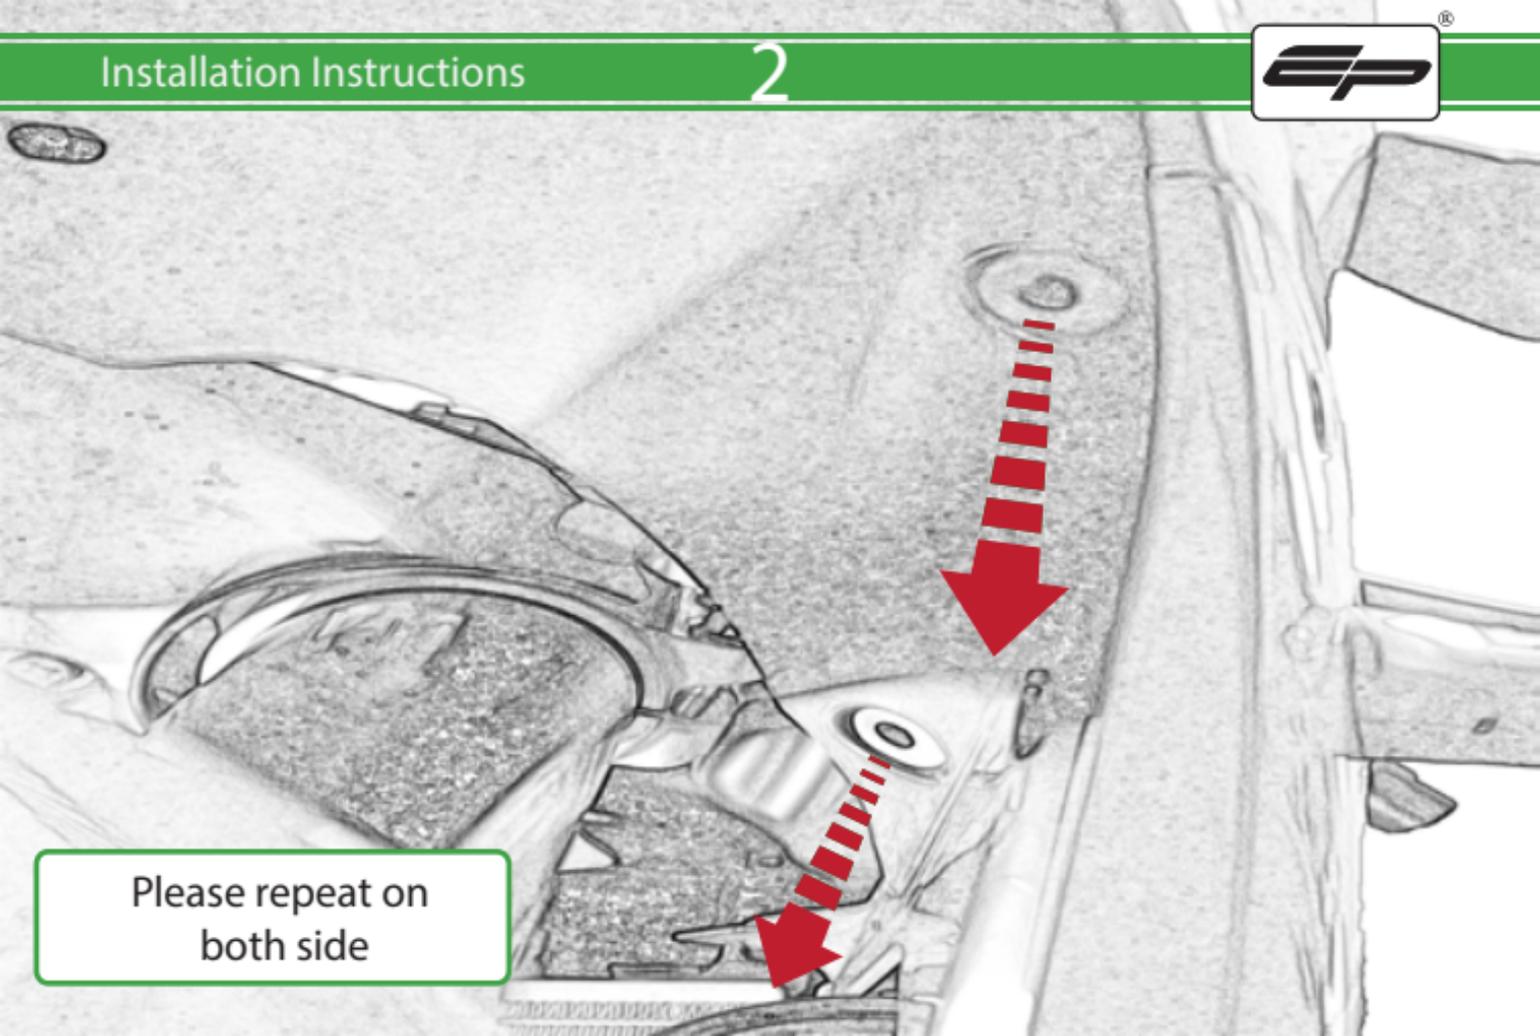


Please repeat on both side

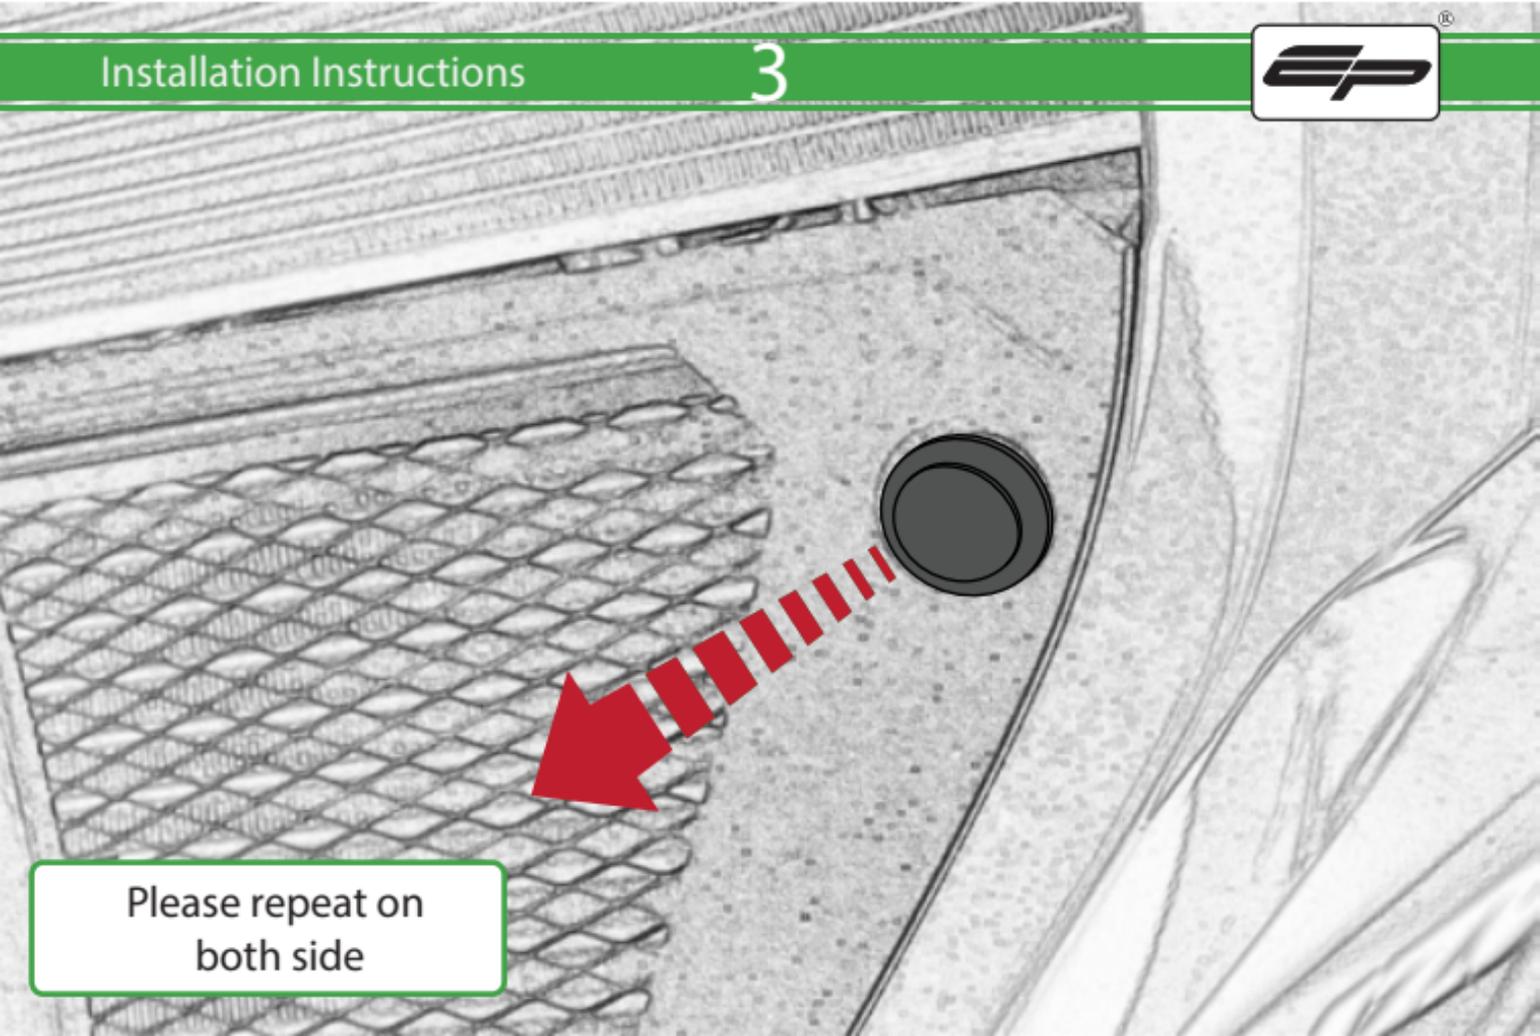




Please repeat on
both side





Pull fairing back and out to release from rubber bung location


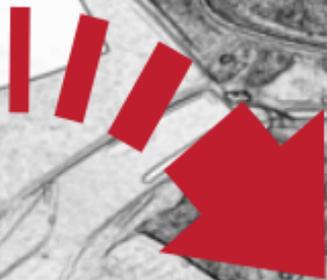


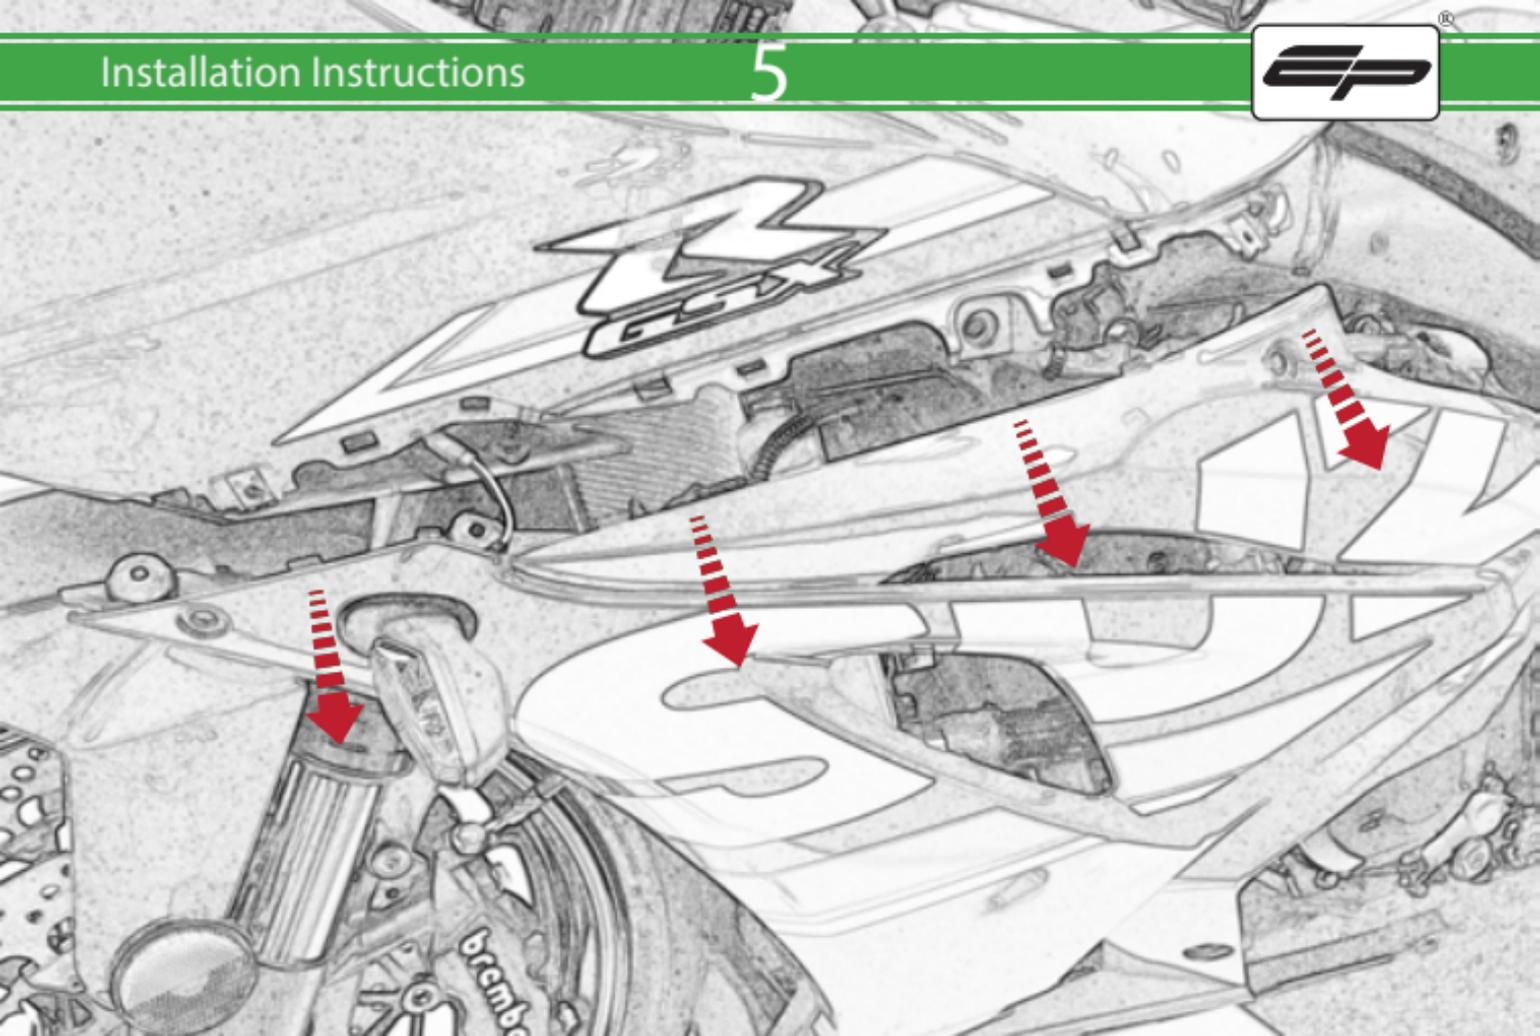

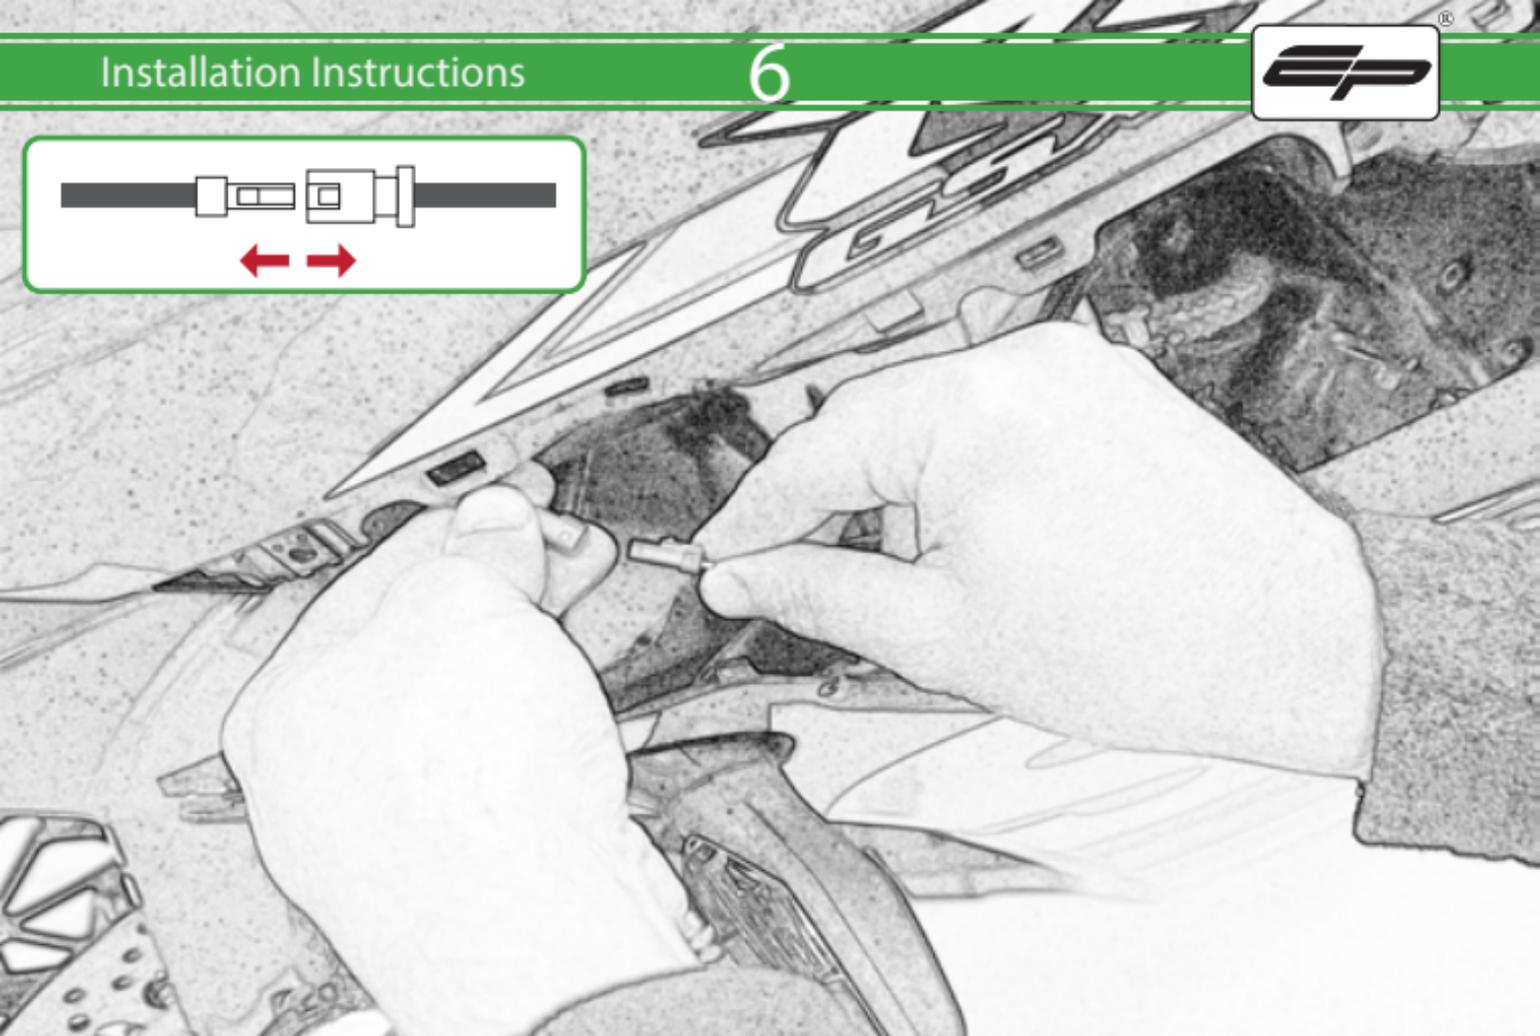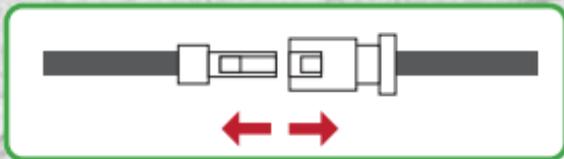

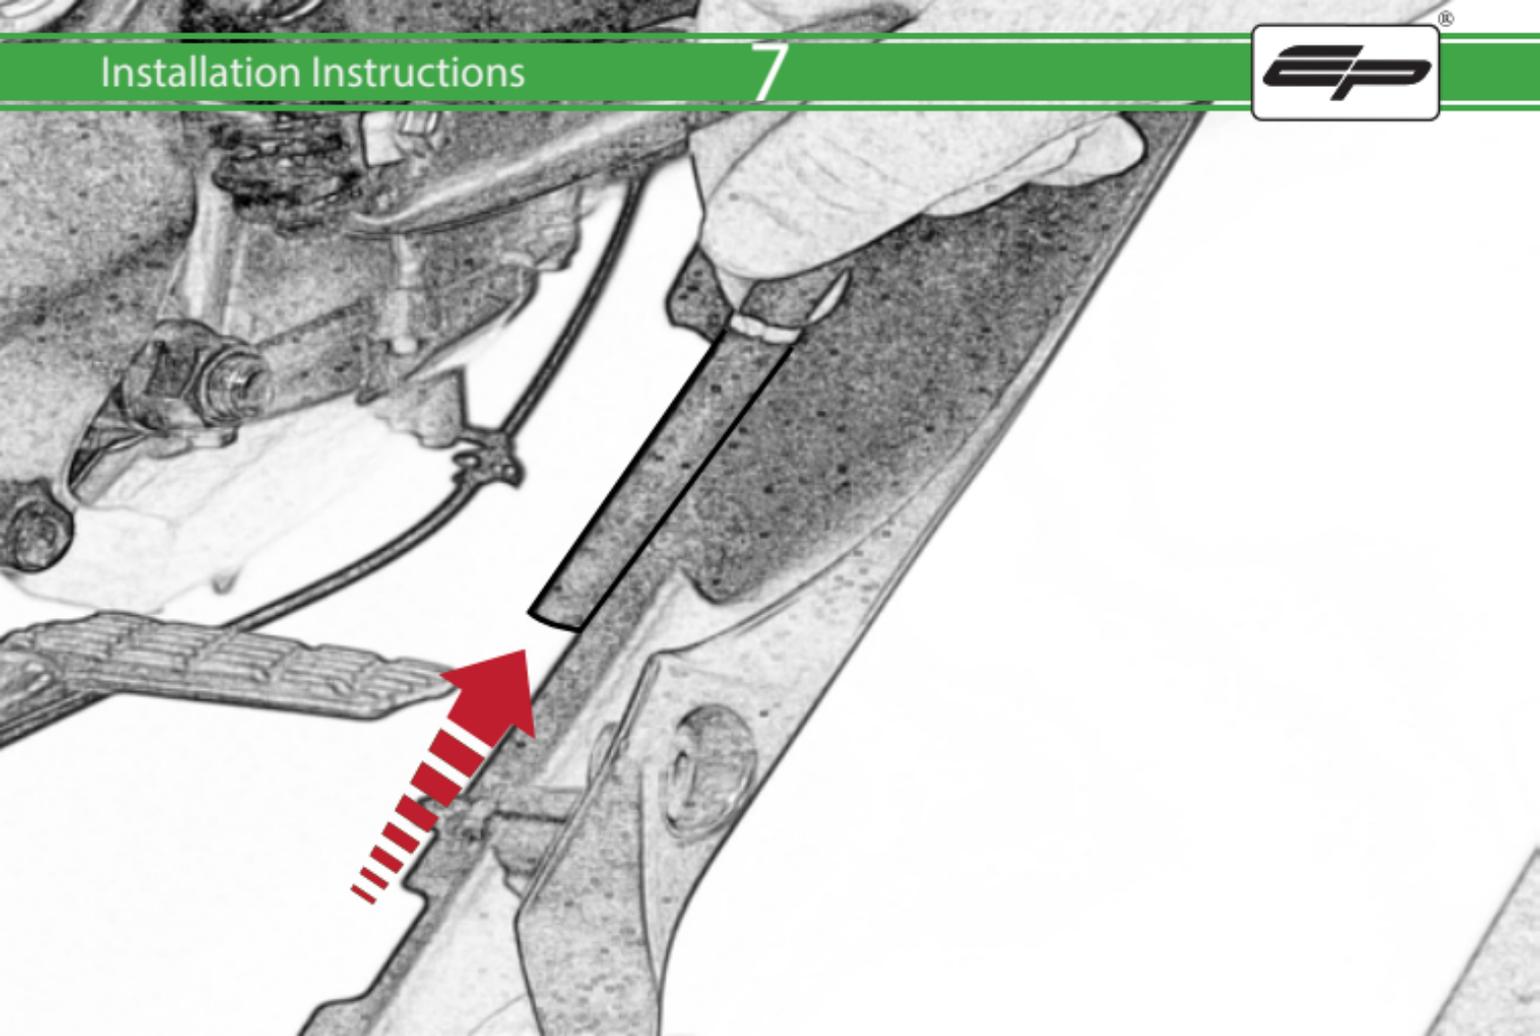

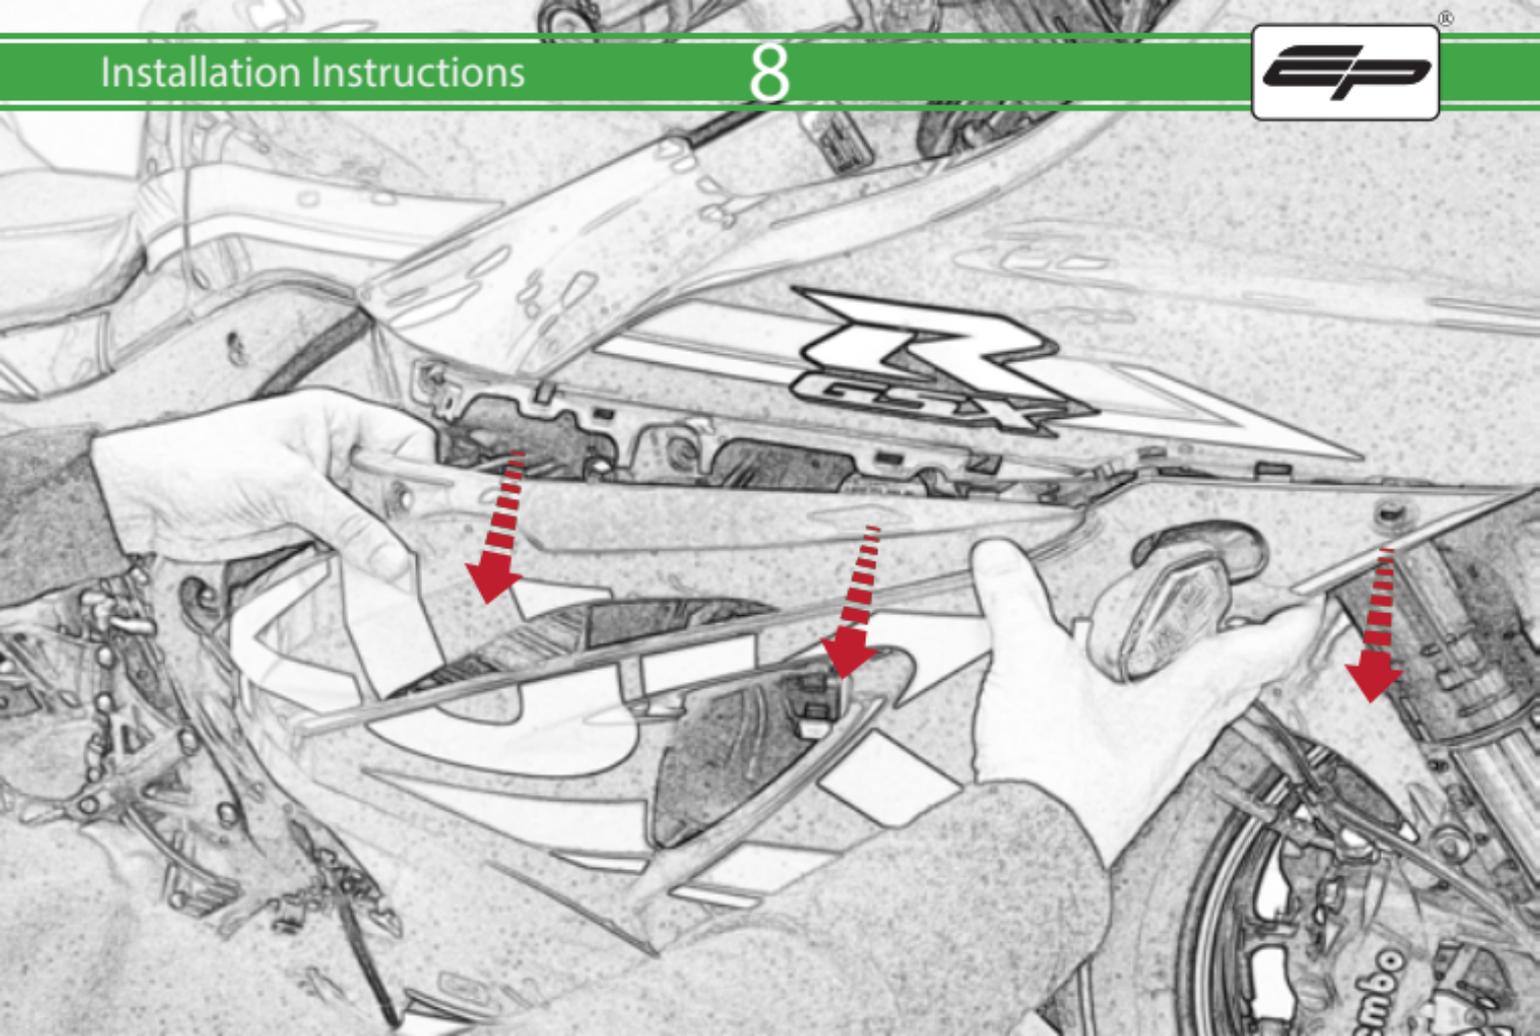


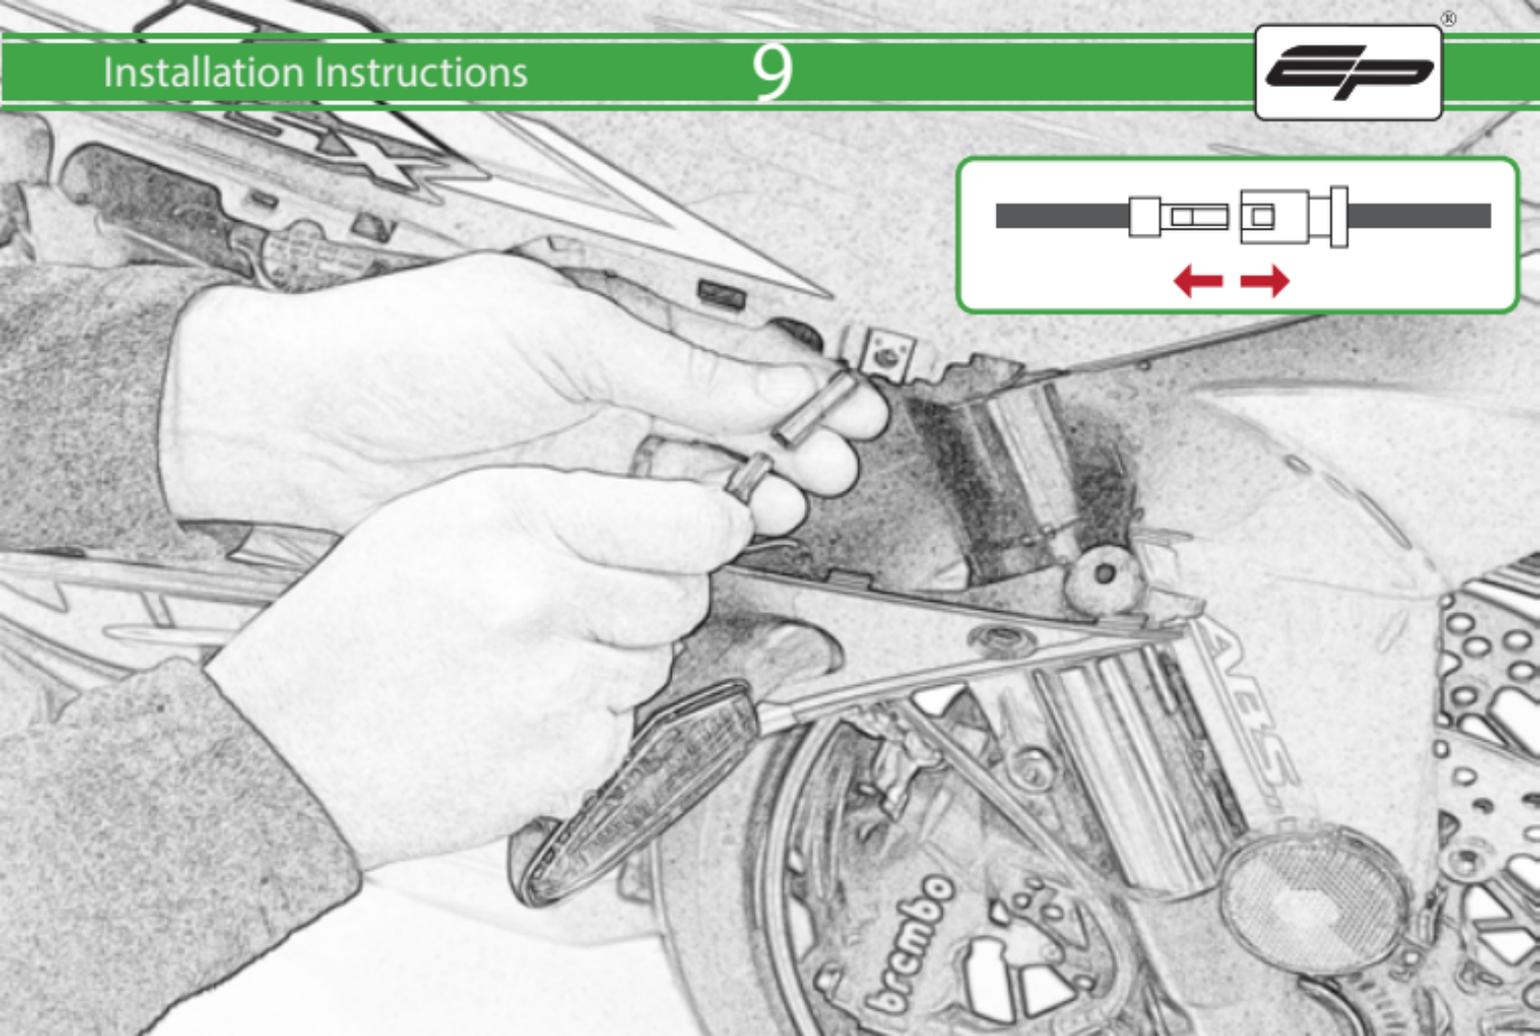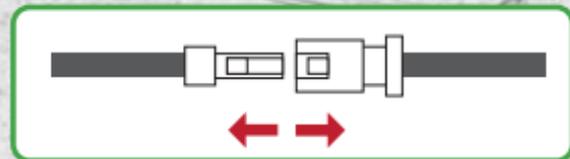



Caution


Lay a towel or cloth on the ground to stop any damage to the fairing

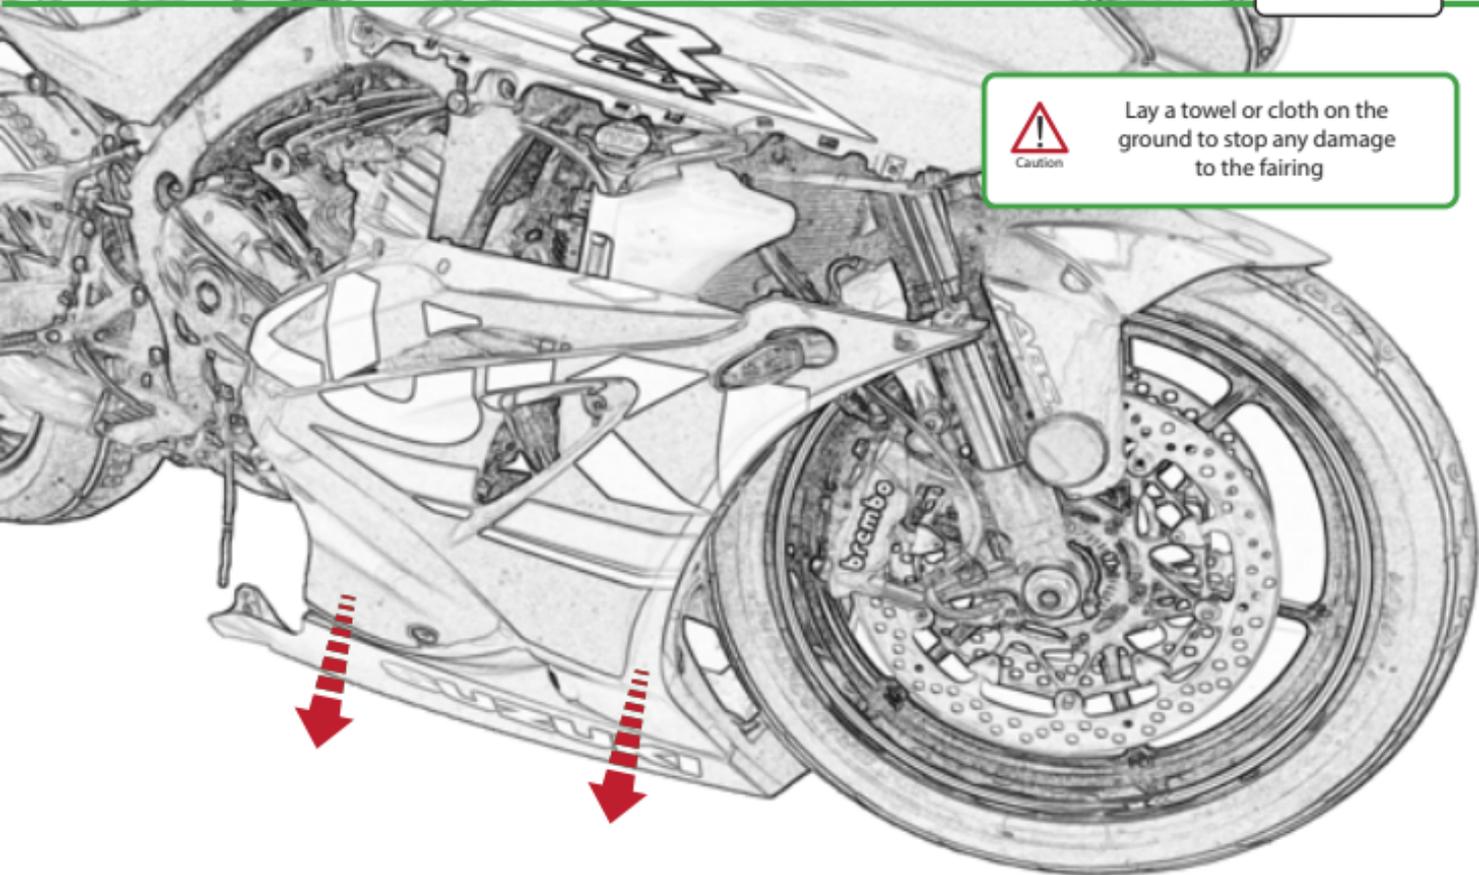






Caution

Remove fairing by rotating
the complete panel underneath
the bike

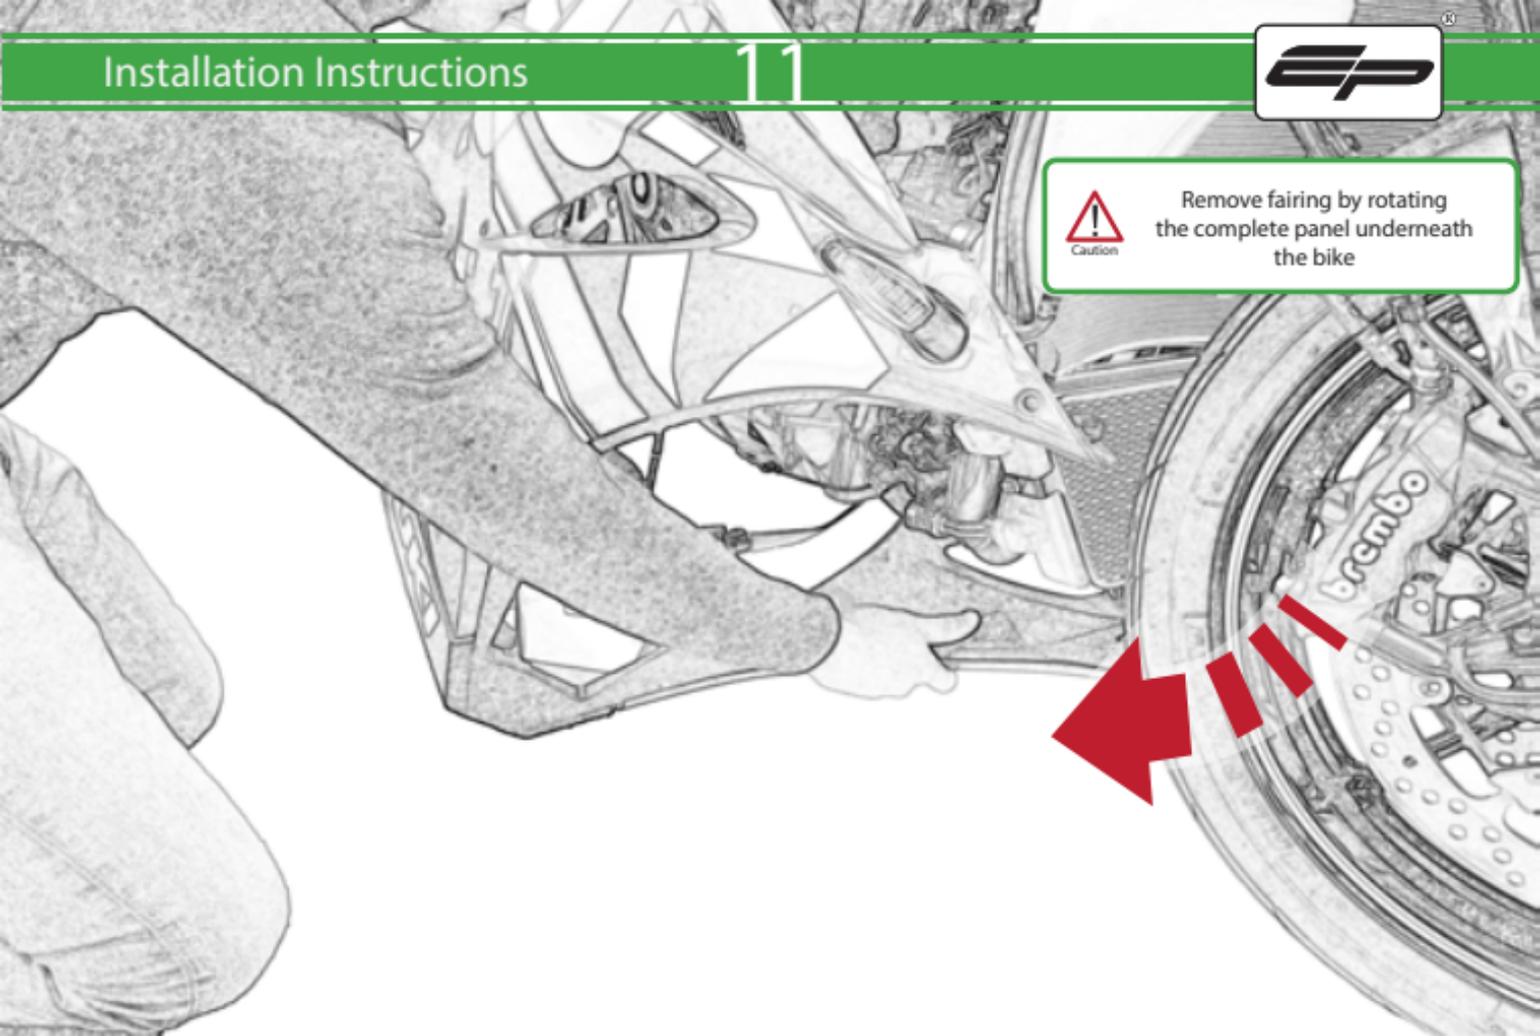


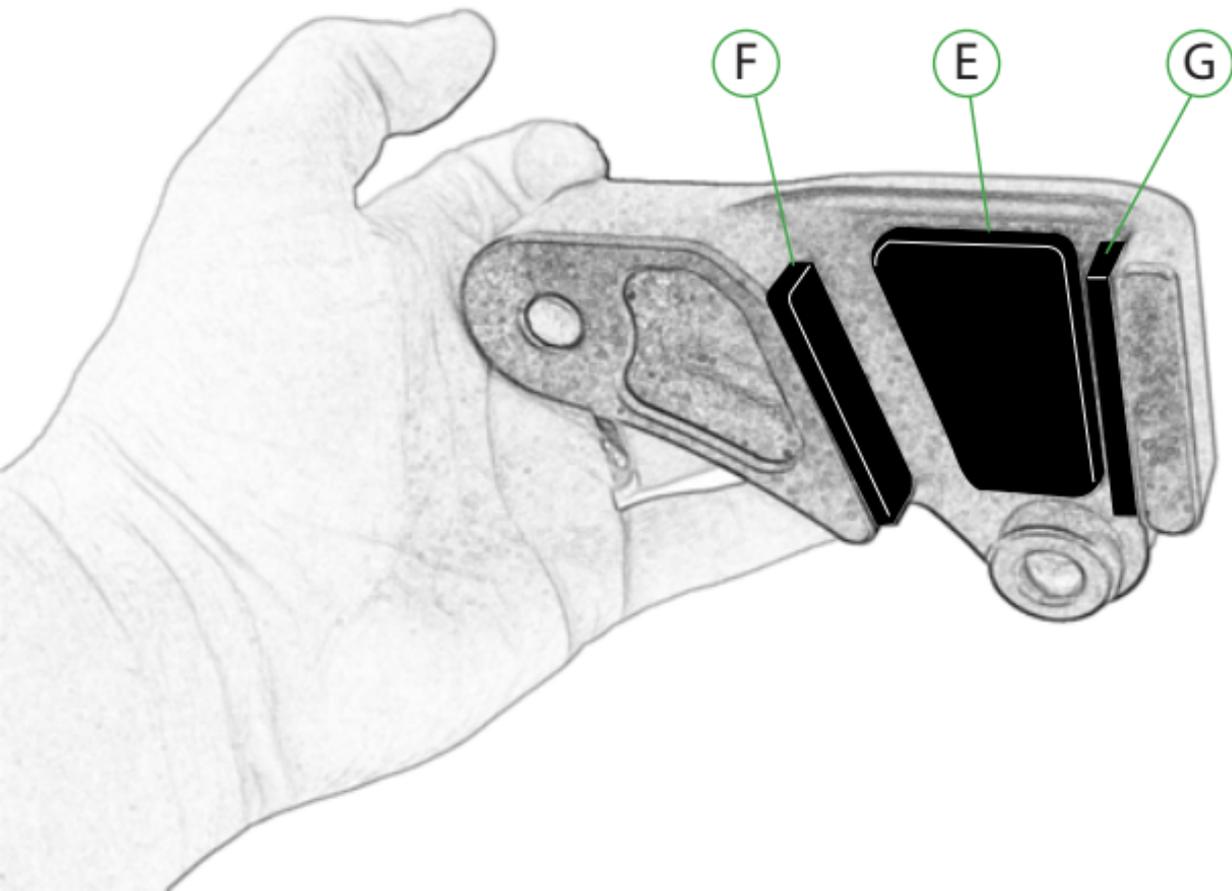

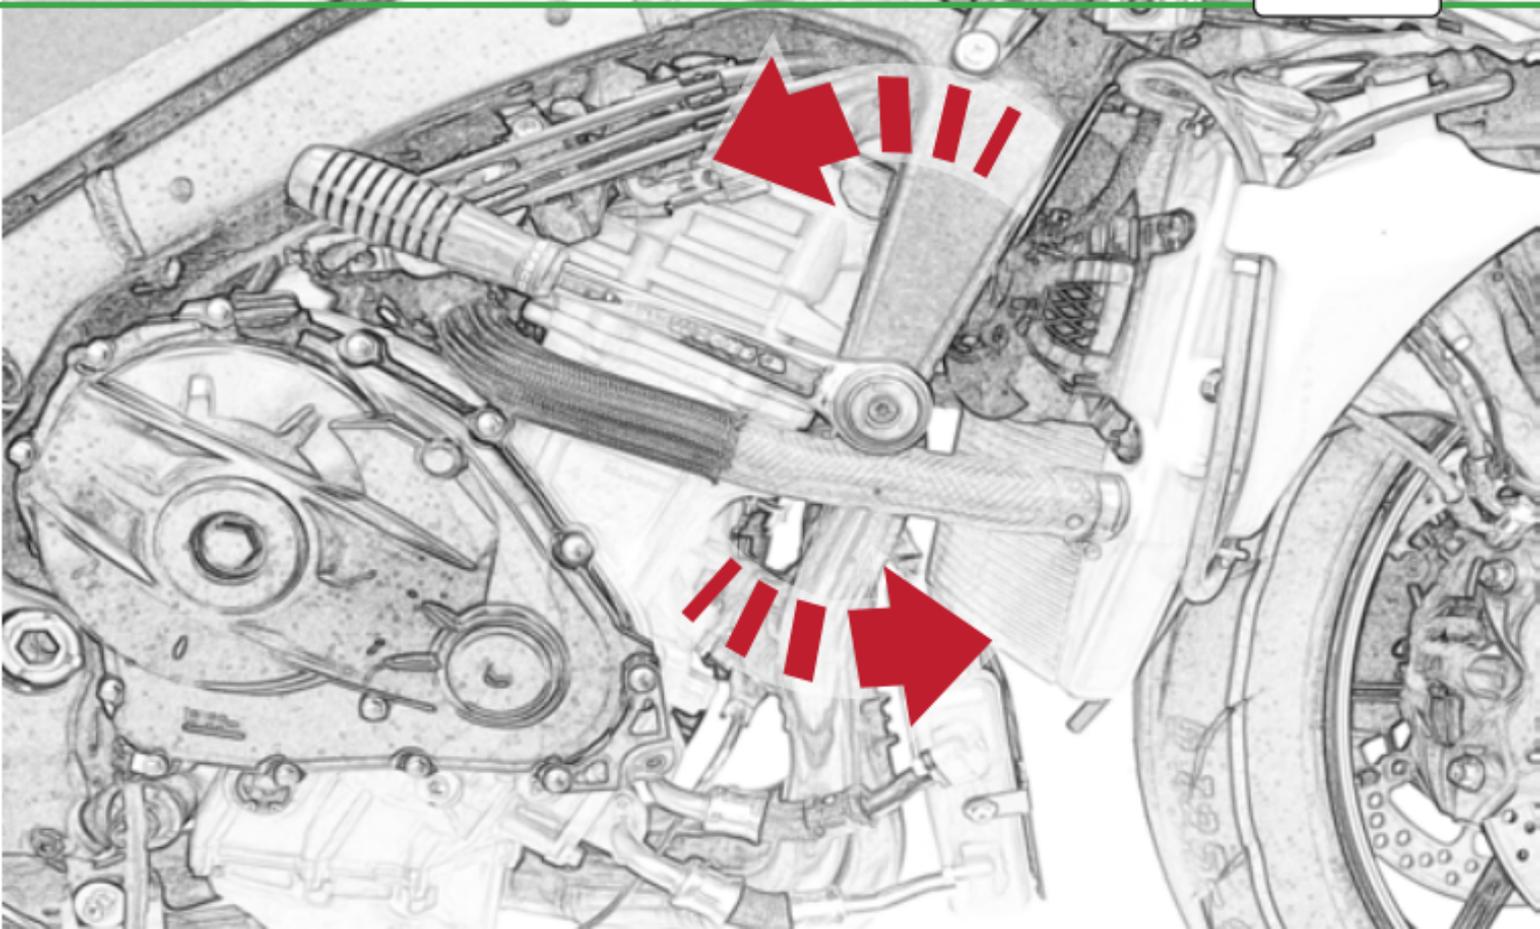

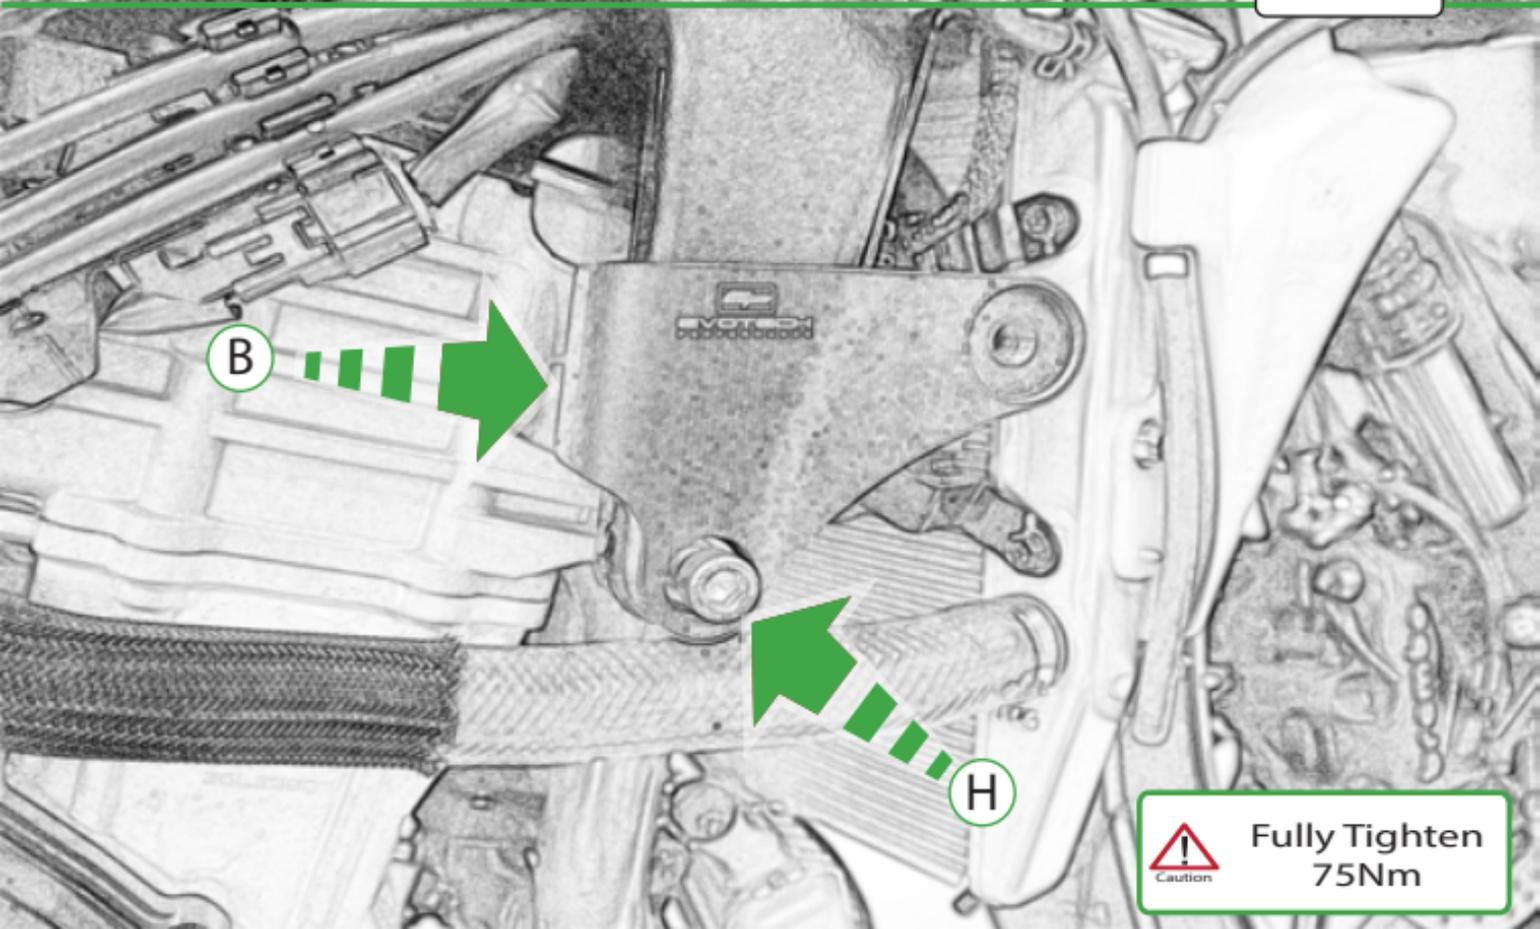

 Fully Tighten
75Nm

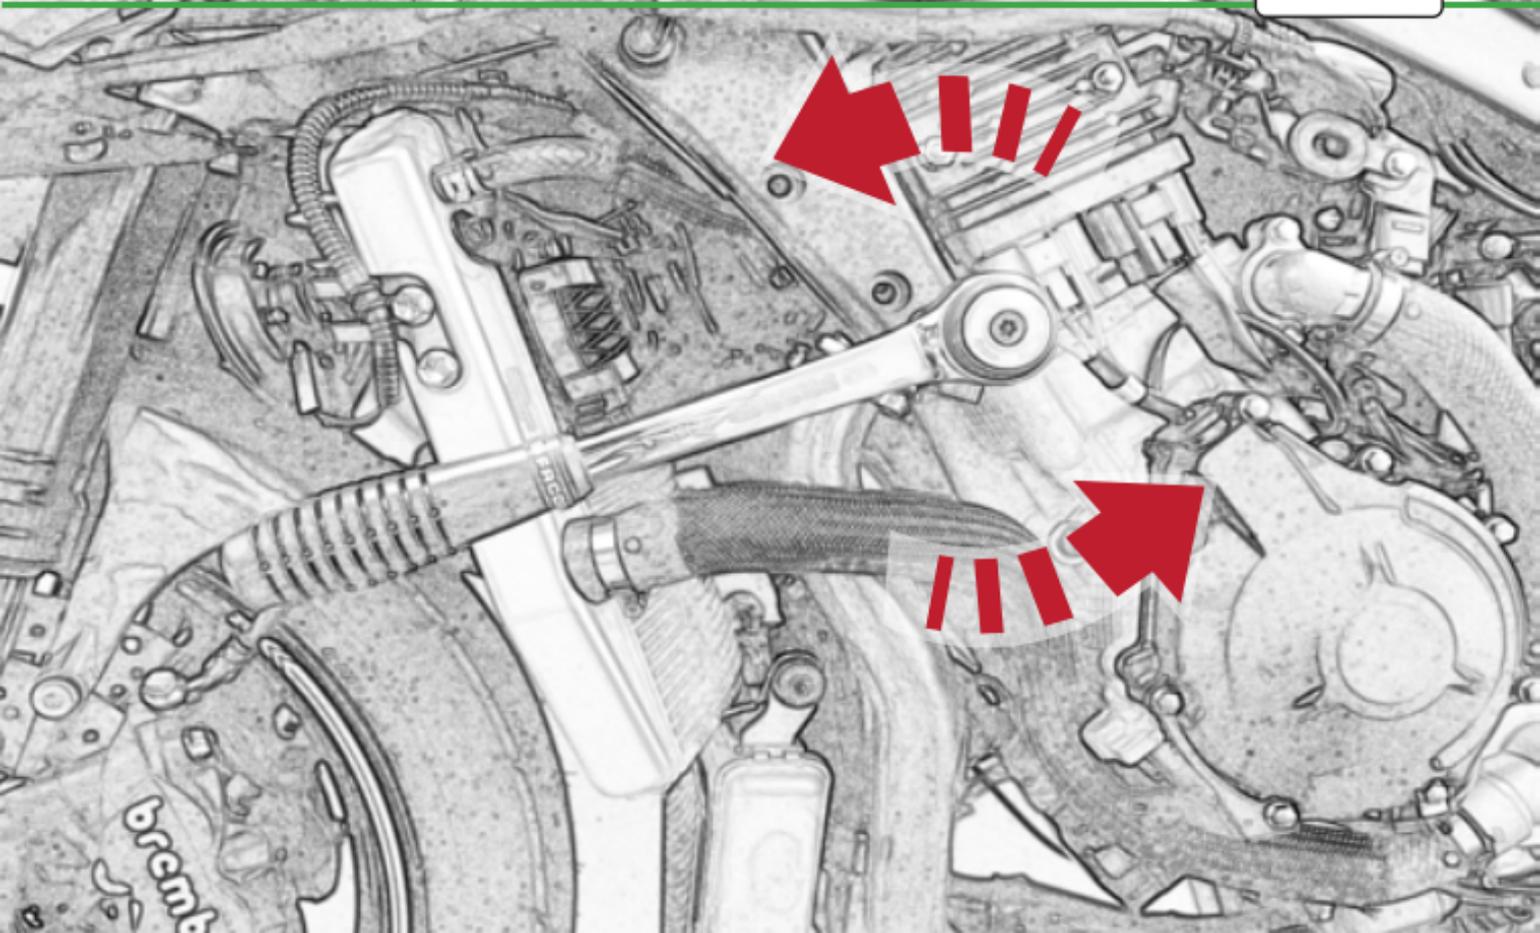

A

J

J

I




Caution

Fully Tighten
15Nm




Caution


Fully Tighten
75Nm

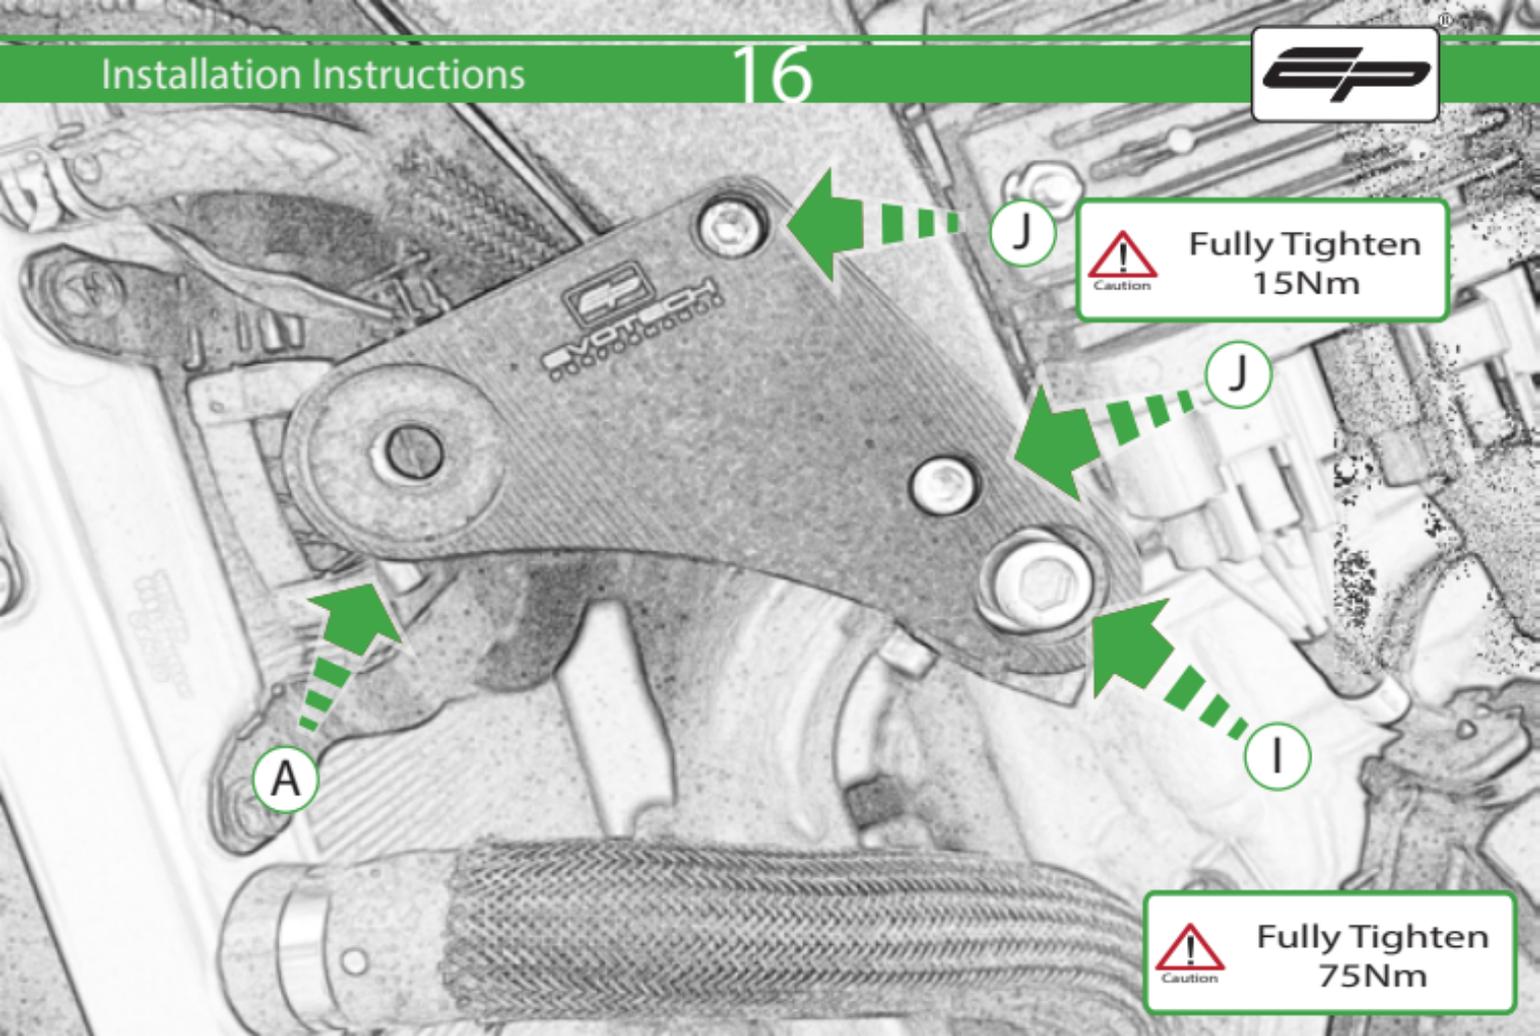



Install fairing by rotating
the complete panel underneath
the bike


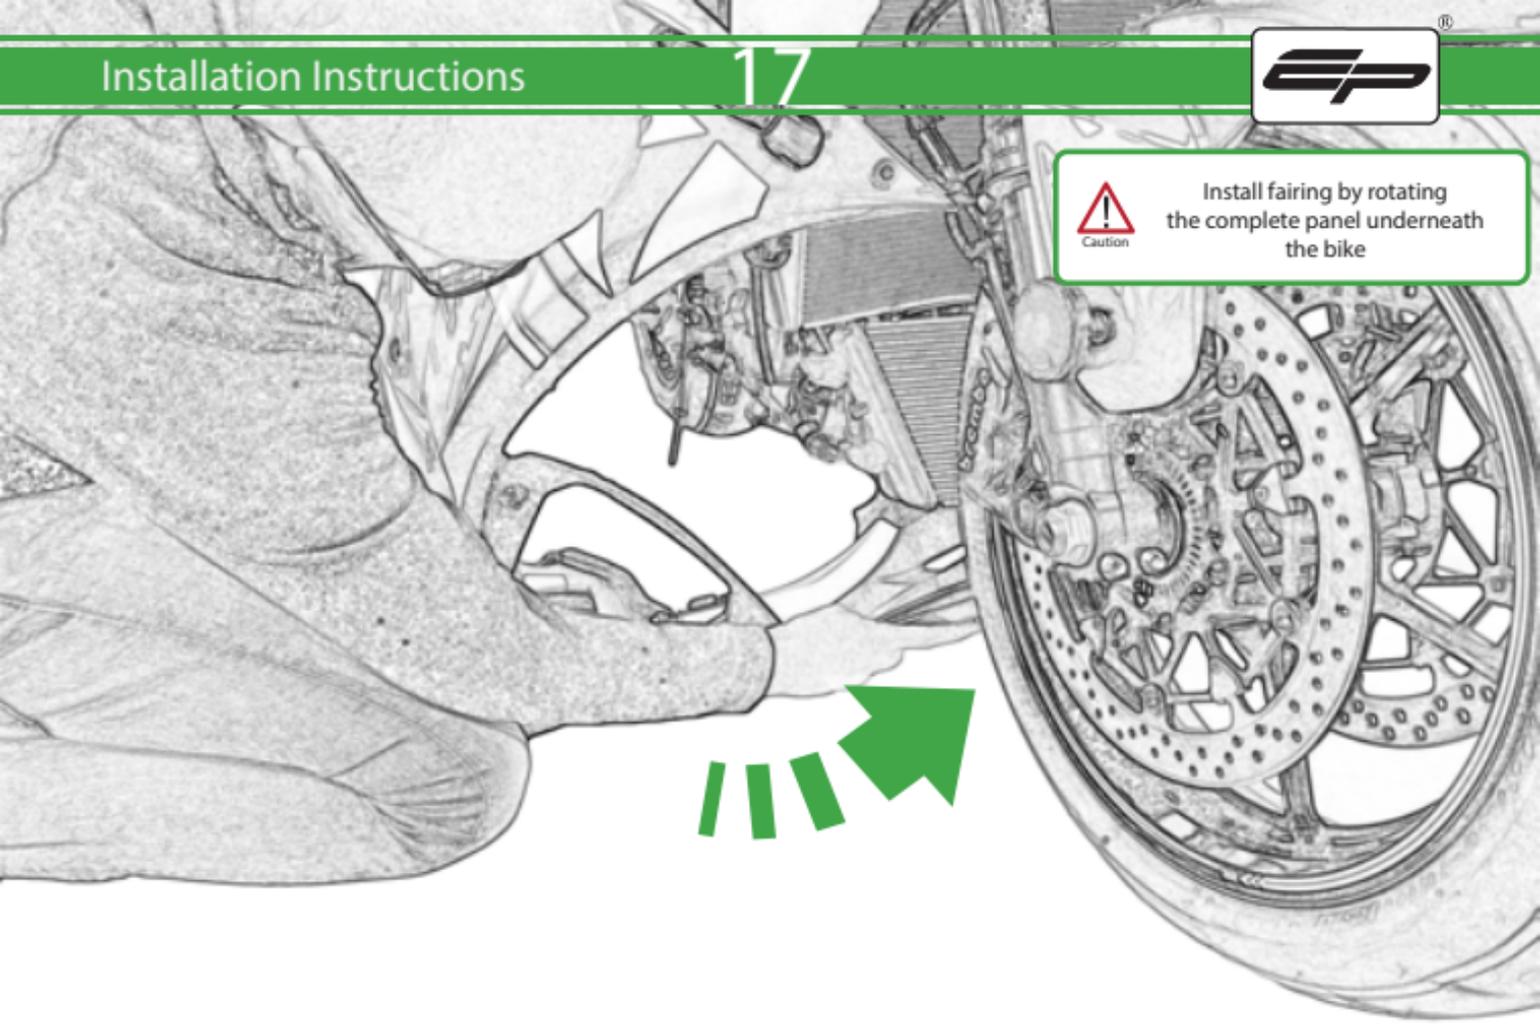



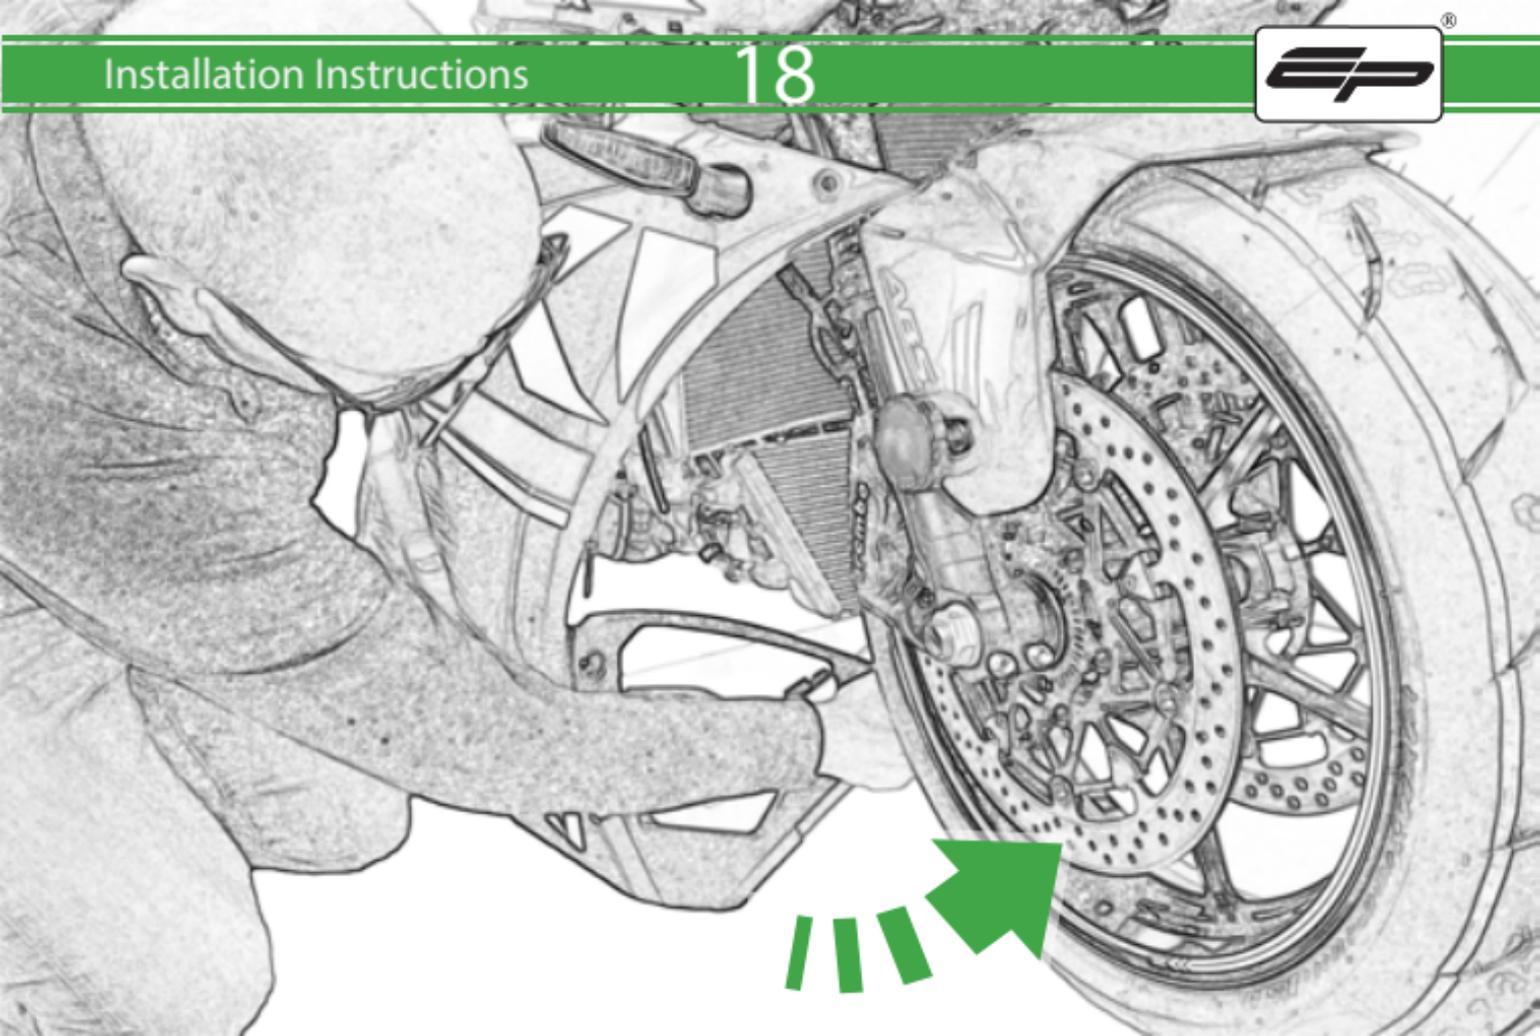




Reverse Stages

9 - 1

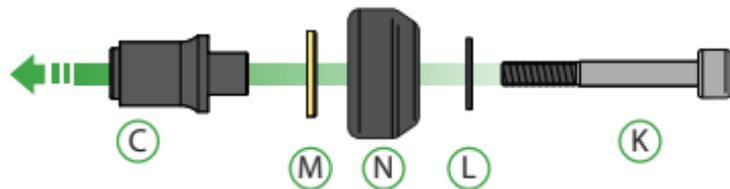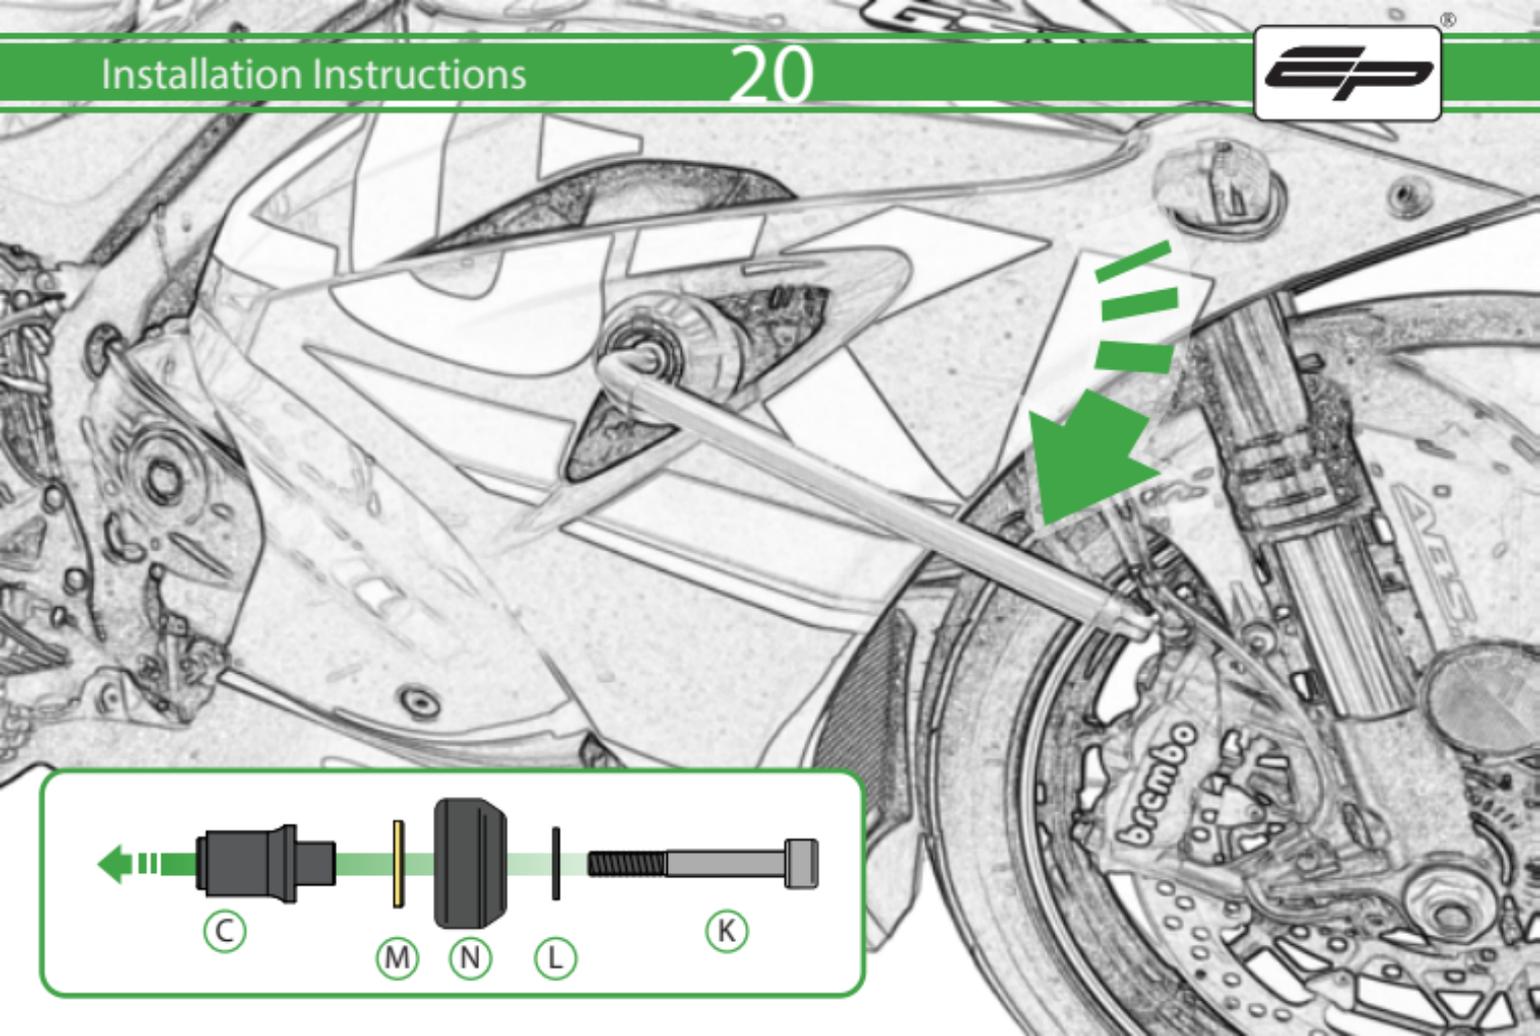

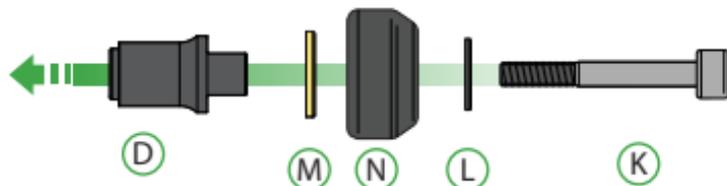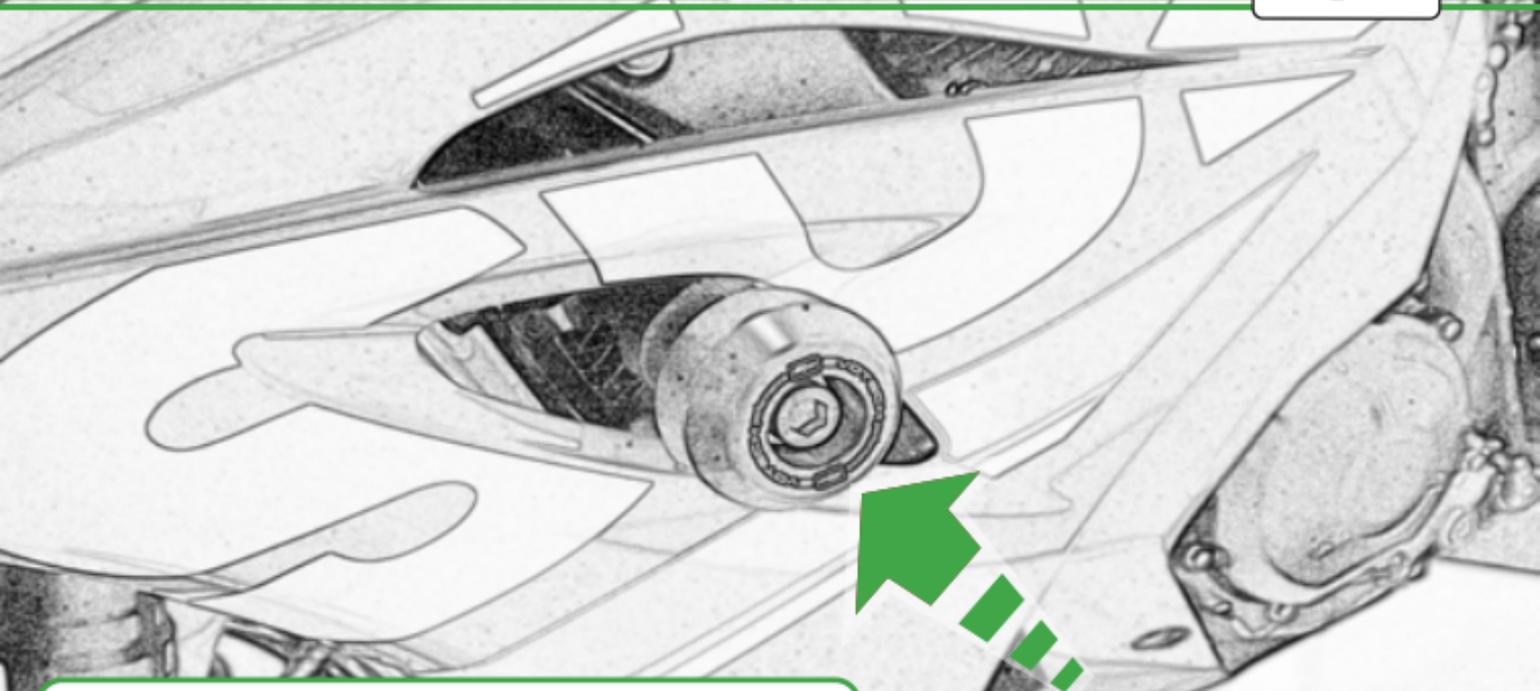



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com