




**Kawasaki H2 SX**  
**Crash Protection**

**Installation Instructions**


## Kit Contents PRN013968

- A** 1 x L/H Bobbin Spacer (Longest Spacer)
- B** 1 x R/H Bobbin Spacer (Shortest Spacer)
- C** 1 x M10-120 x 1.25 Caphead
- D** 1 x M10-130 x 1.25 Caphead
- E** 2 x M10 x Washer
- F** 2 x Polyurathane Washer
- G** 2 x Large Bobbin Head

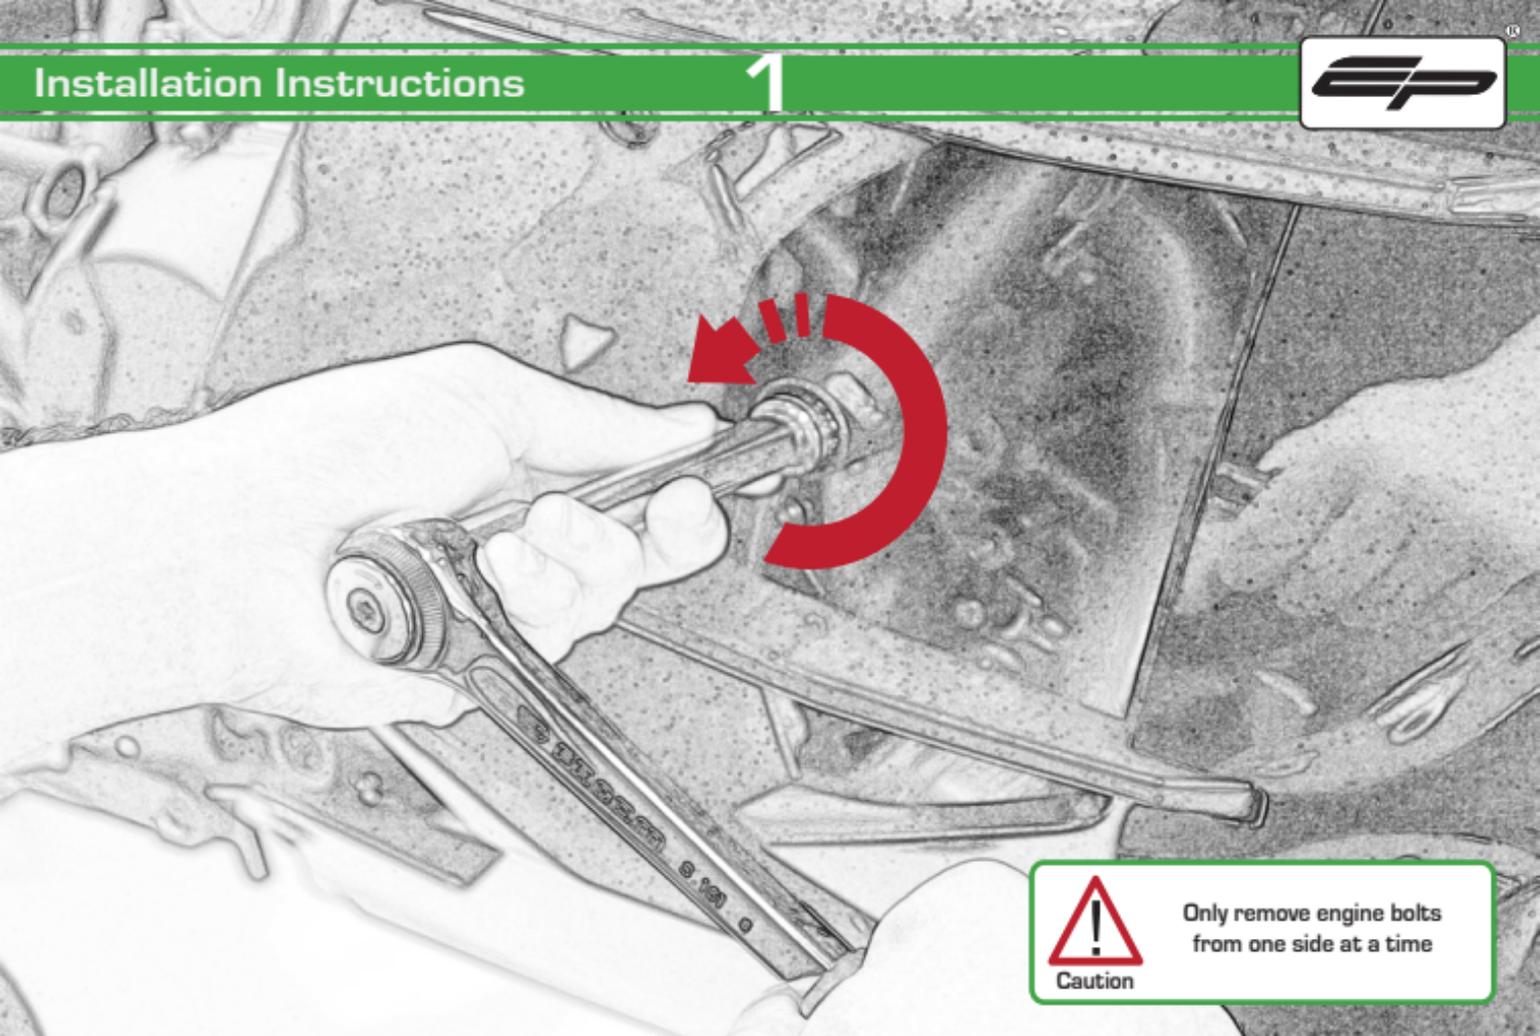


Caution

Only remove engine bolts from one side at a time

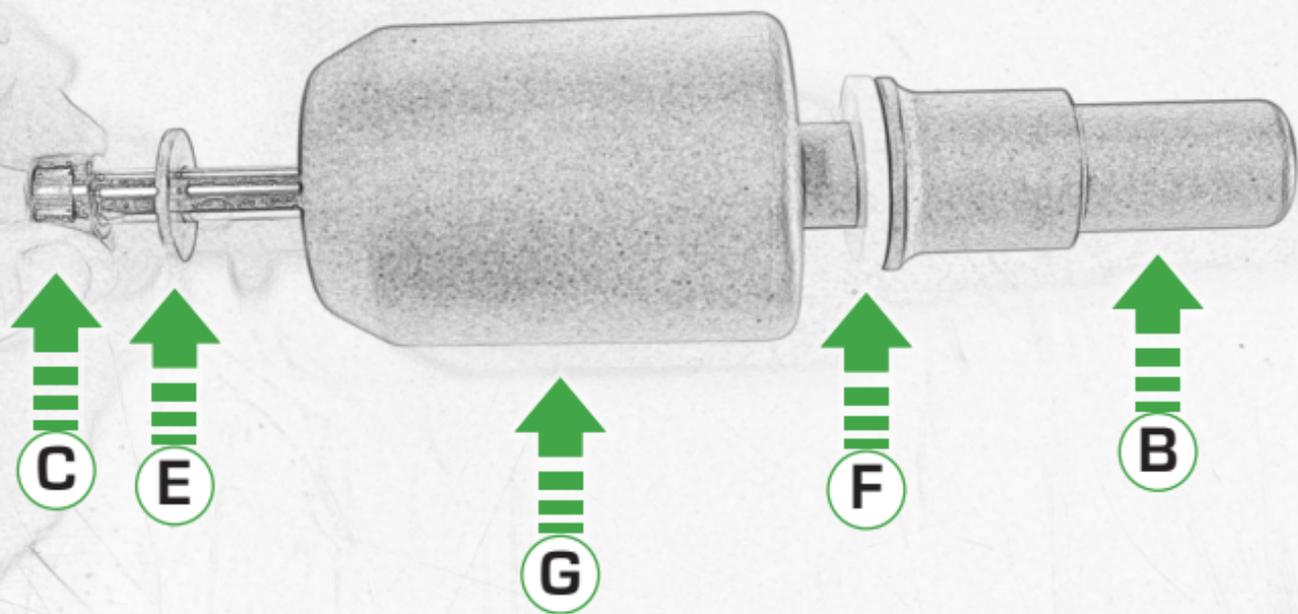




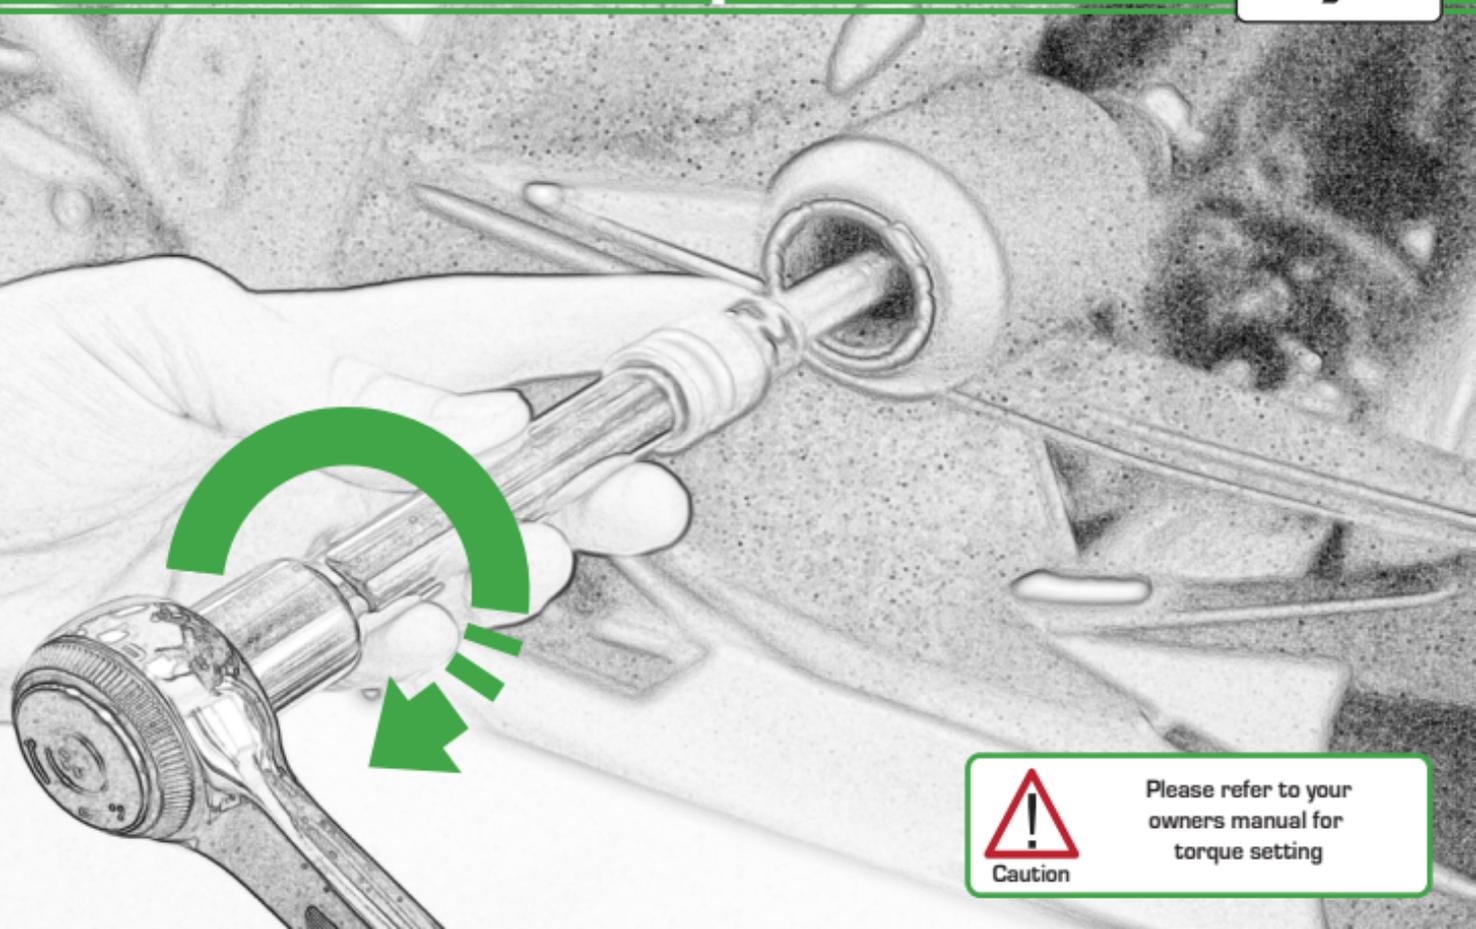


Caution


Please refer to your  
owners manual for  
torque setting

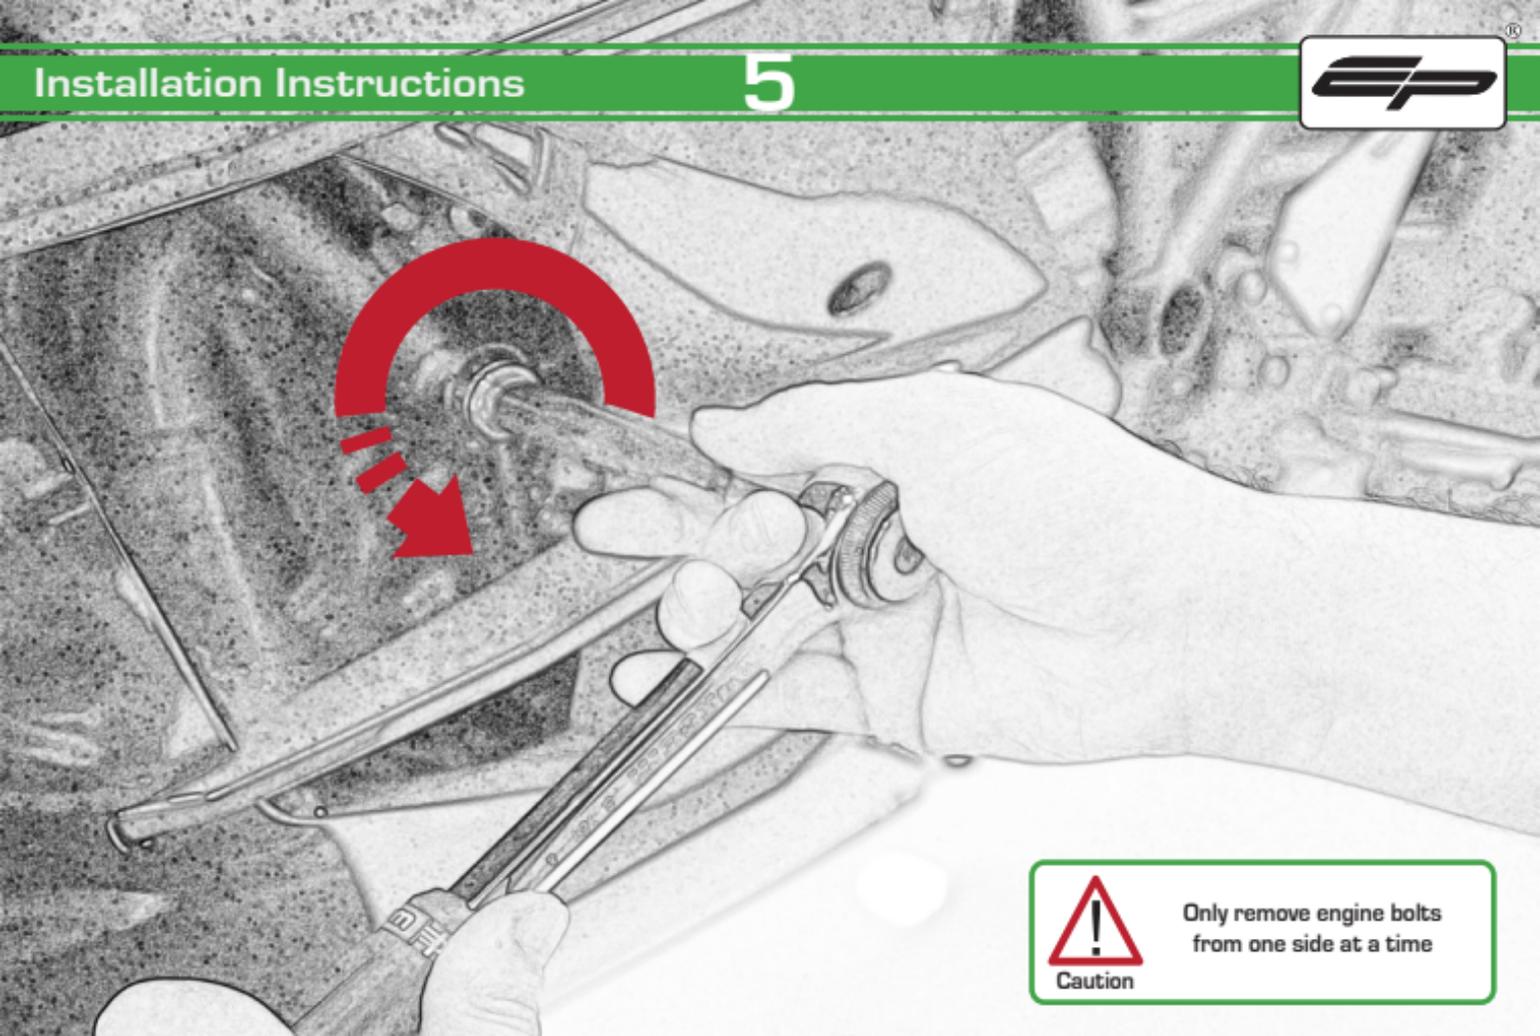

Caution

Only remove engine bolts  
from one side at a time

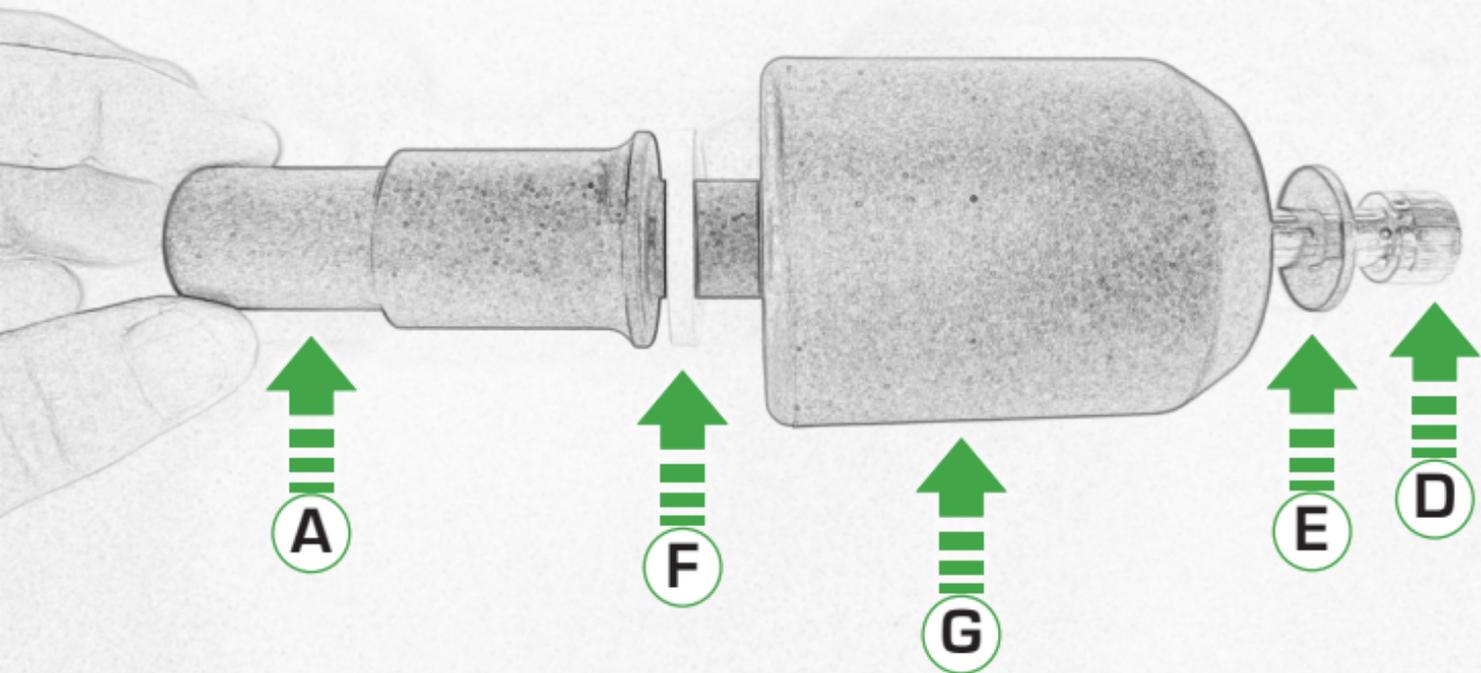

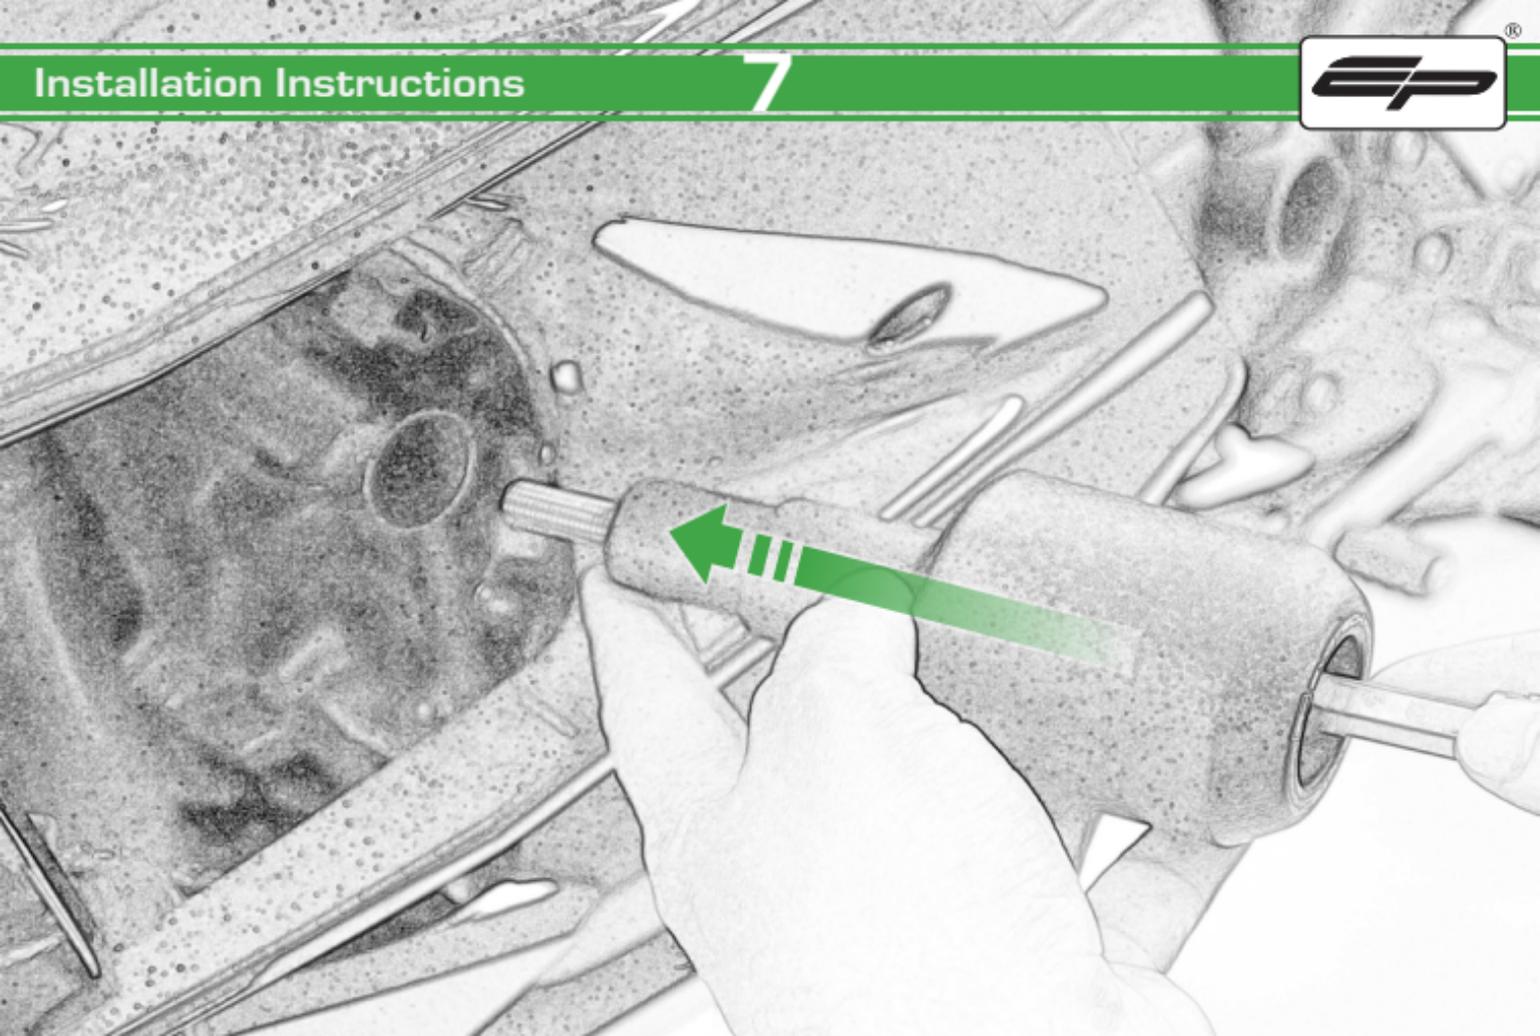



Please refer to your  
owners manual for  
torque setting

### ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)