



EVOTECH[®]
P E R F O R M A N C E


Kawasaki Z400
Crash Protection


Installation Instructions




Kit Contents PRN014537

- (A) 1 x R/H Bobbin Spacer (Longest)
- (B) 1 x L/H Bobbin Spacer (Shortest)
- (C) 1 x L/H Bobbin Bracket
- (D) 1 x L/H Inner Spacer
- (E) 1 x Fairing Washer
- (F) 1 x M10-55-125-SS Caphead
- (G) 1 x M10-120-125-SS Caphead
- (H) 1 x M10-130-125-SS Caphead
- (I) 1 x M6 x 20mm Black Button Head Bolts
- (J) 2 x M10 Custom Washer
- (K) 2 x Polyurathane Washer
- (L) 2 x Low Profile Bobbin

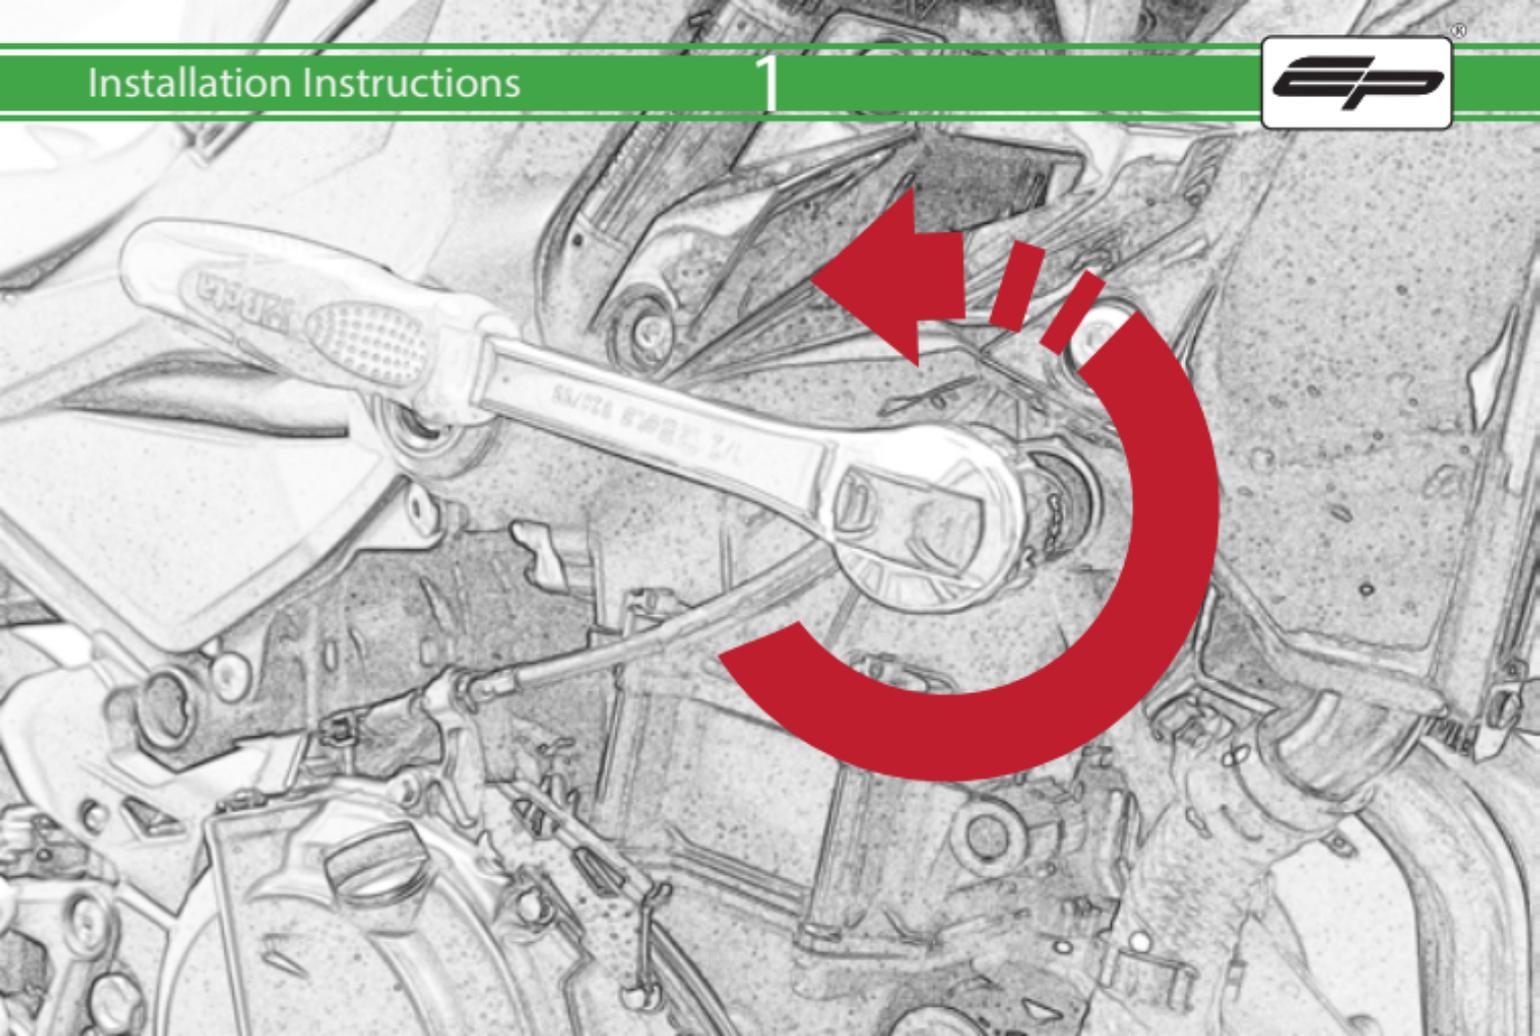


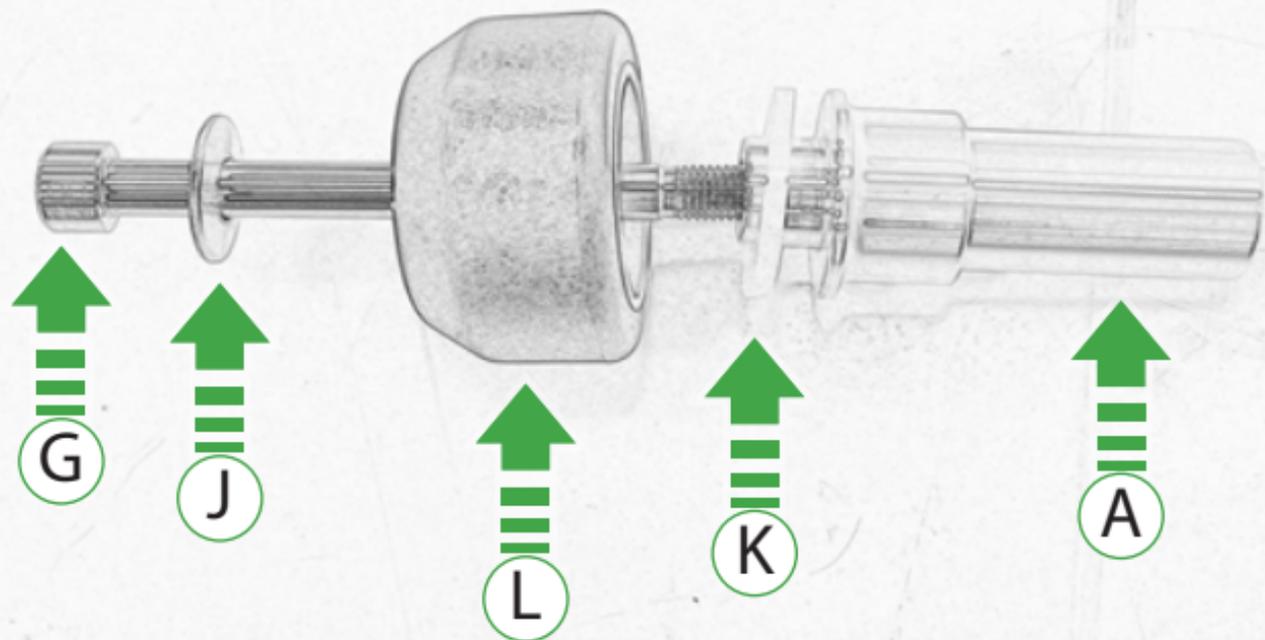


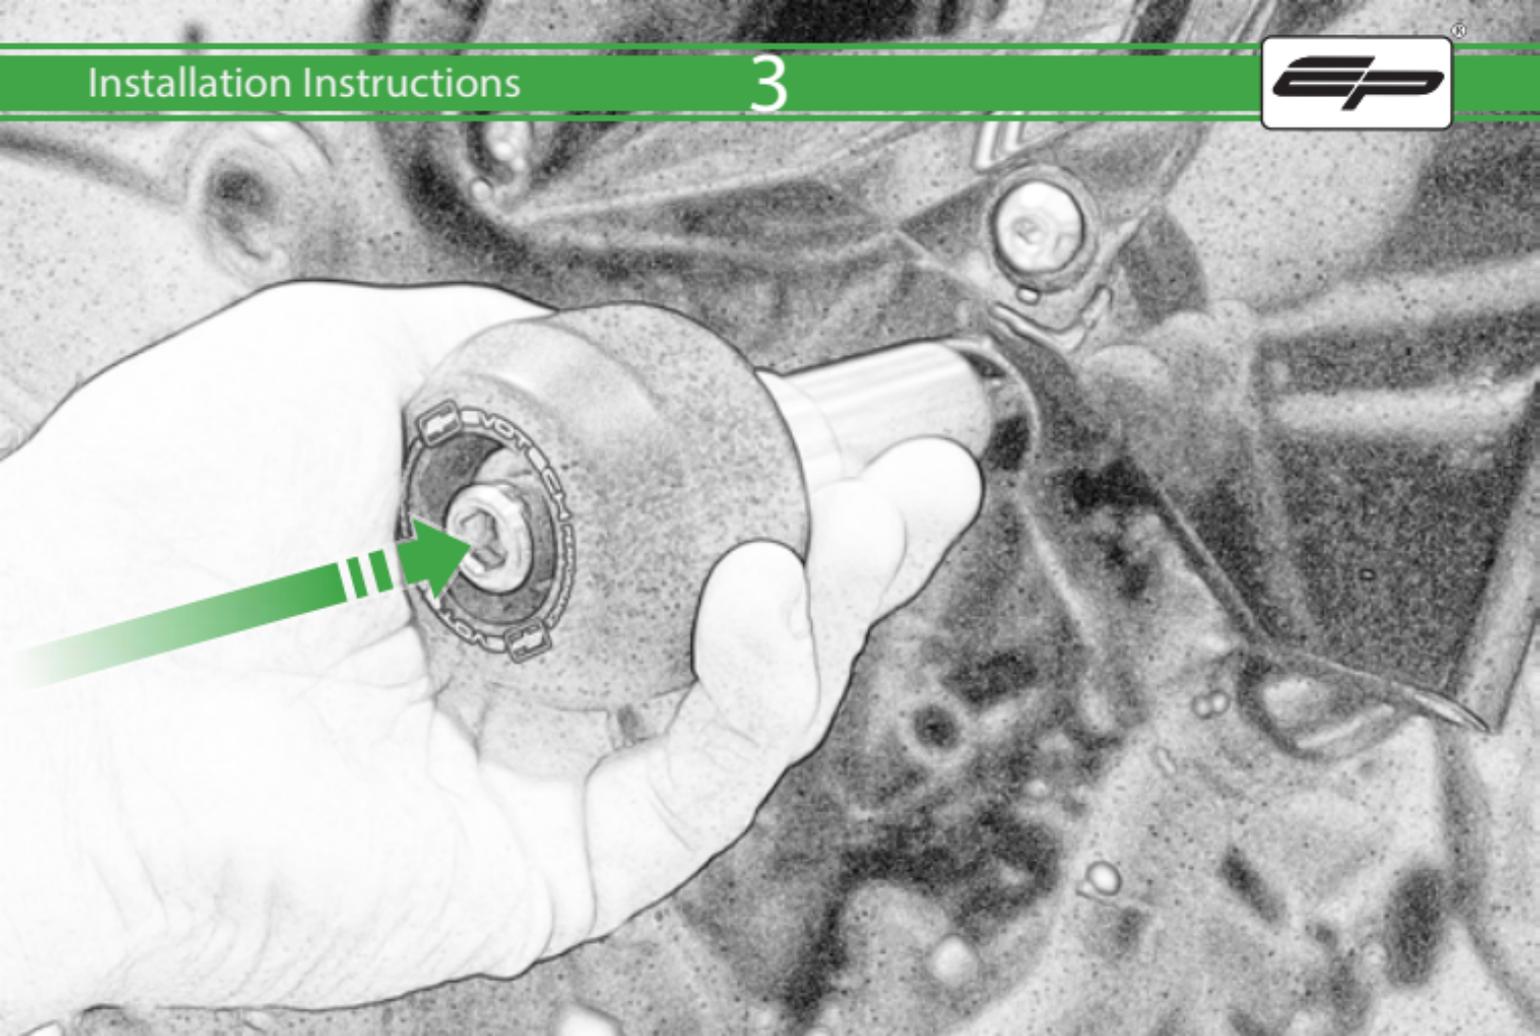





Fully Tighten
45Nm

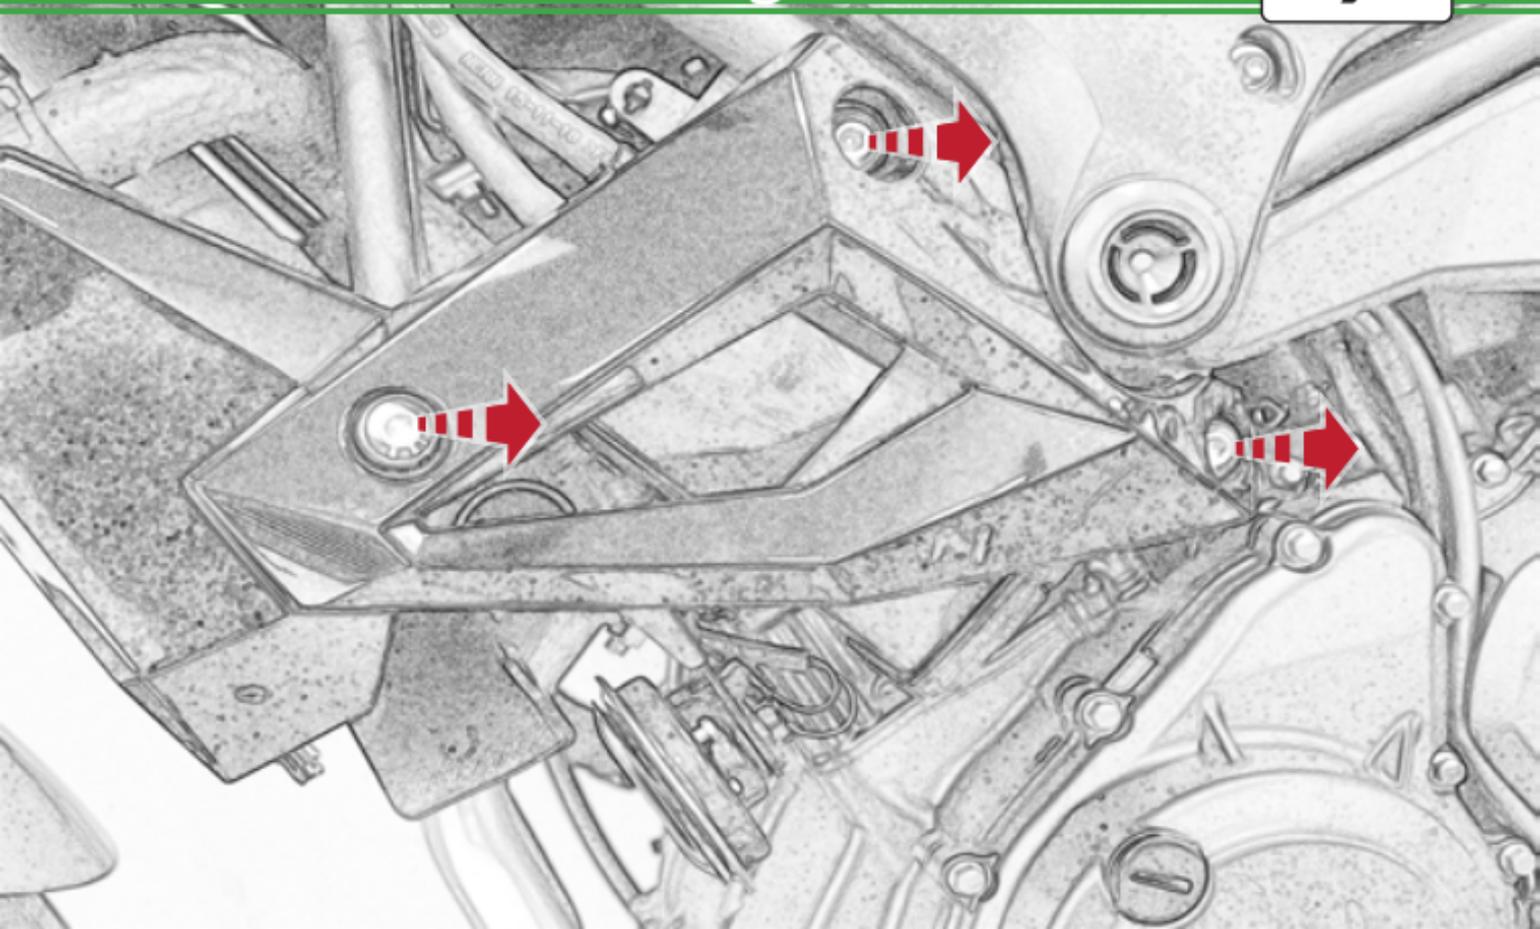

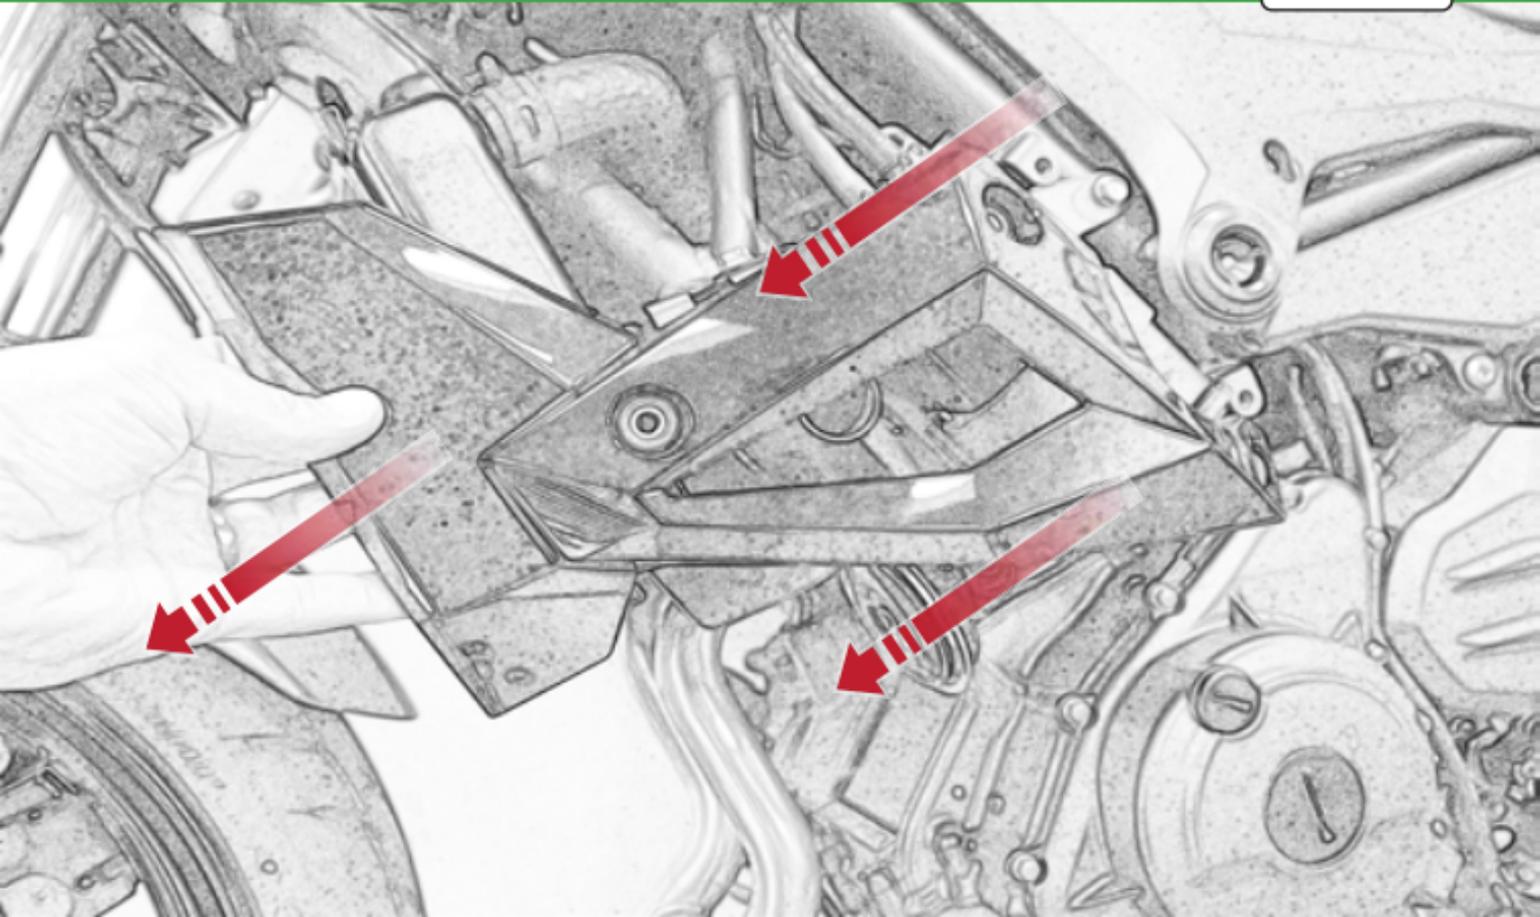


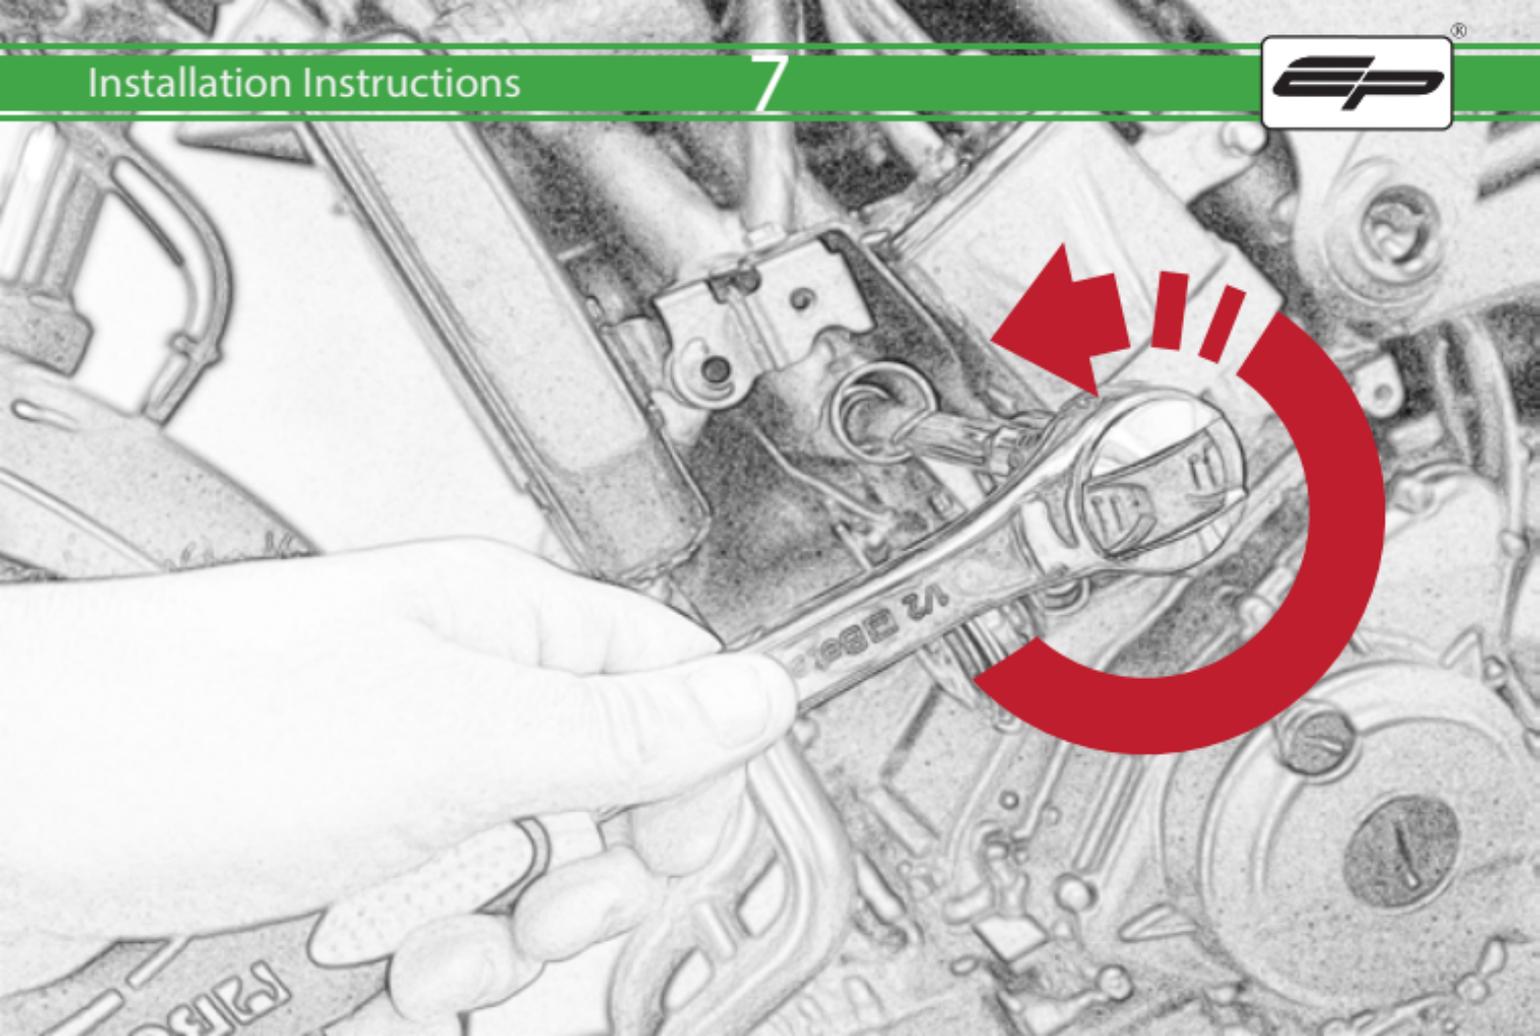

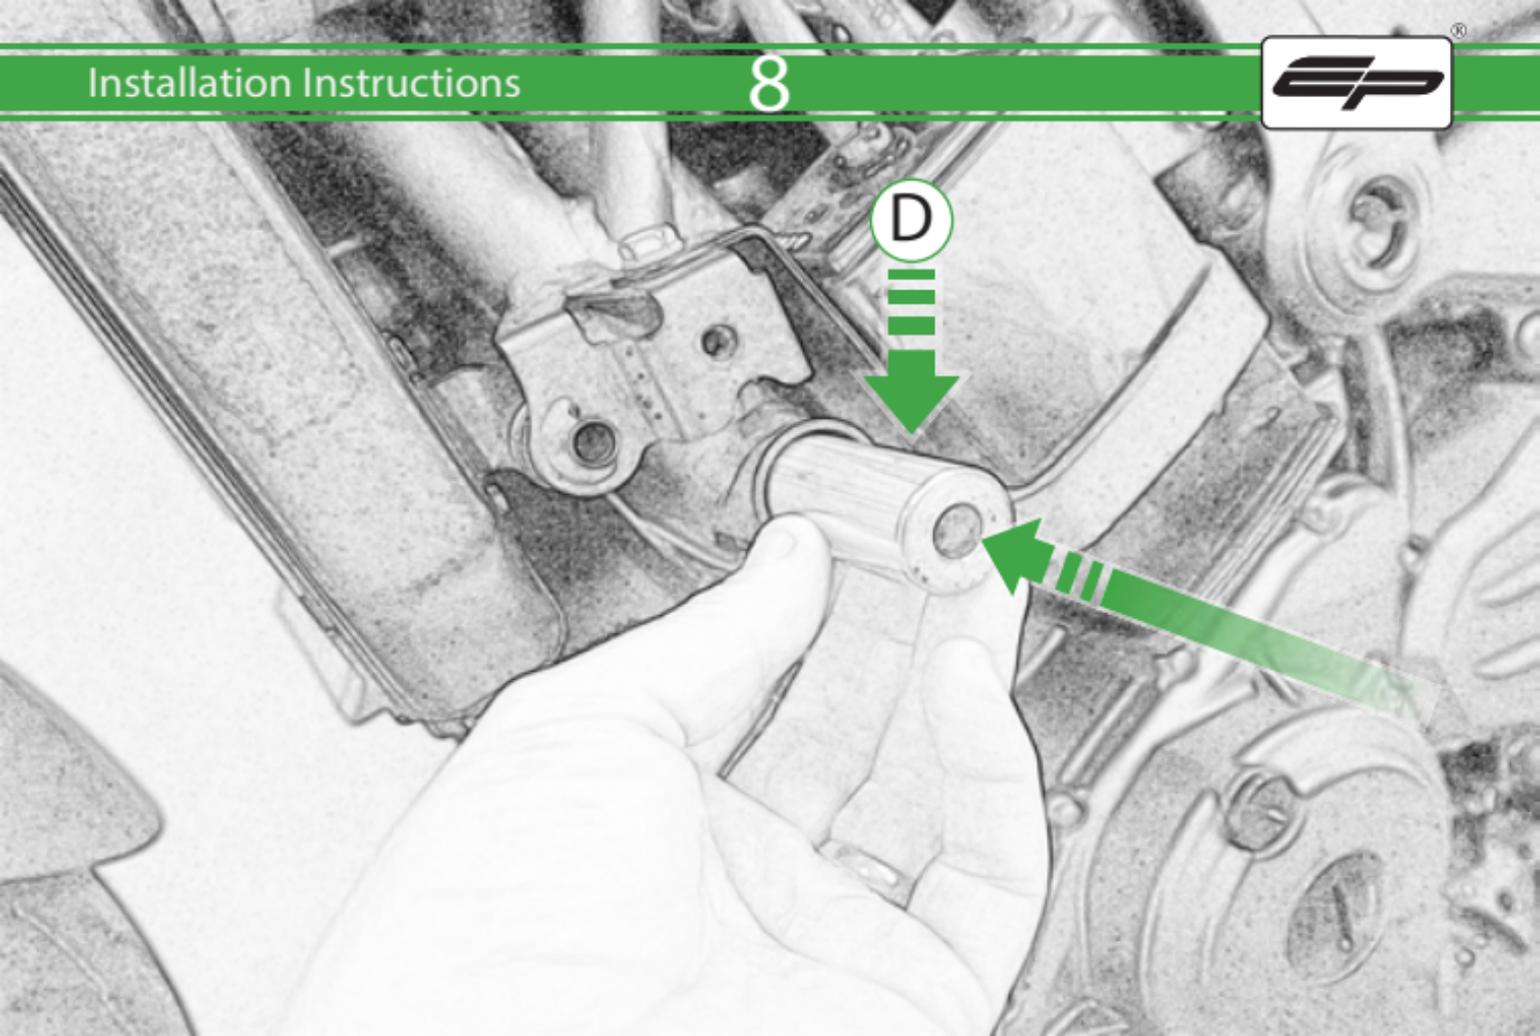




C

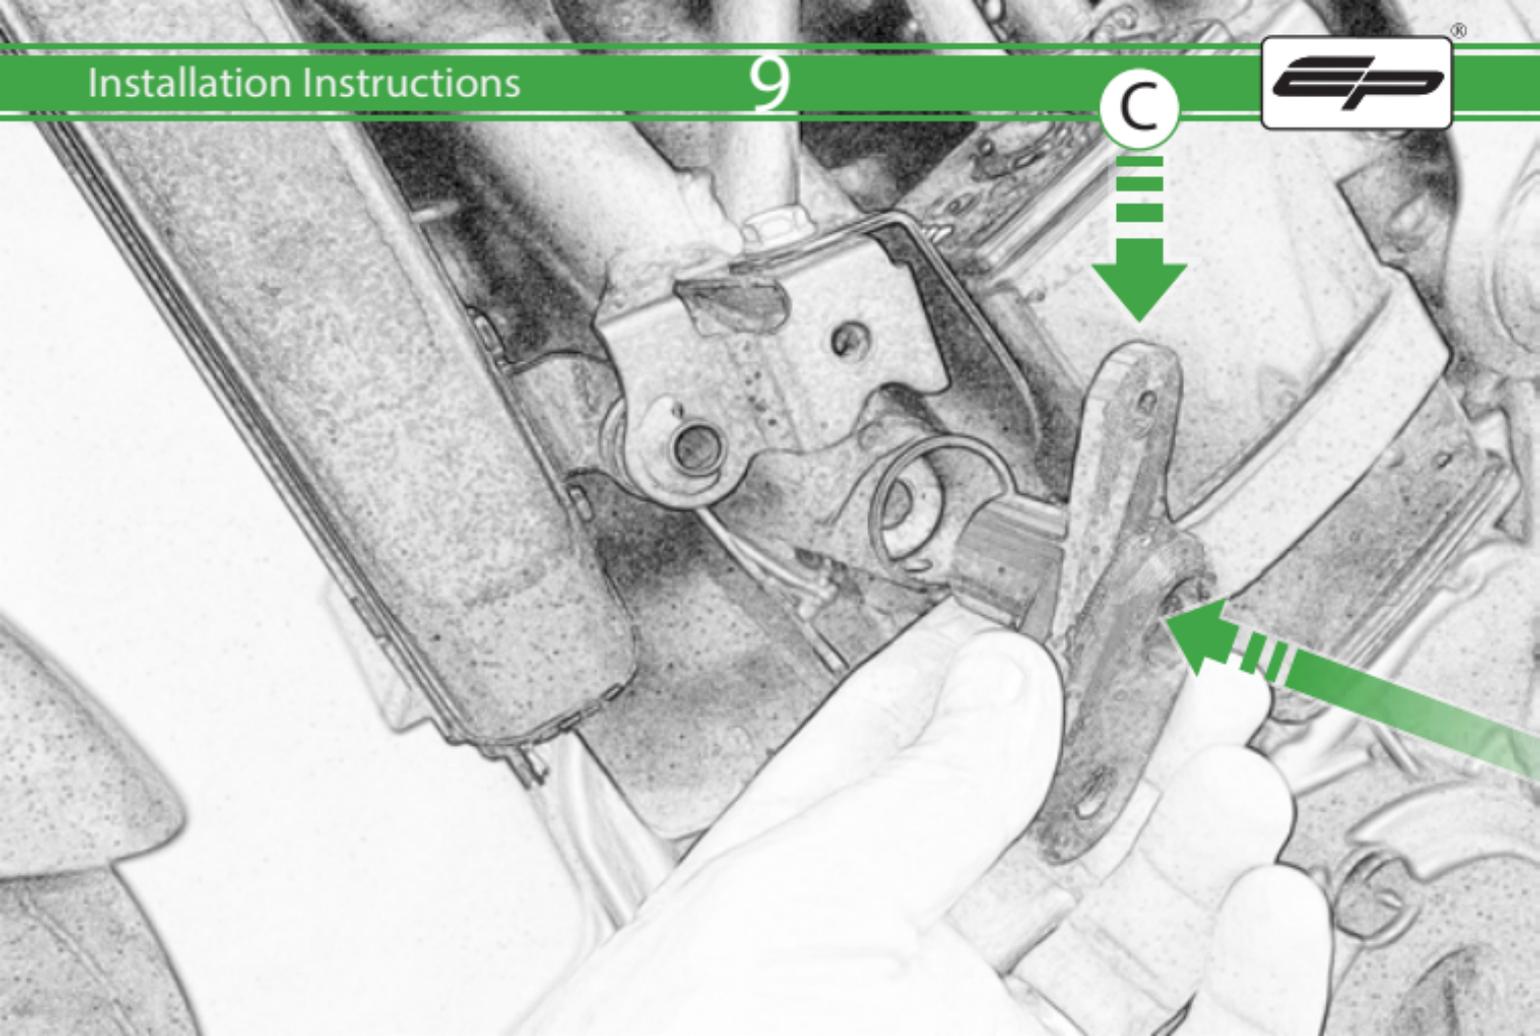





Caution

Rotate until the
holes are in line

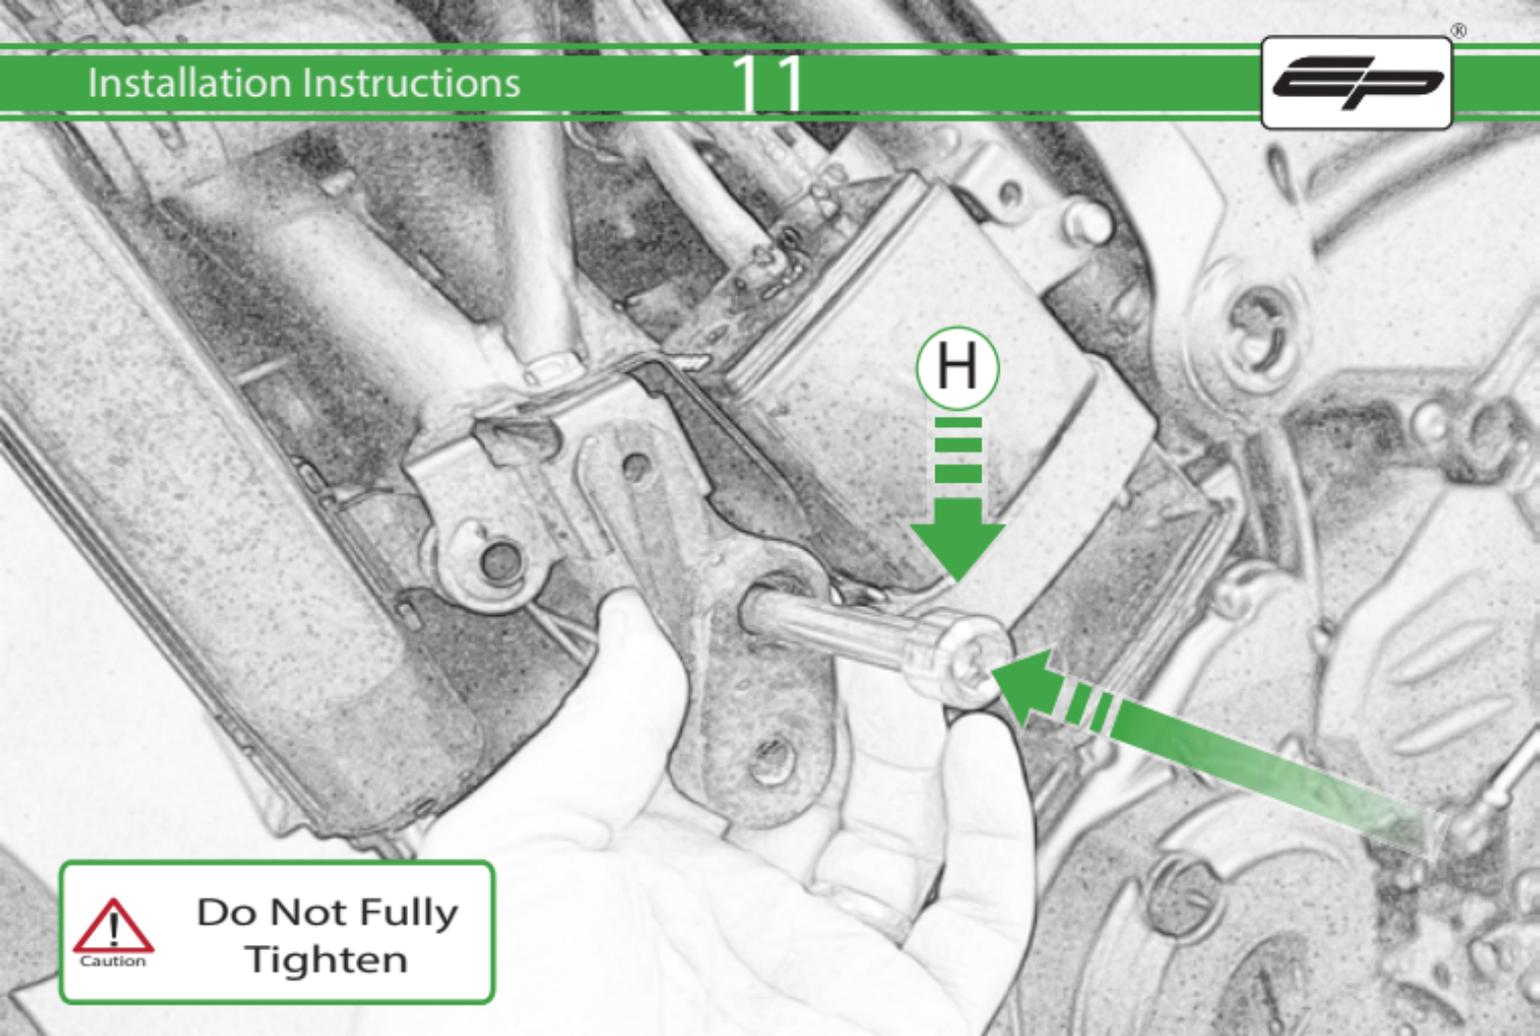



**Do Not Fully
Tighten**

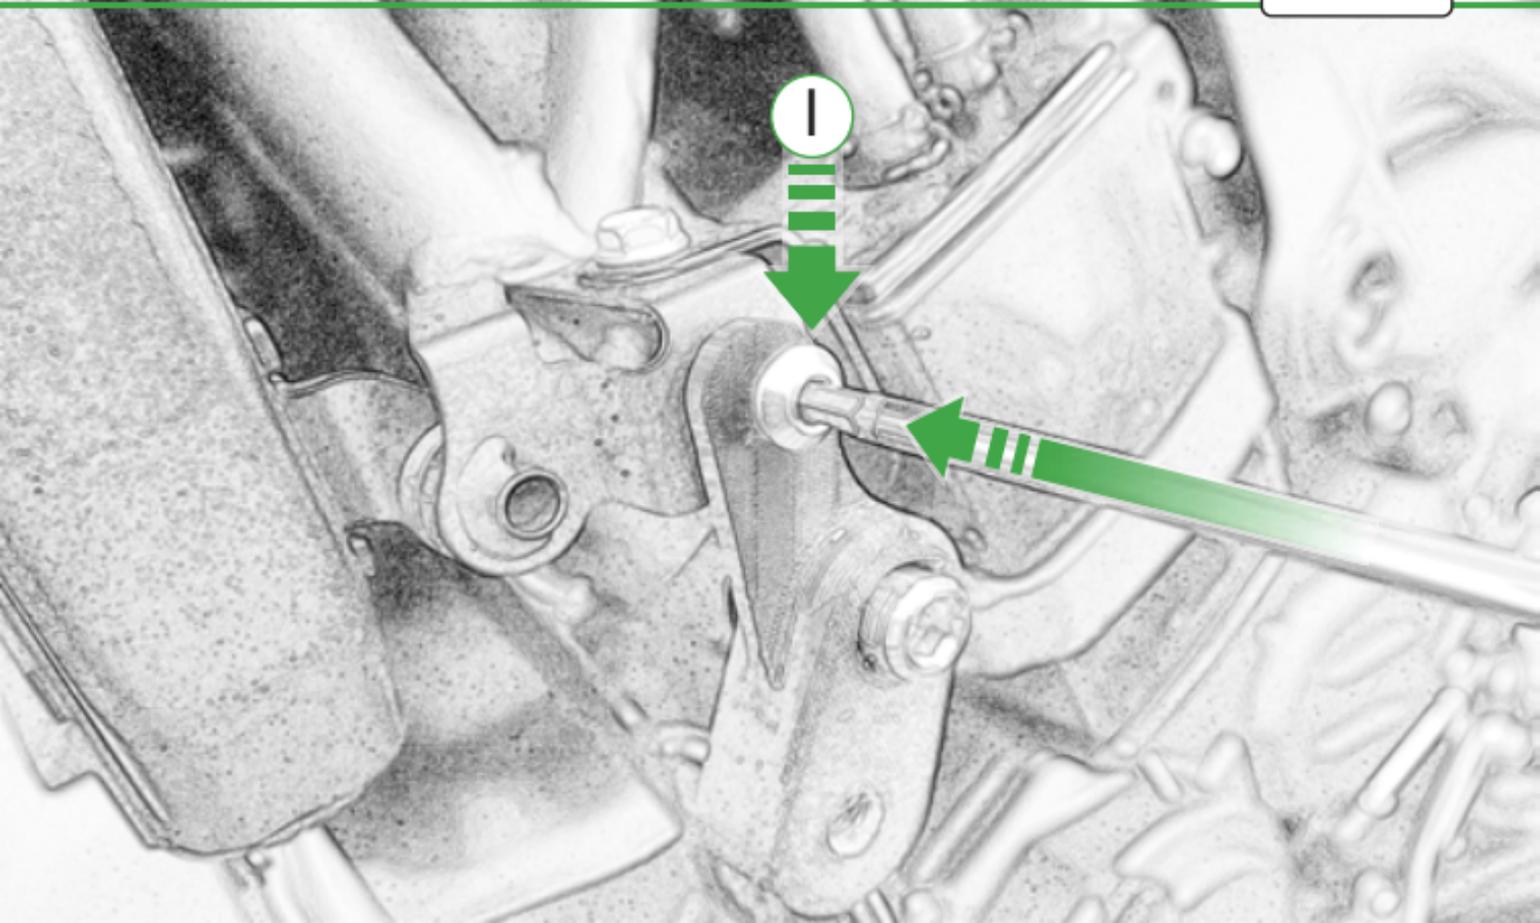

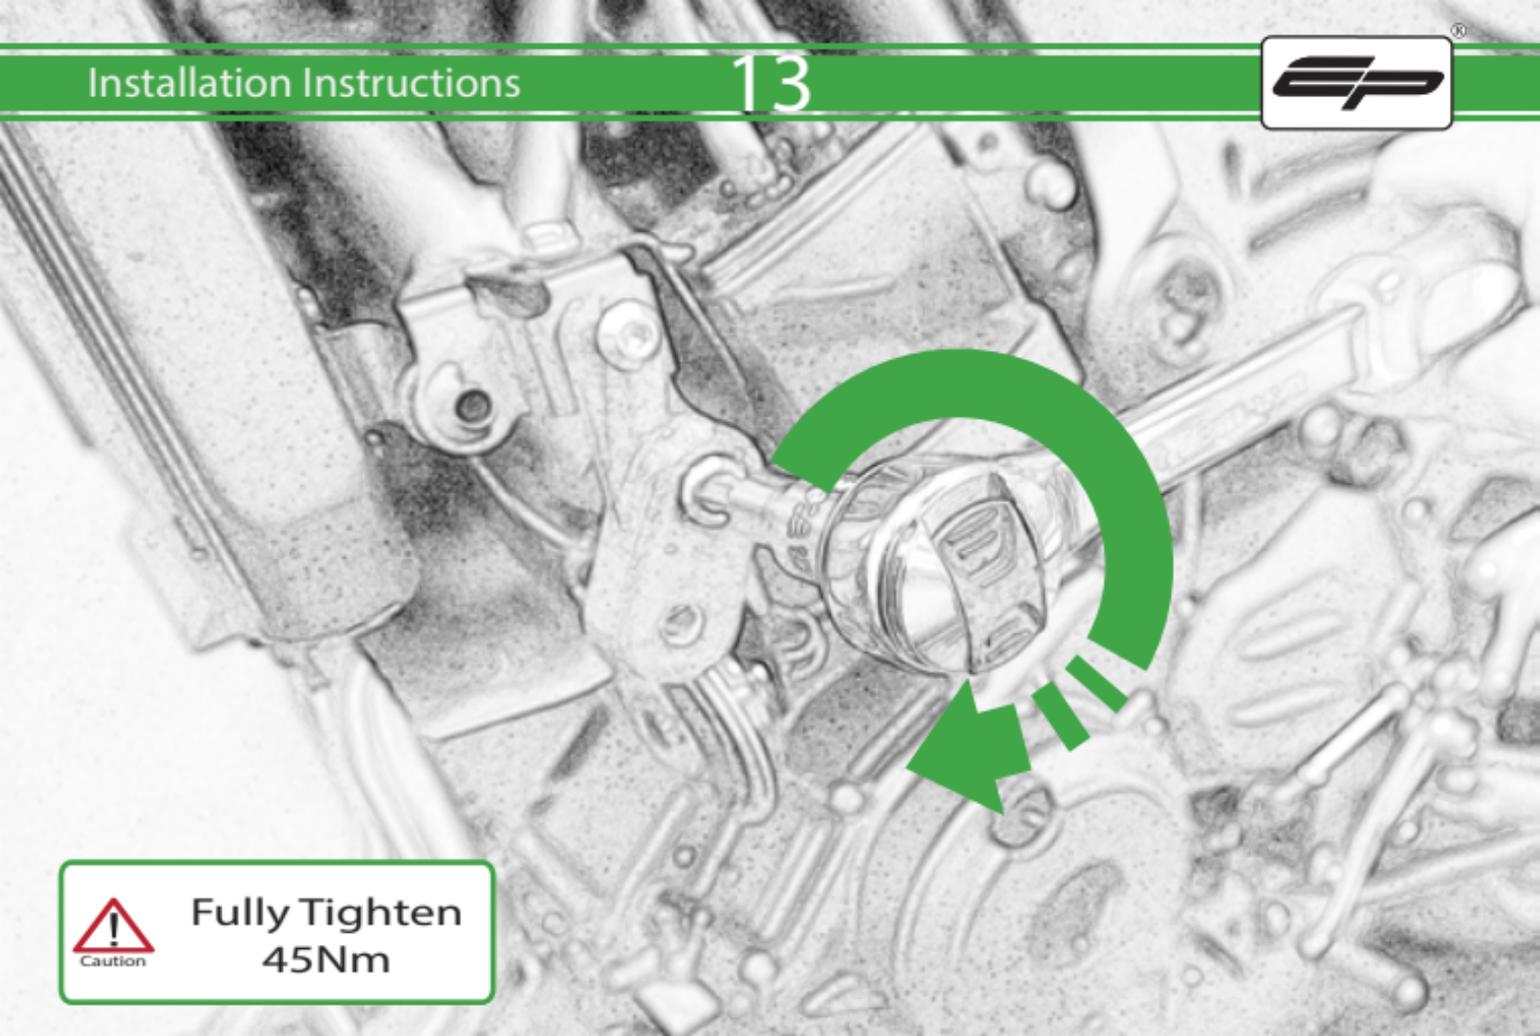

Fully Tighten
45Nm

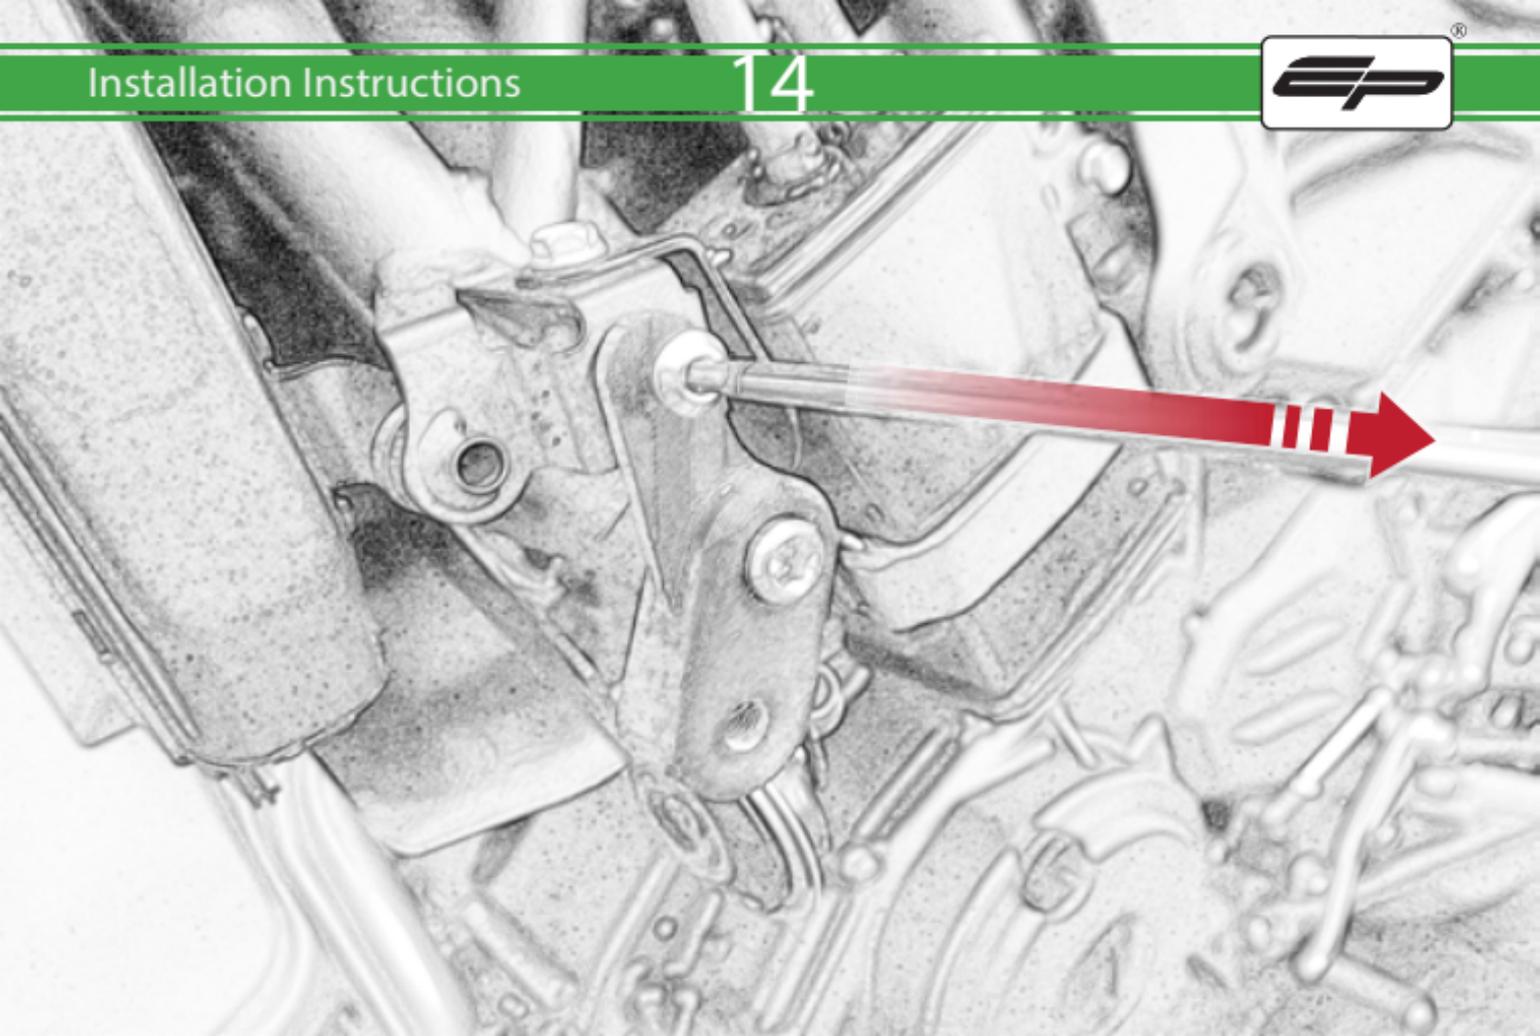

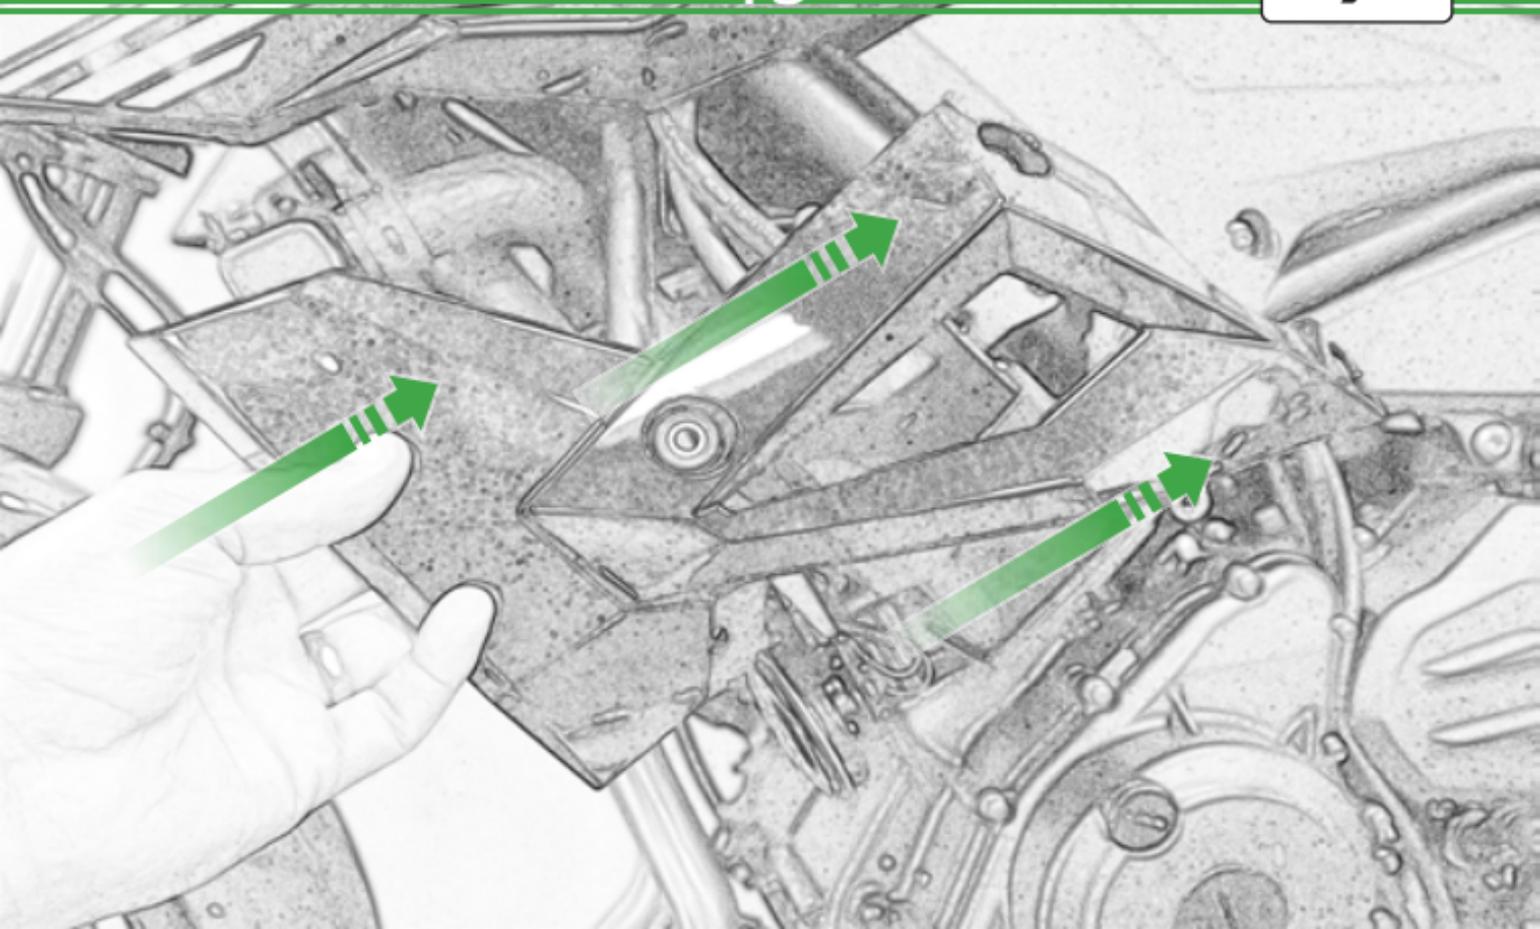






OEM PART




OEM PART

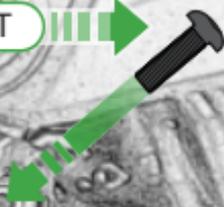

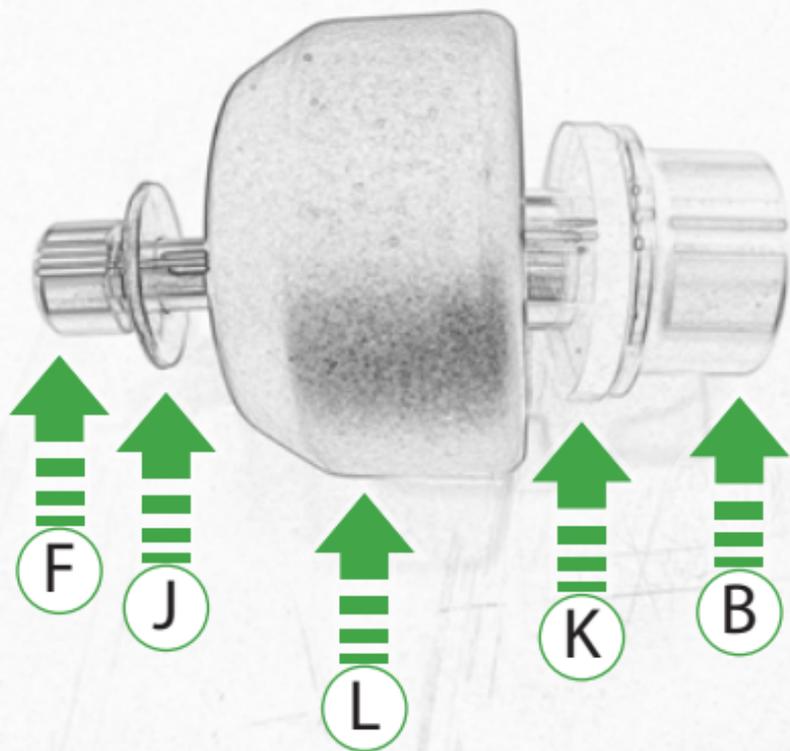

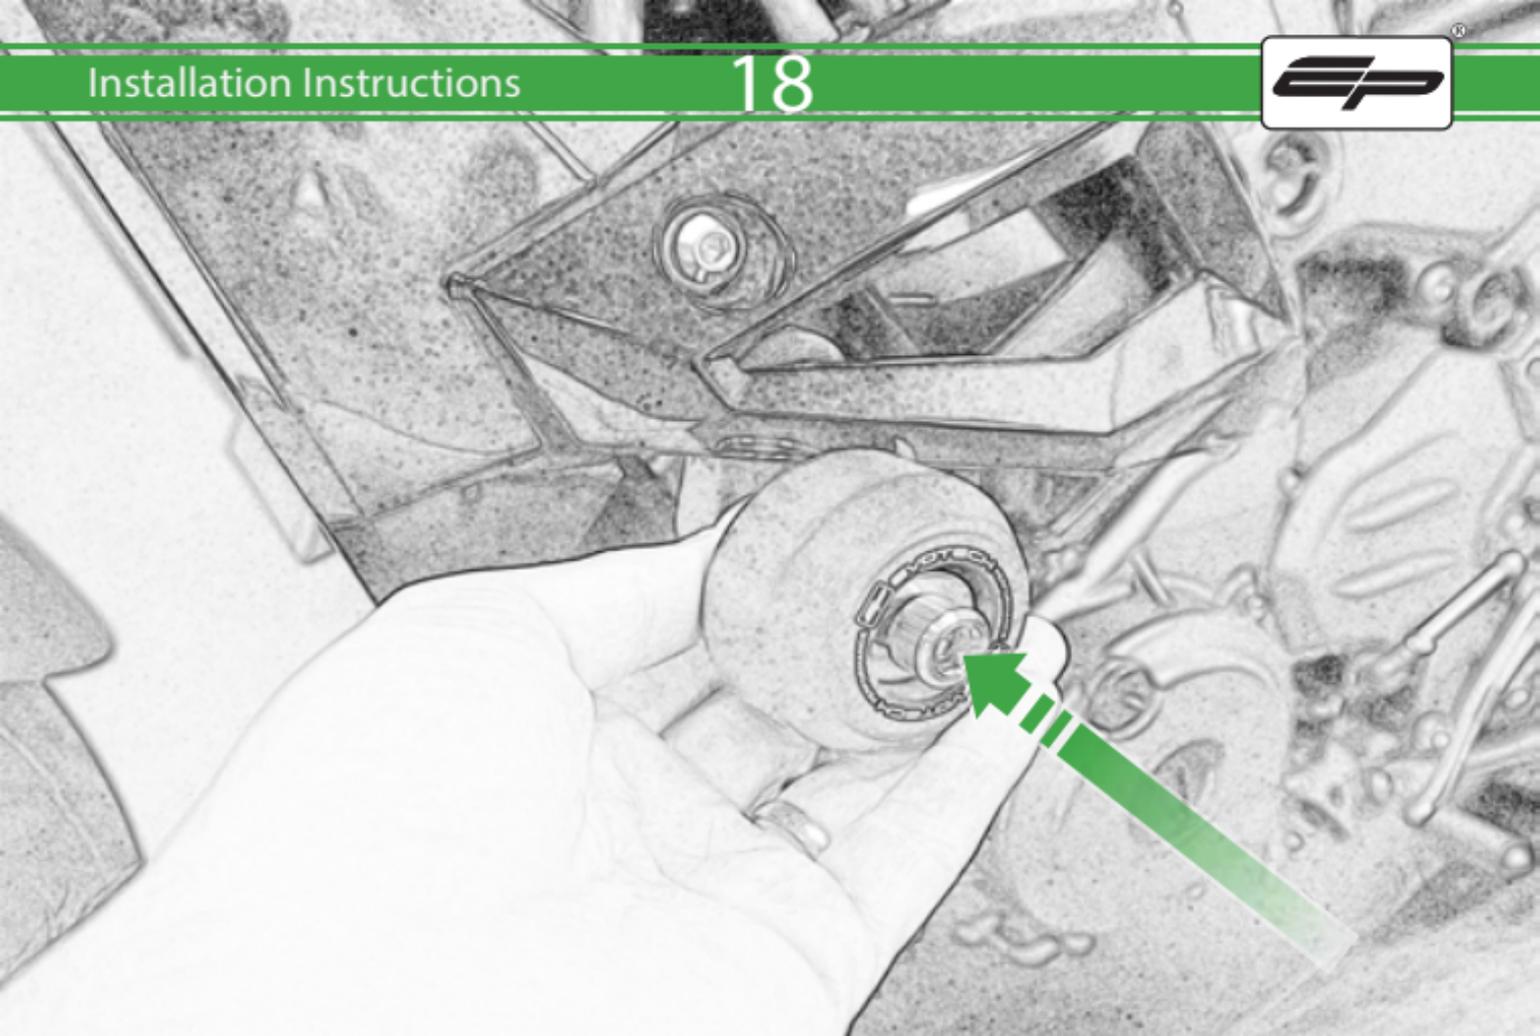

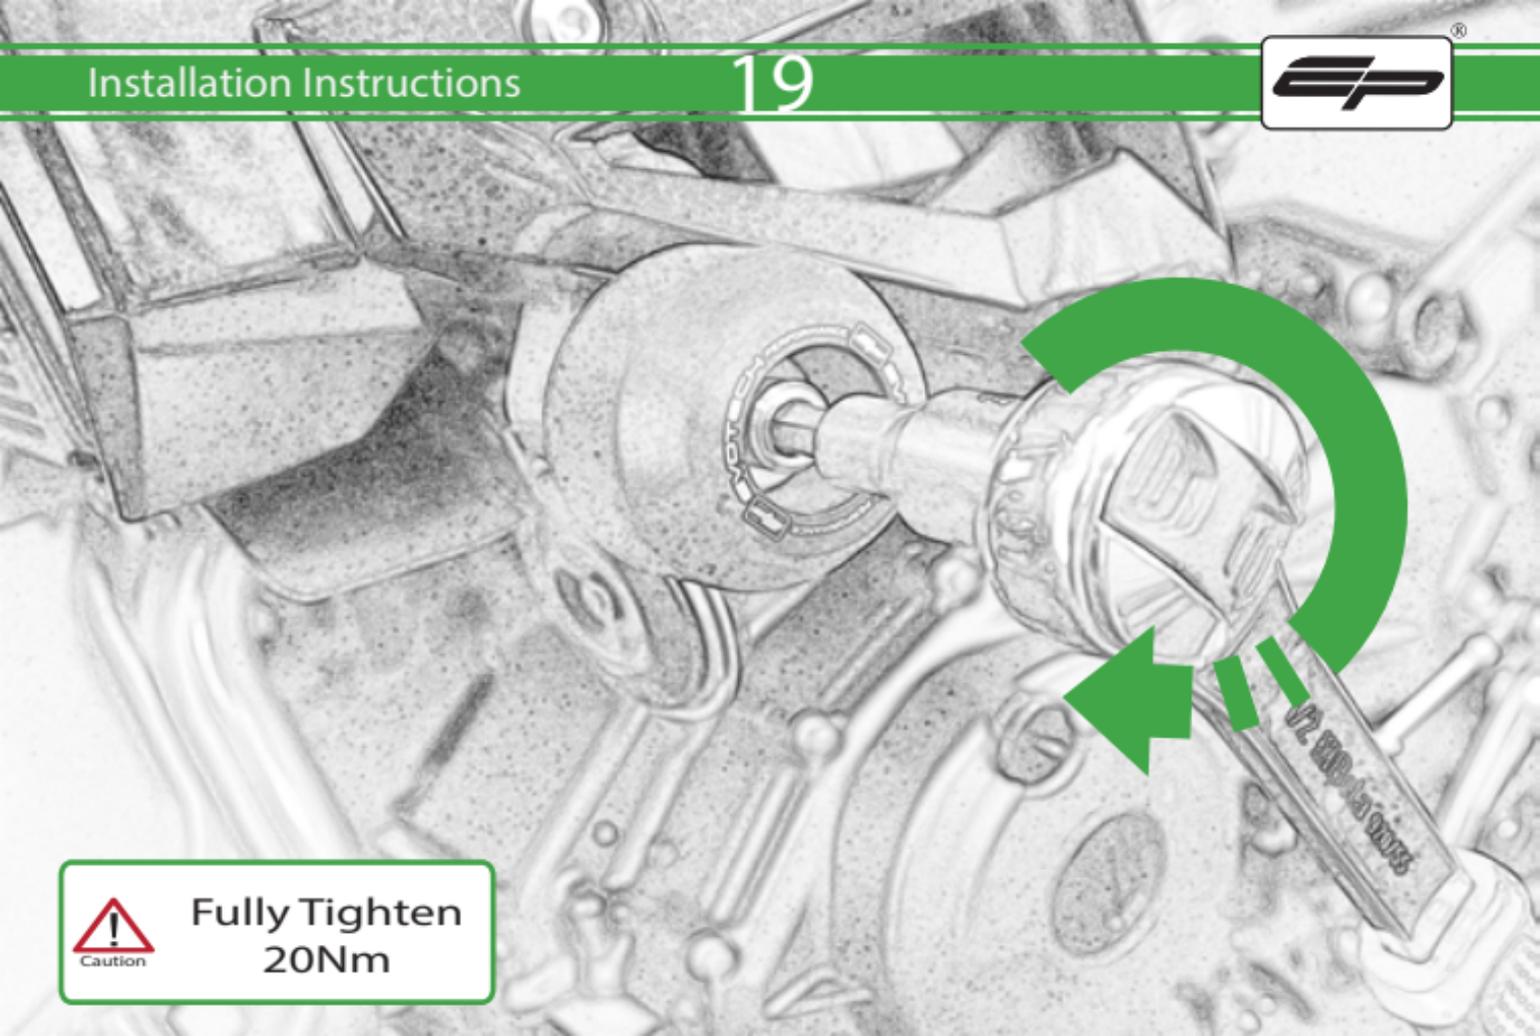

**Fully Tighten
20Nm**



E



I





 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com