



EVOTECH®
P E R F O R M A N C E

Installation Instructions





BMW R1200 RS RADIATOR GUARD

Product Reference - 12256


Kit Contents

- Ⓐ 1 x Radiator Guard
- Ⓑ 1 x 6mm Neoprene Foam
- Ⓒ 1 x 3mm Neoprene Foam
- Ⓓ 2 x M5 - 10 Socket Button Head Screws

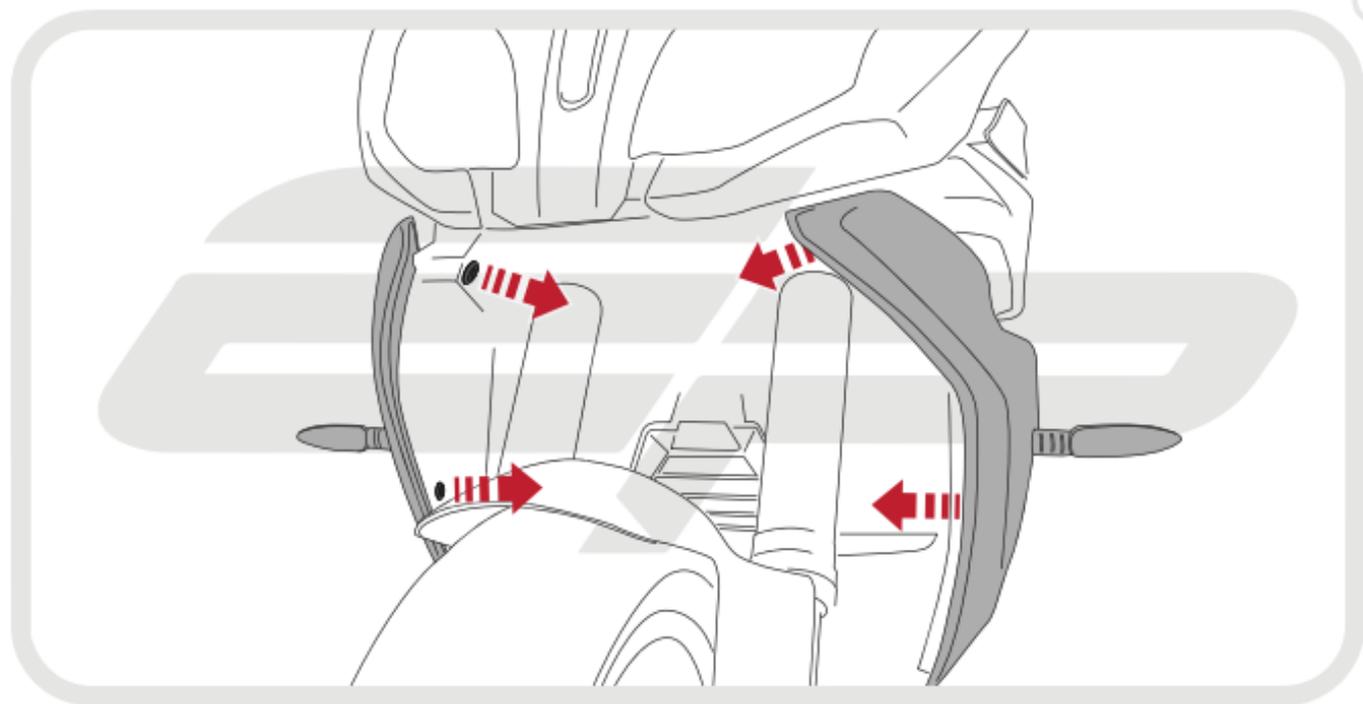


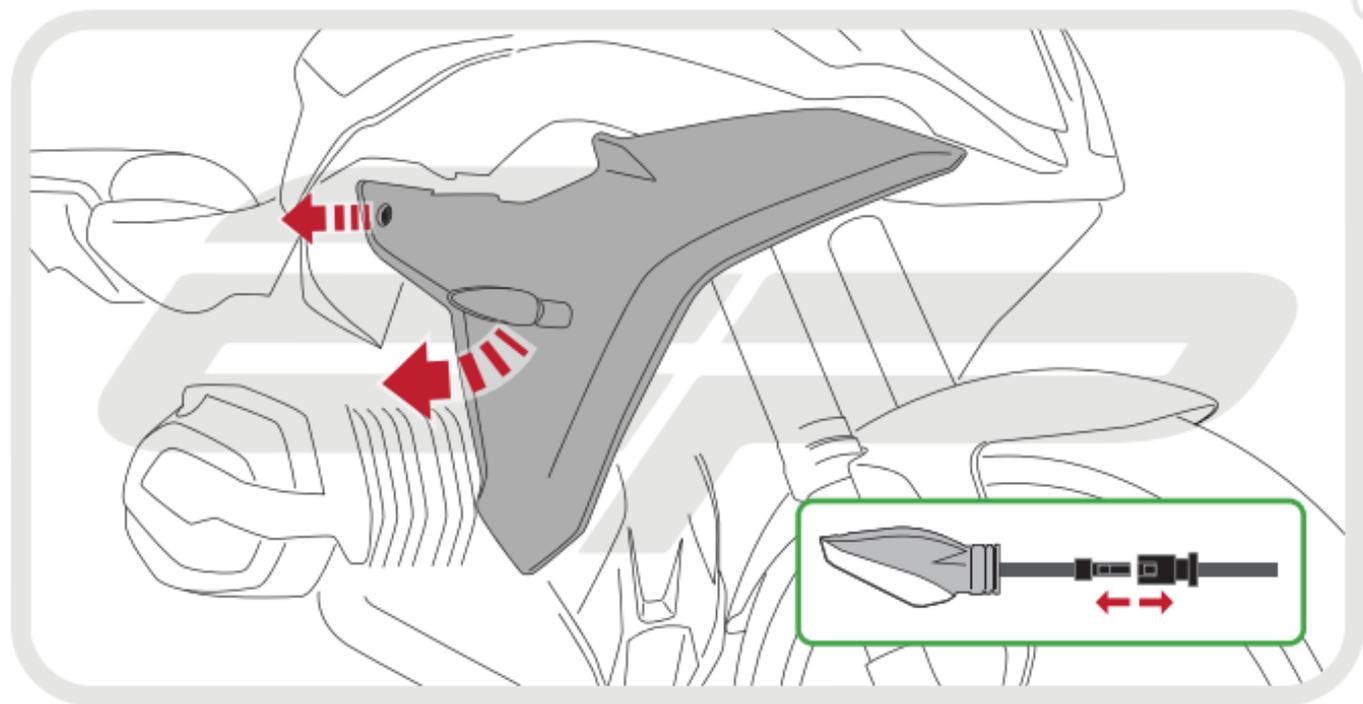



EVOTECH[®]
P E R F O R M A N C E

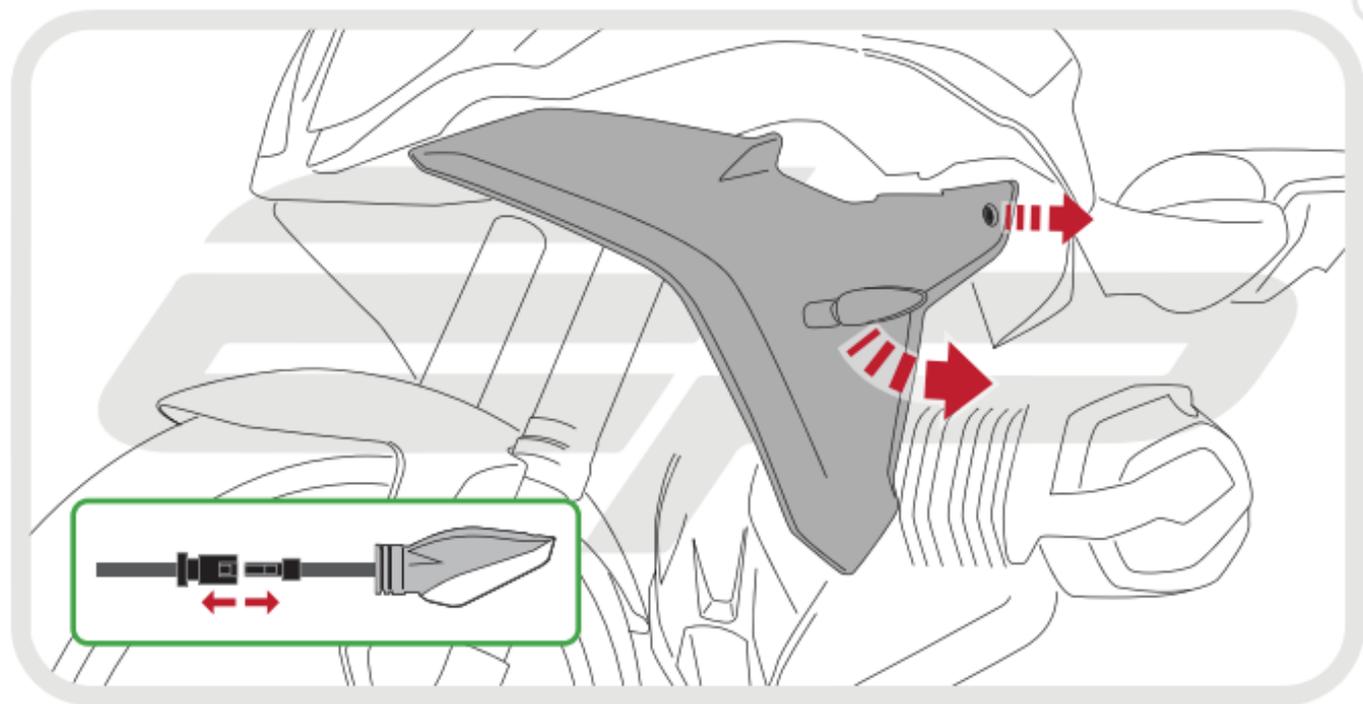


EVOTECH[®]
P E R F O R M A N C E

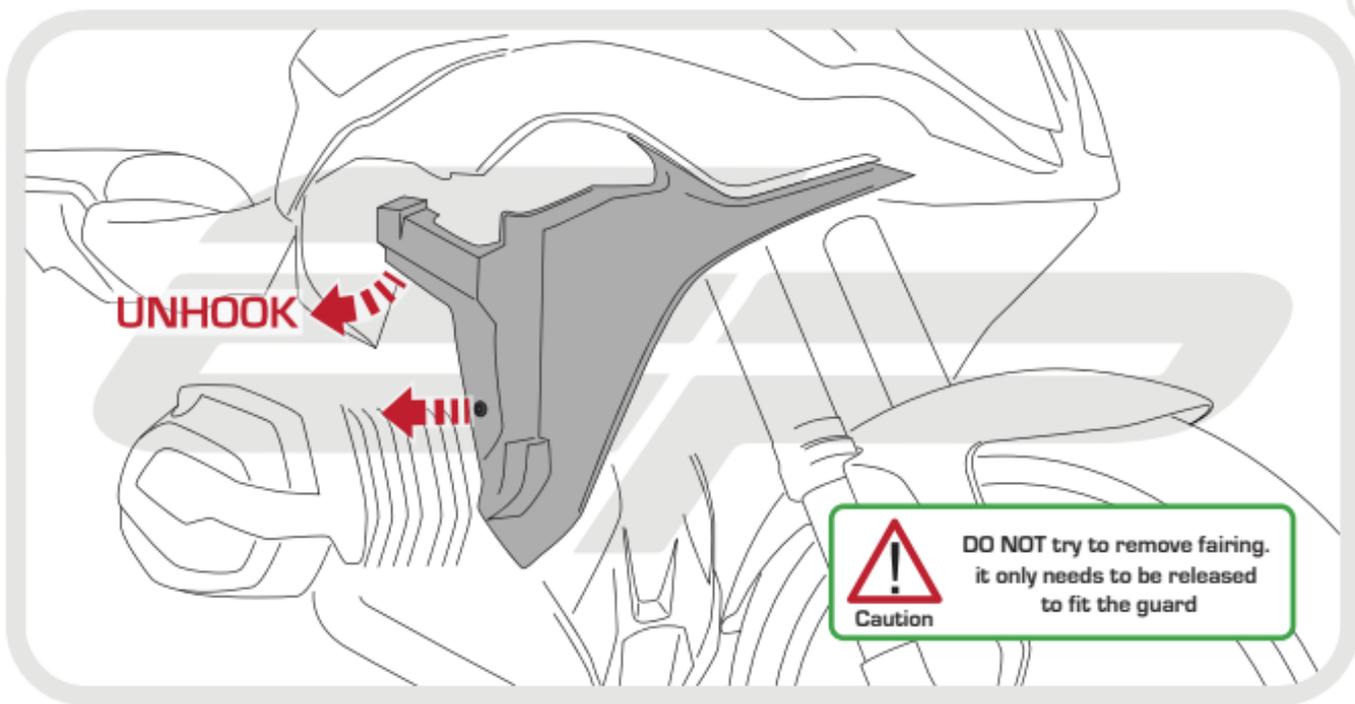


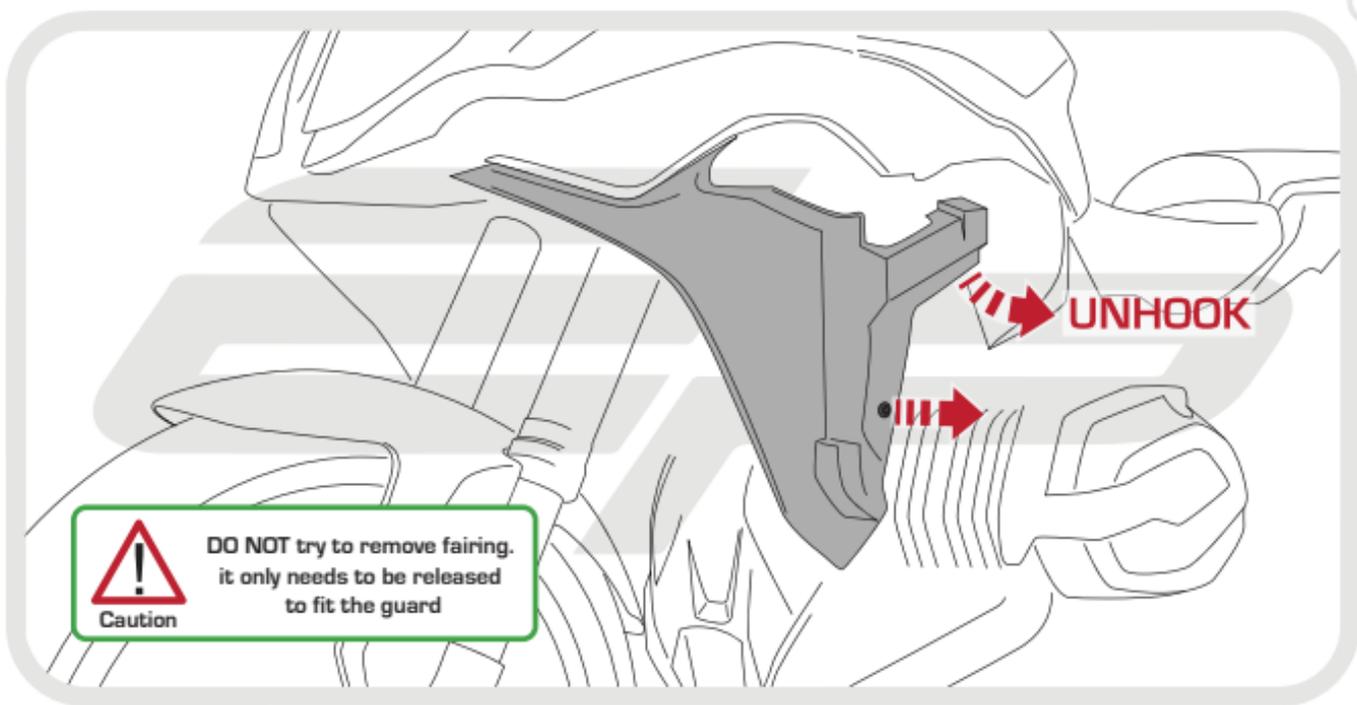


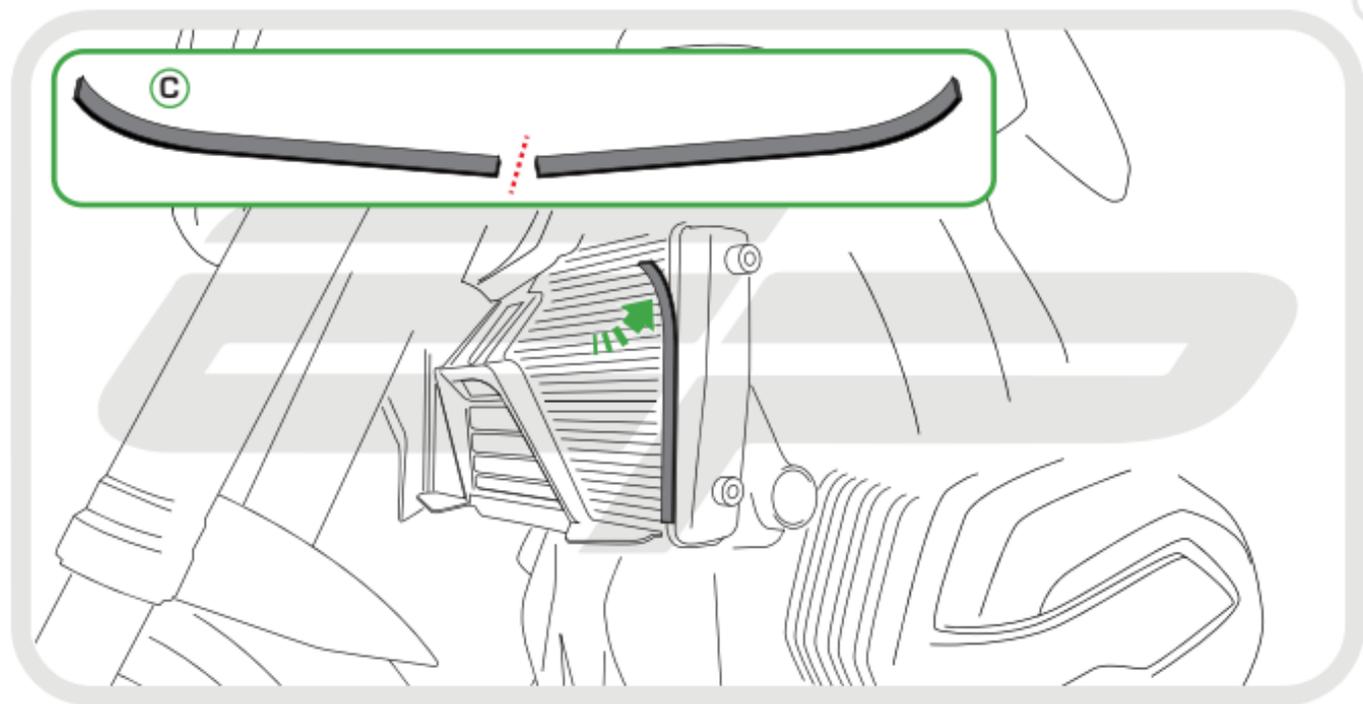



EVOTECH[®]
P E R F O R M A N C E

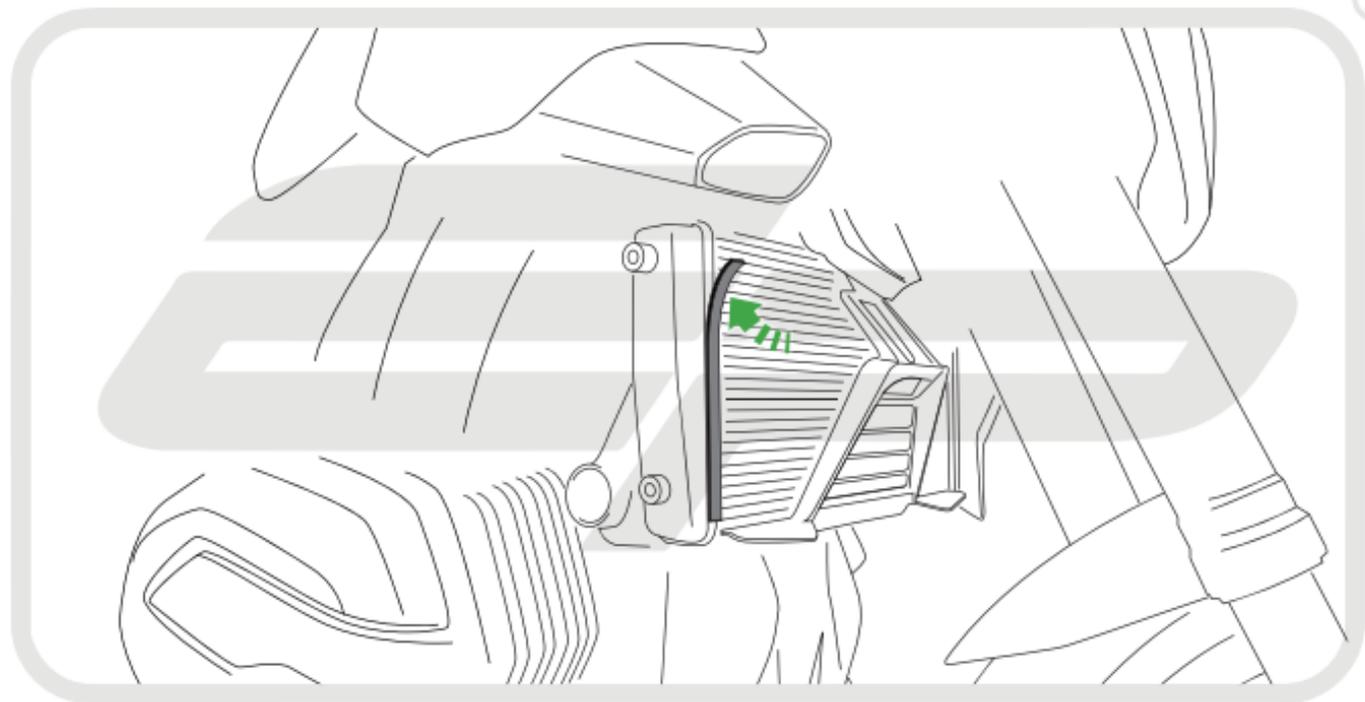


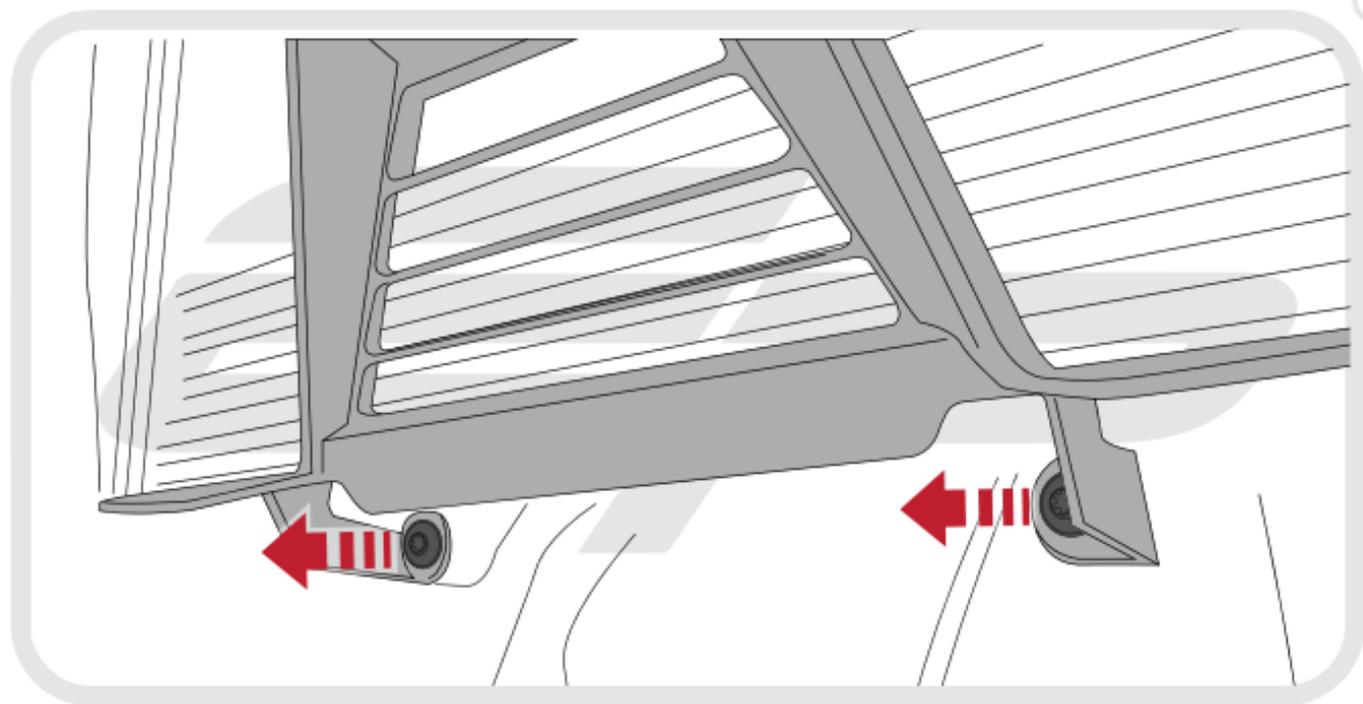

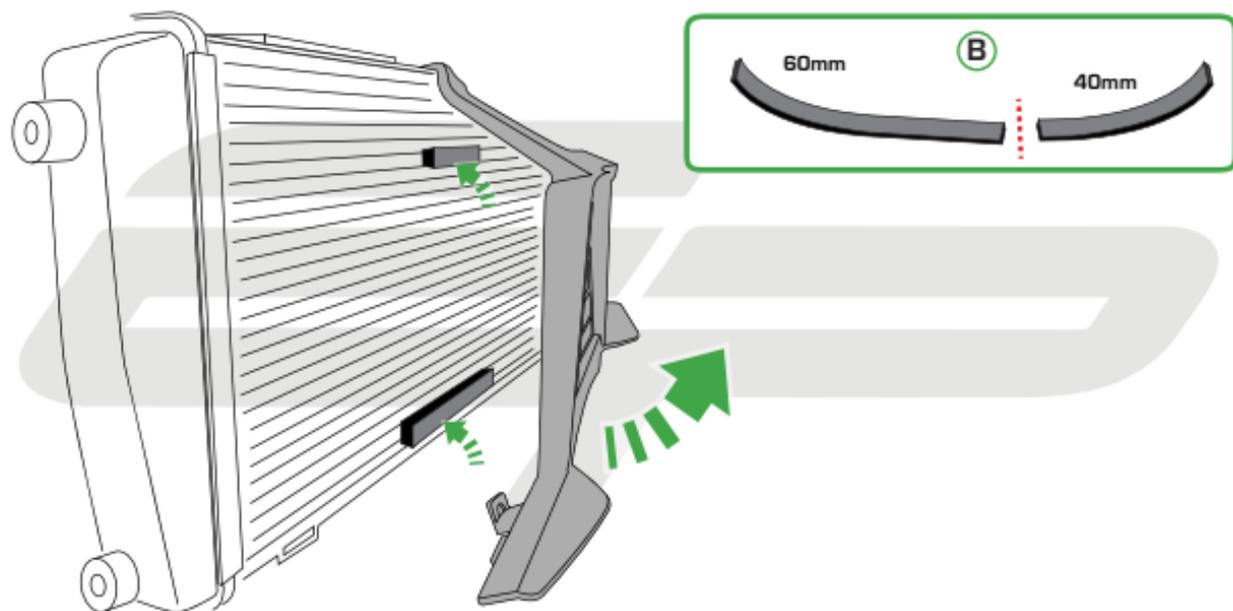

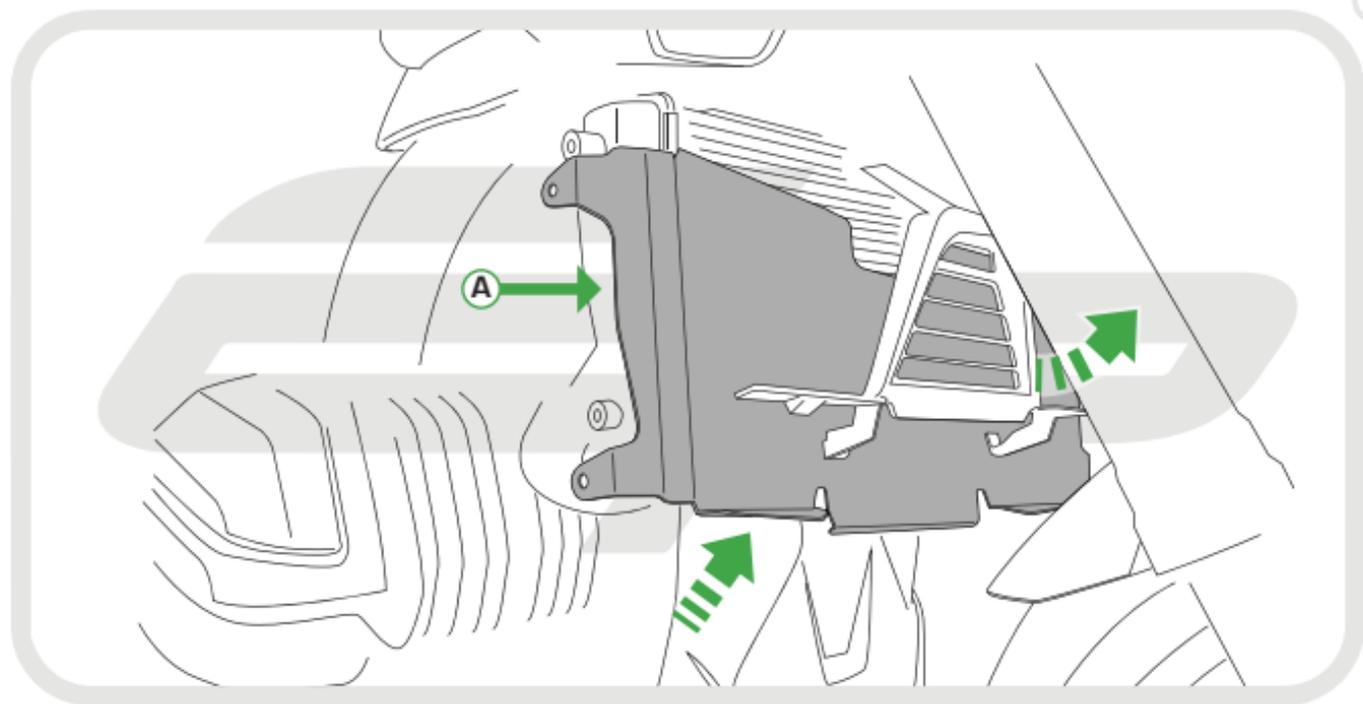


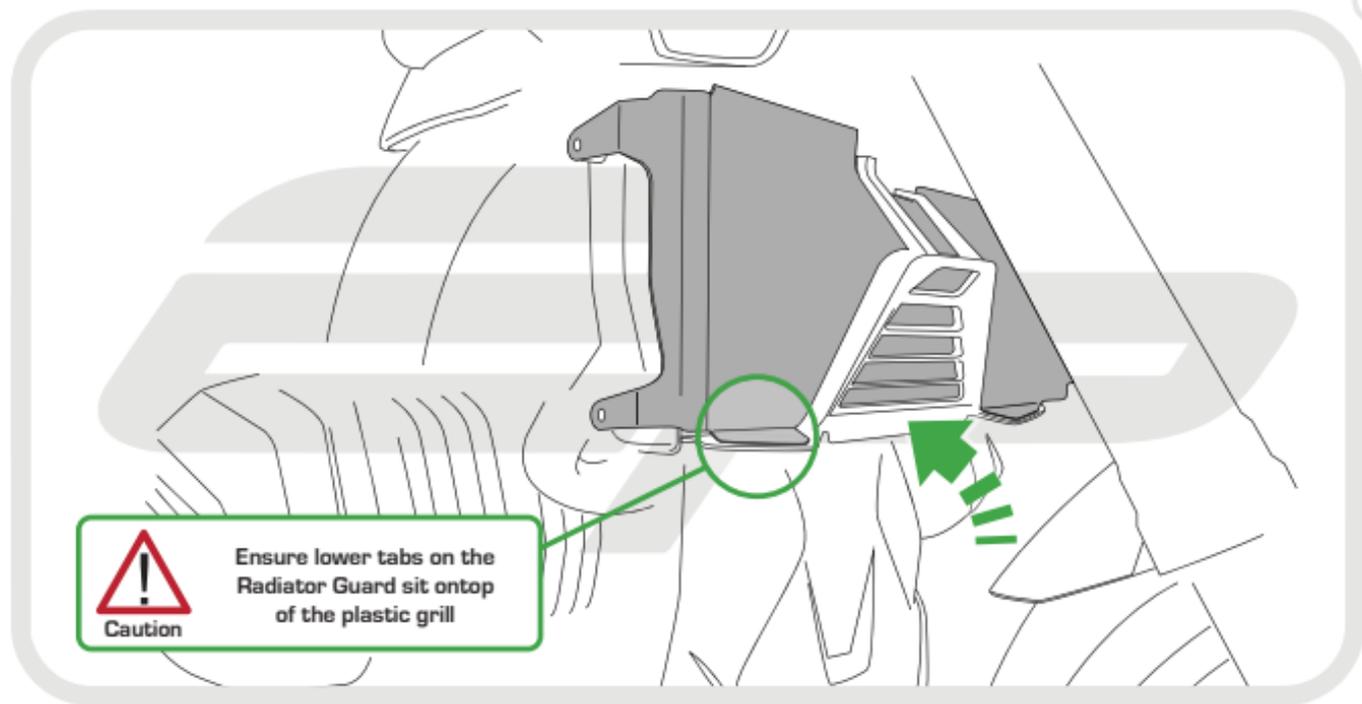


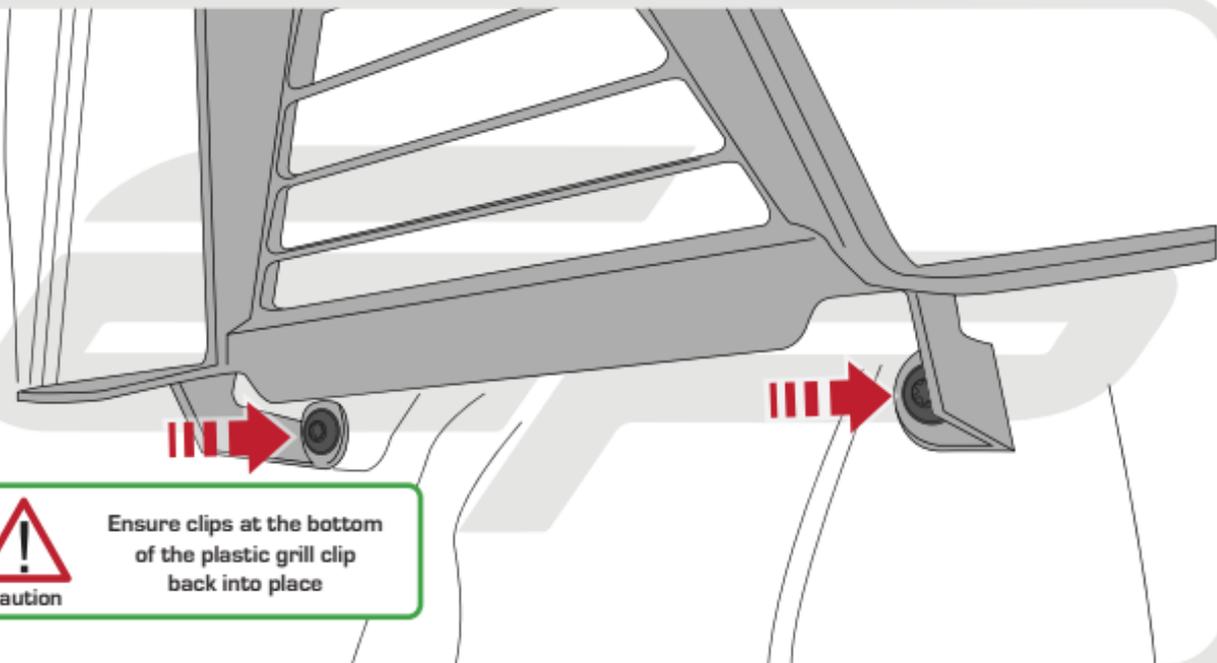


Caution


Ensure clips at the bottom
of the plastic grill clip
back into place

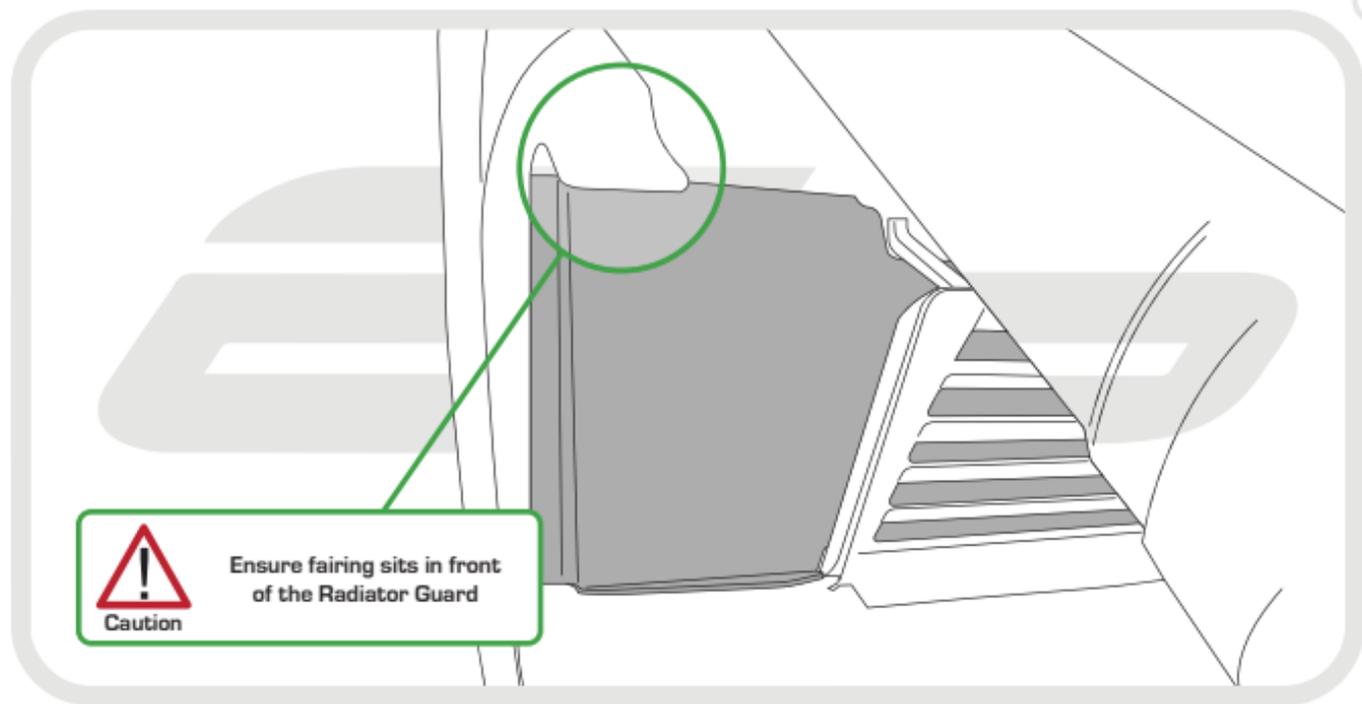

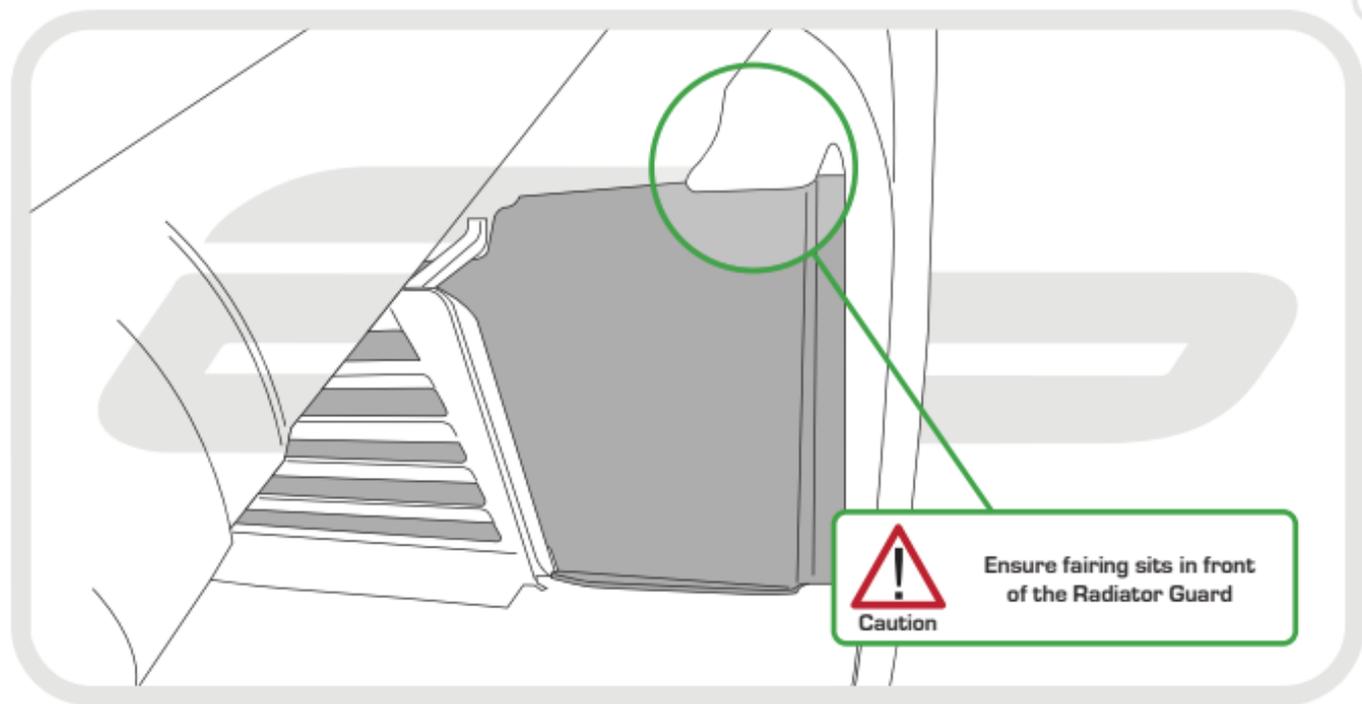

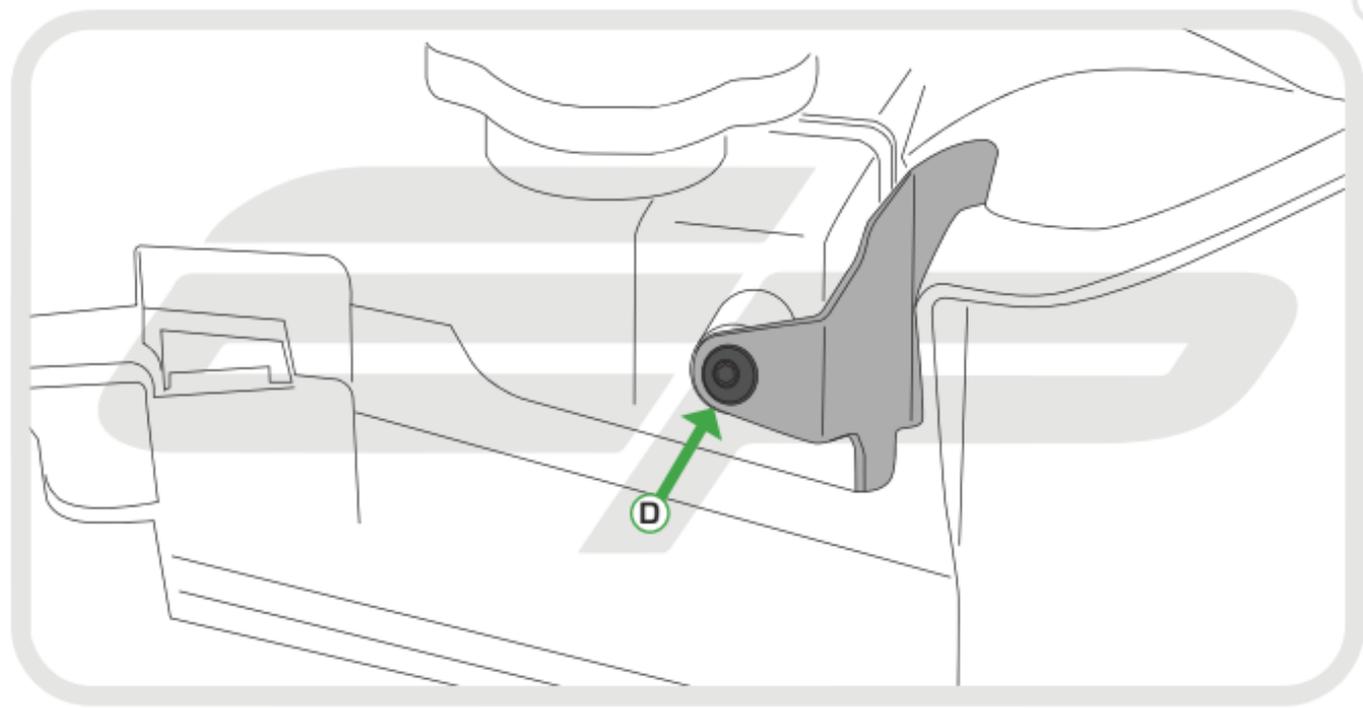

EVOTECH[®]
P E R F O R M A N C E

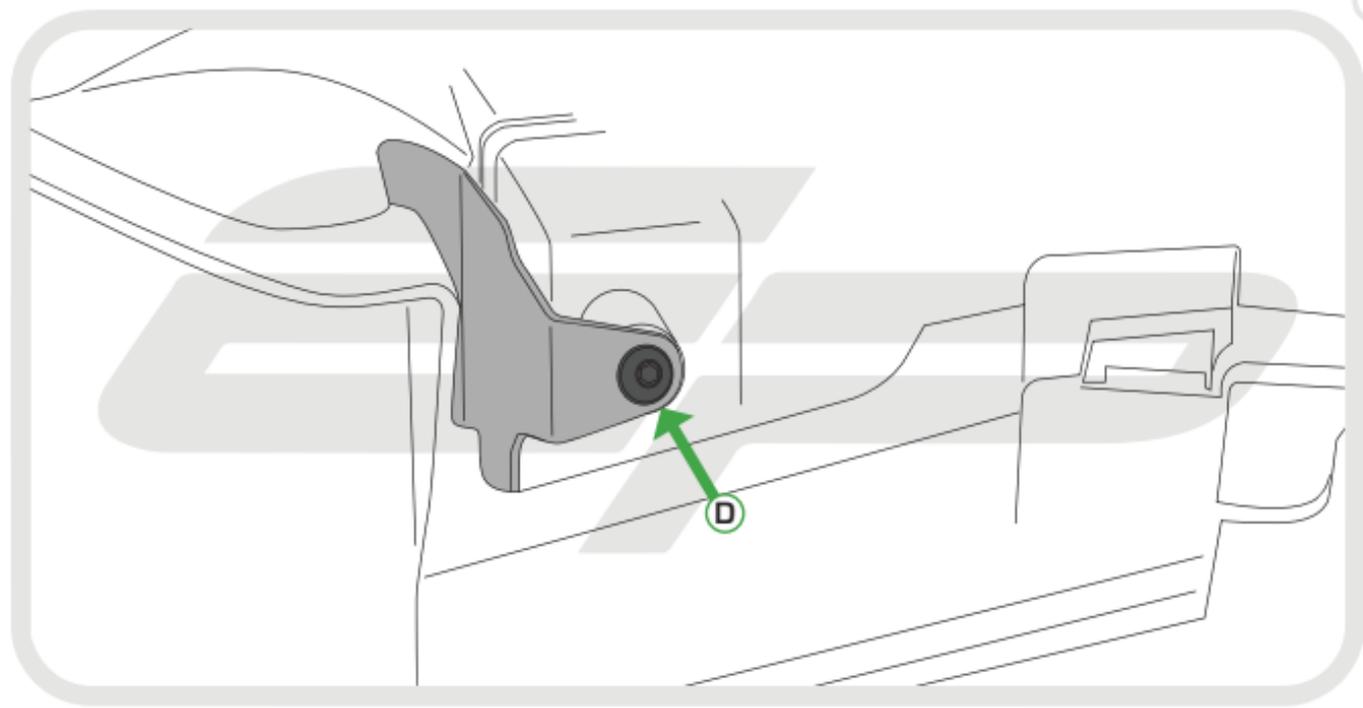



Reverse Stages

5 - 1



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com