



EVOTECH®
P E R F O R M A N C E


Installation Instructions

TRIUMPH SPEED TRIPLE 1050 2016 TAIL TIDY

Product Reference - 13124



Kit Contents

- | | |
|------------------------------------|---|
| A 1 x RH Arm | H 1 x Reflector Bracket |
| B 1 x LH Arm | I 2 x M6 - 16 Cap Head Screws |
| C 1 x Licence Plate Bracket | J 2 x M5 - 12 Countersink Screws |
| D 1 x Cover Plate | K 2 x M3 - 12 Button Head Screws |
| E 1 x LED Light Unit | L 2 x Male Bullet Connectors |
| F 1 x Wiring Connector | M 5 x M5 - 12 Button Head Screws |
| G 1 x Reflector | N 5 x Cable Ties |

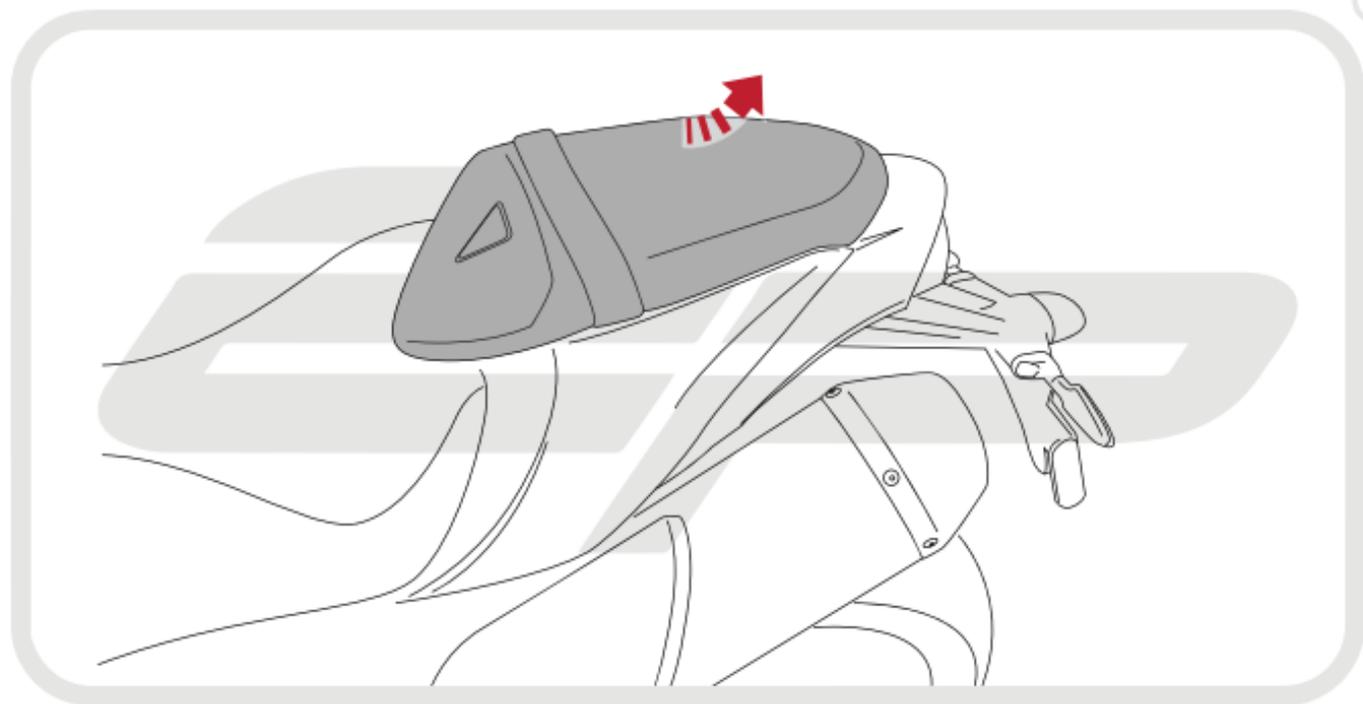



®

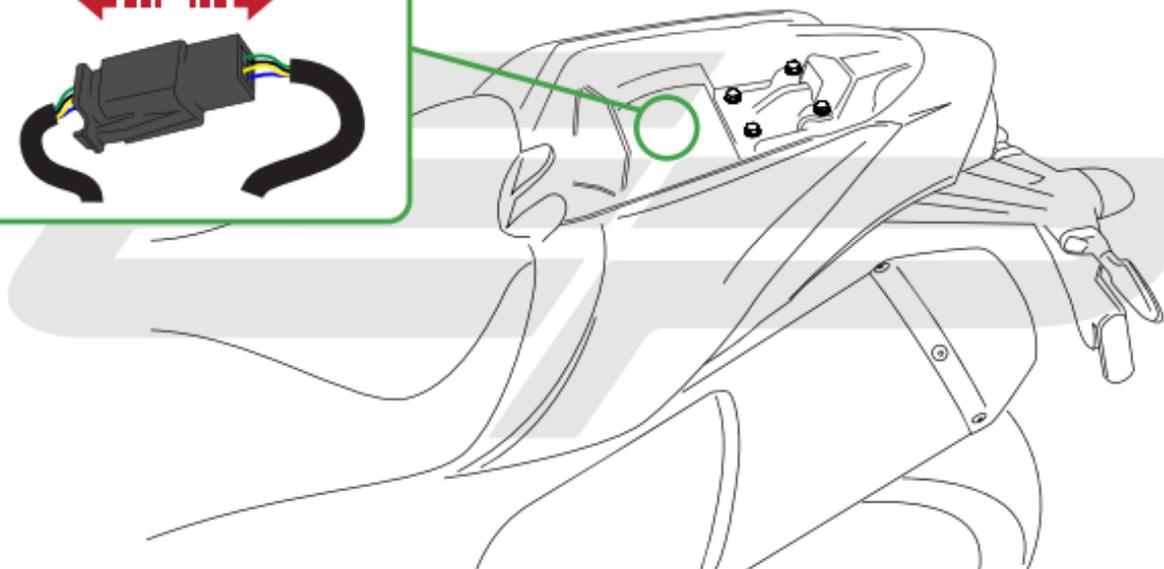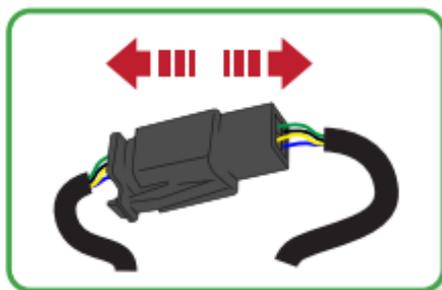



EVOTECH[®]
P E R F O R M A N C E









Star washers require cutting to remove.

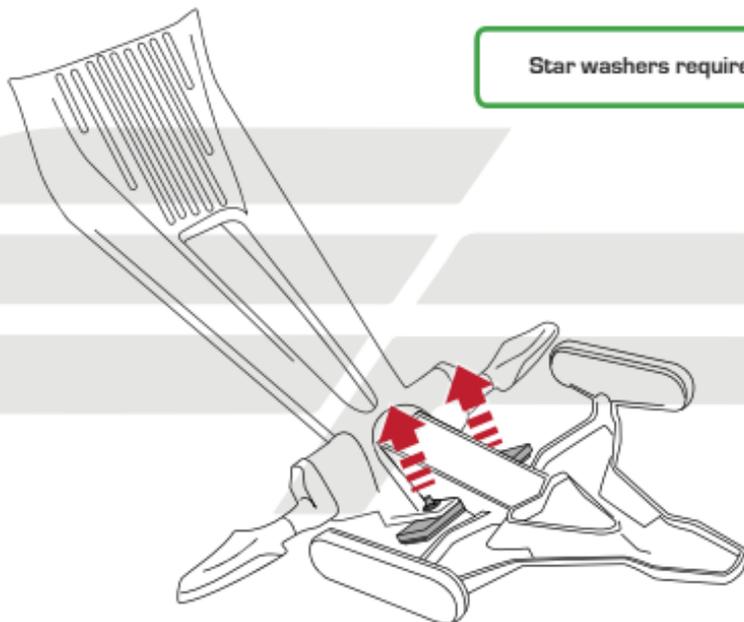


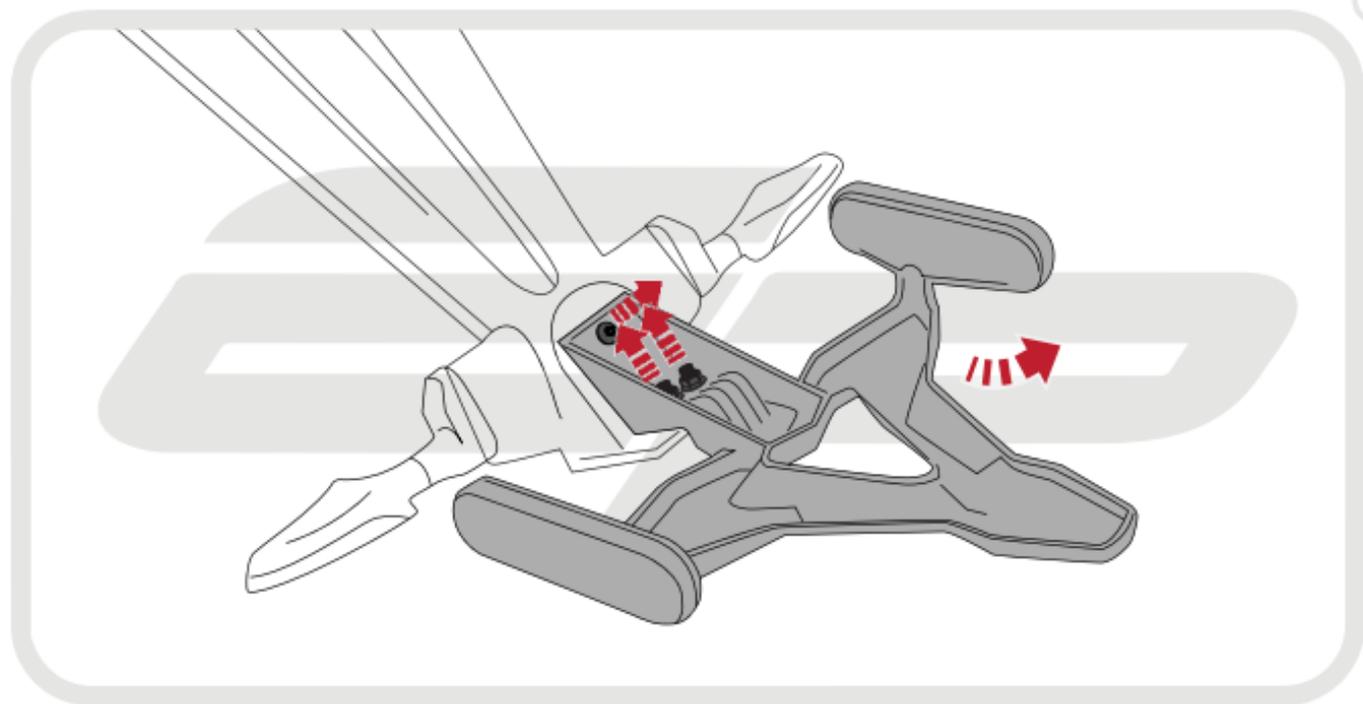


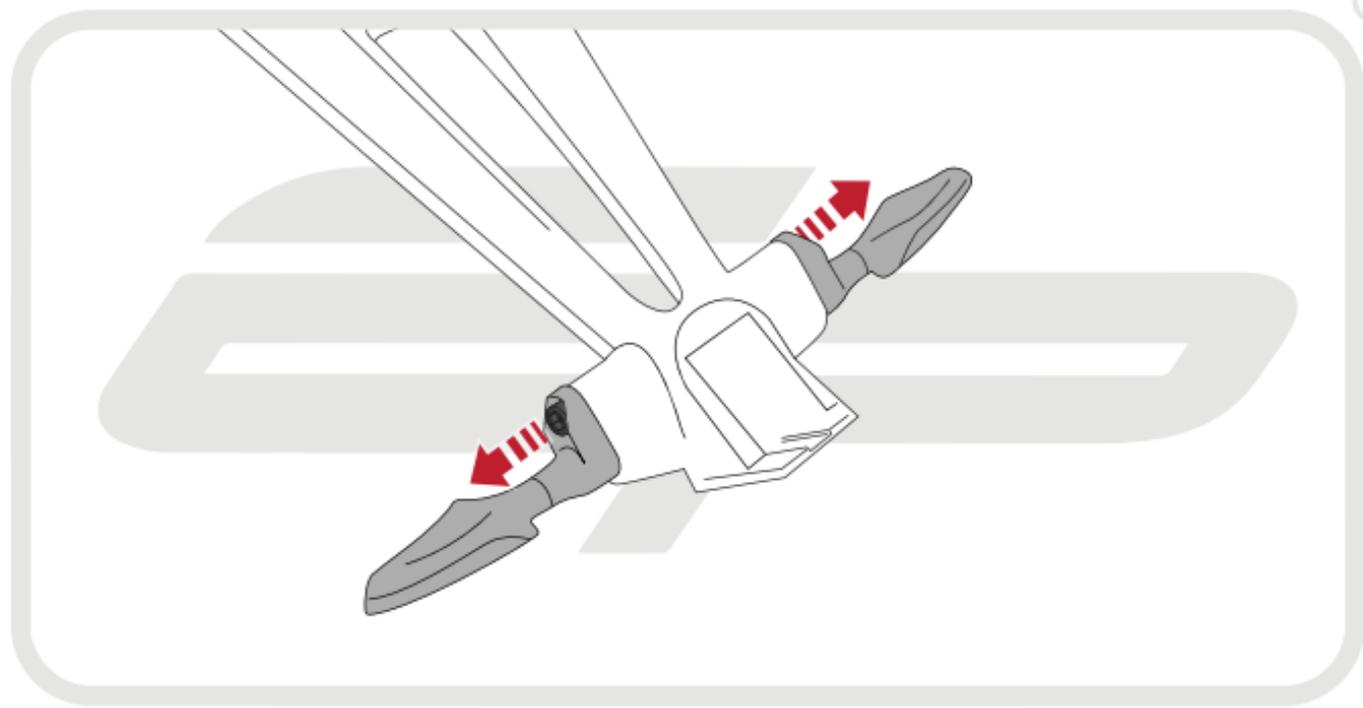


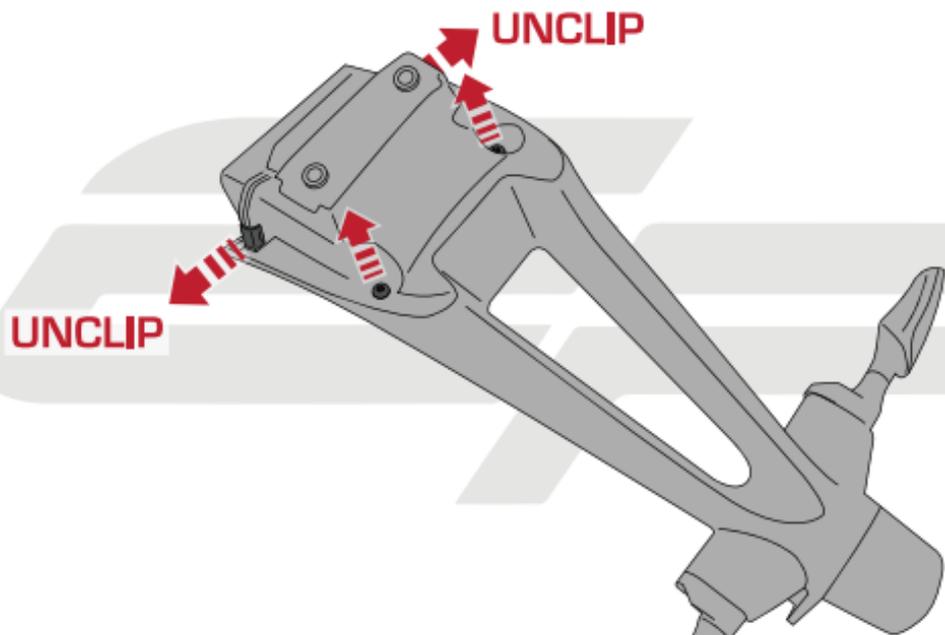


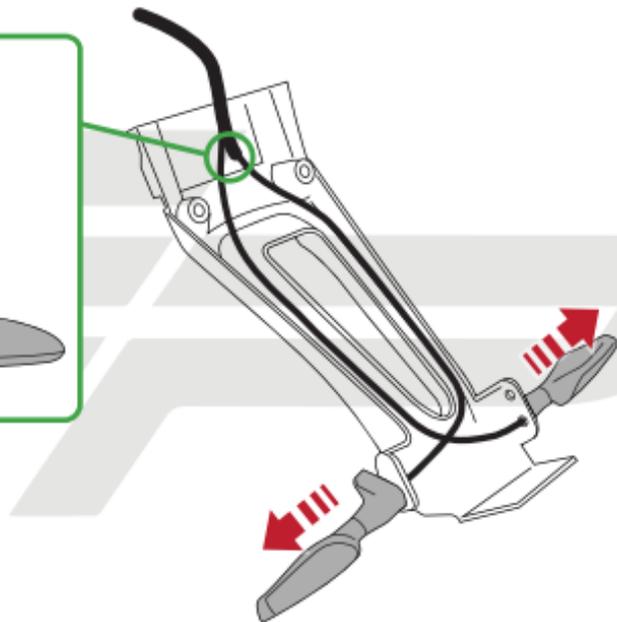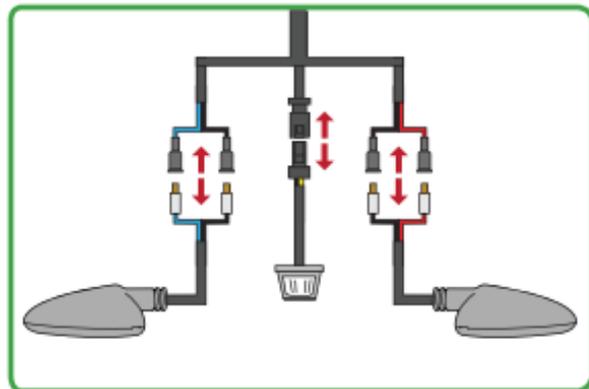


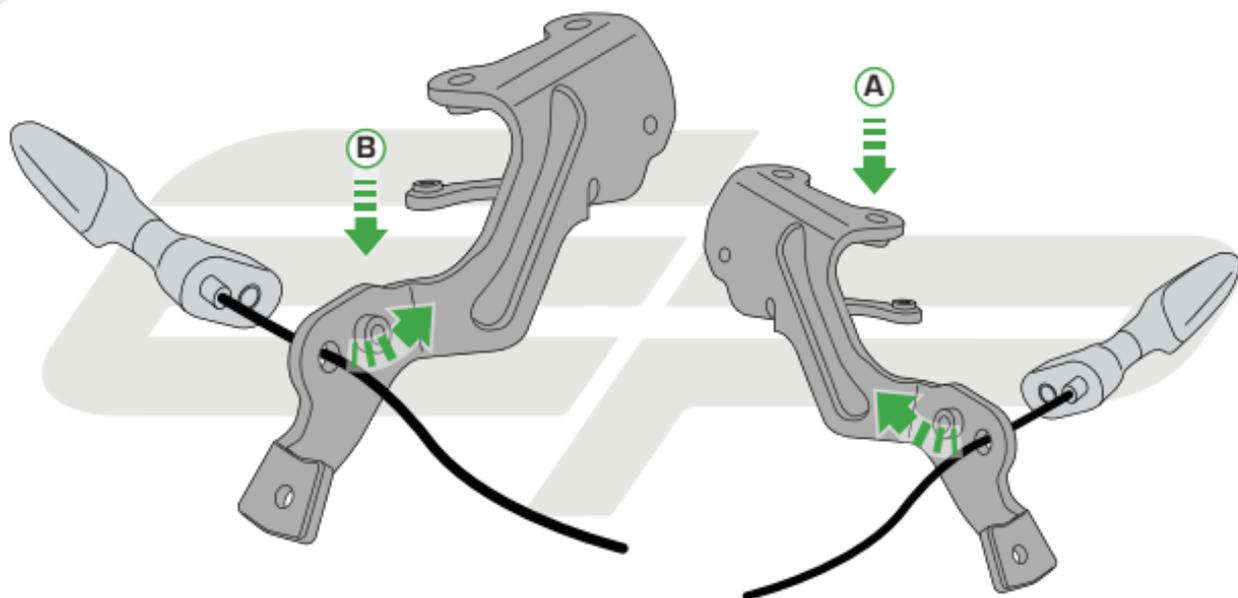

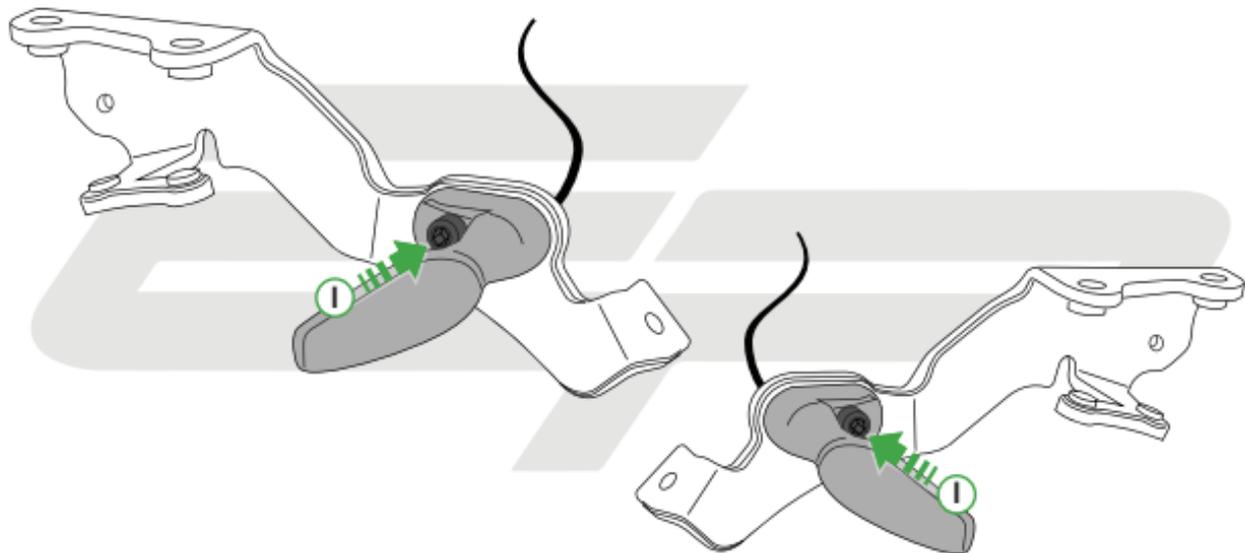

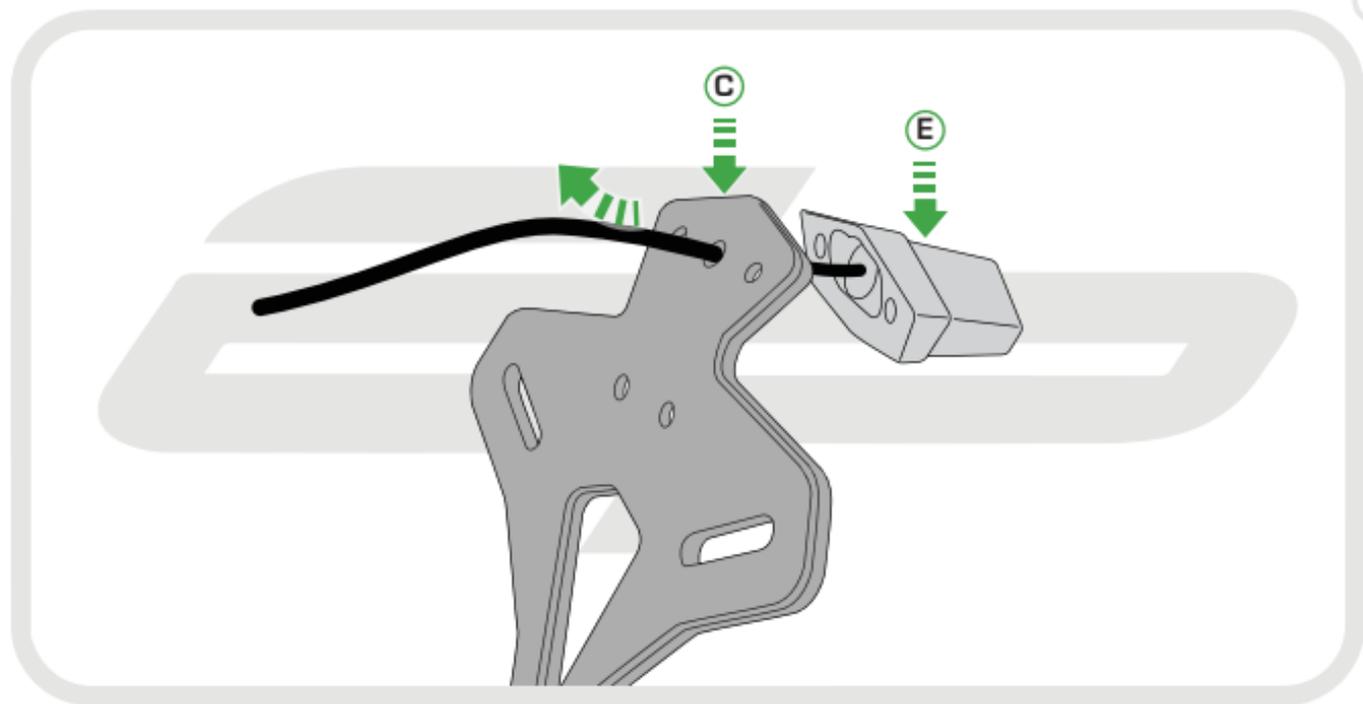


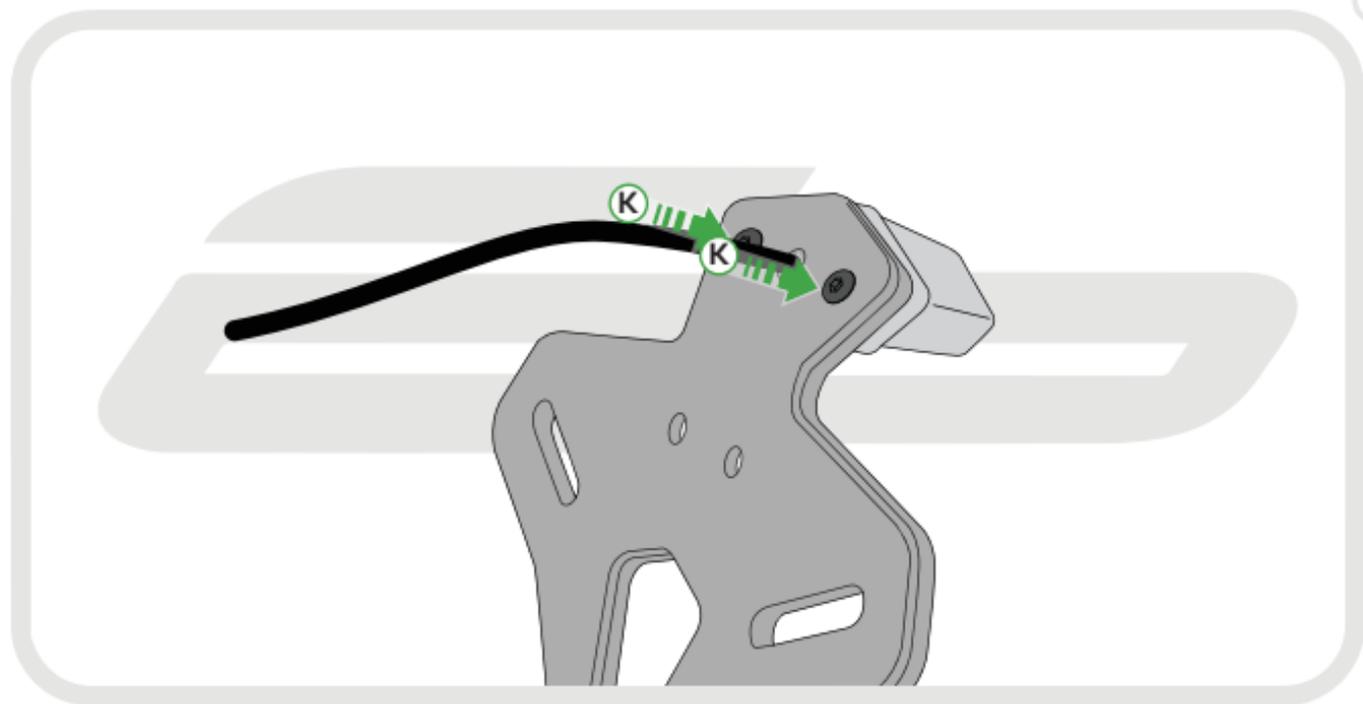


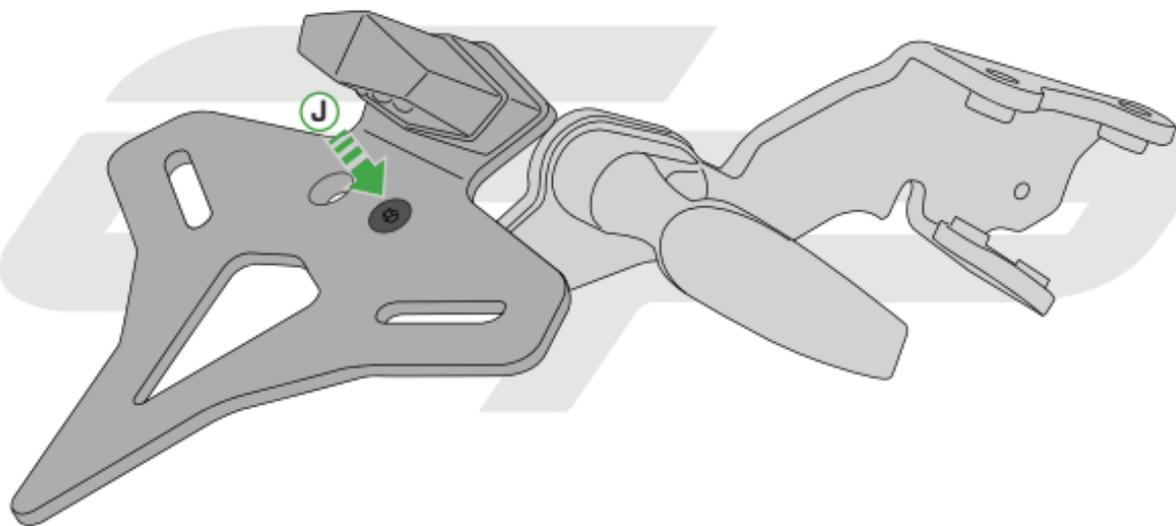


EVOTECH[®]
P E R F O R M A N C E

Run wires neatly along the channel in the RH arm

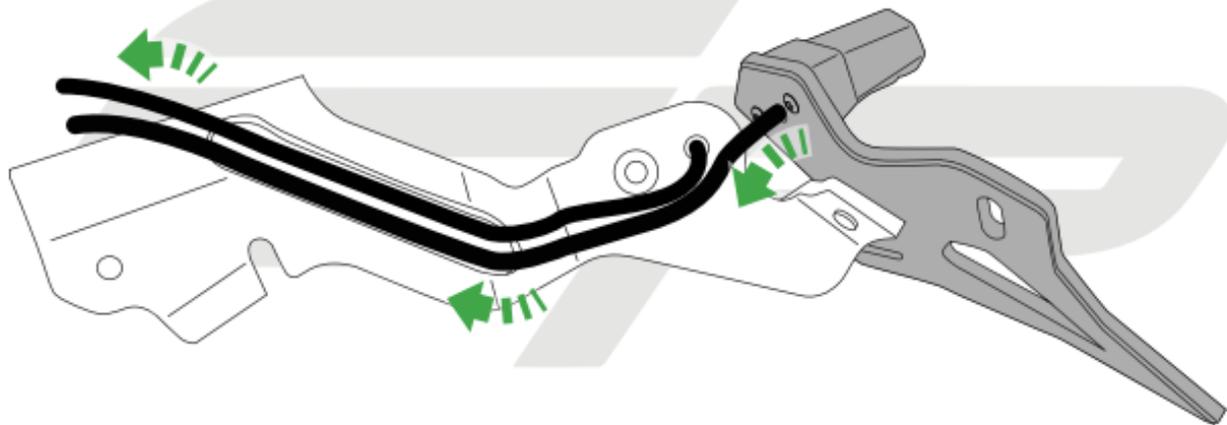

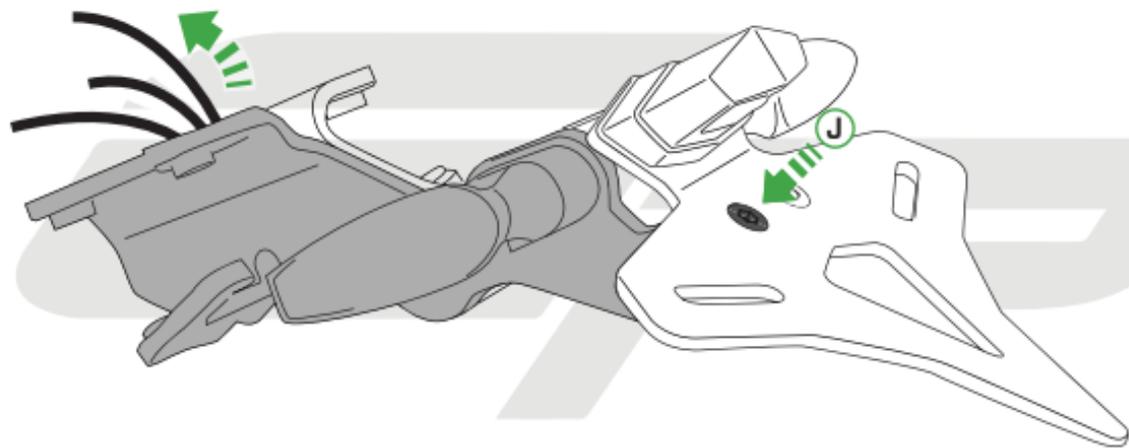


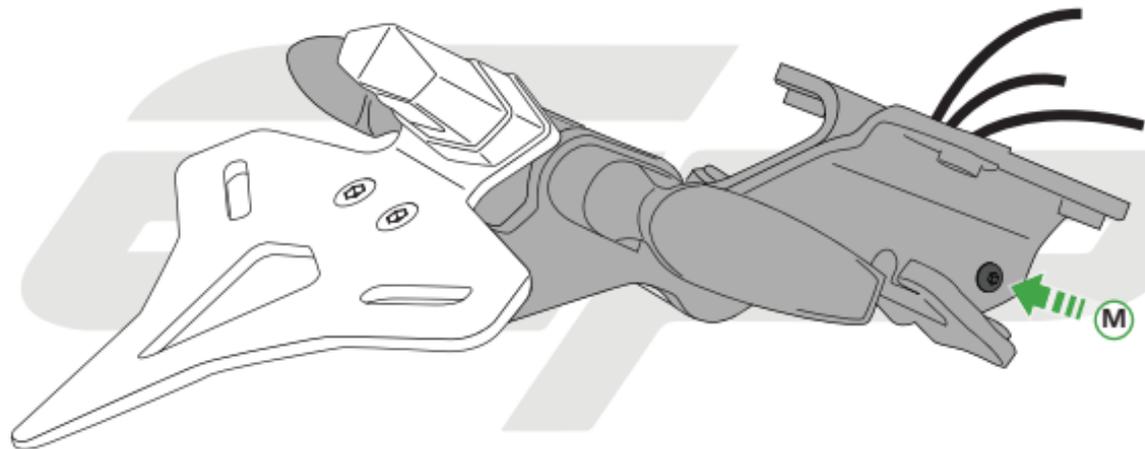


EVOTECH[®]
P E R F O R M A N C E





®

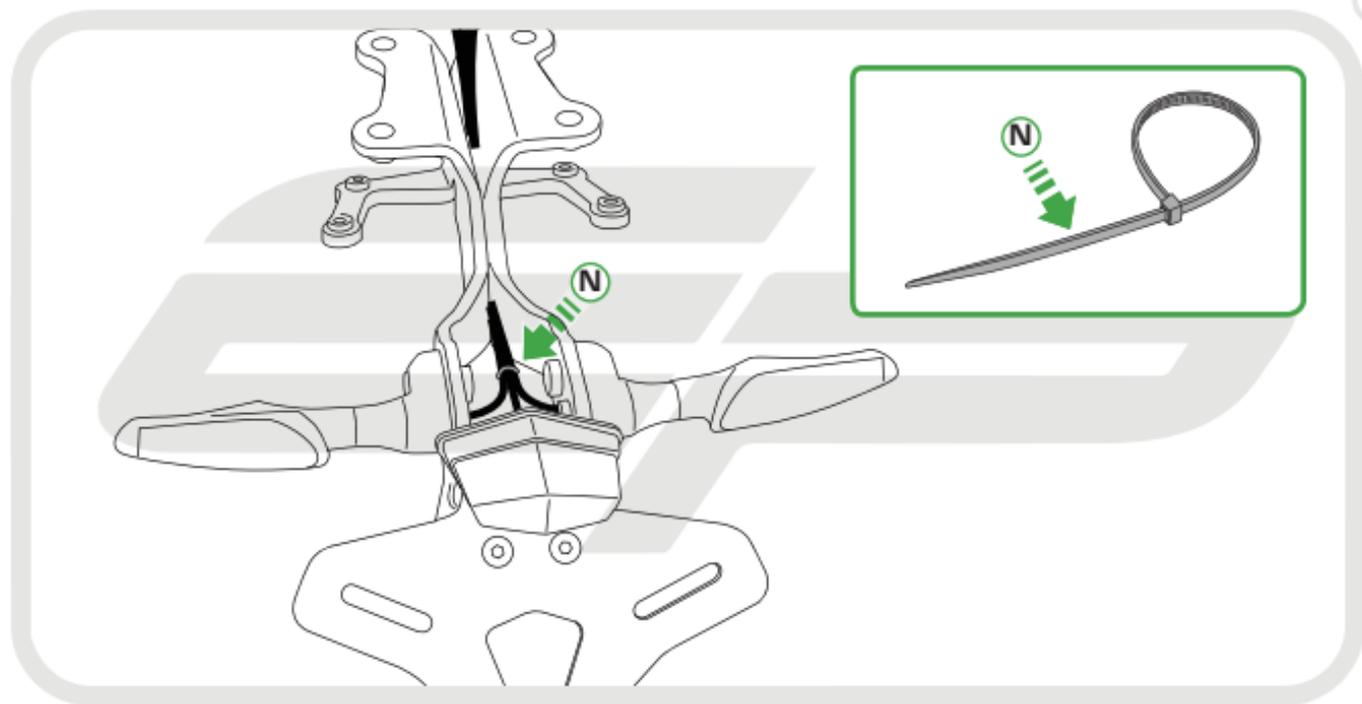


EVOTECH[®]
P E R F O R M A N C E

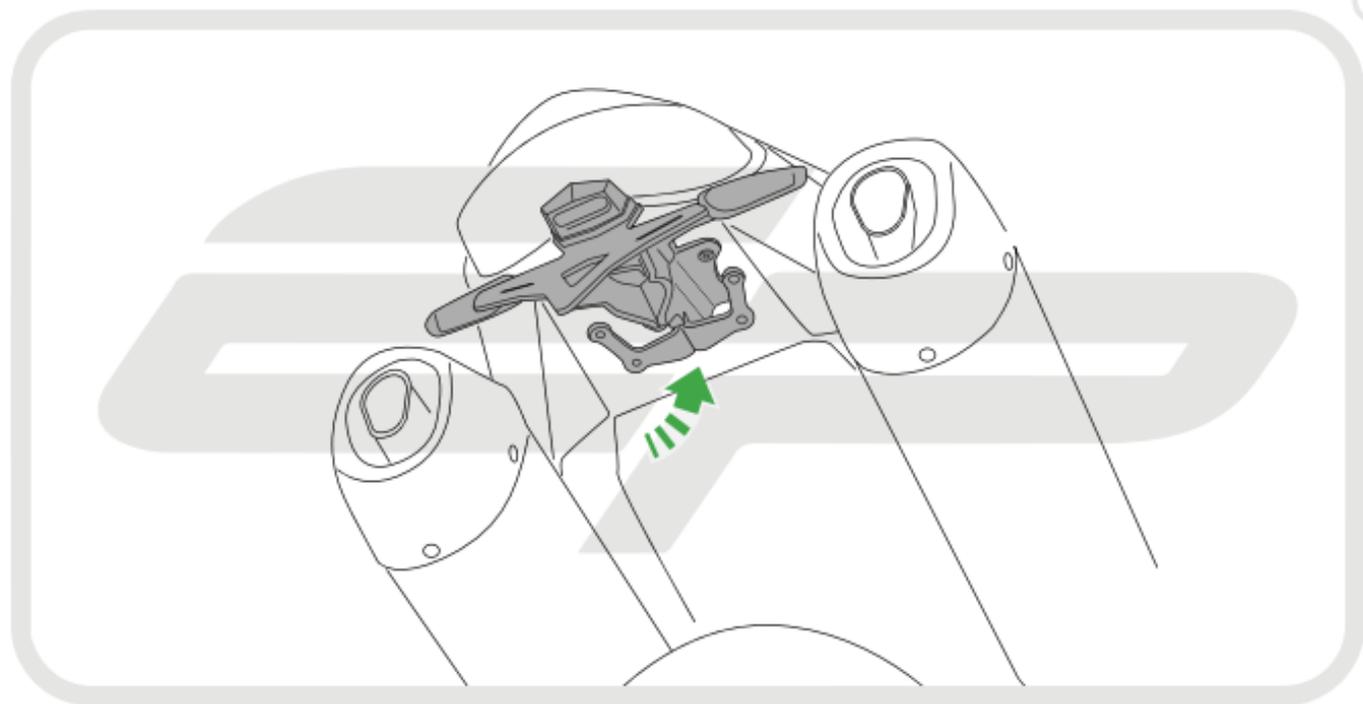

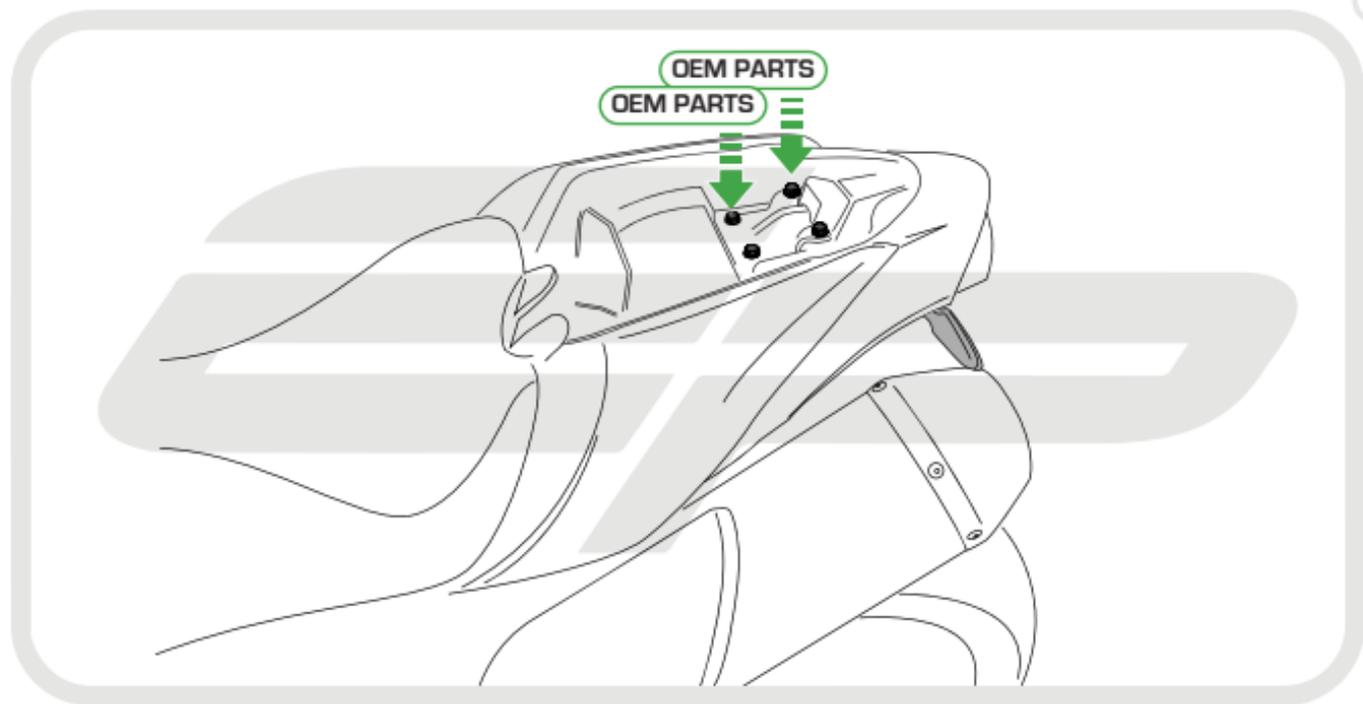

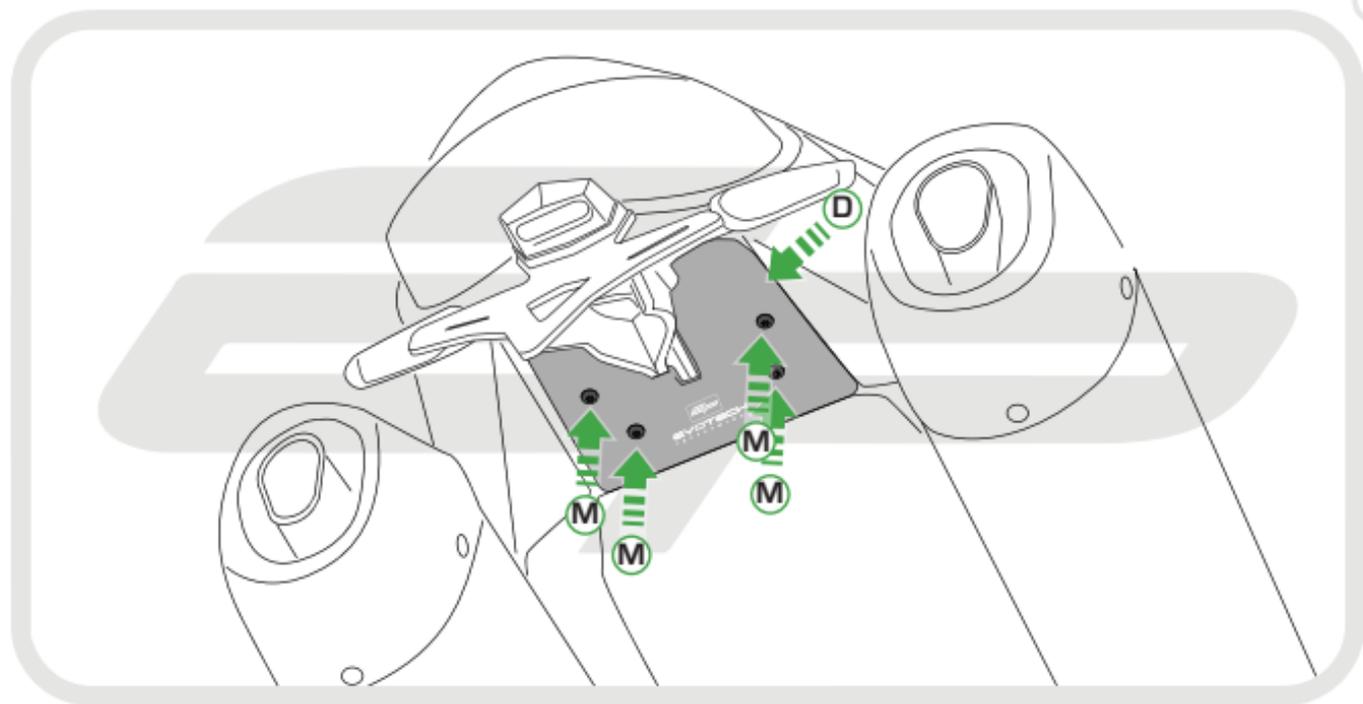

EVOTECH[®]
P E R F O R M A N C E

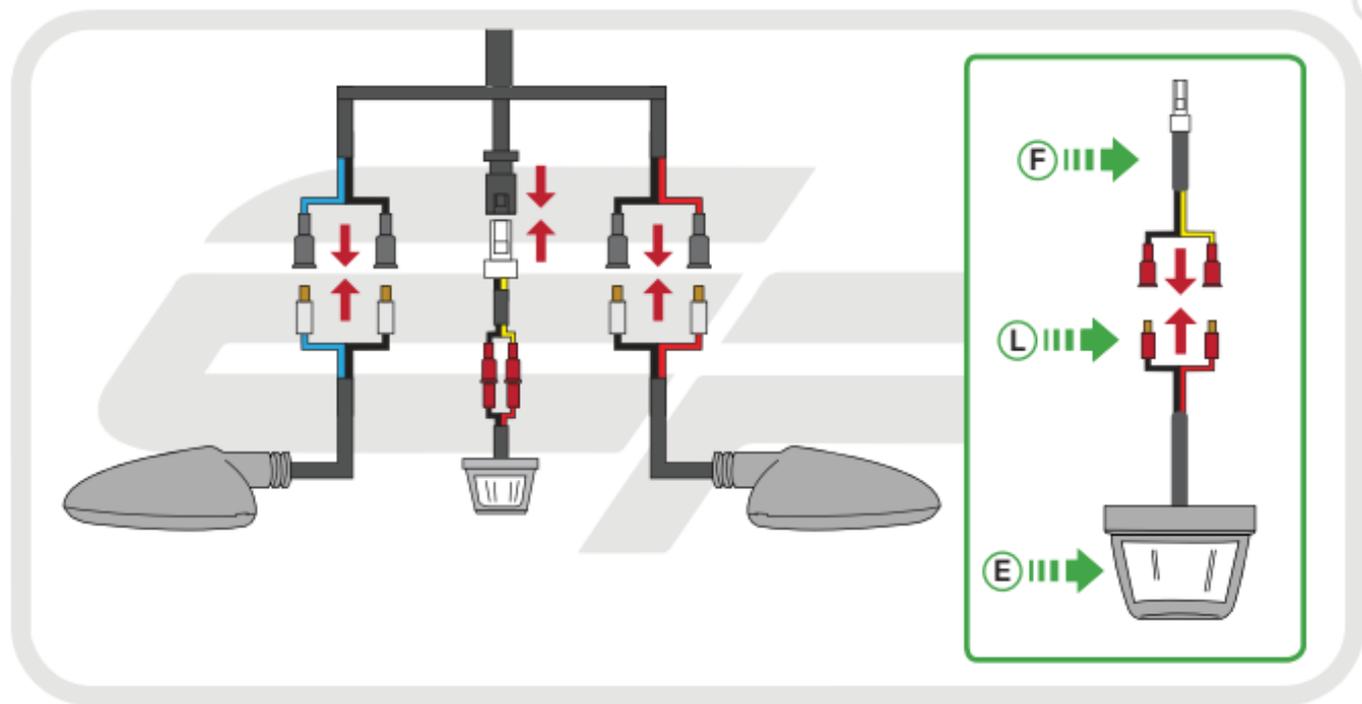




Reverse Stage

2 & 1

Reflector Bracket Installation

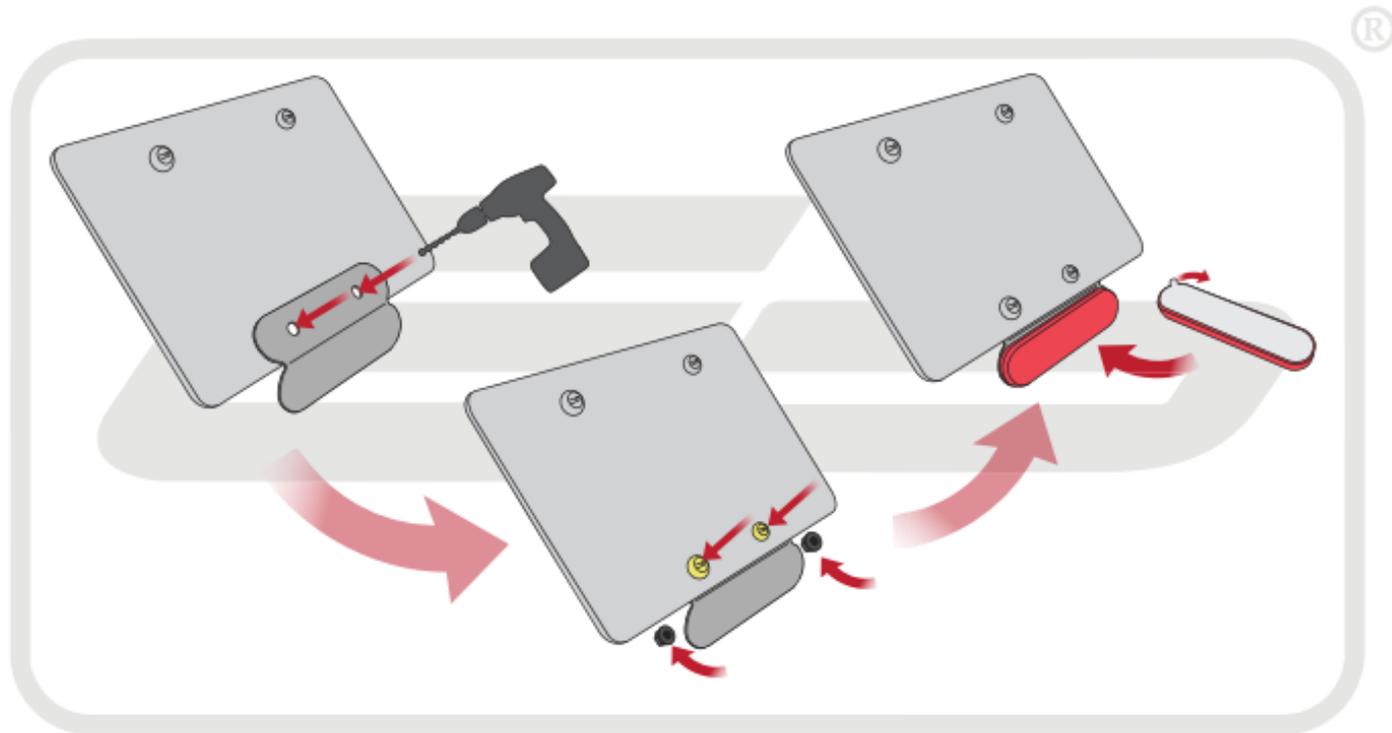

EVOTECH[®]
P E R F O R M A N C E



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com