



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com

KTM 1290 Super Duke Pillion Peg Removal Kit Installation Instructions




Kit Contents PRN014914

- (A) 2 x Large Aluminium Spacers
- (B) 2 x Small Aluminium Spacers

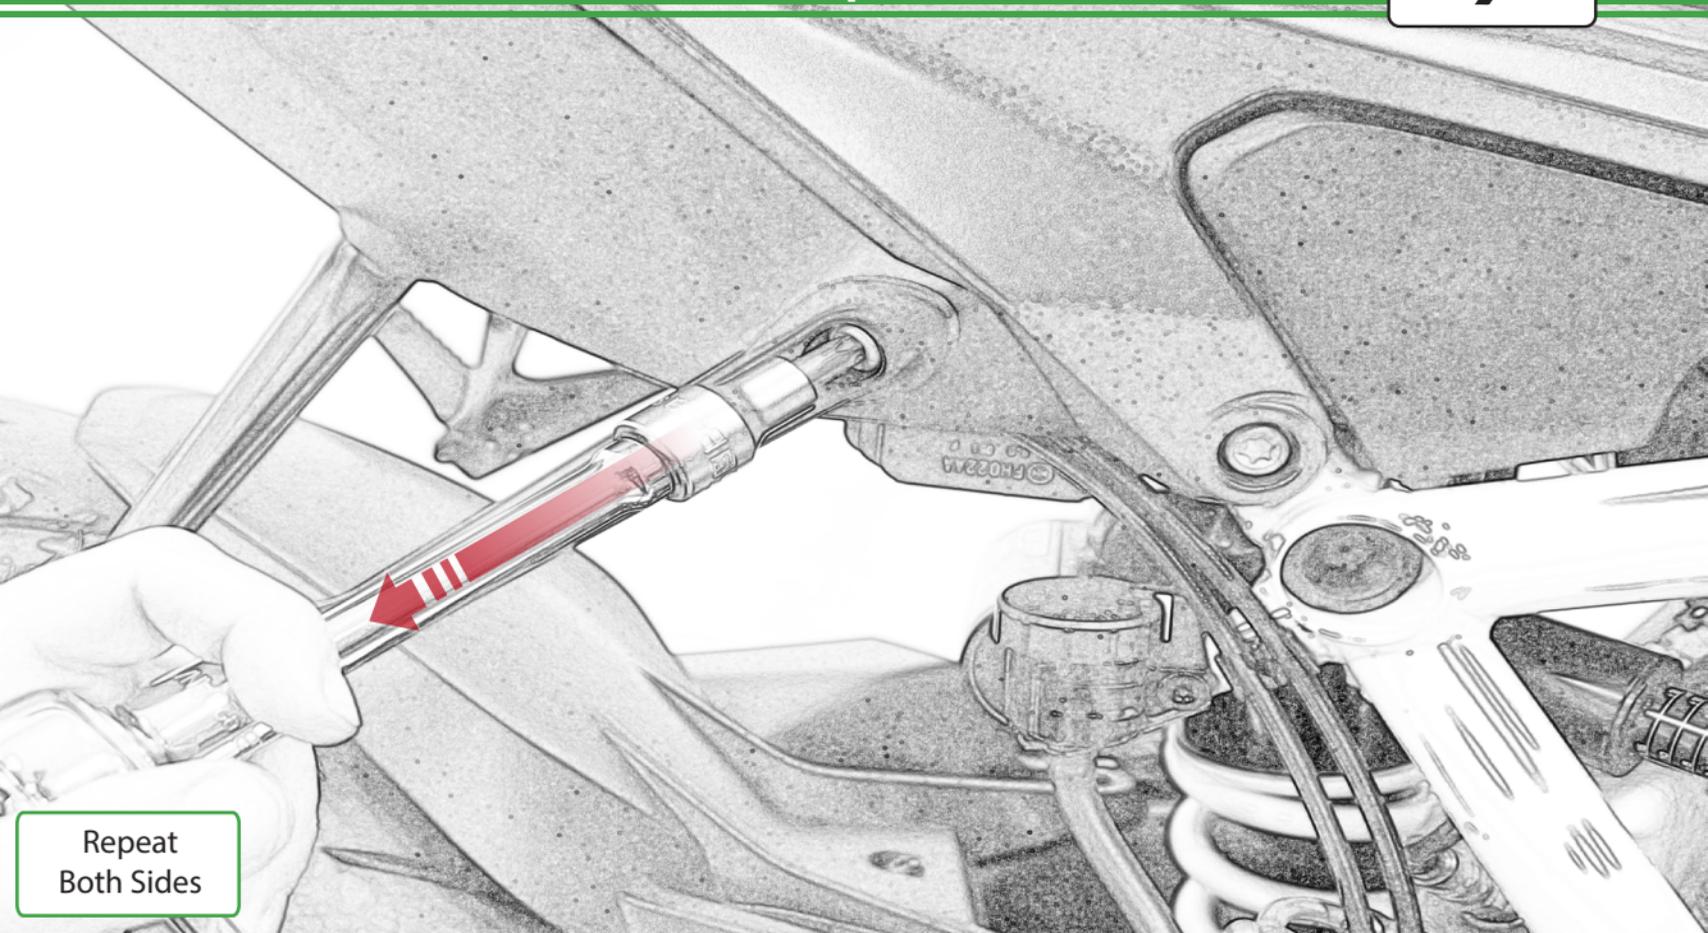


Repeat
Both Sides

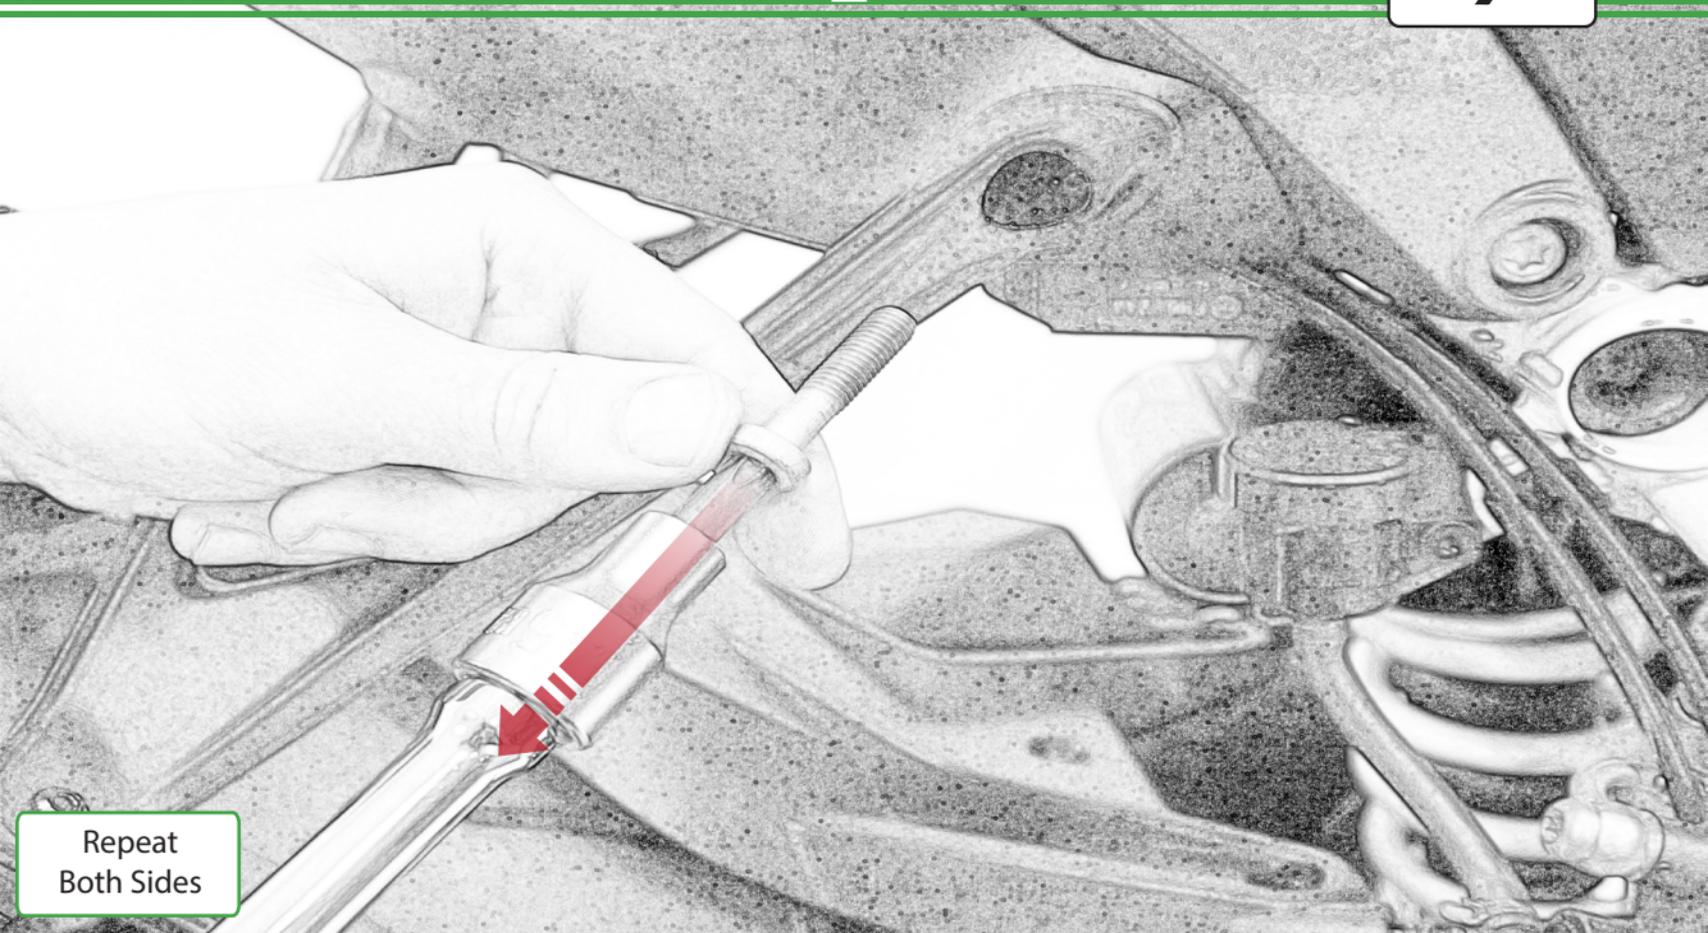


Repeat
Both Sides




Repeat
Both Sides

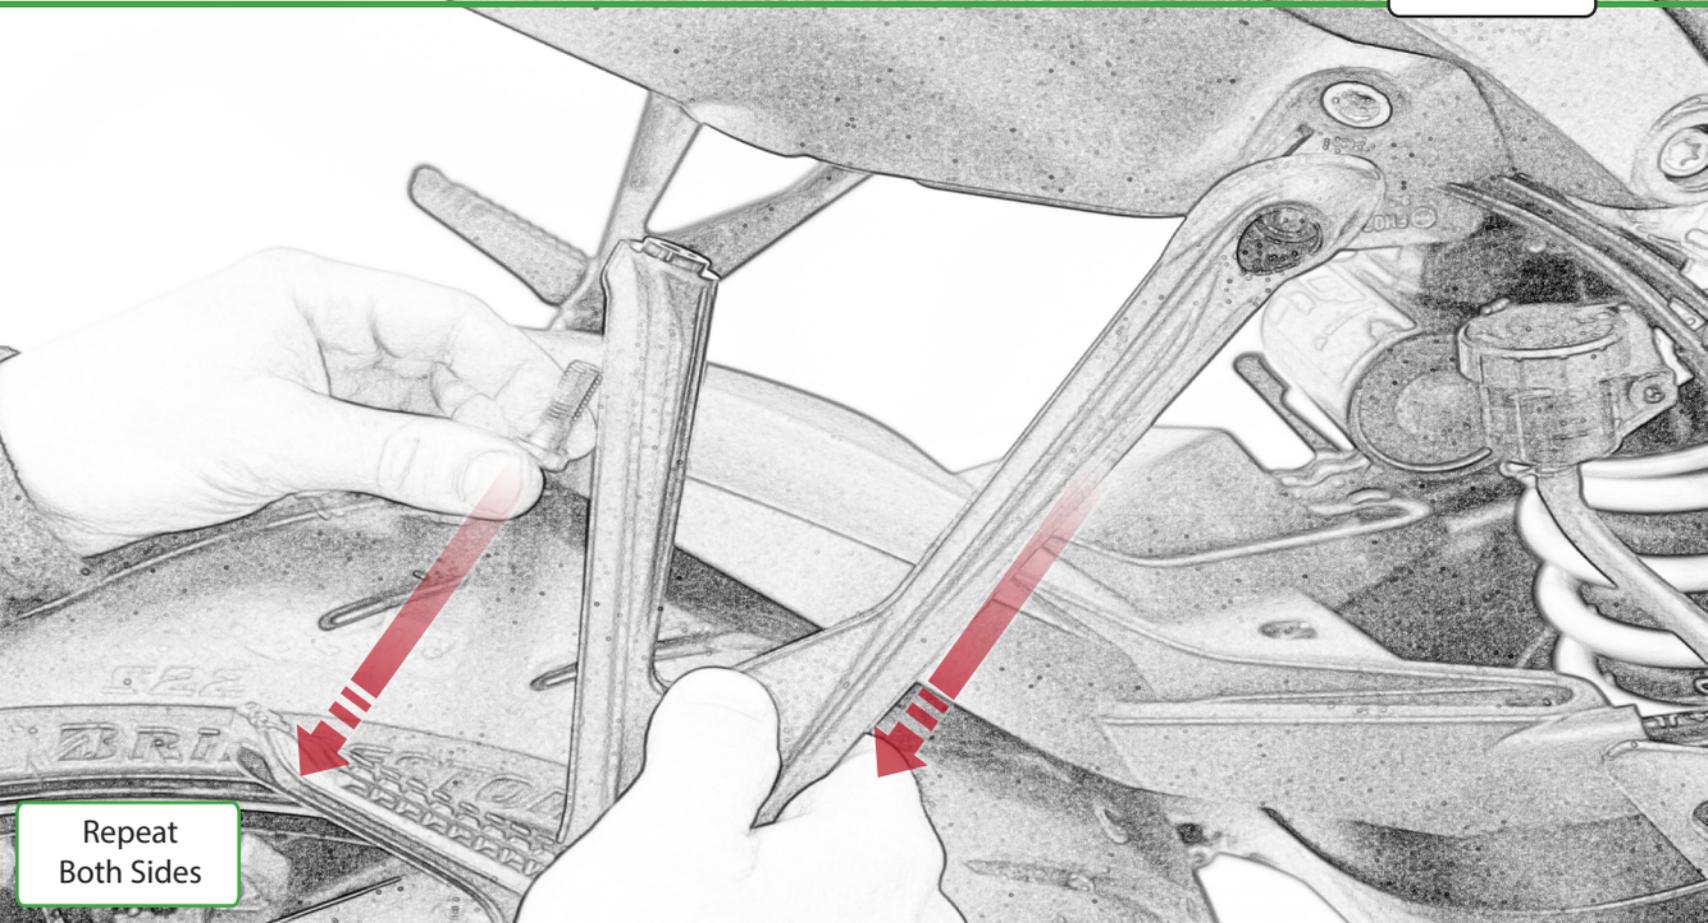


Repeat
Both Sides

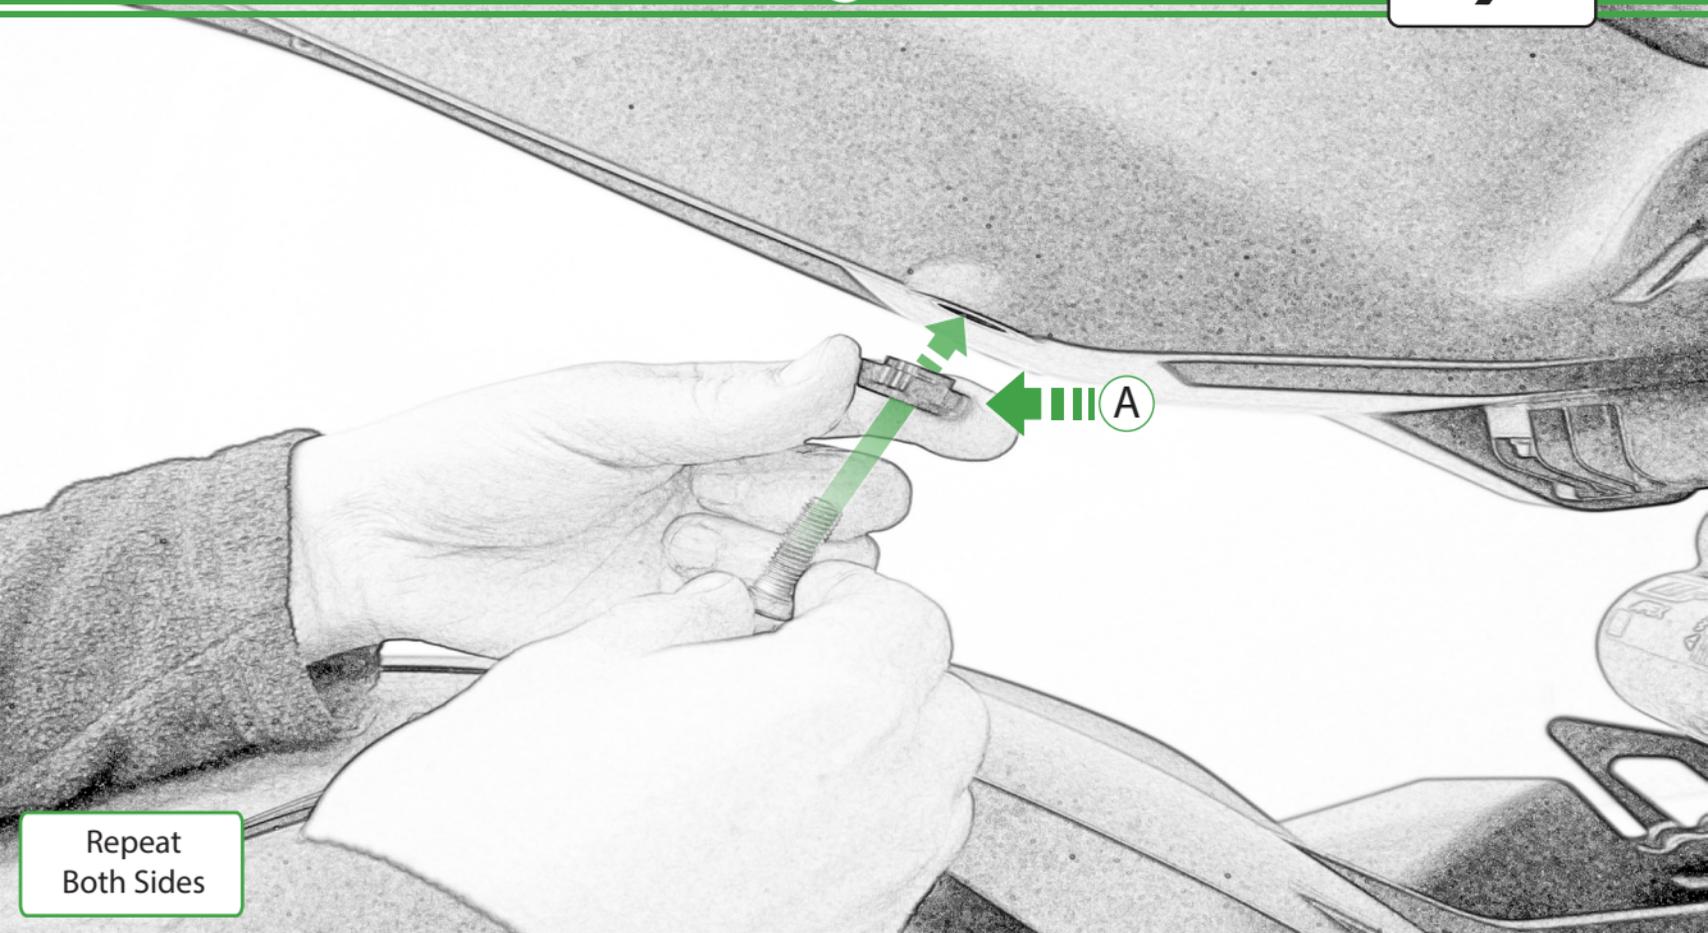

Repeat
Both Sides

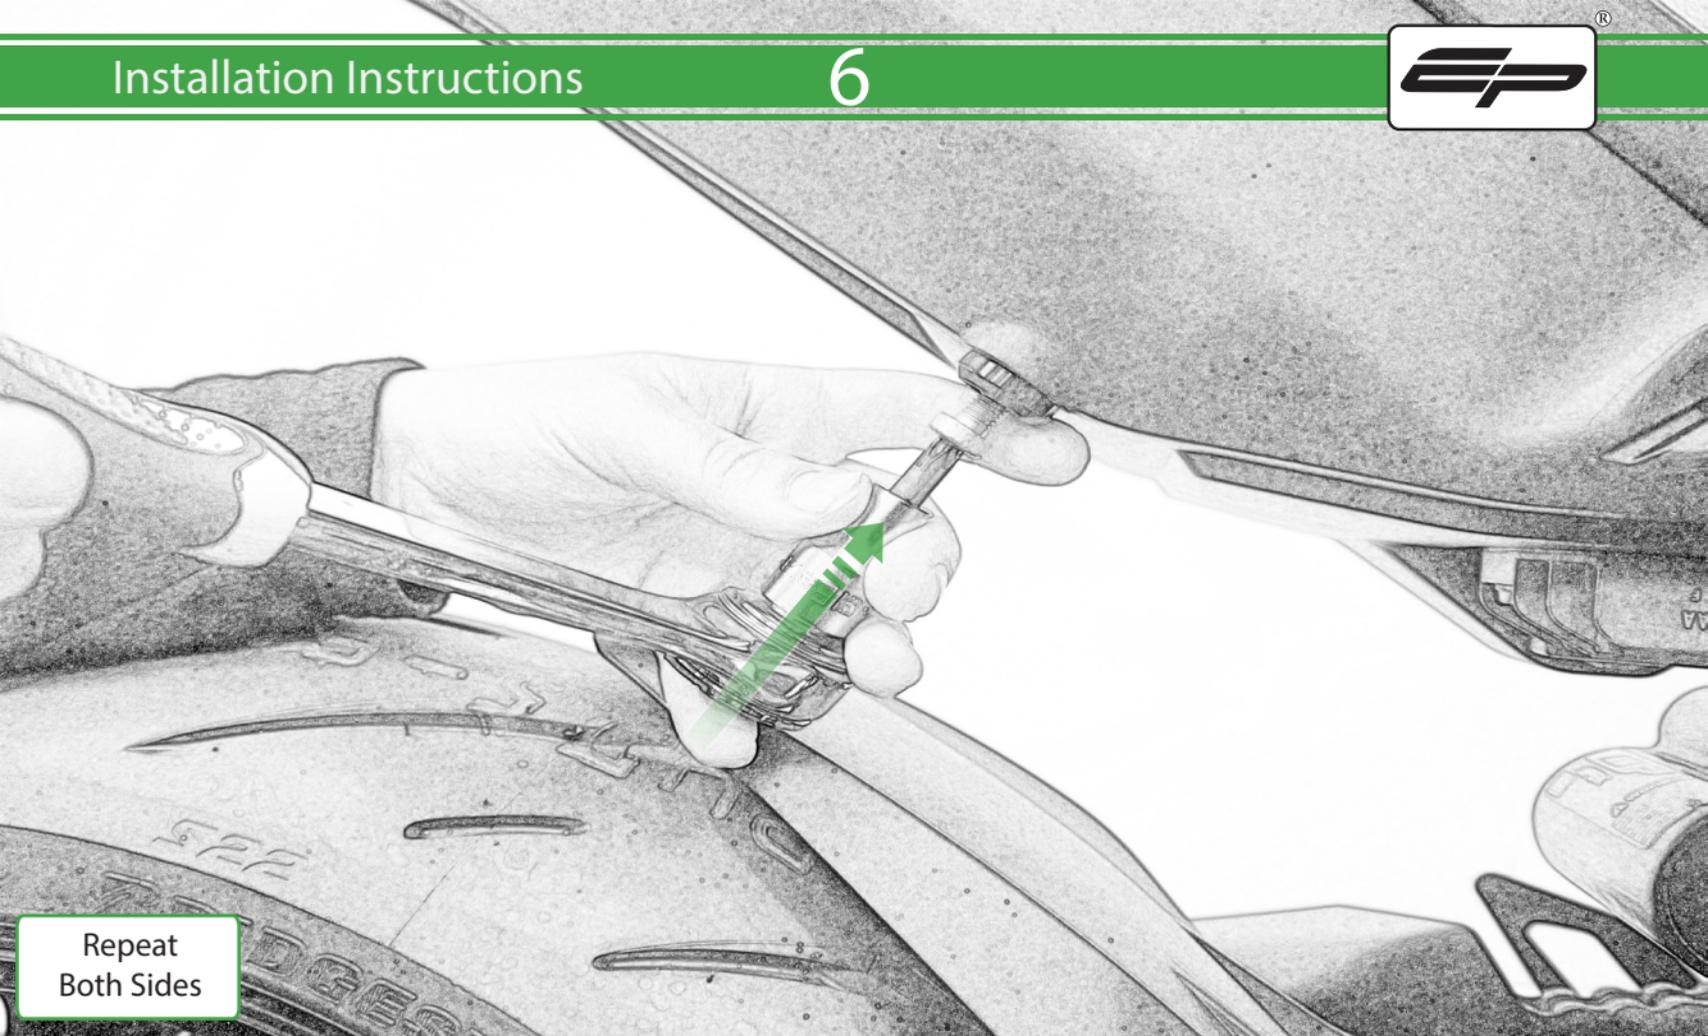

Repeat
Both Sides

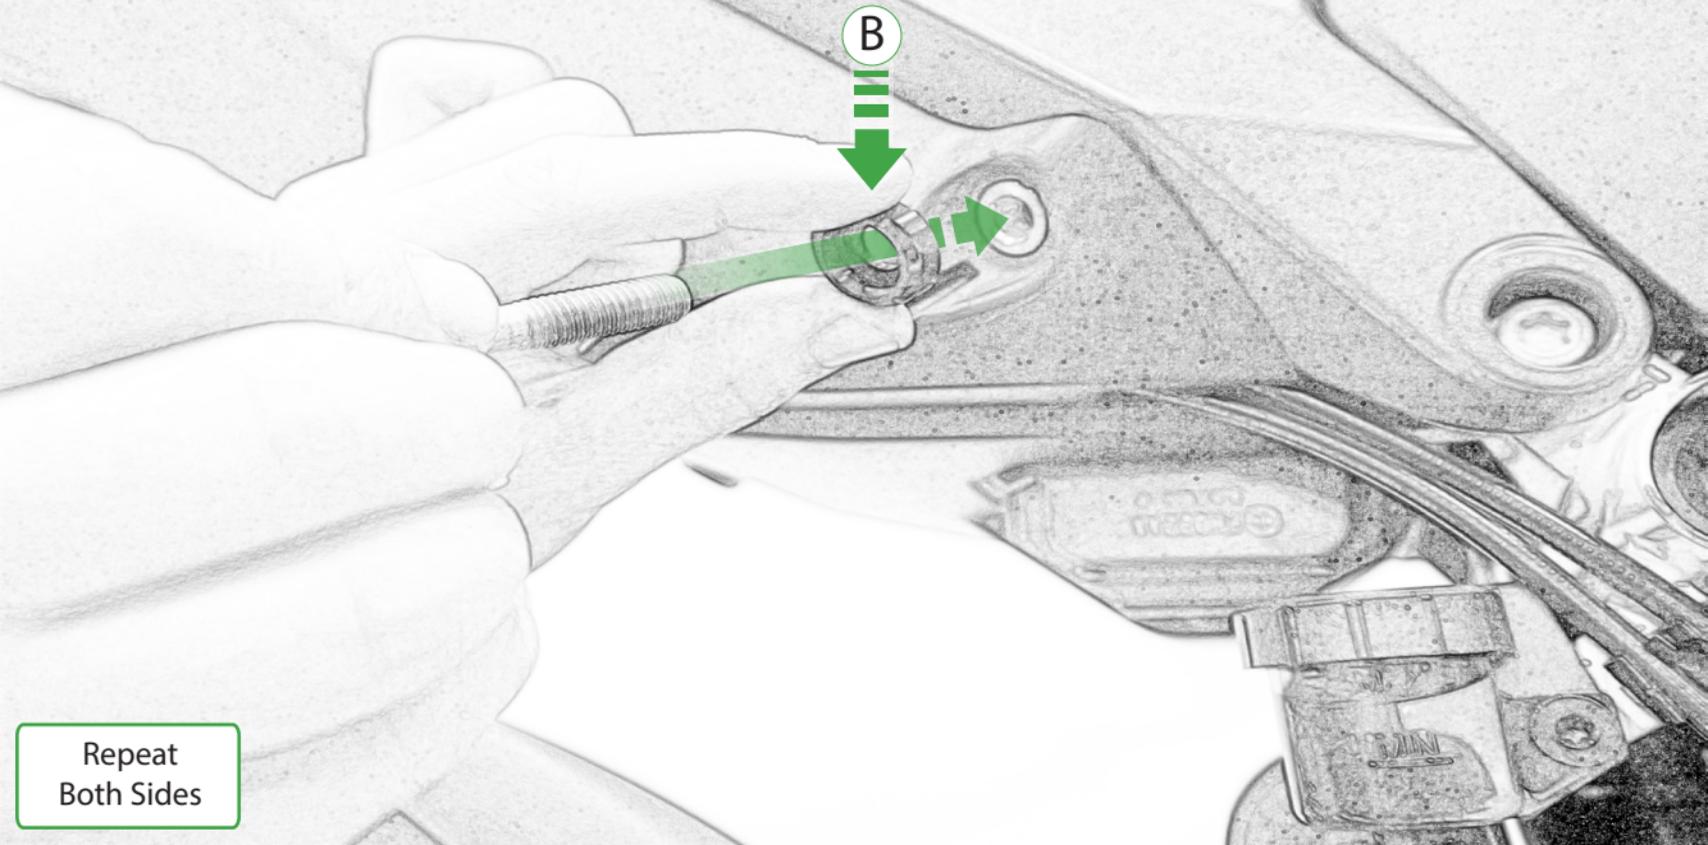

Repeat
Both Sides



Repeat
Both Sides



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com