

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Speed Triple 1200 RS
Crash Protection Instruction





Kit Contents PRN015492


- | | |
|-----------------------------------|----------------------|
| (A) 1 x L/H Bracket | (M) 2 x M12 Washer |
| (B) 1 x L/H Bobbin Spacer (Long) | (N) 2 x Poly Washer |
| (C) 1 x L/H Frame Spacer (Long) | (O) 2 x Bobbin Heads |
| (D) 1 x M10 x 90 x 1.5 Caphead | |
| (E) 1 x M10 x 60 x 1.5 Caphead | |
| (F) 1 x M12 x 75 x 1.25 Caphead | |
| (G) 1 x R/H Bracket | |
| (H) 1 x R/H Bobbin Spacer (Short) | |
| (I) 1 x R/H Frame Spacer | |
| (J) 1 x M10 x 100 x 1.5 Caphead | |
| (K) 1 x M10 x 65 x 1.5 Caphead | |
| (L) 1 x M12 x 55 x 1.25 Caphead | |

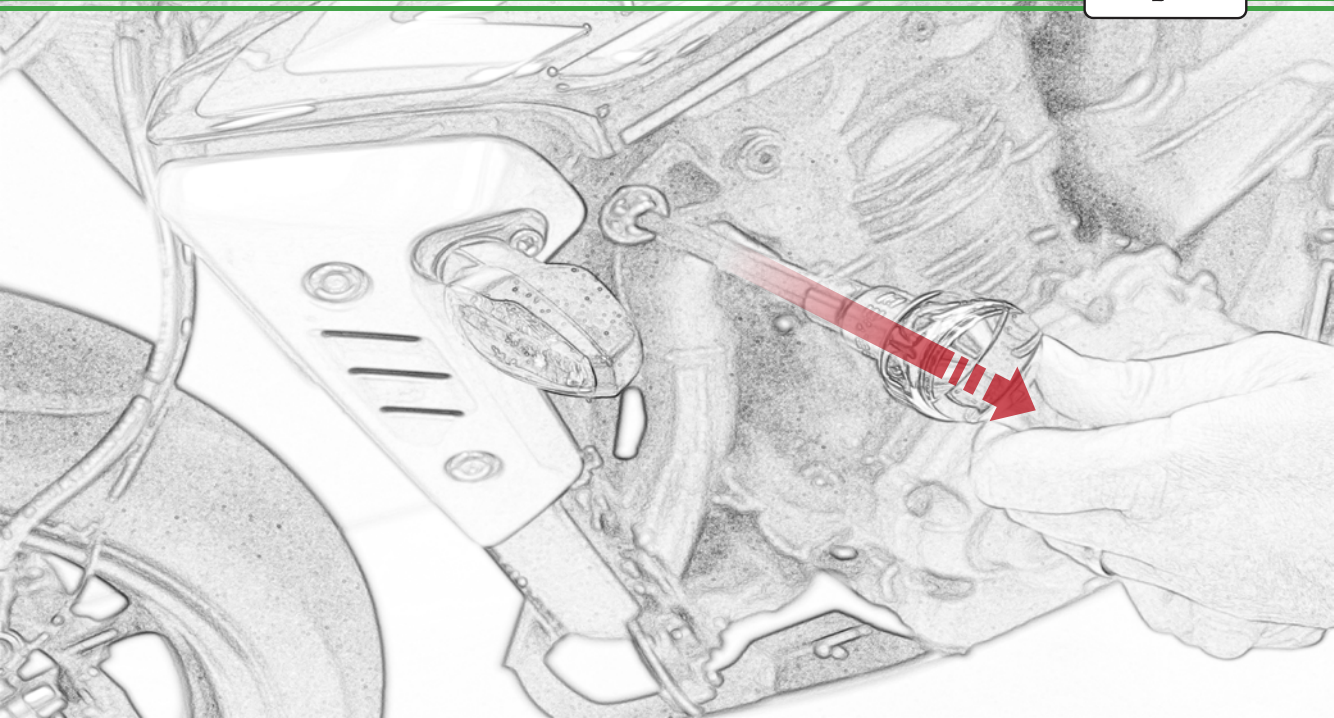

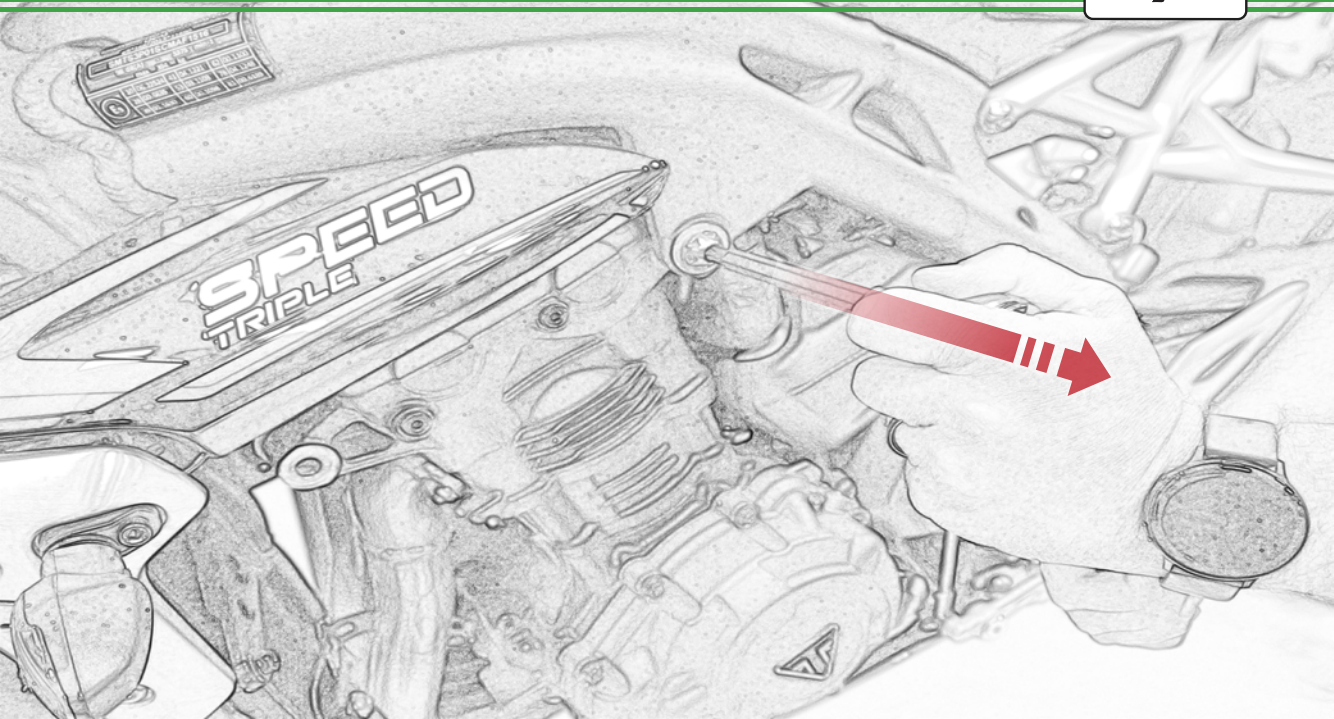

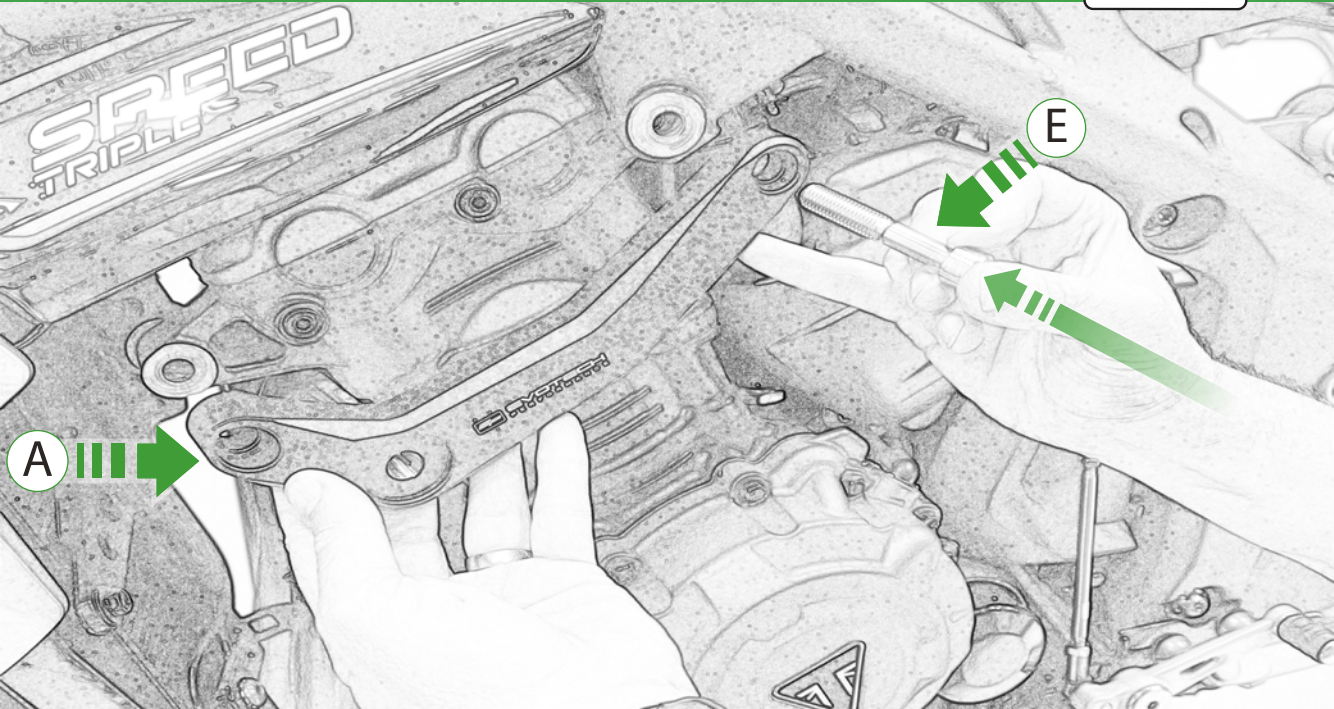


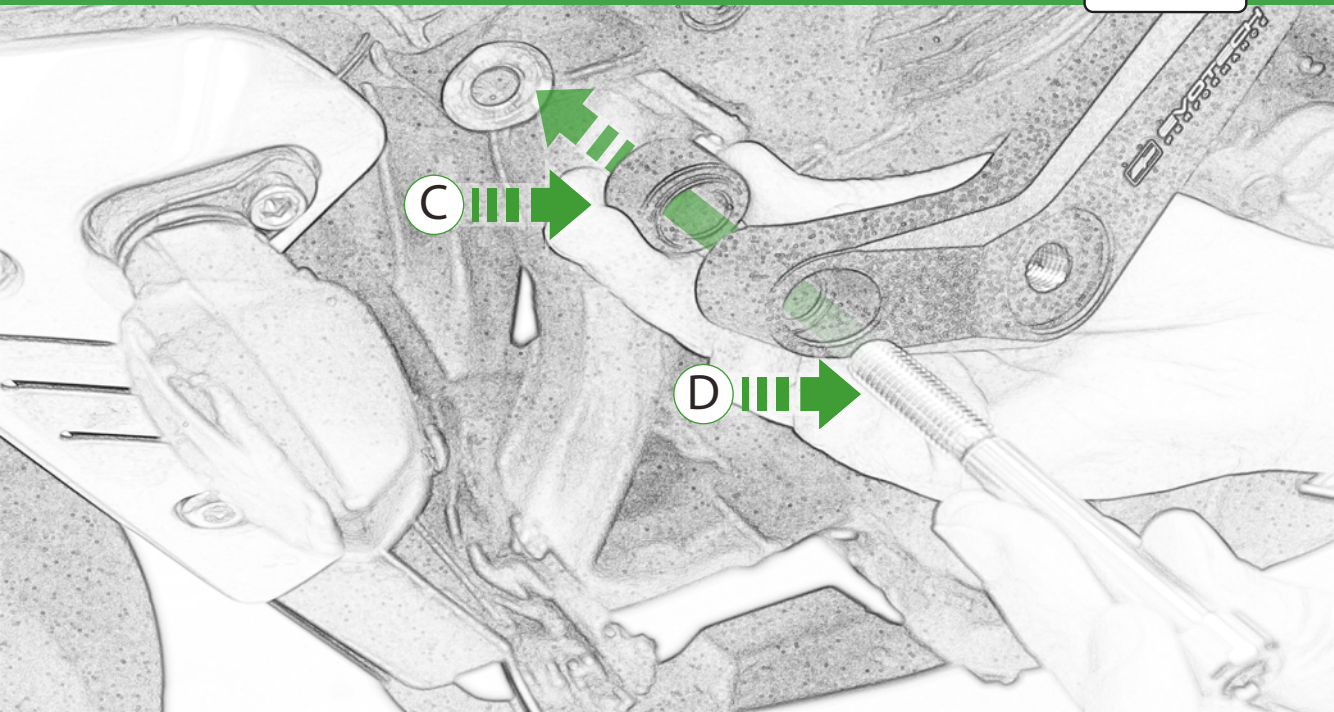

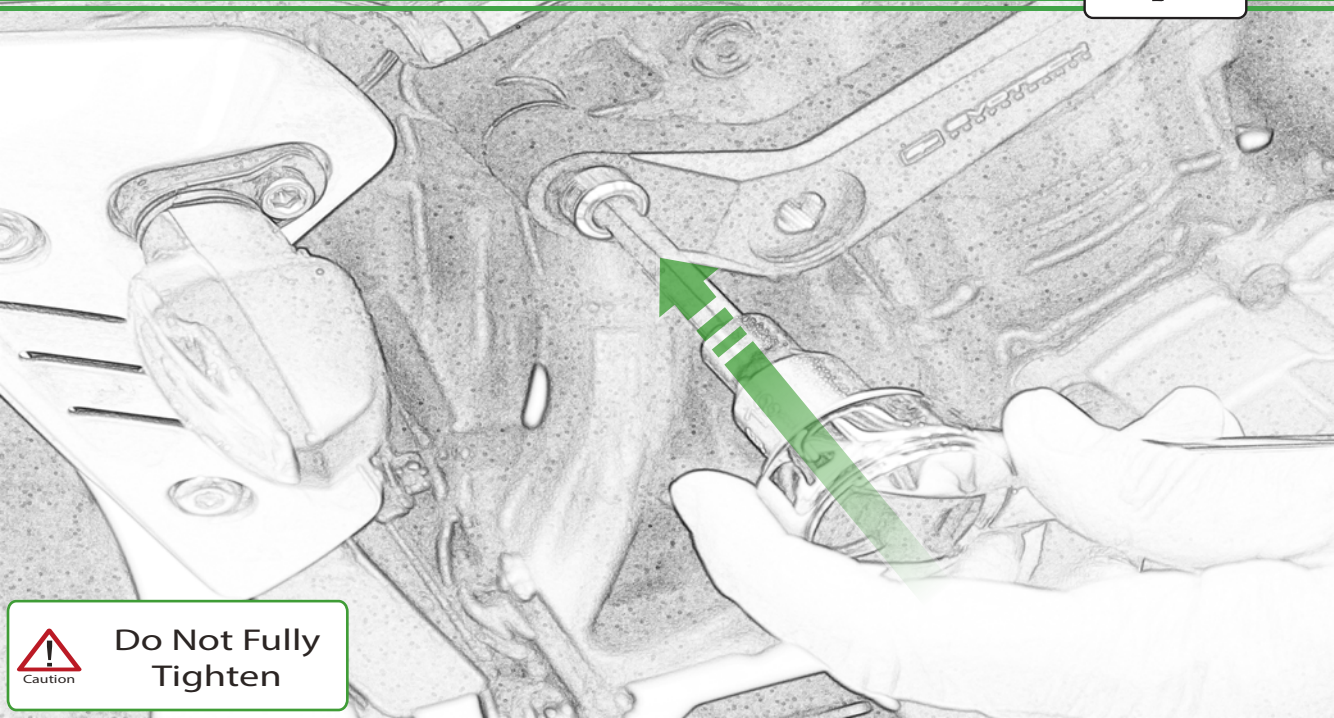


Caution

**Do Not Fully
Tighten**

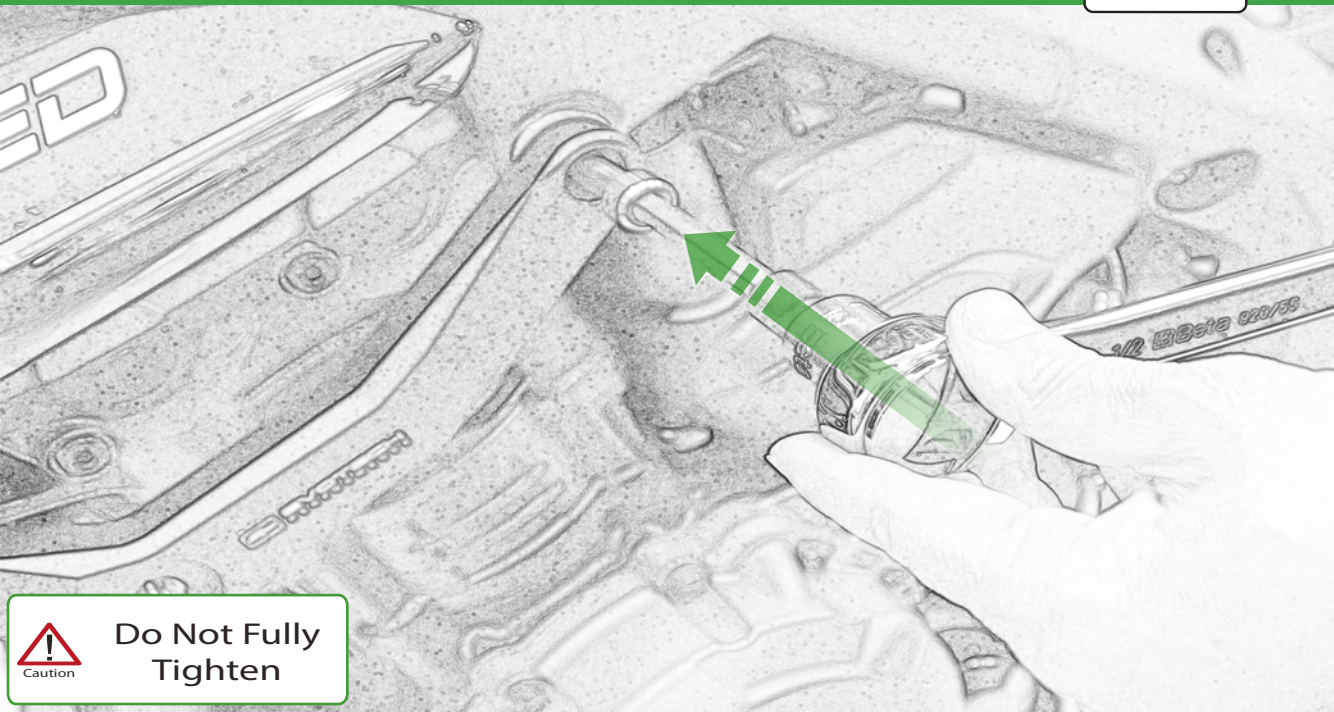


**Do Not Fully
Tighten**

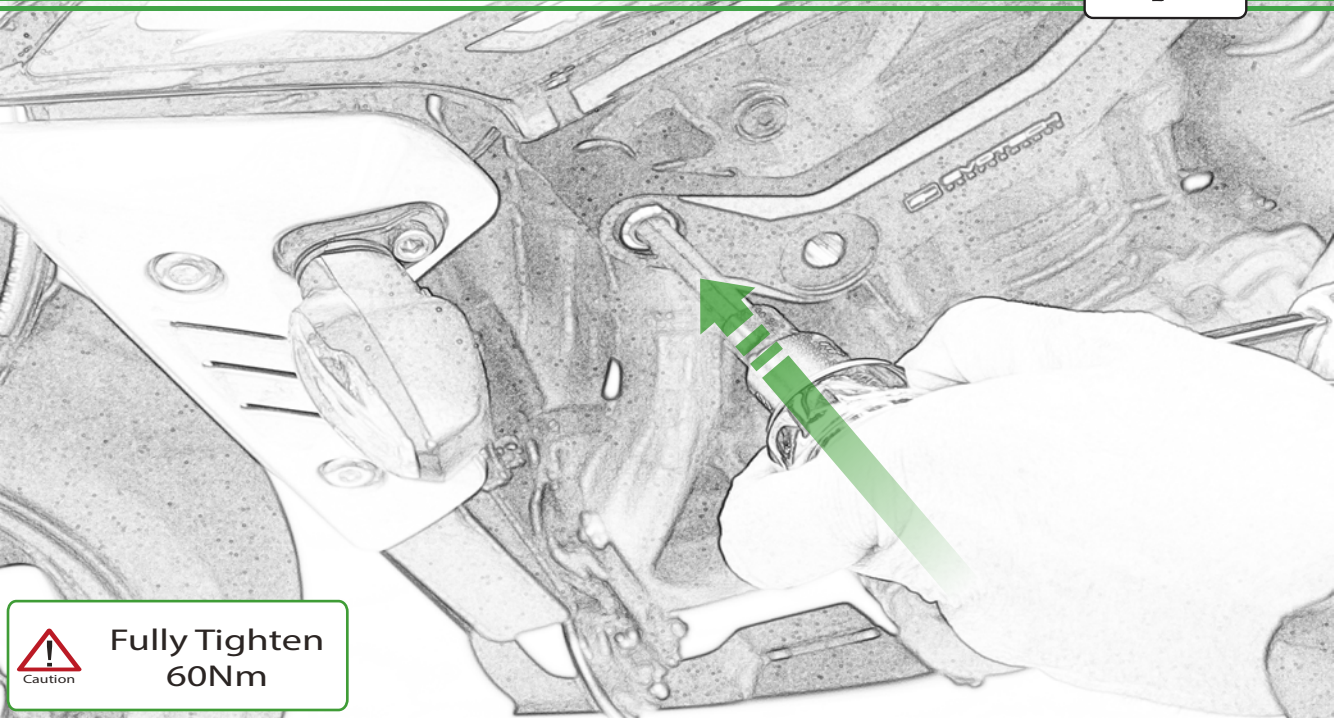


Caution

Fully Tighten
60Nm

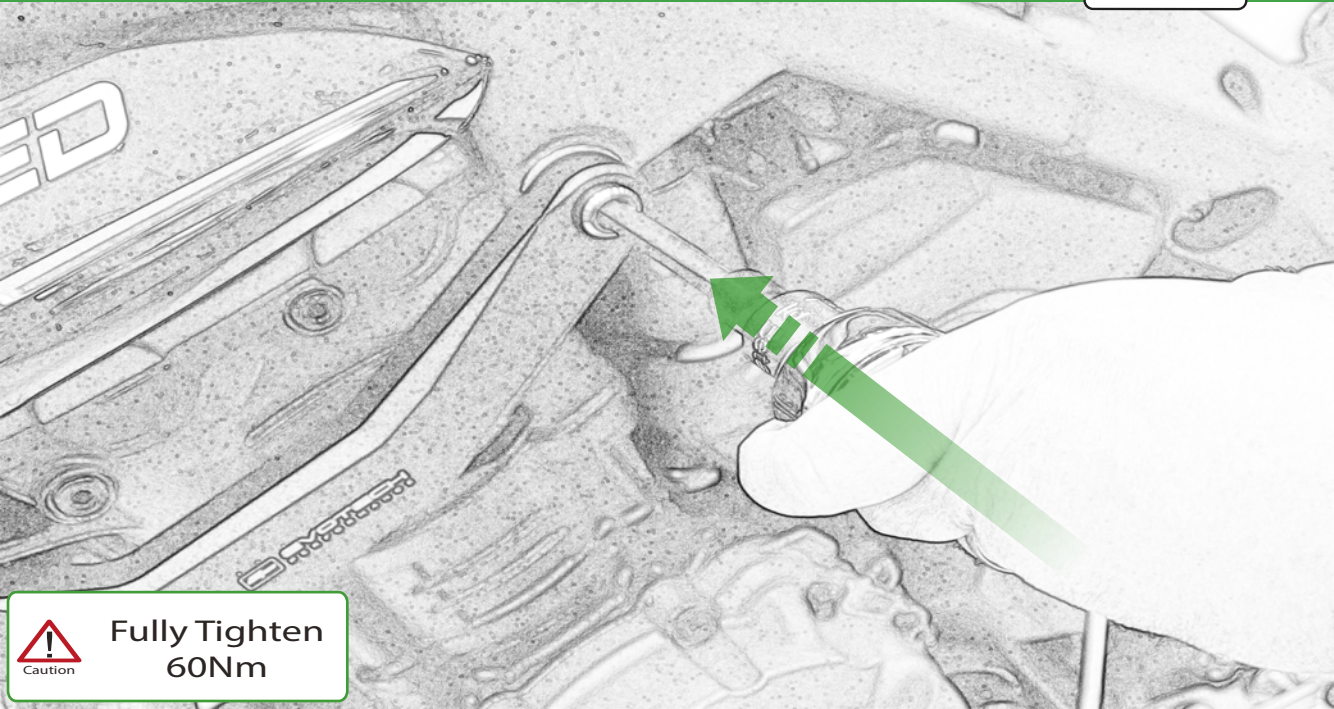



Caution

Fully Tighten
60Nm

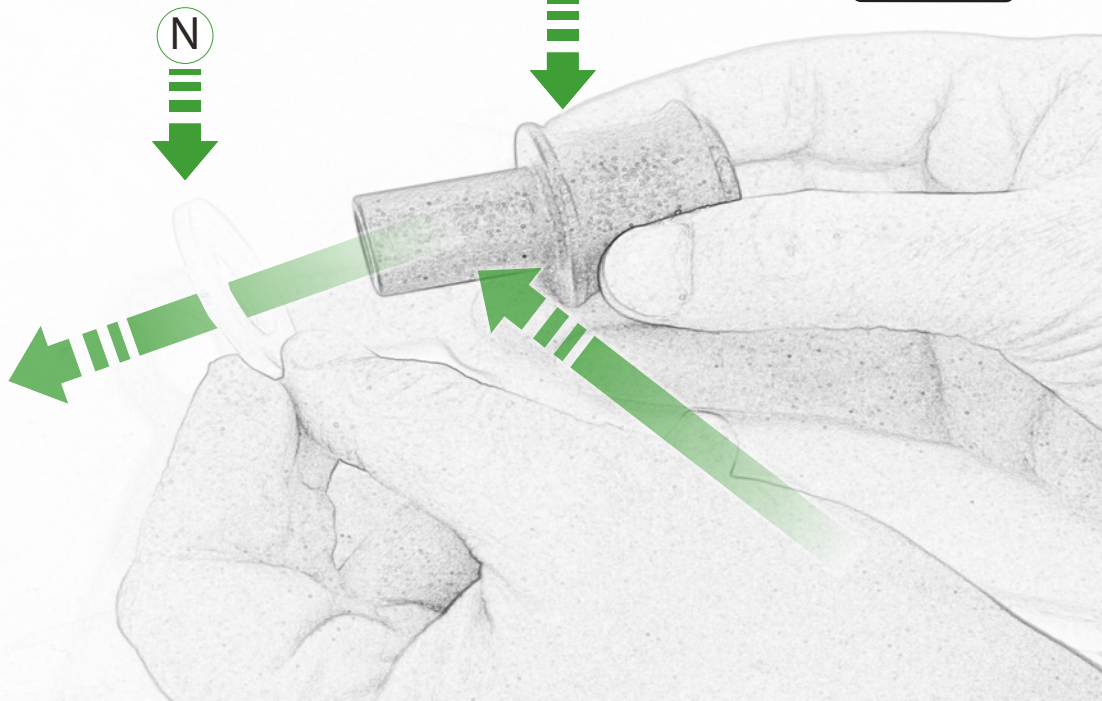




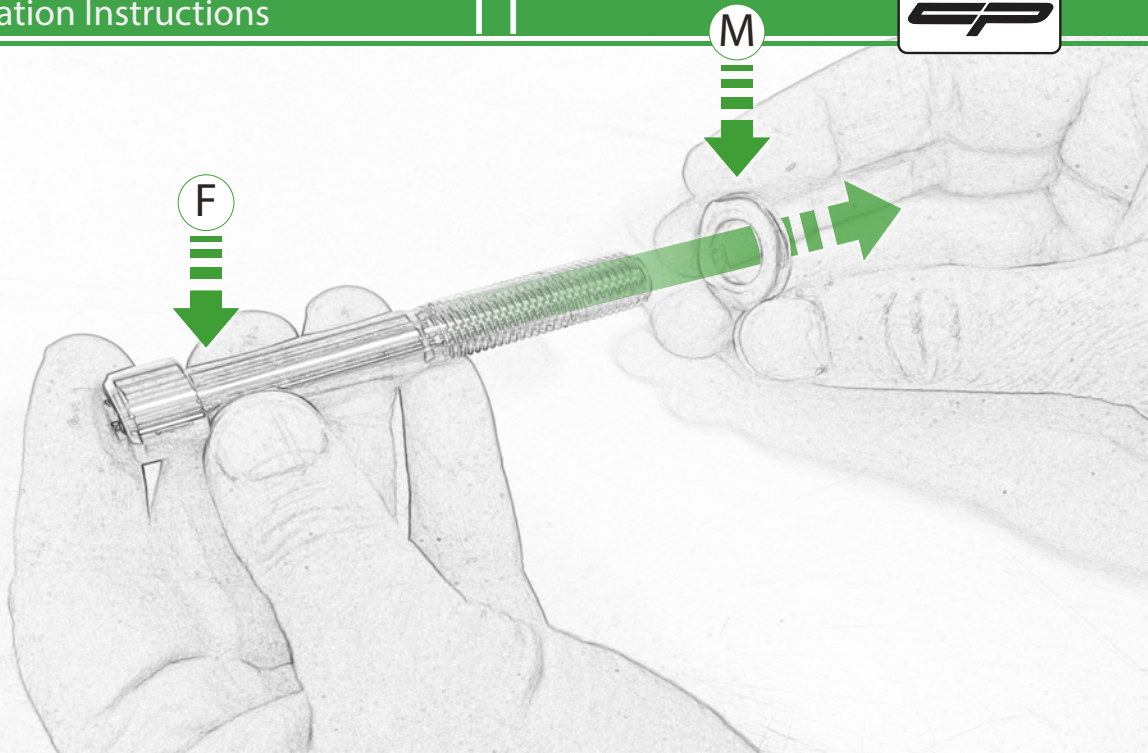

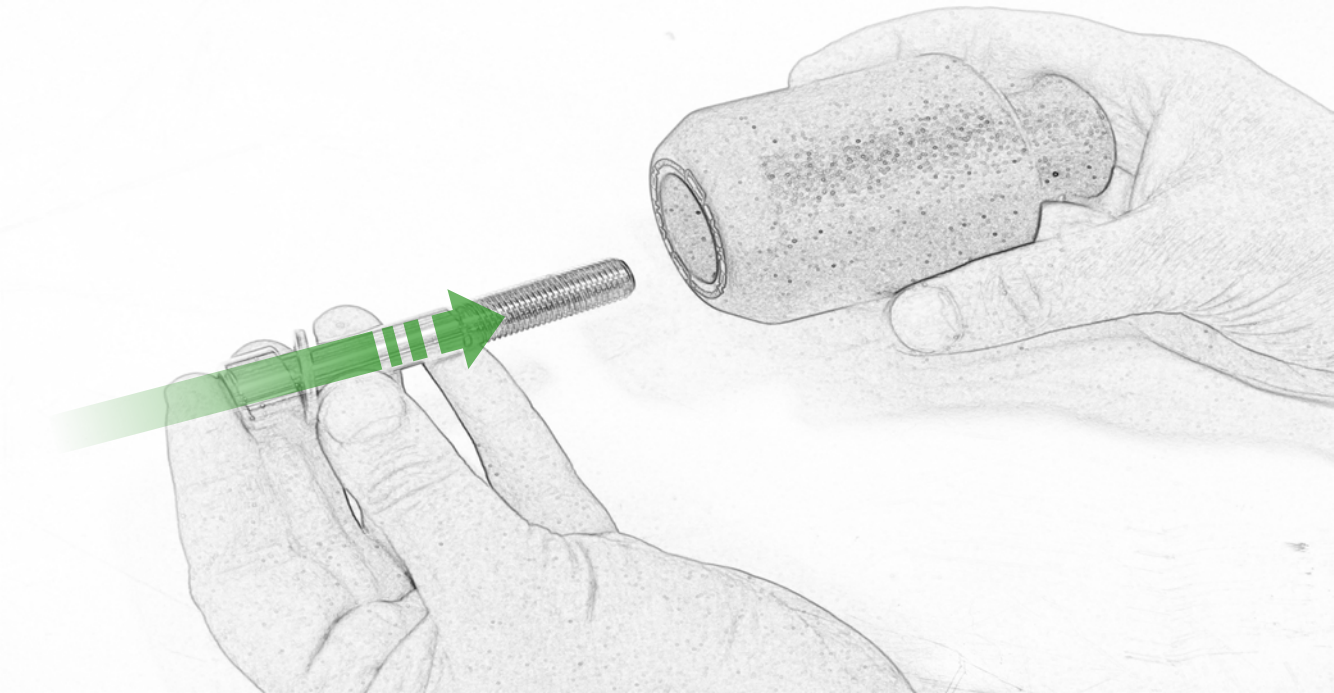





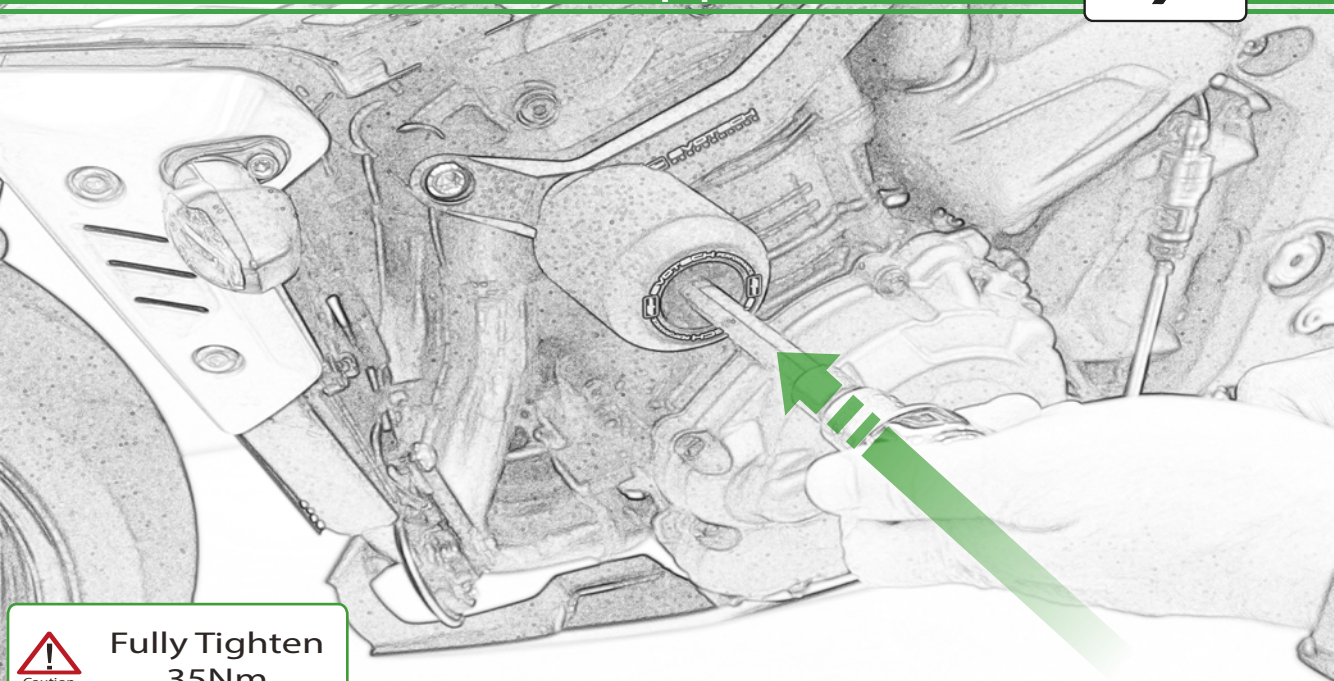


Caution

Fully Tighten
35Nm

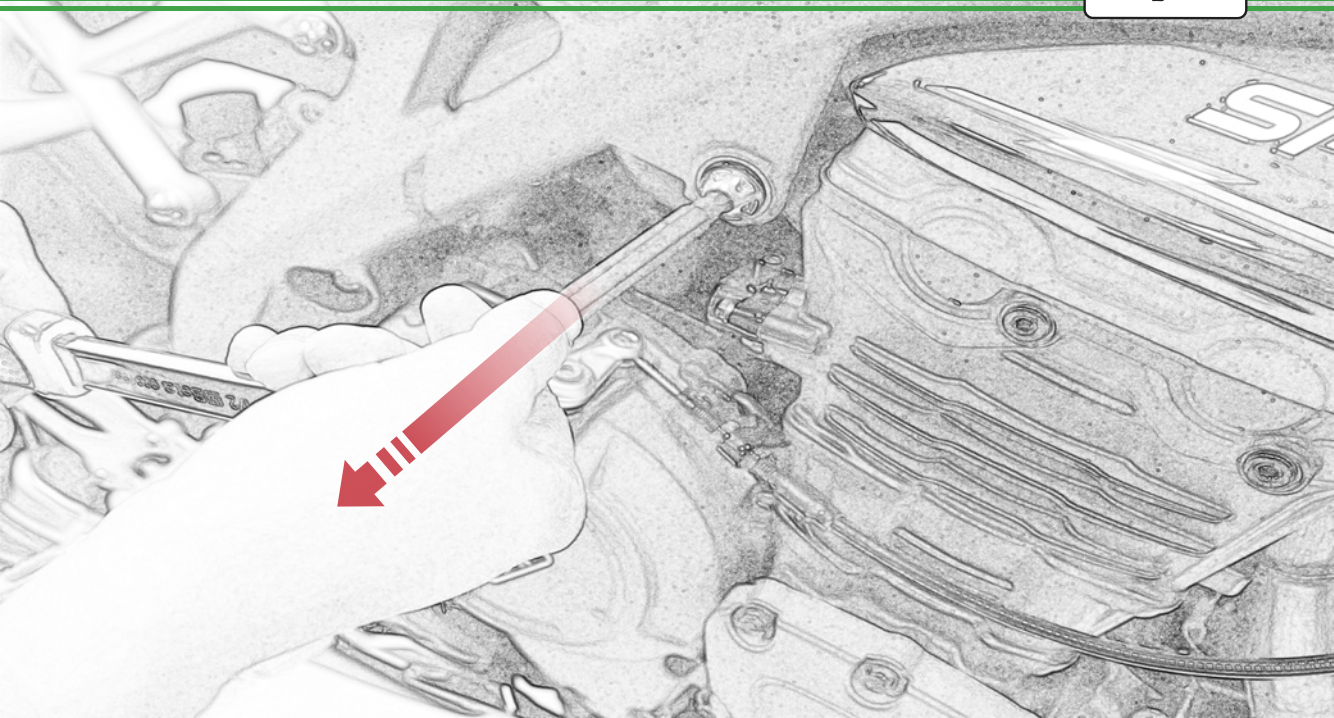

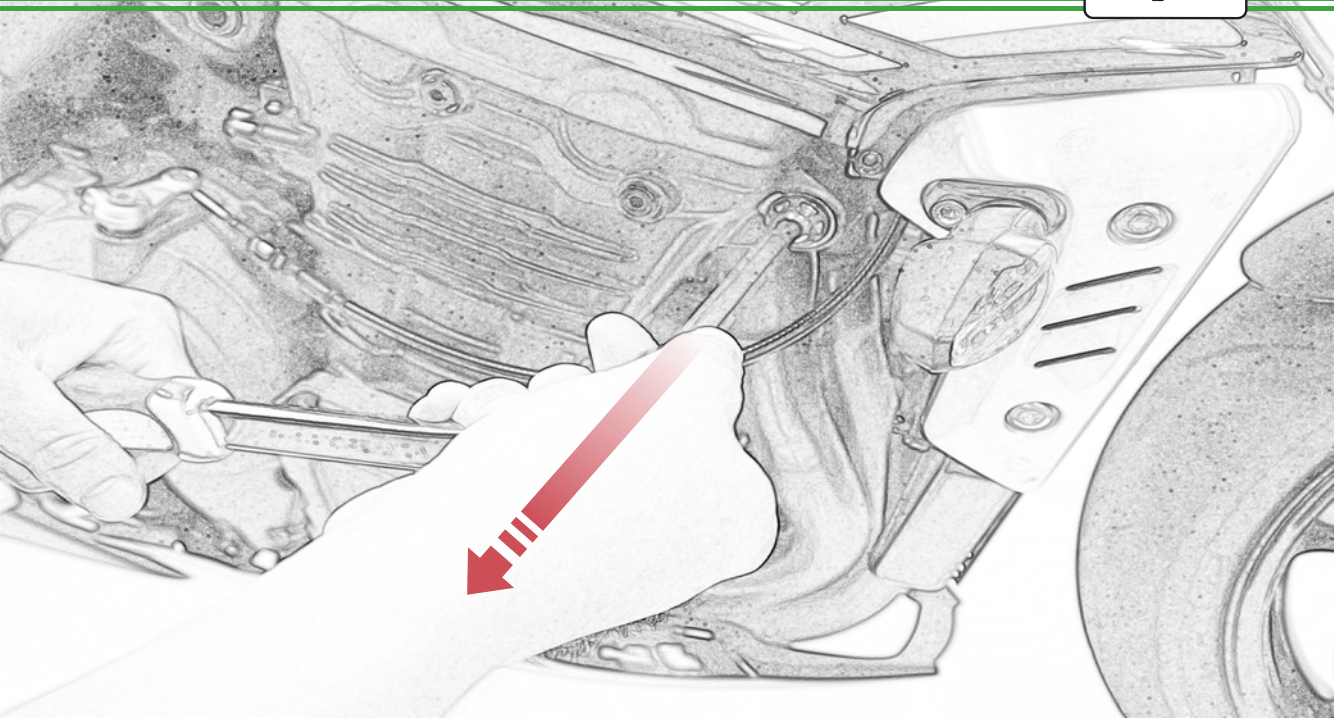

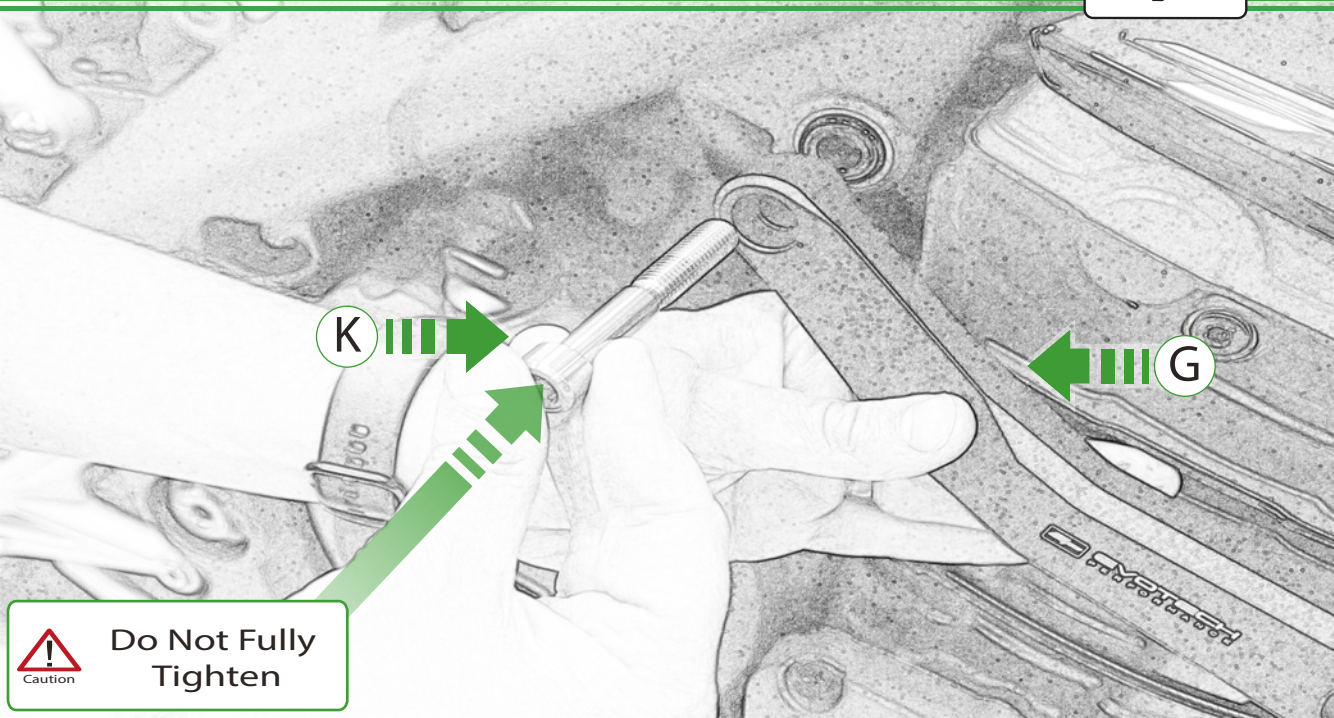


K

G



Caution

Do Not Fully
Tighten

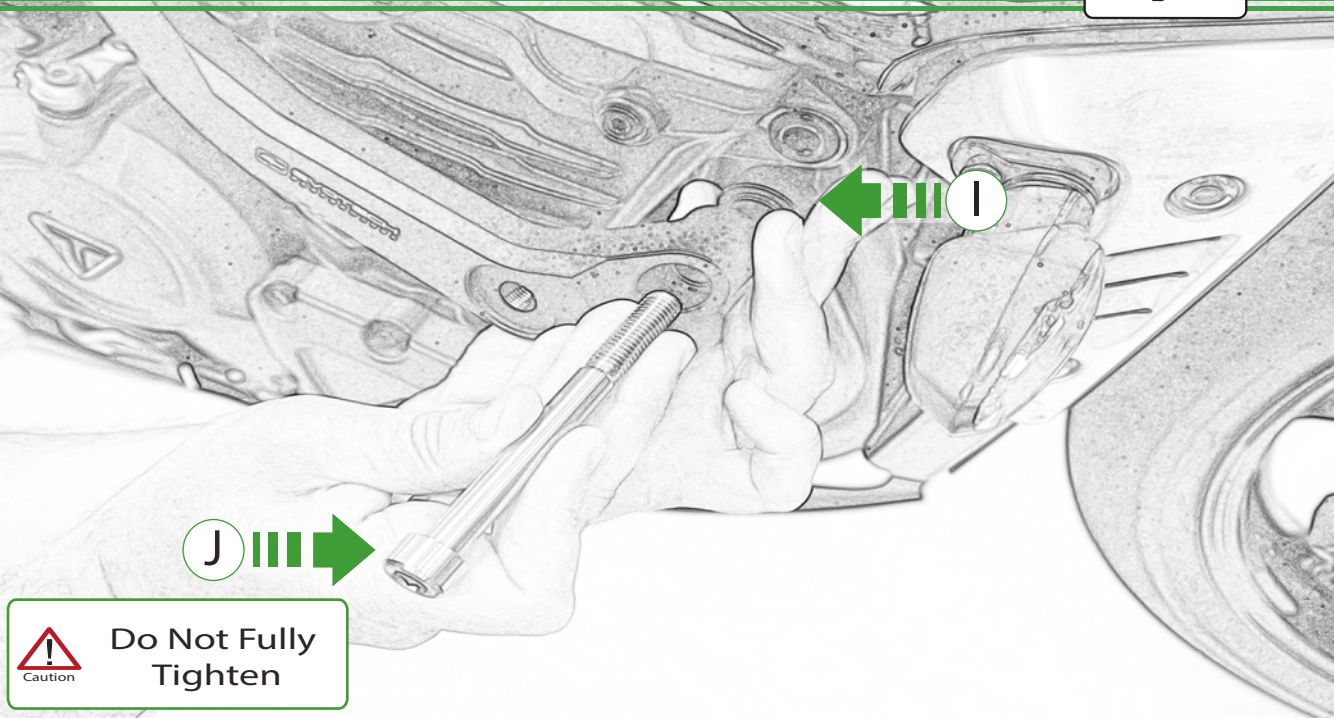


J


I



Do Not Fully
Tighten

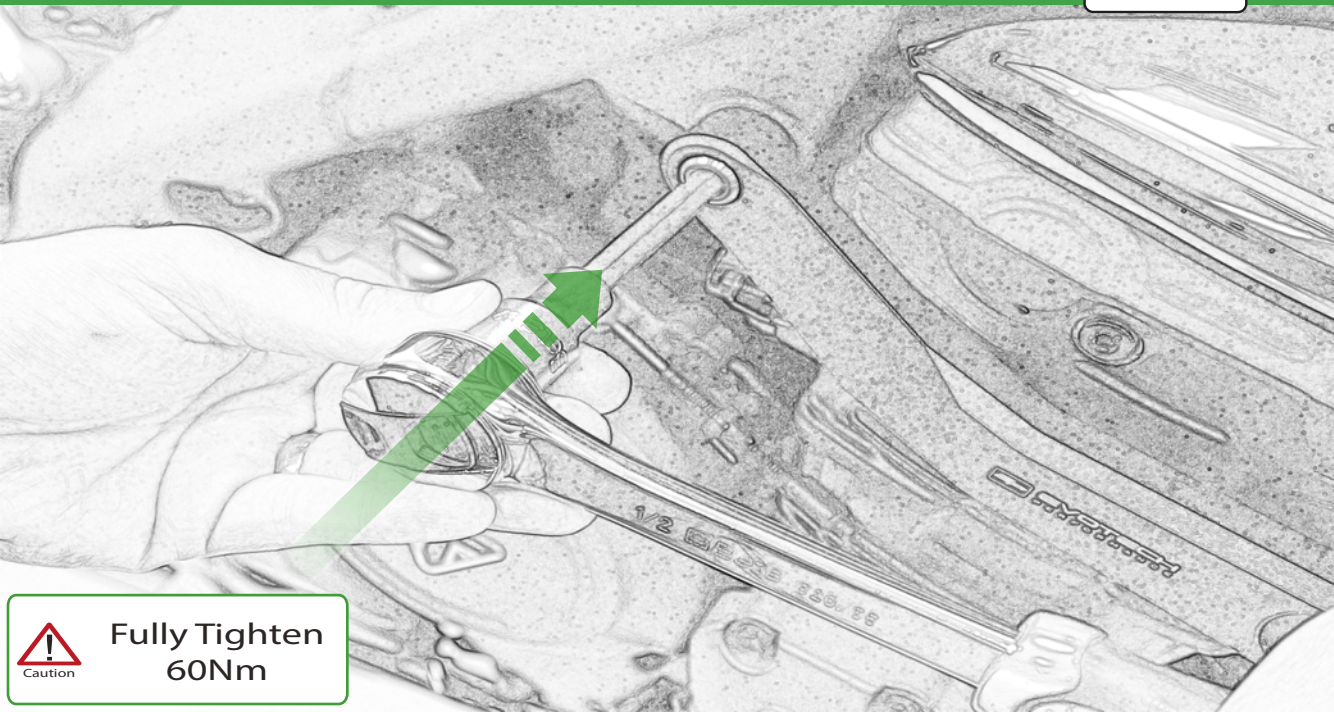



**Fully Tighten
60Nm**

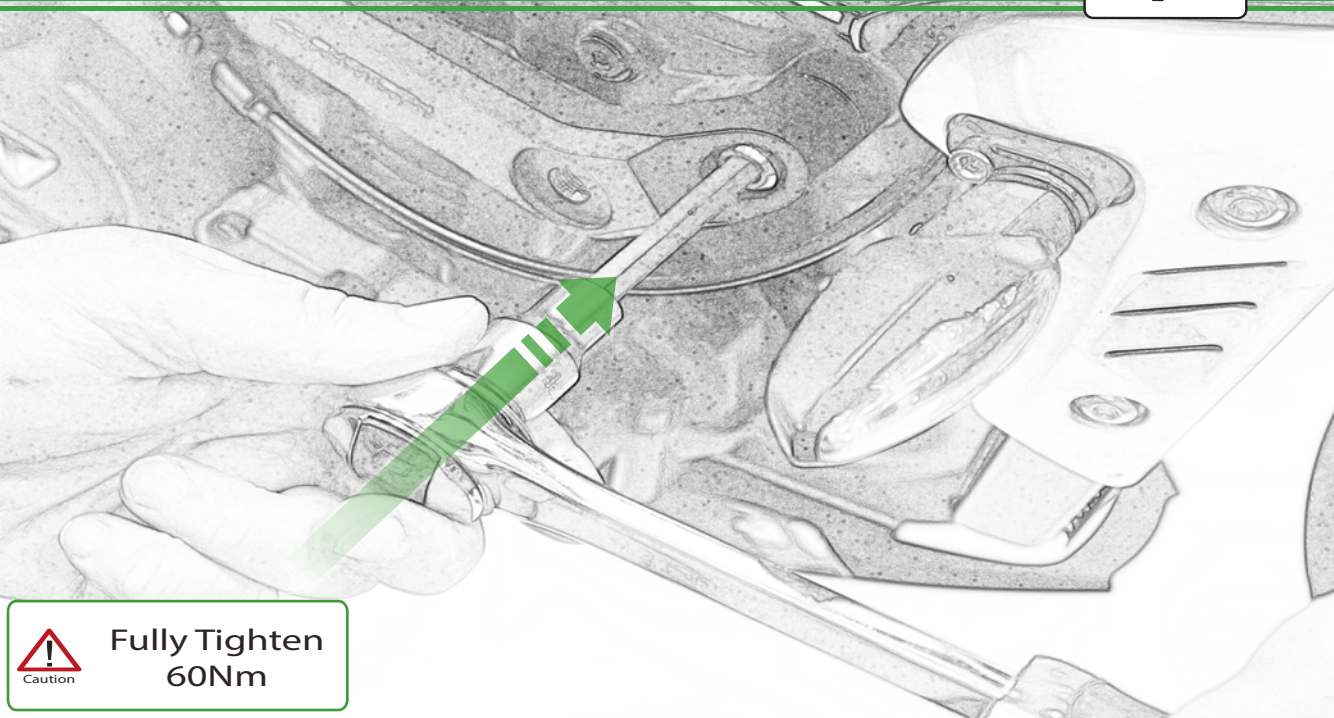



Caution


Fully Tighten
60Nm

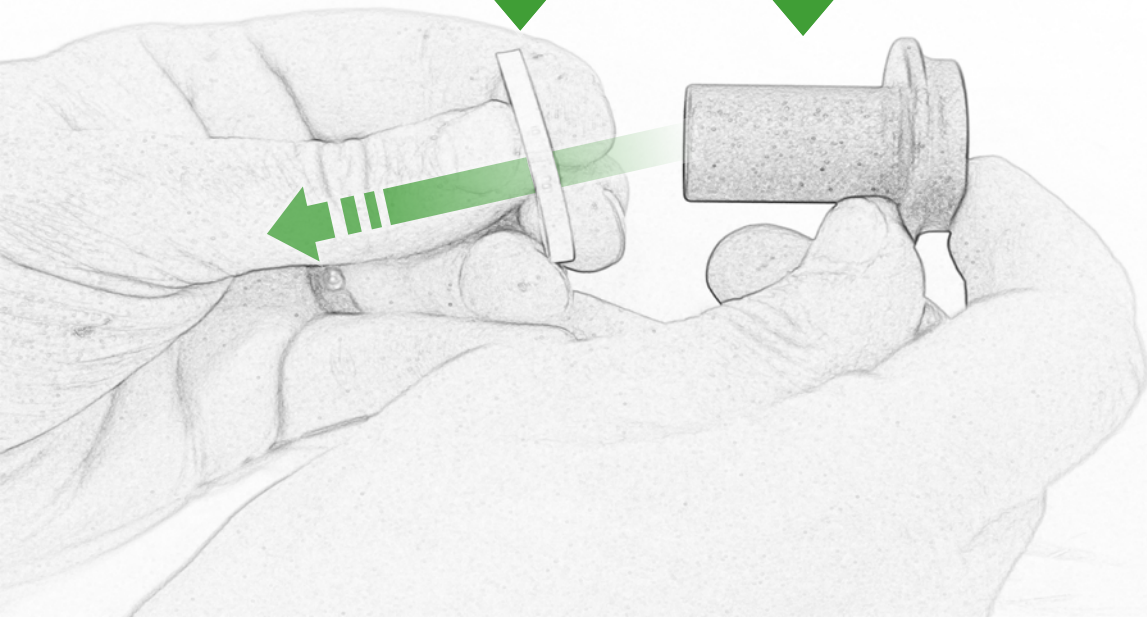


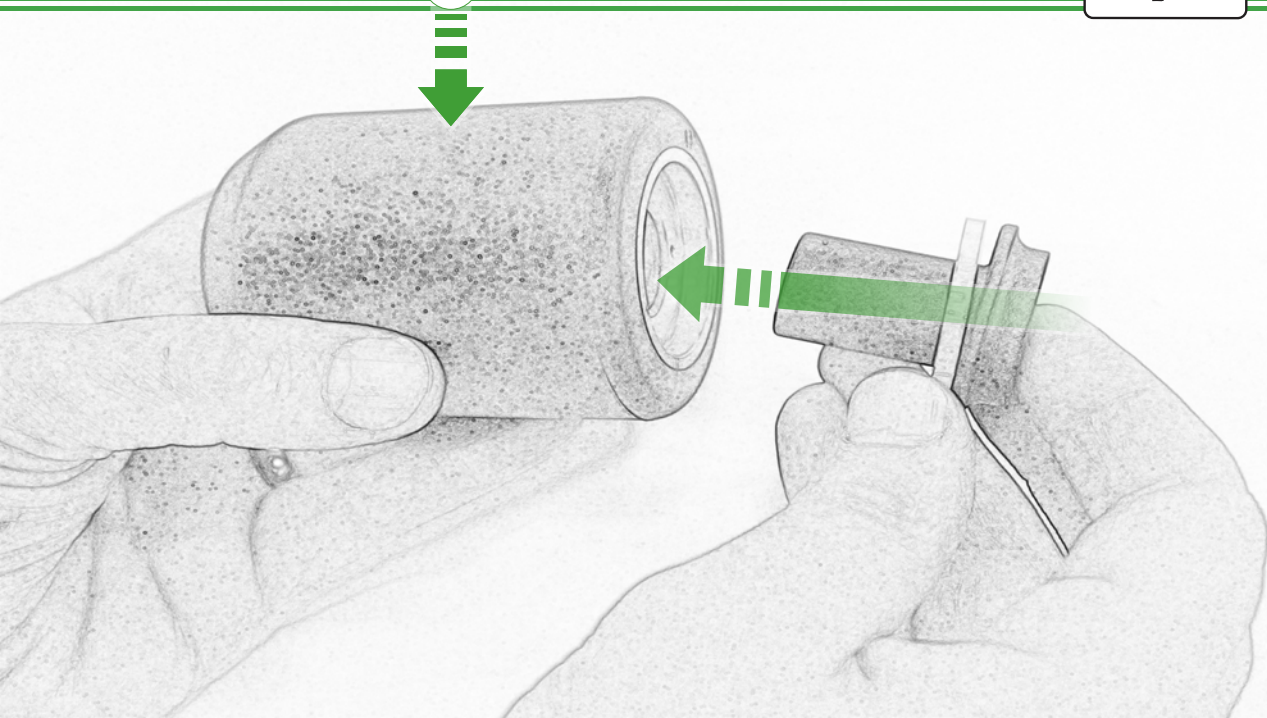

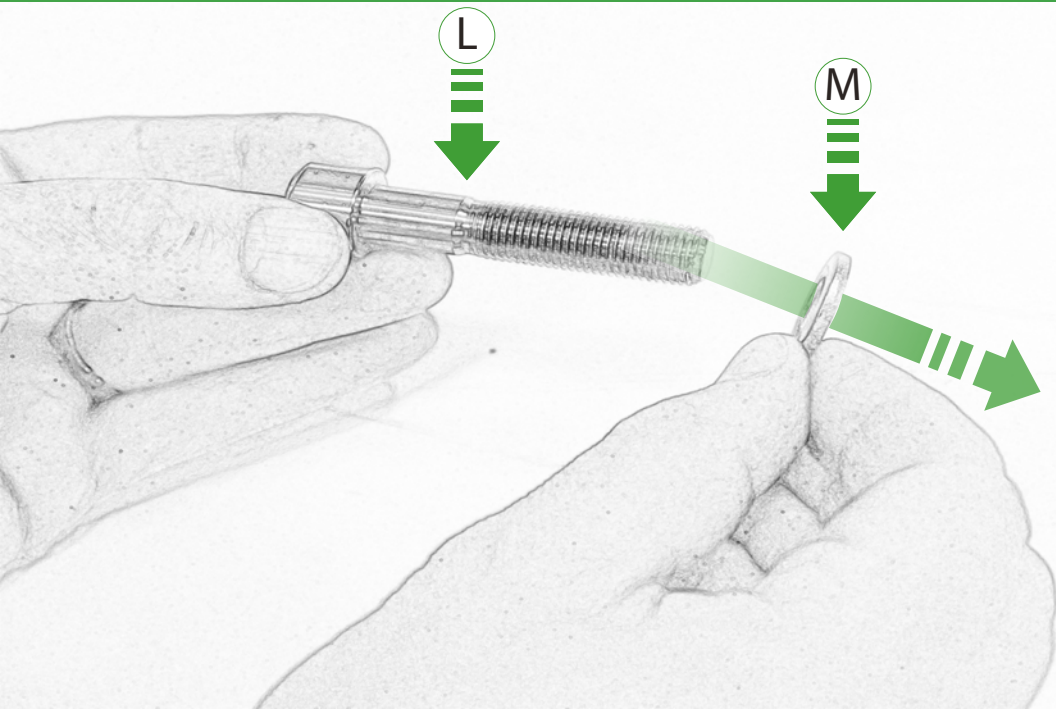

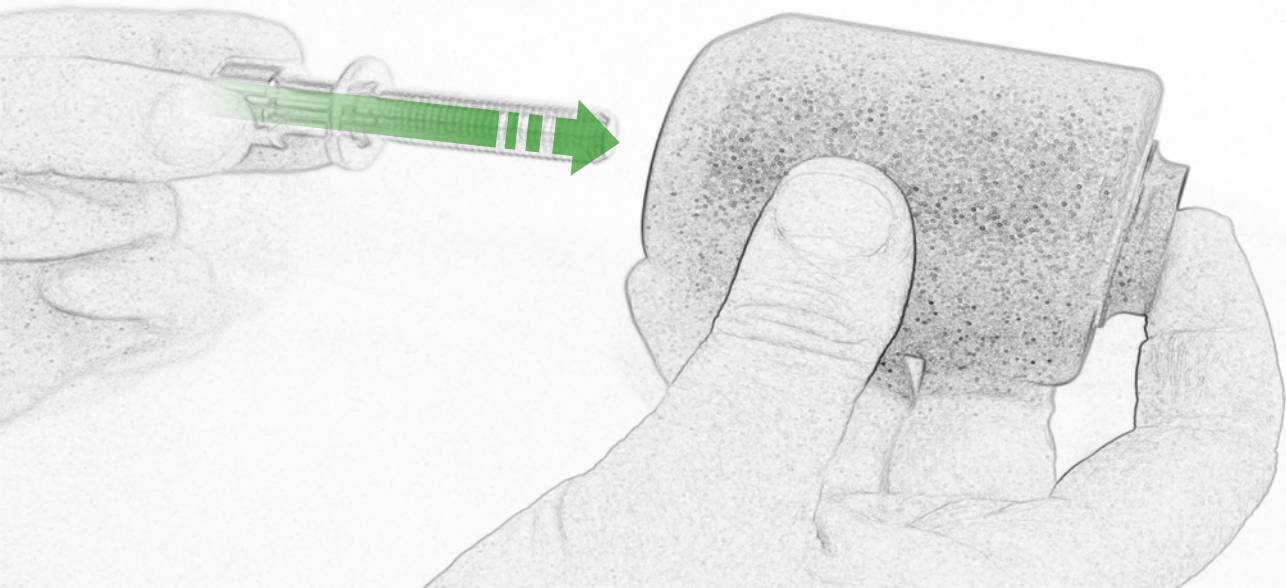

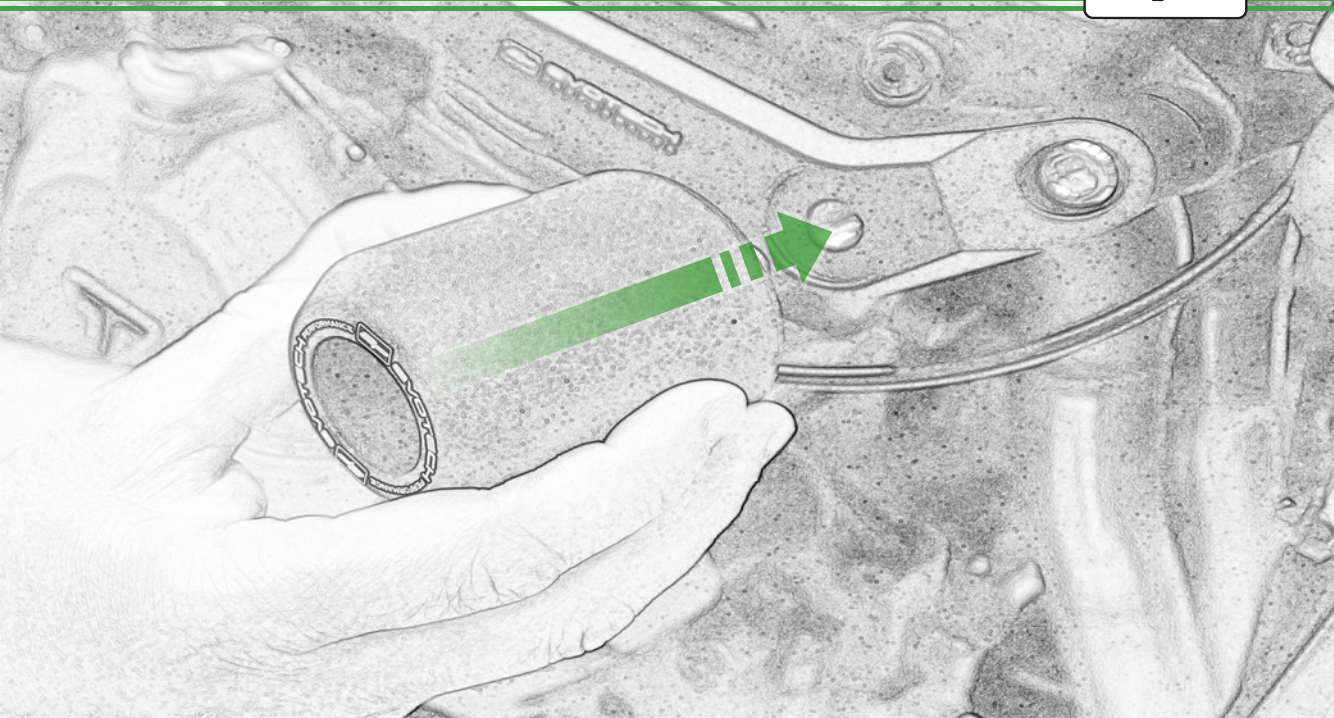

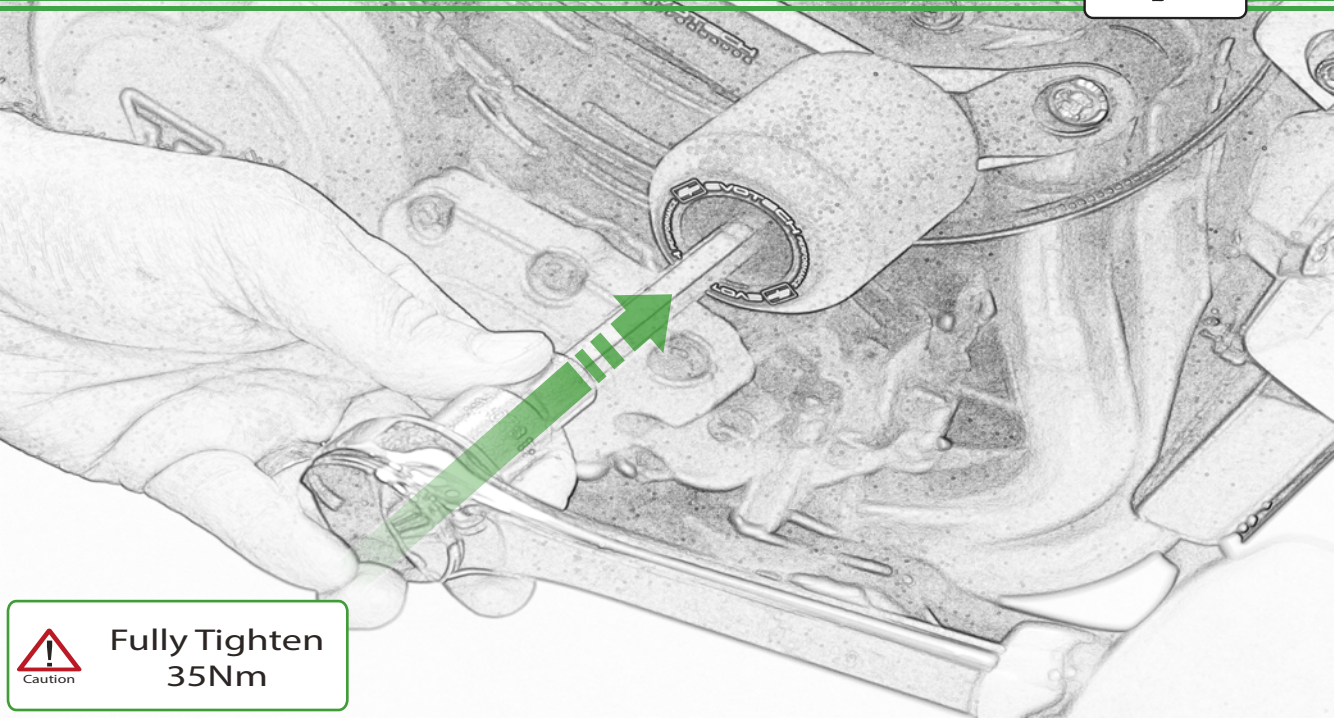

Caution

Fully Tighten
35Nm



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com