



Fitment method A


| Push-Rivet | Extenda Fenda & Hugger Extension Fitting Instructions

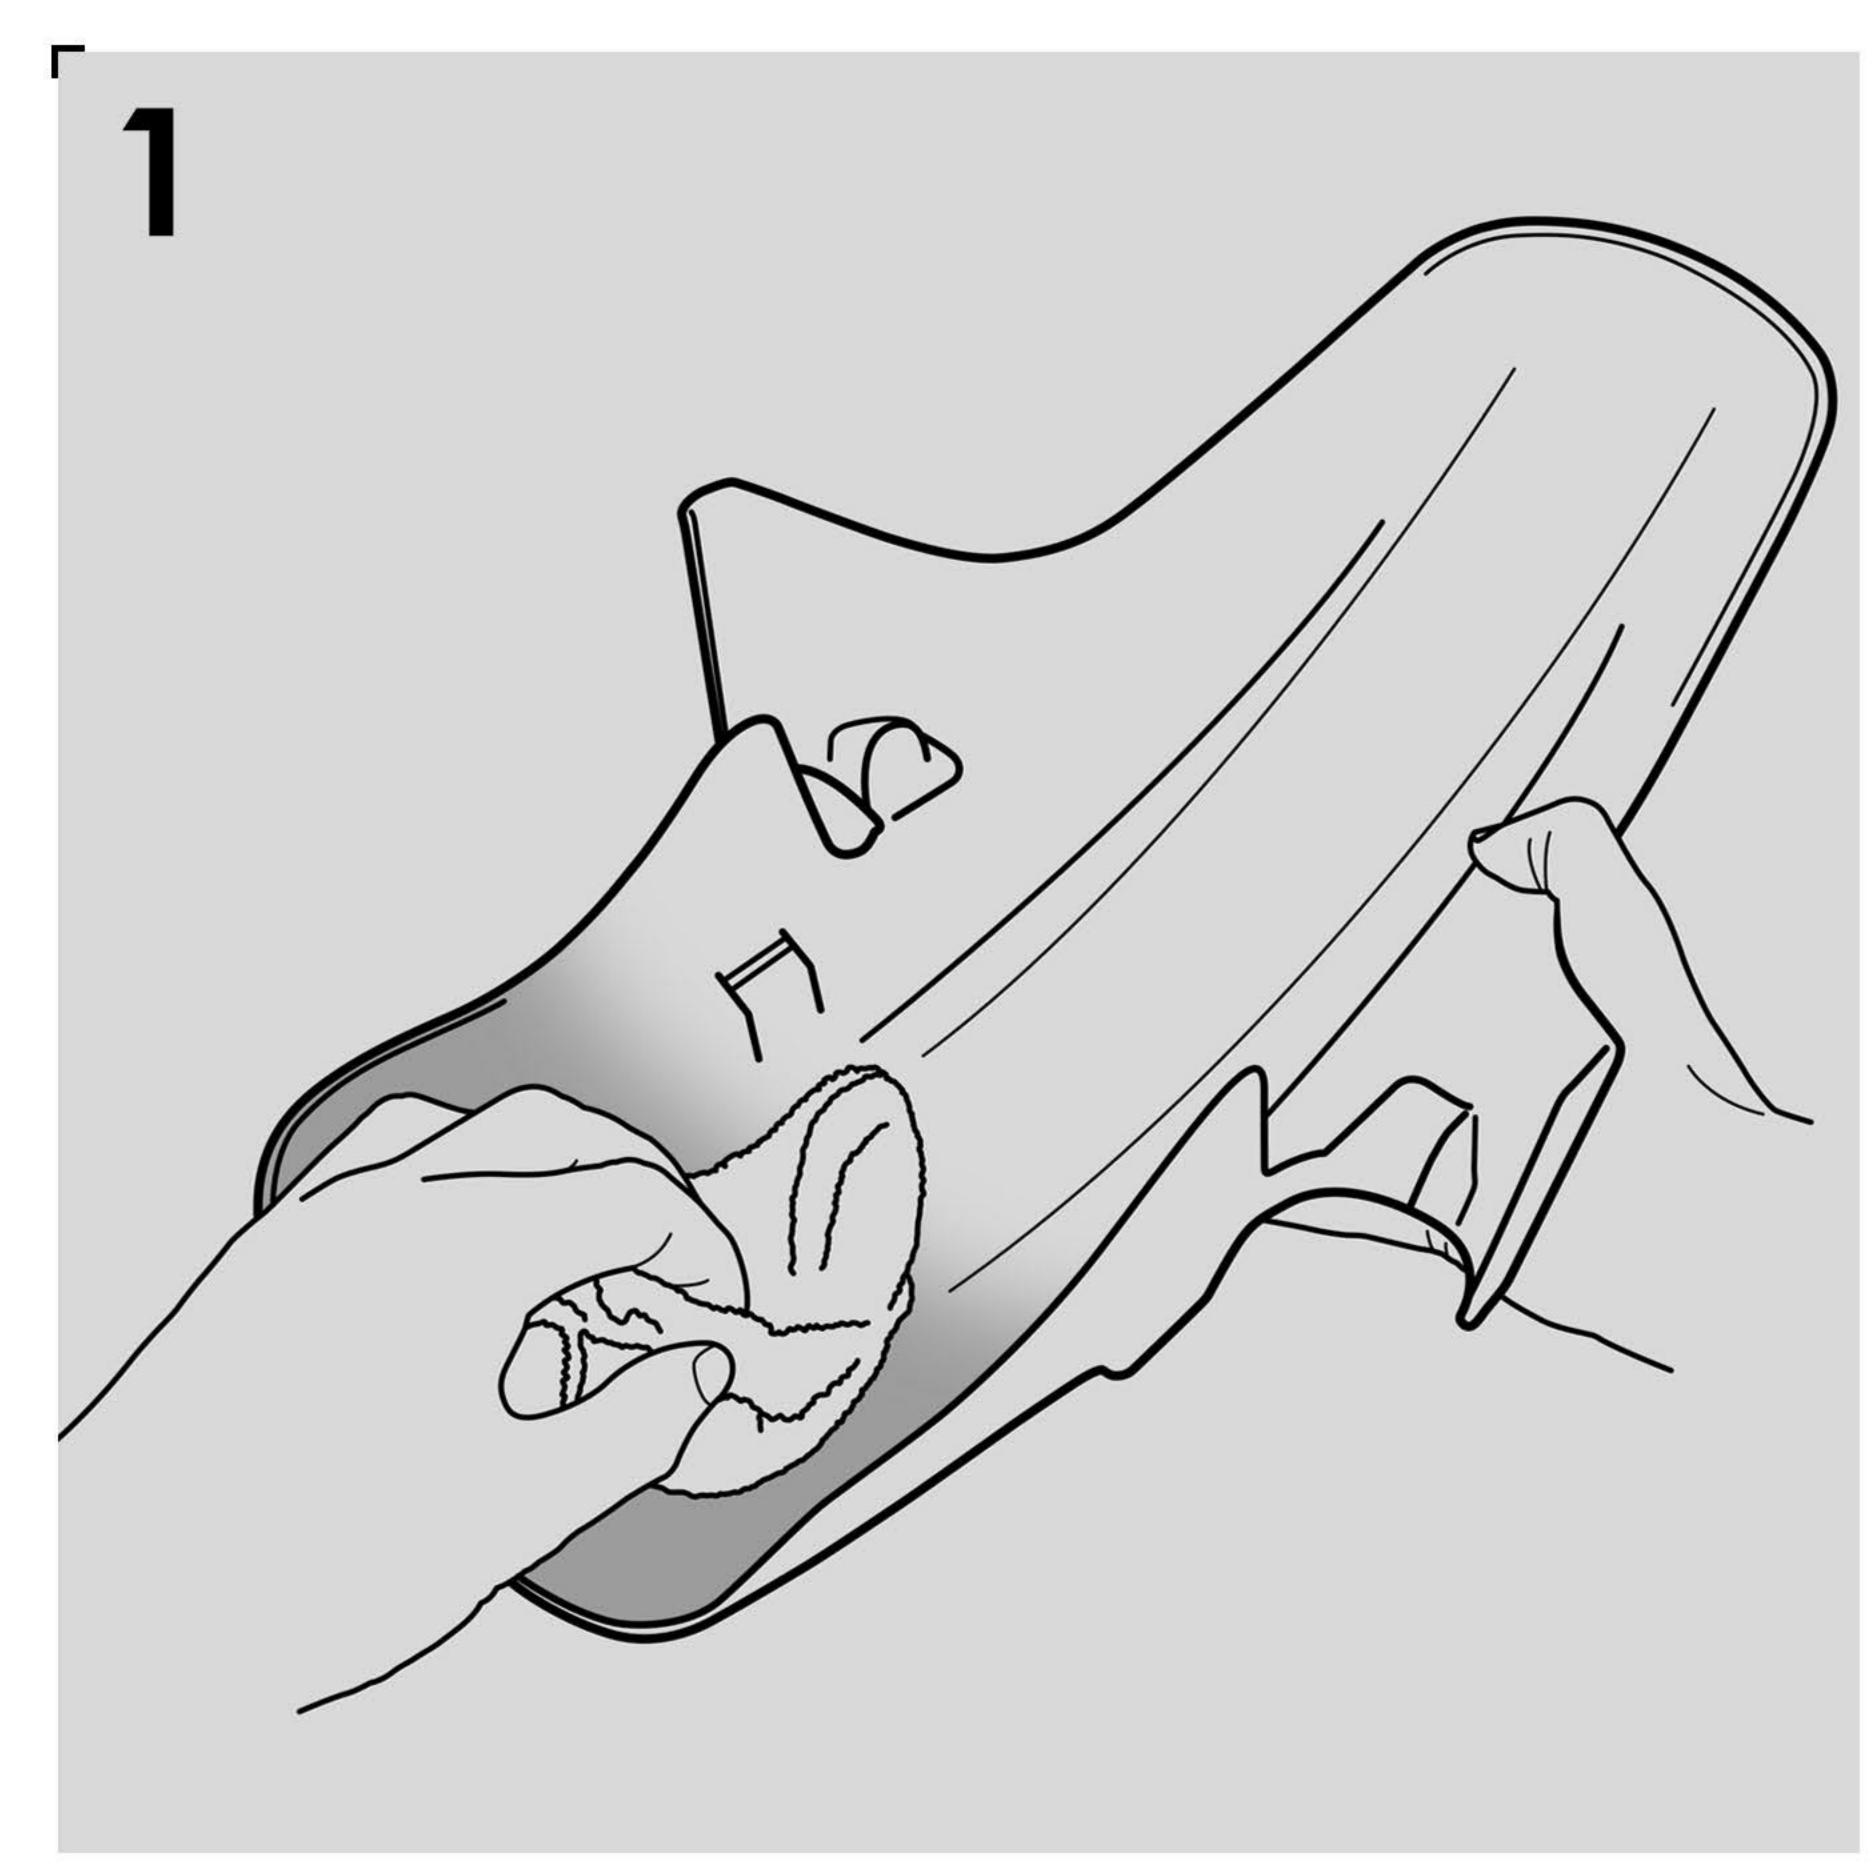

Remove mudguard from bike & clean inside.

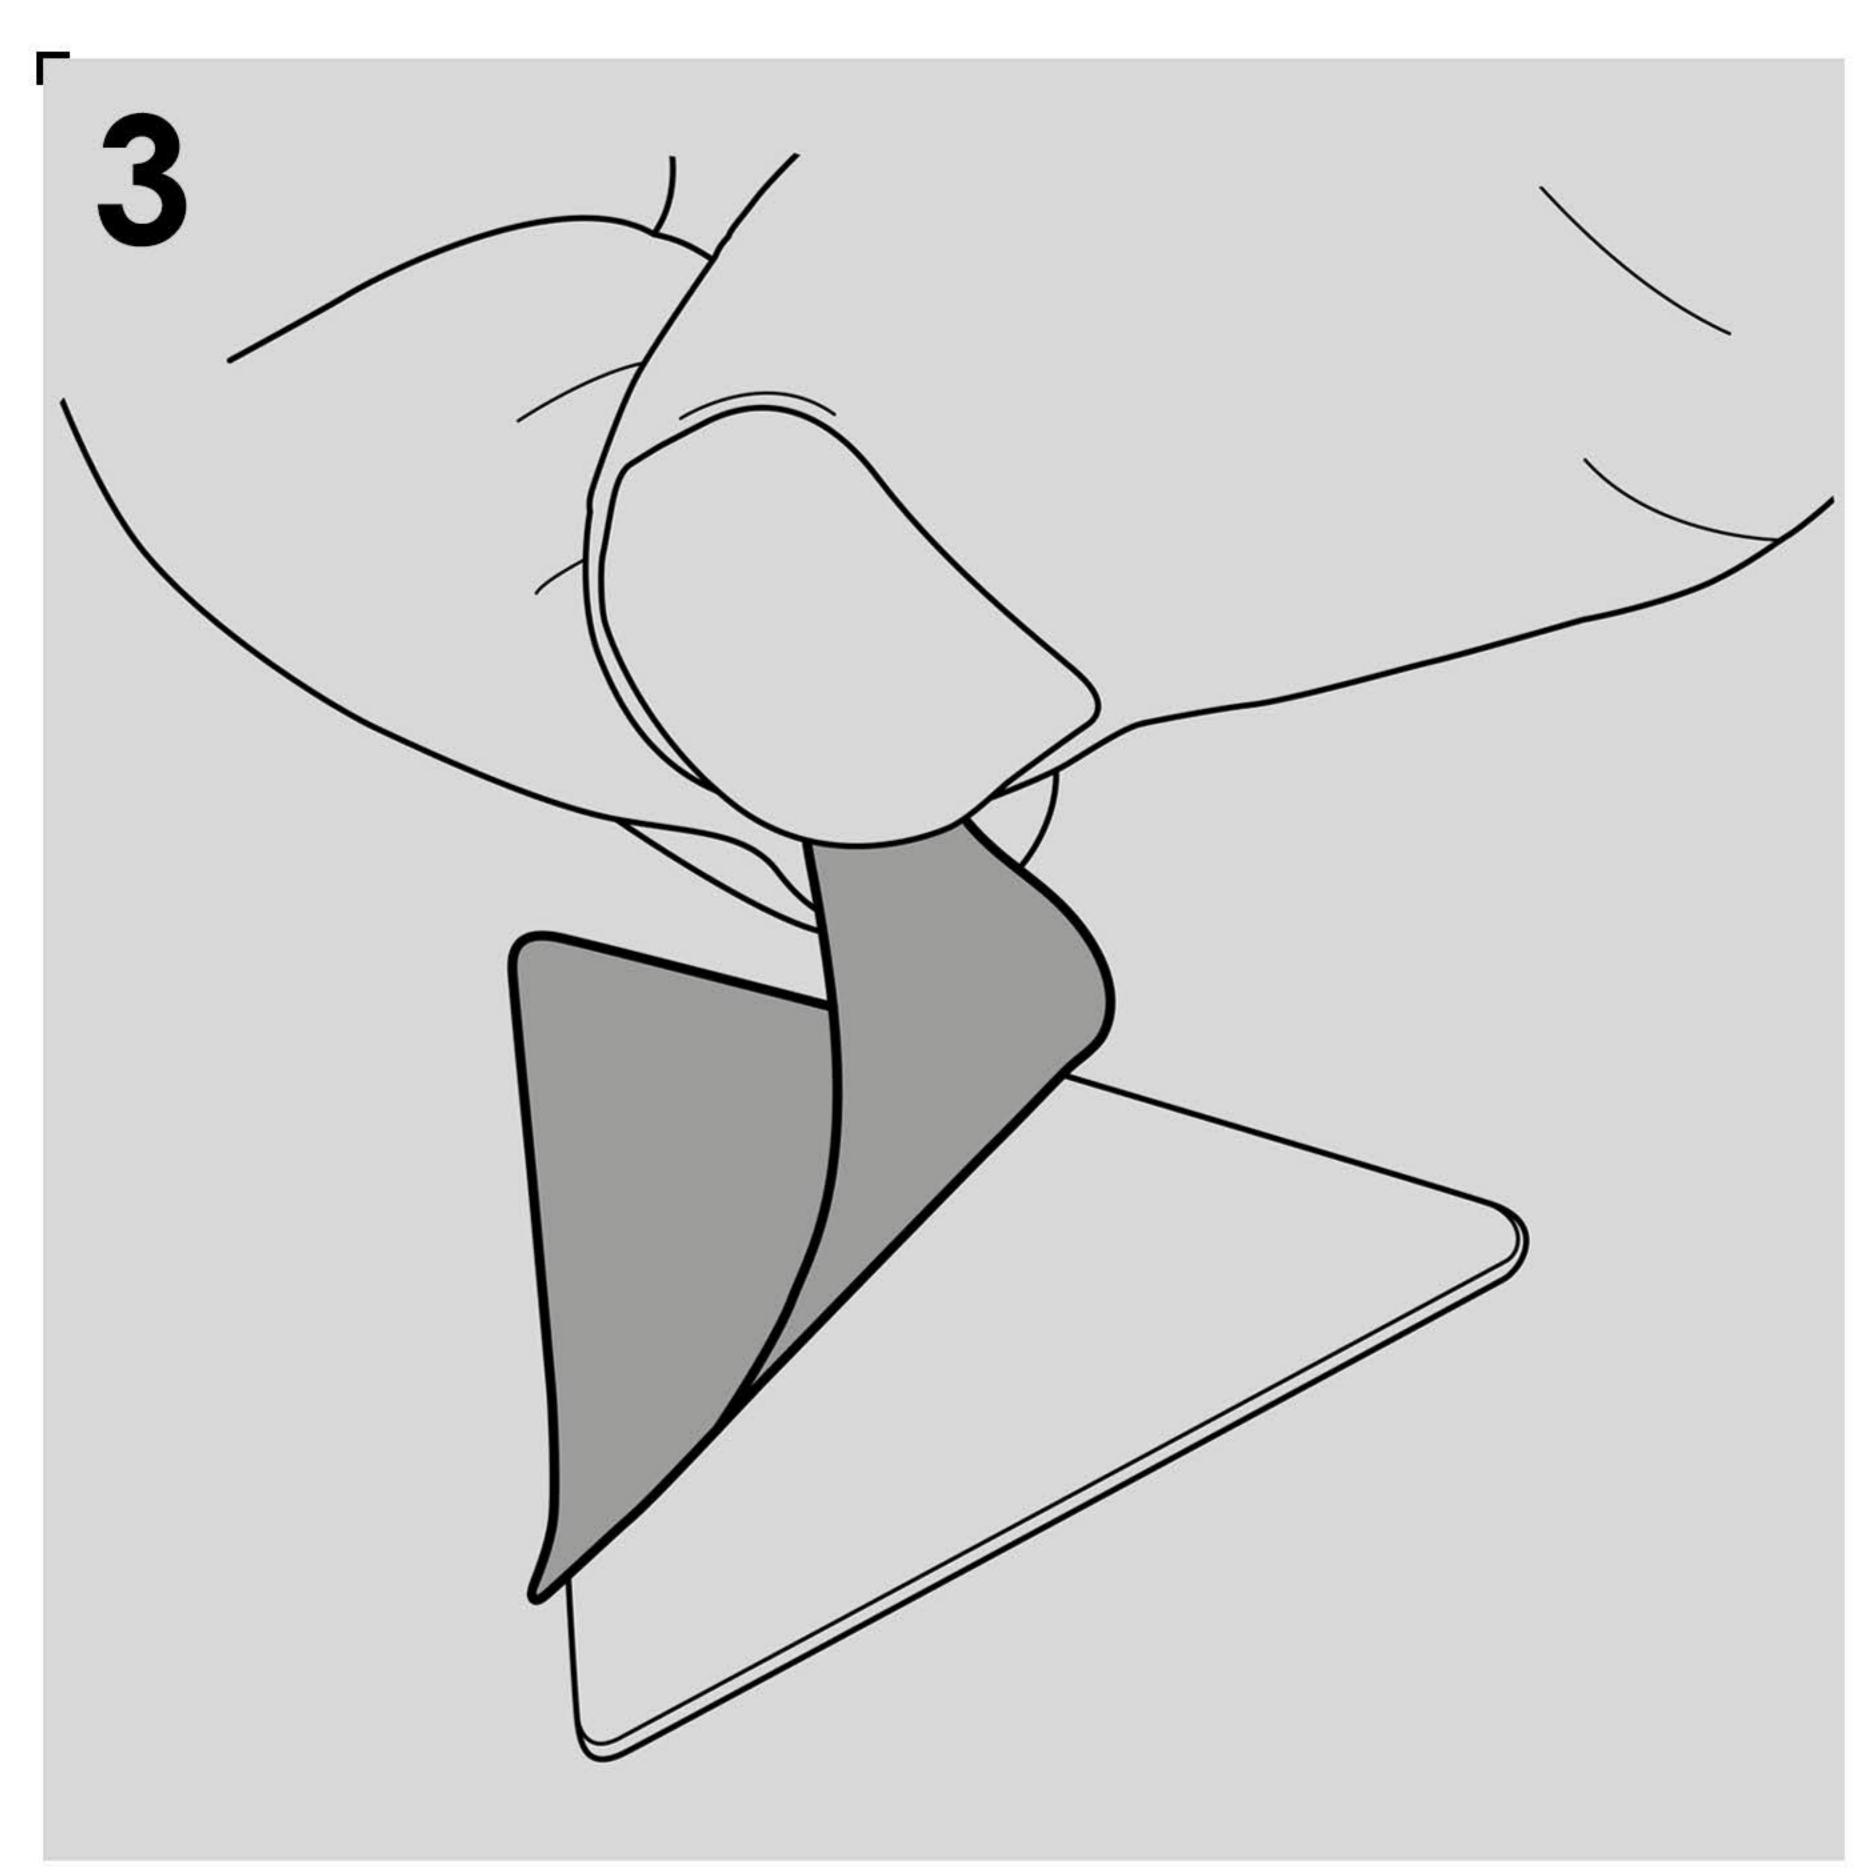


Peel backing paper from Stick-Fit pads.

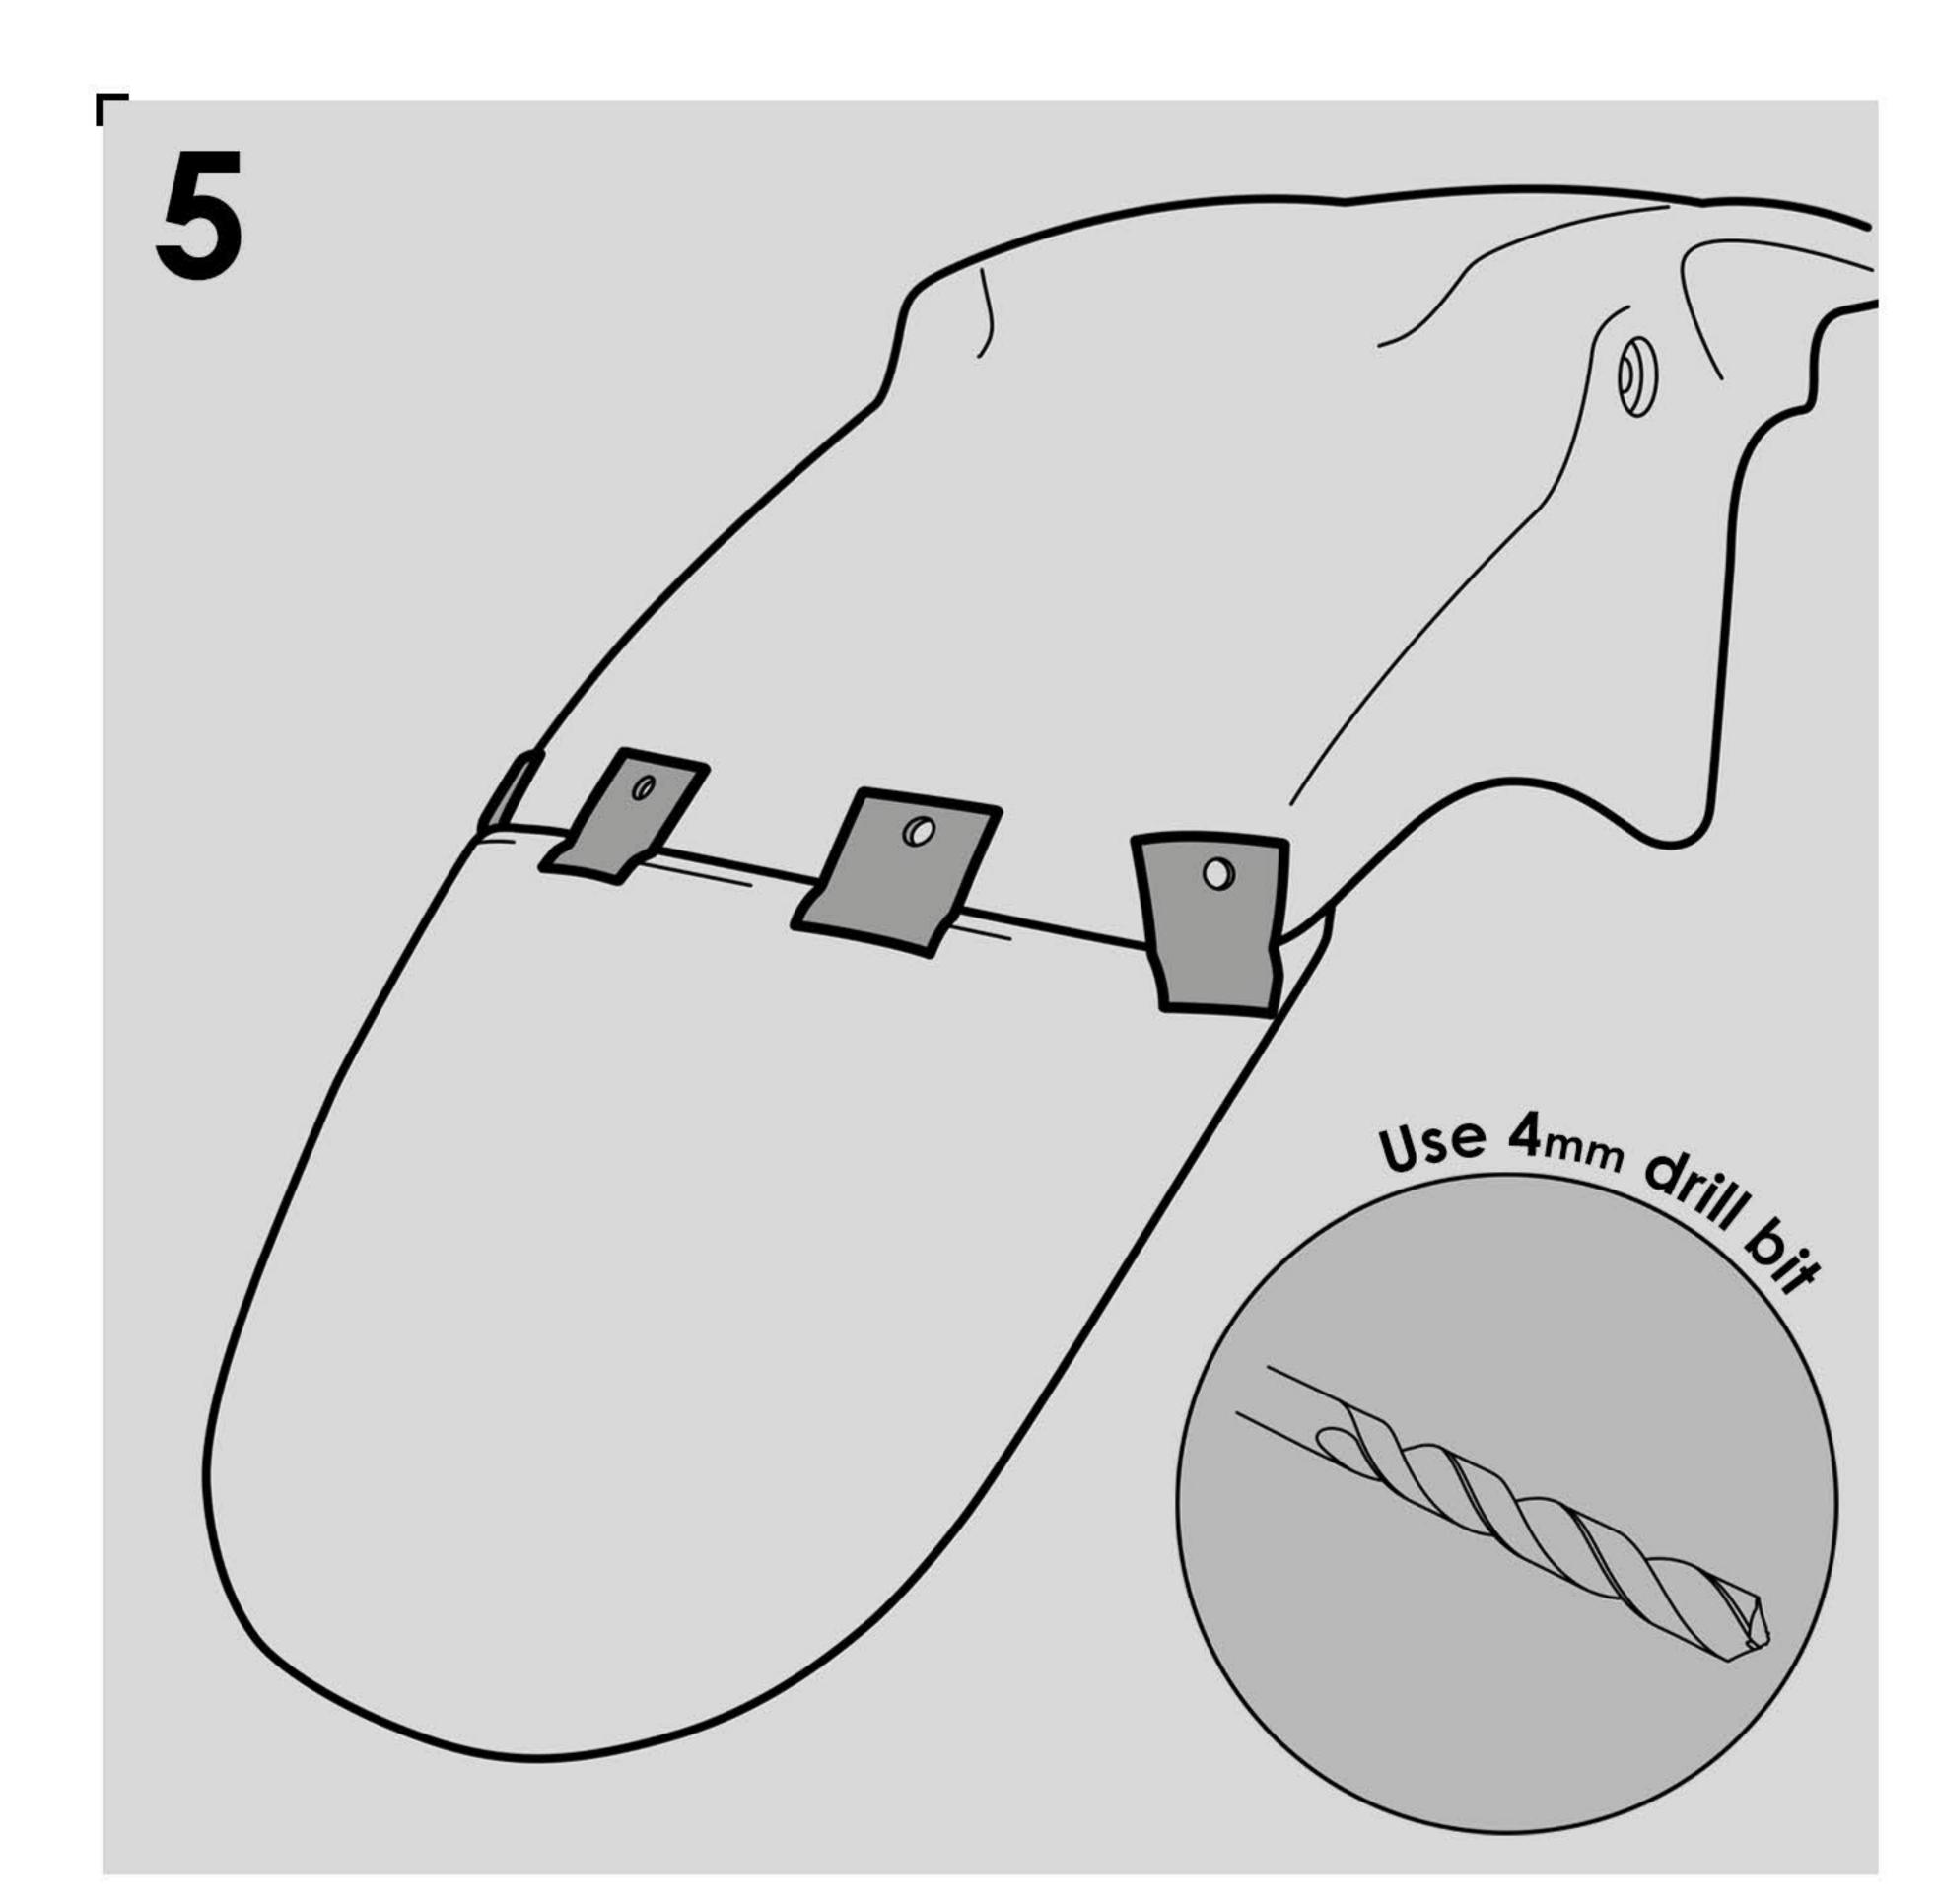


Use masking tape to mark equally spaced drilling points.


Drill through the Extenda Fenda/Hugger Extension & mudguard at each point.

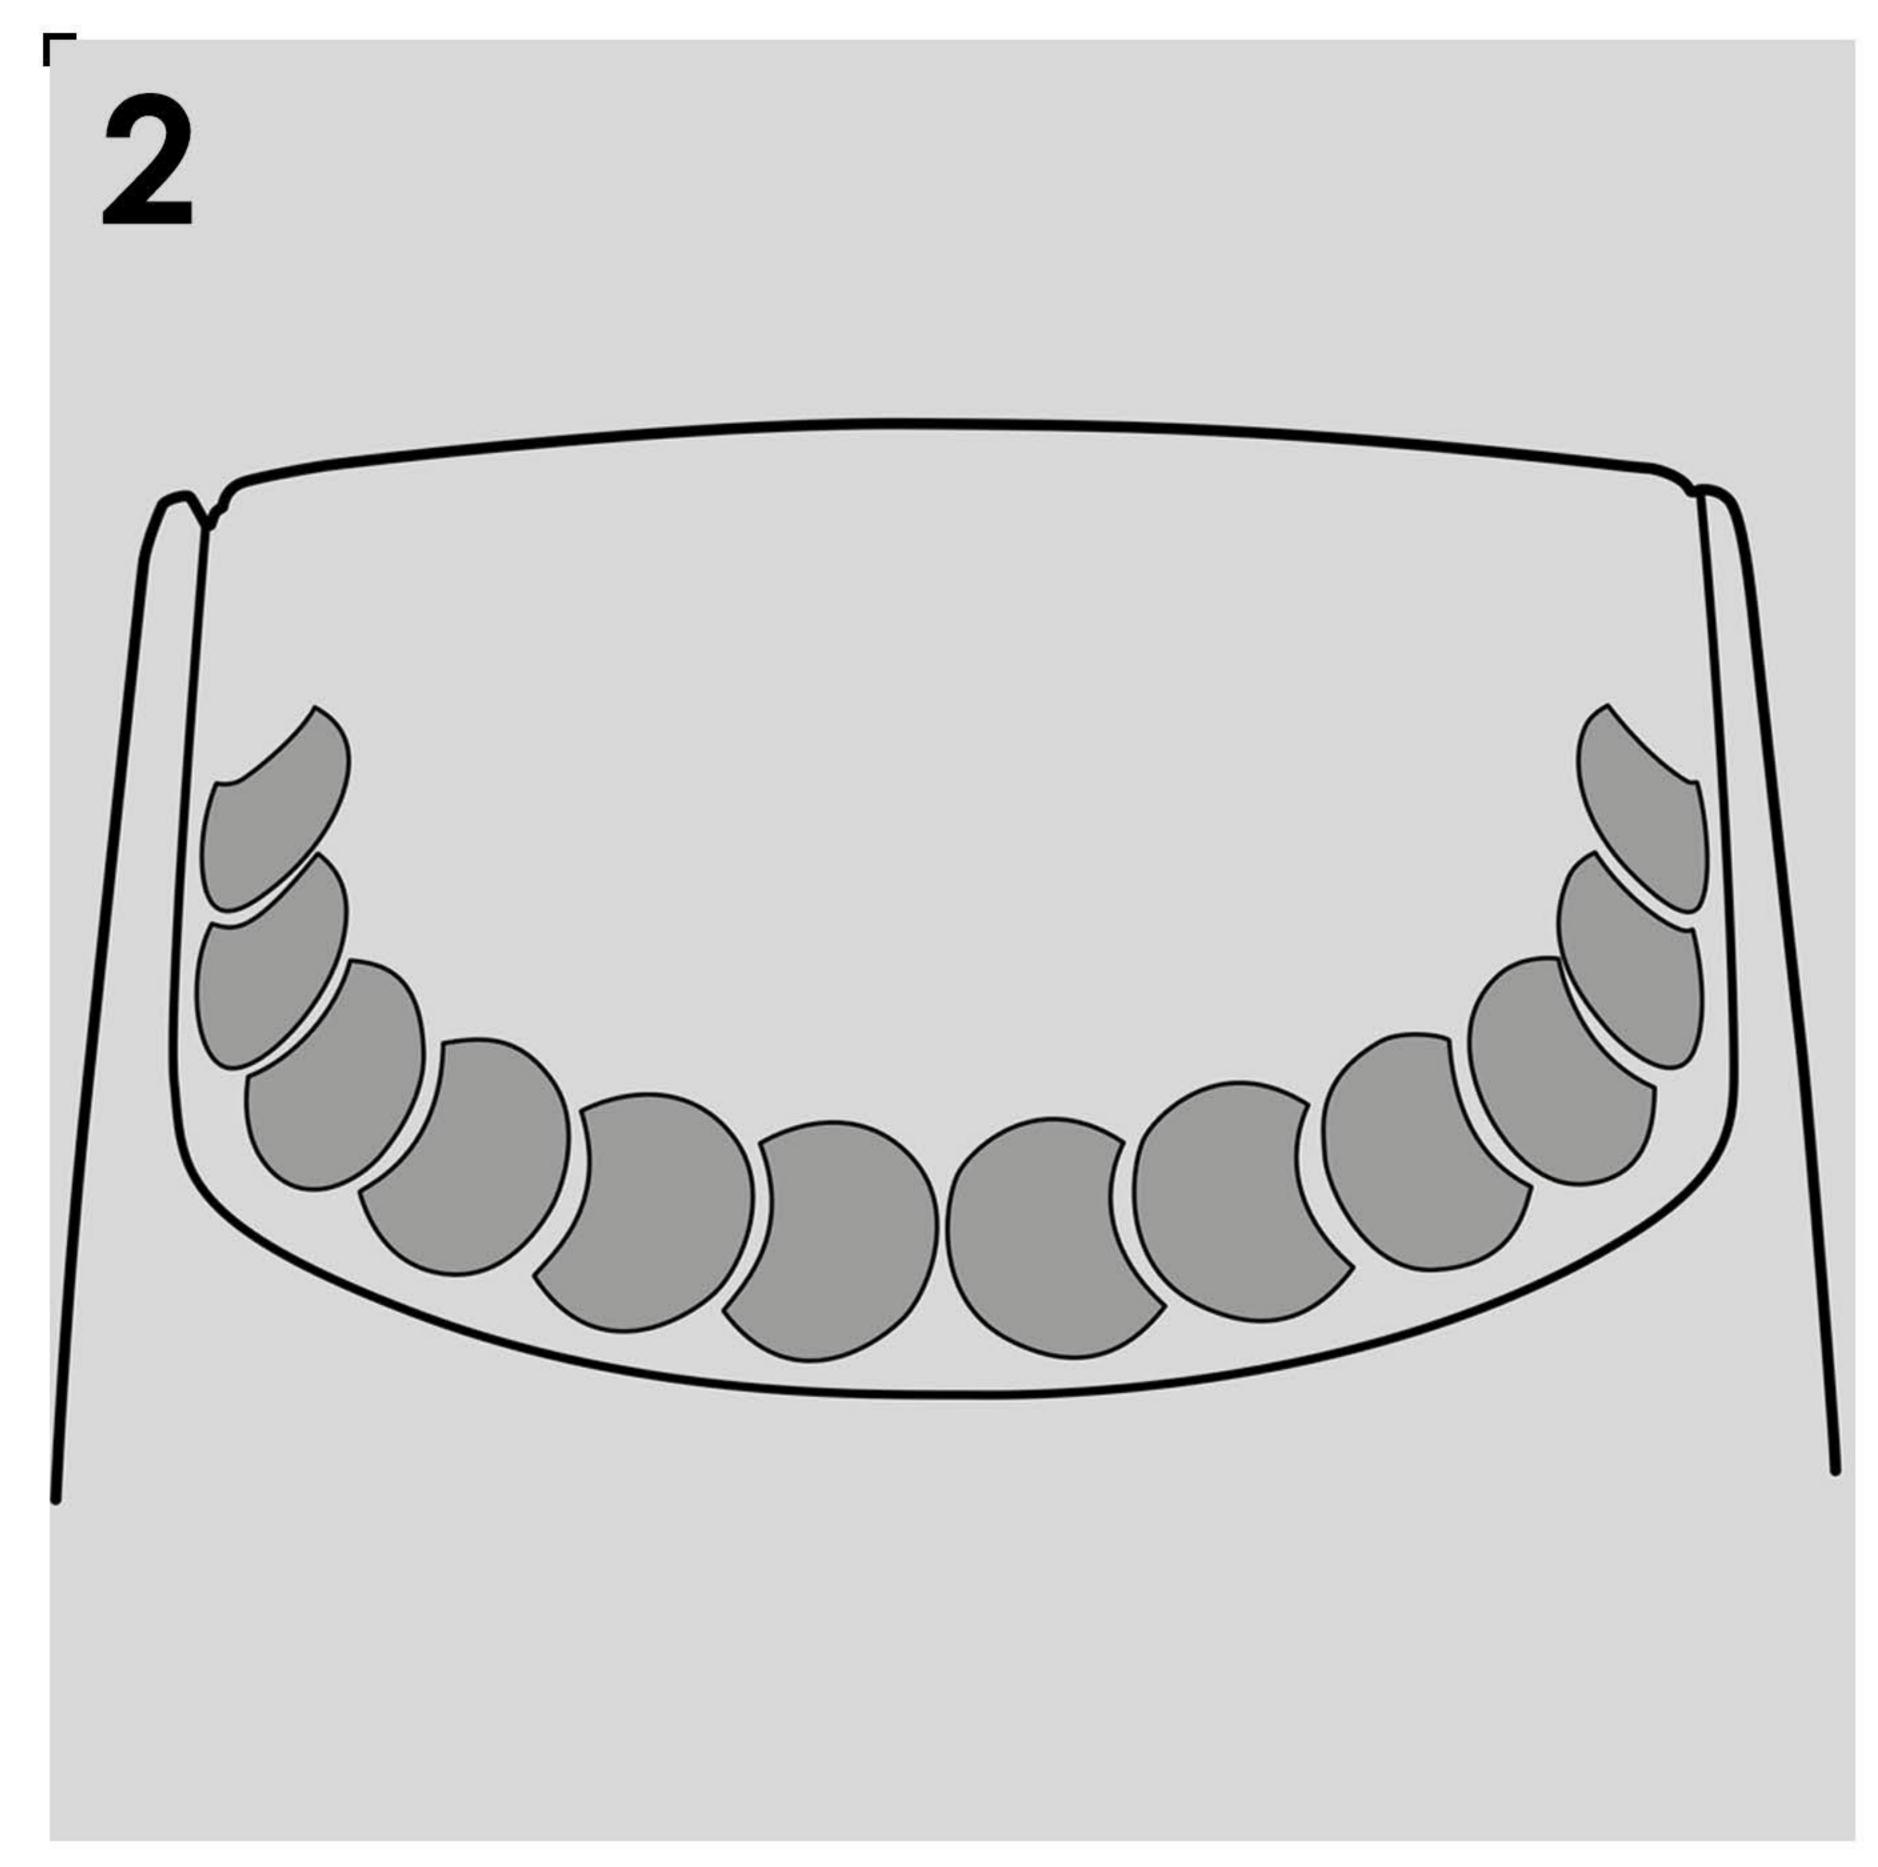

Attach a few Stick-Fit pads to the Extenda Fenda/ Hugger Extension in area shown to create a gasket.

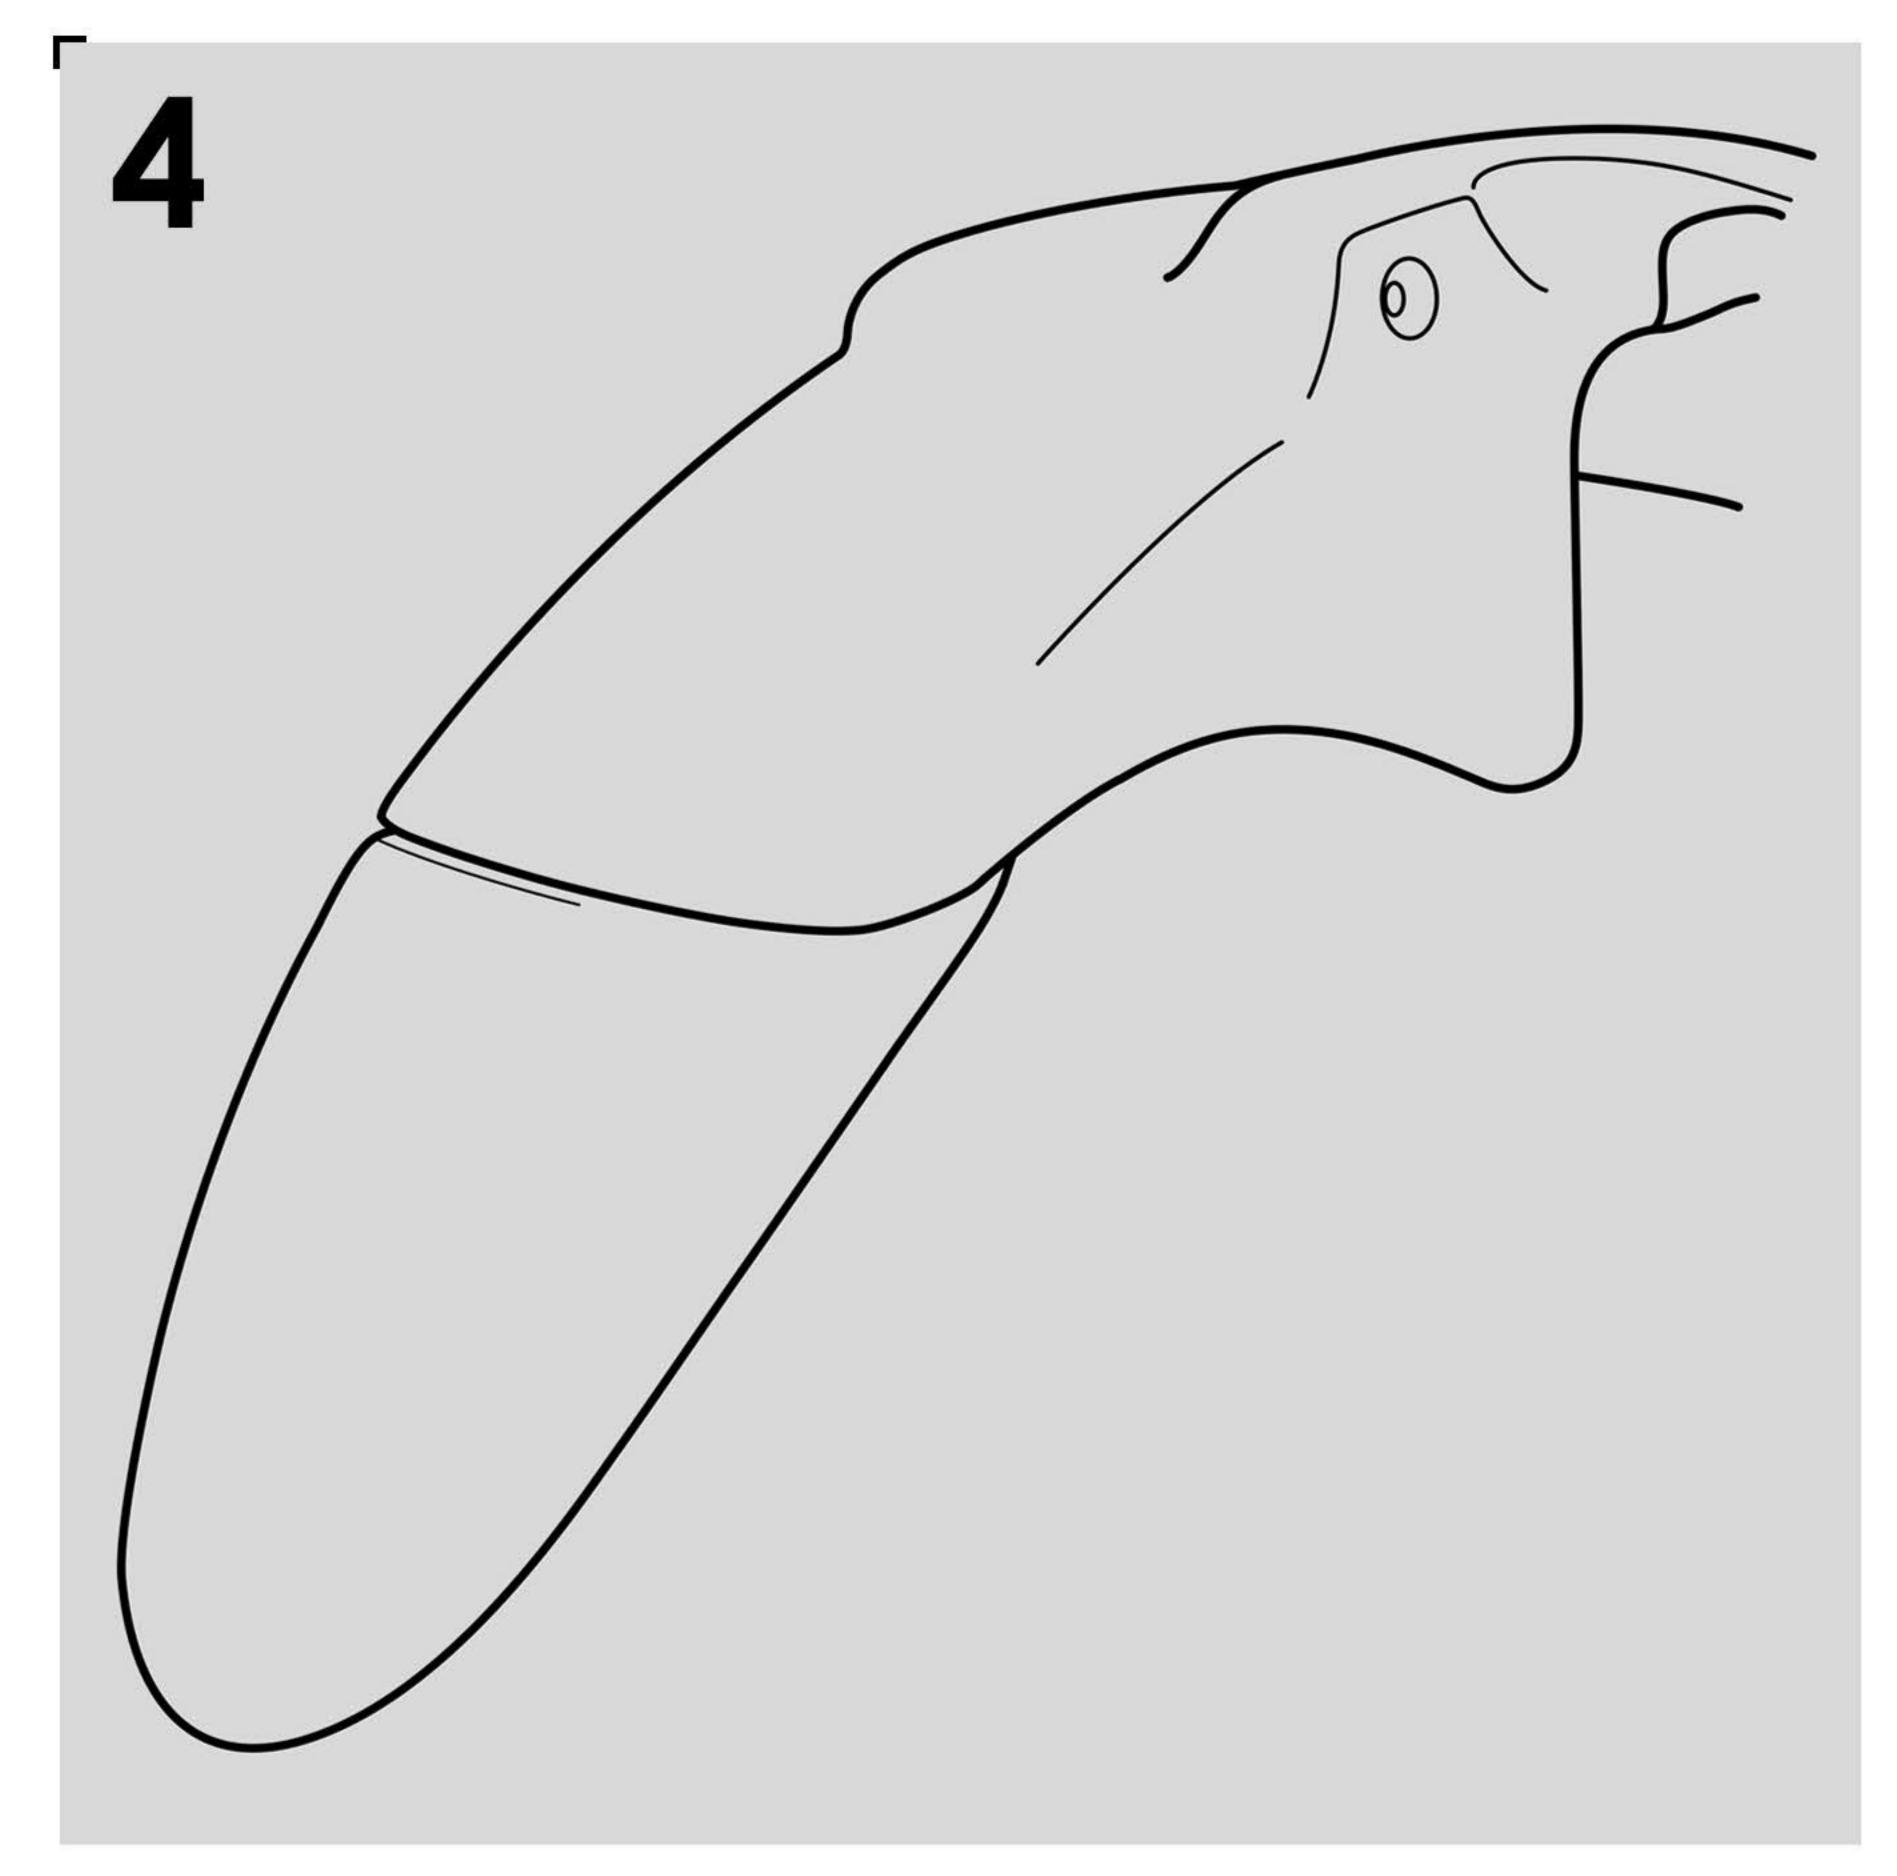

Fit Extenda Fenda/Hugger Extension to mudguard and check for alignment before step 5.

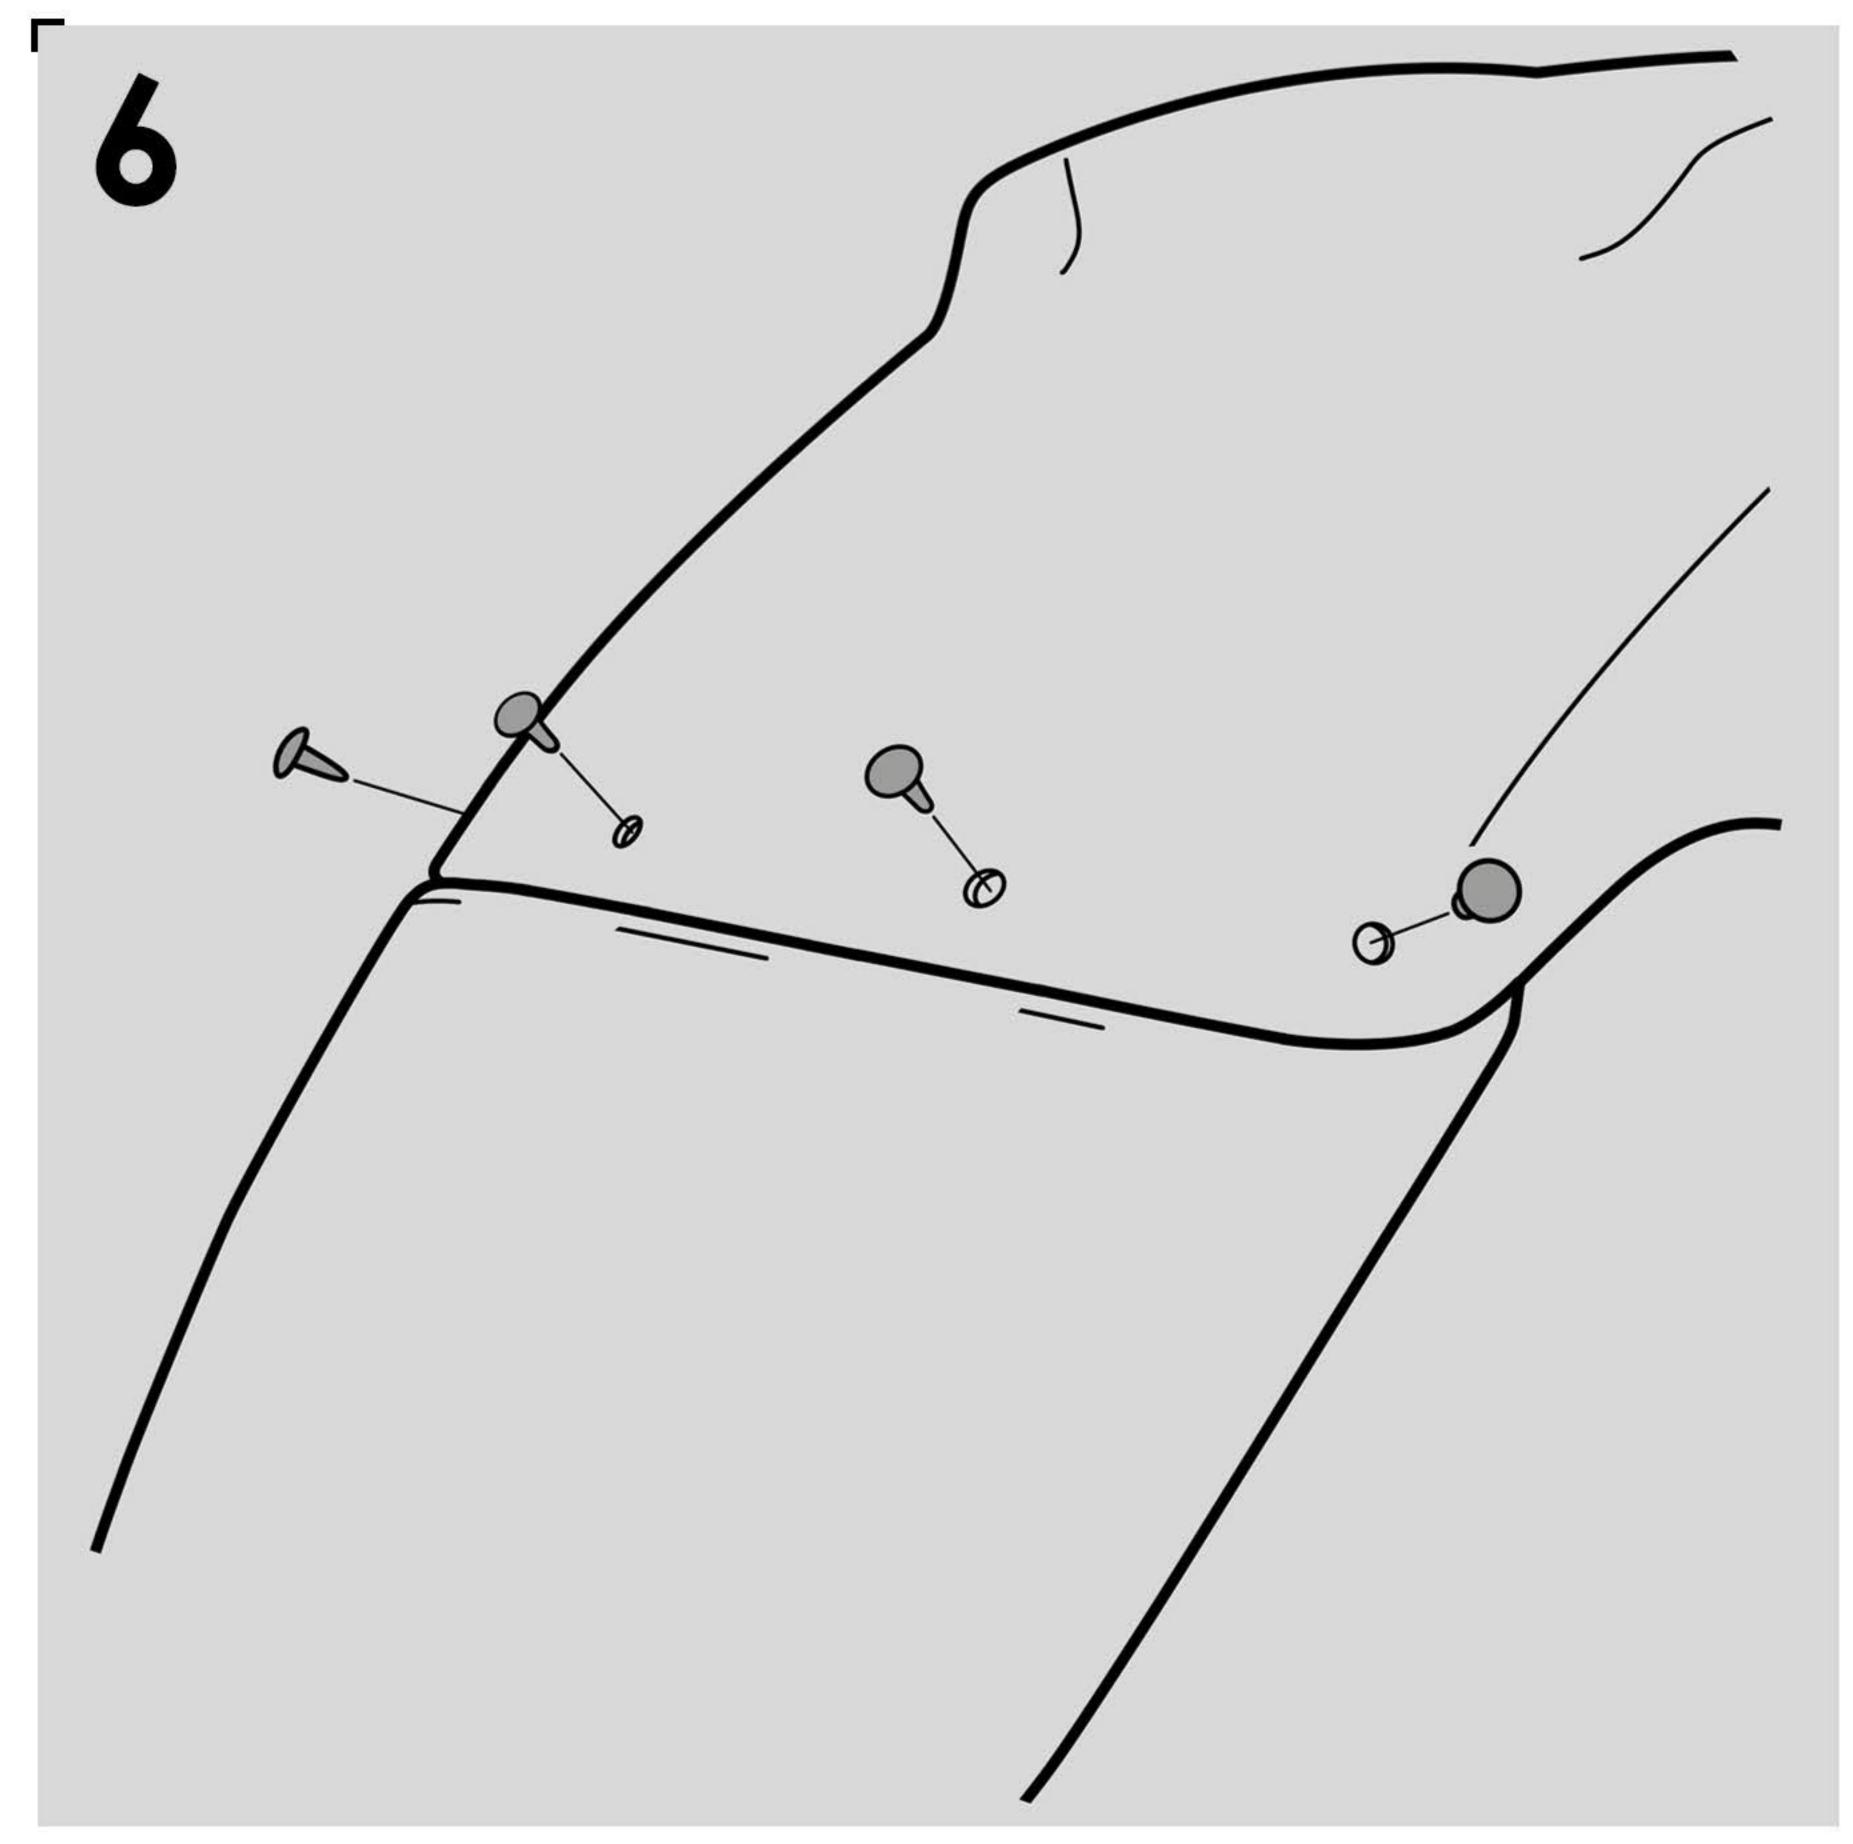

Fit Push-Rivets provided and re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Stick-Fit Extenda Fenda/Hugger Extension

www.pyramid-plastics.co.uk




Fitment method B


Stick-Fit | Extenda Fenda & Hugger Extension Fitting Instructions

Important notes:


Avoid any cleaning product other than hot soapy water and wipe supplied, any oils or solvents will reduce adhesion dramatically.
 We advise lighly keying both surfaces with sandpaper (inside guard and extenda face) to give the best stick fit.

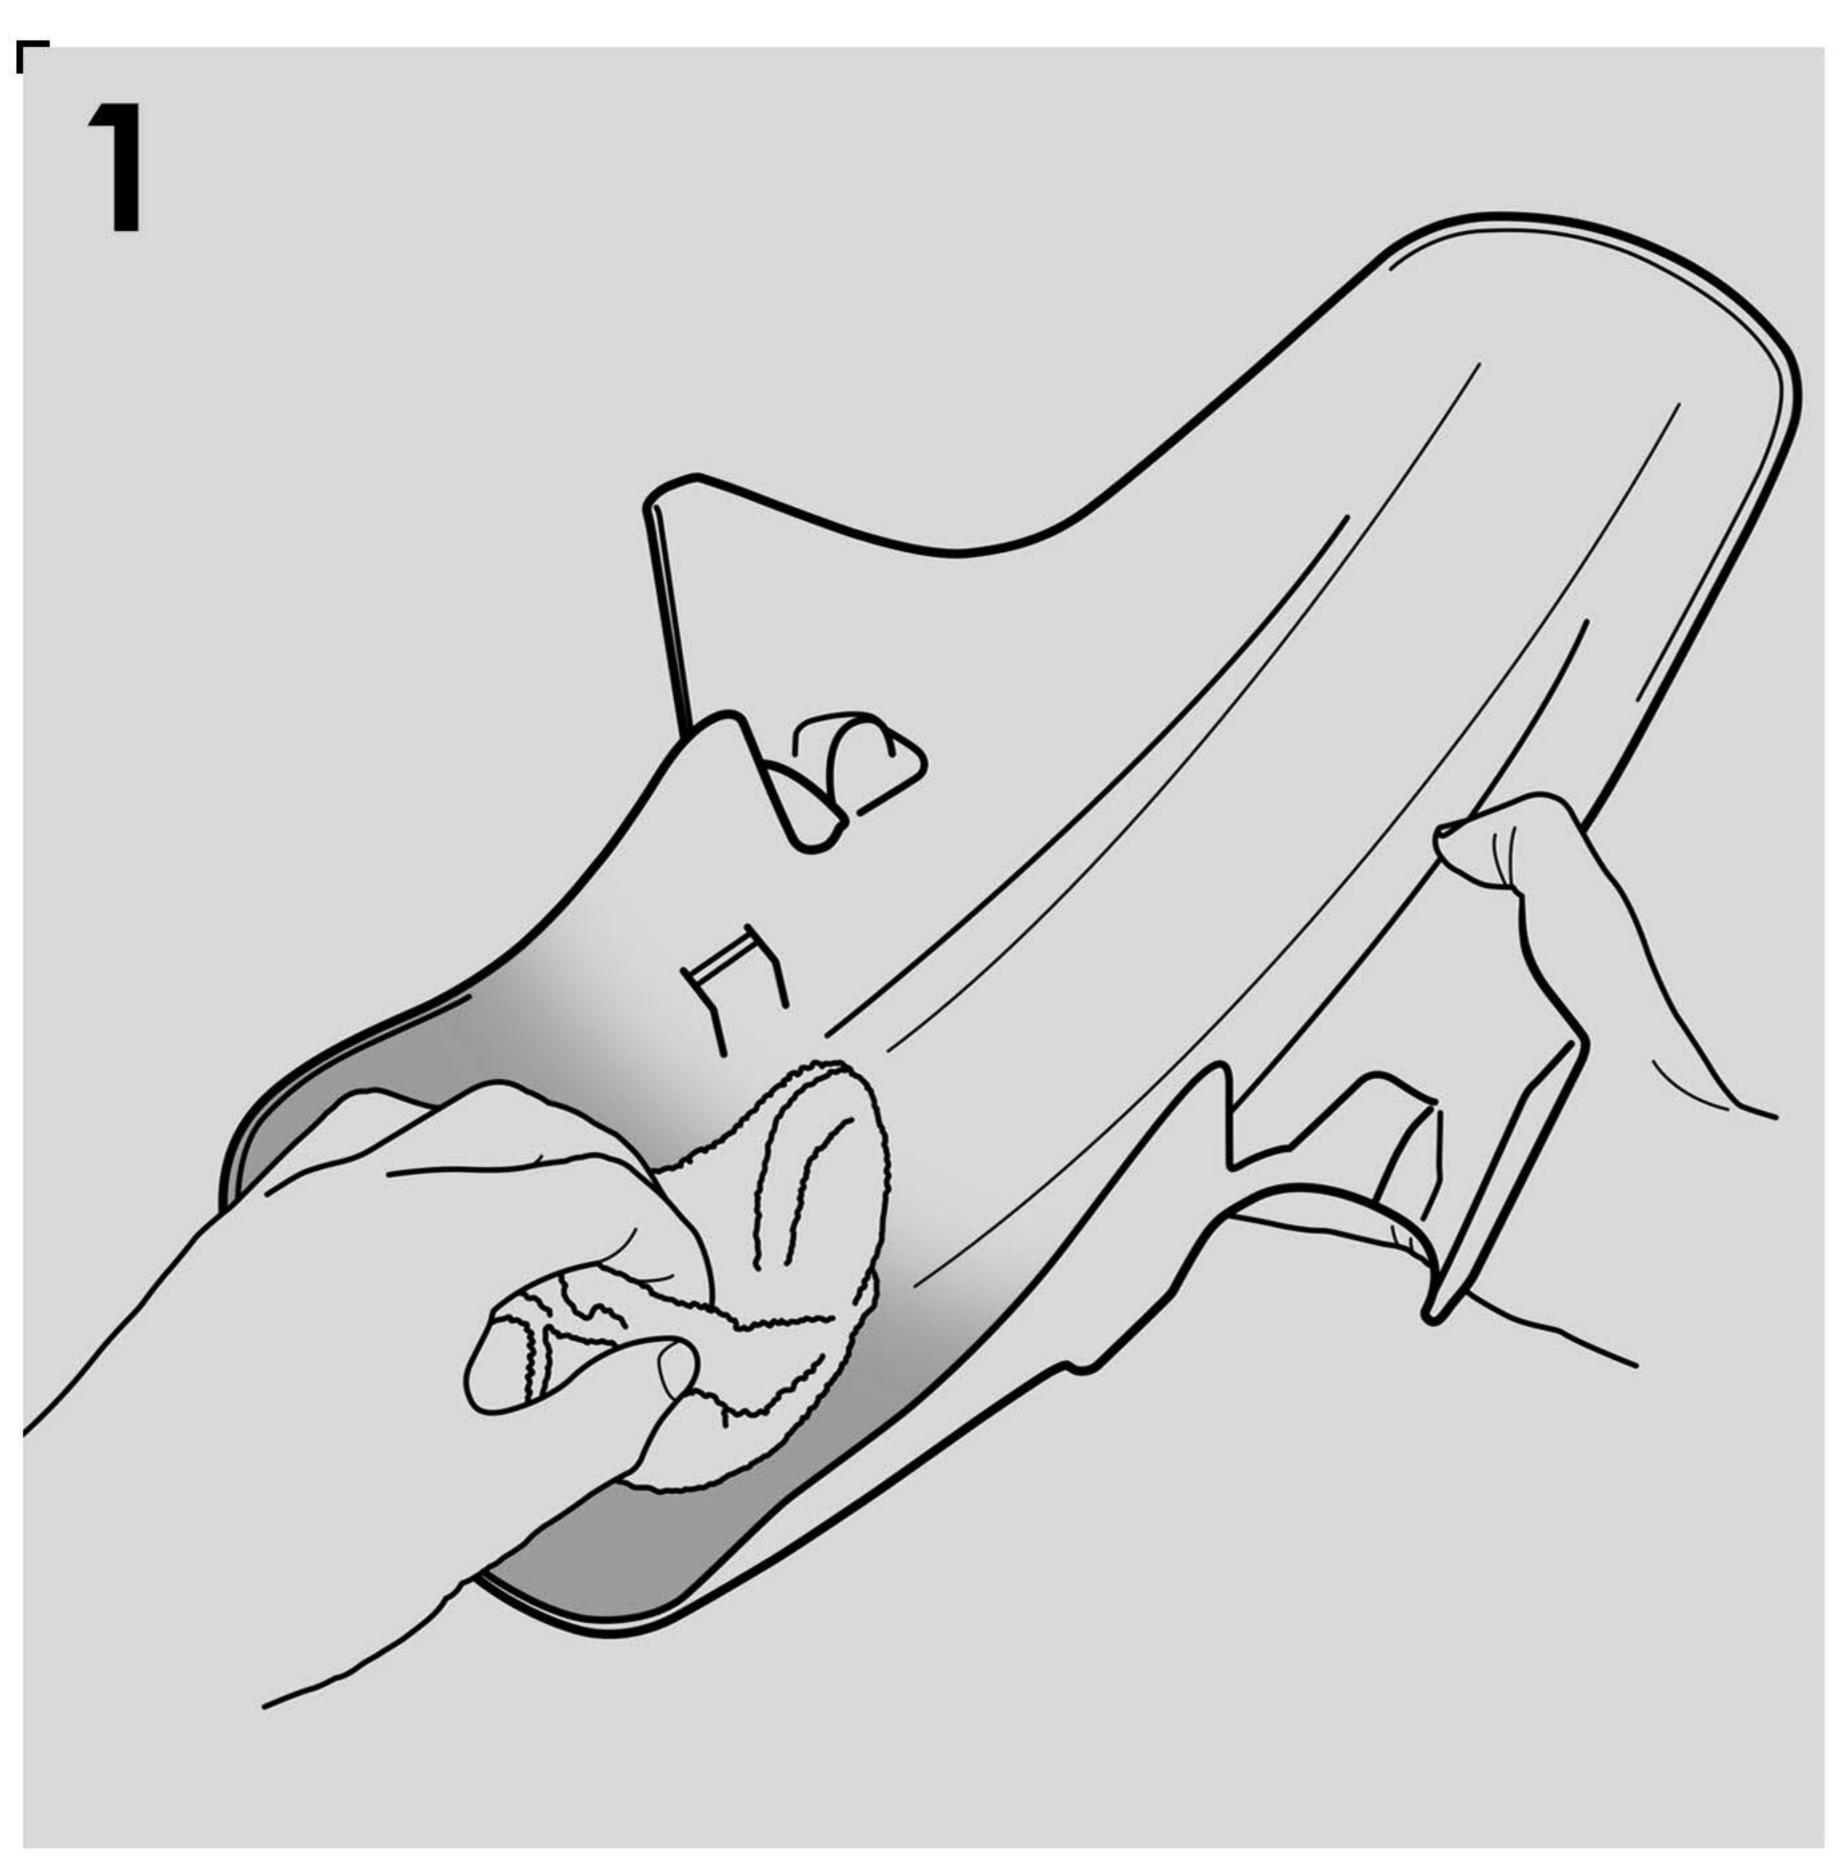

Remove mudguard from bike & clean inside.

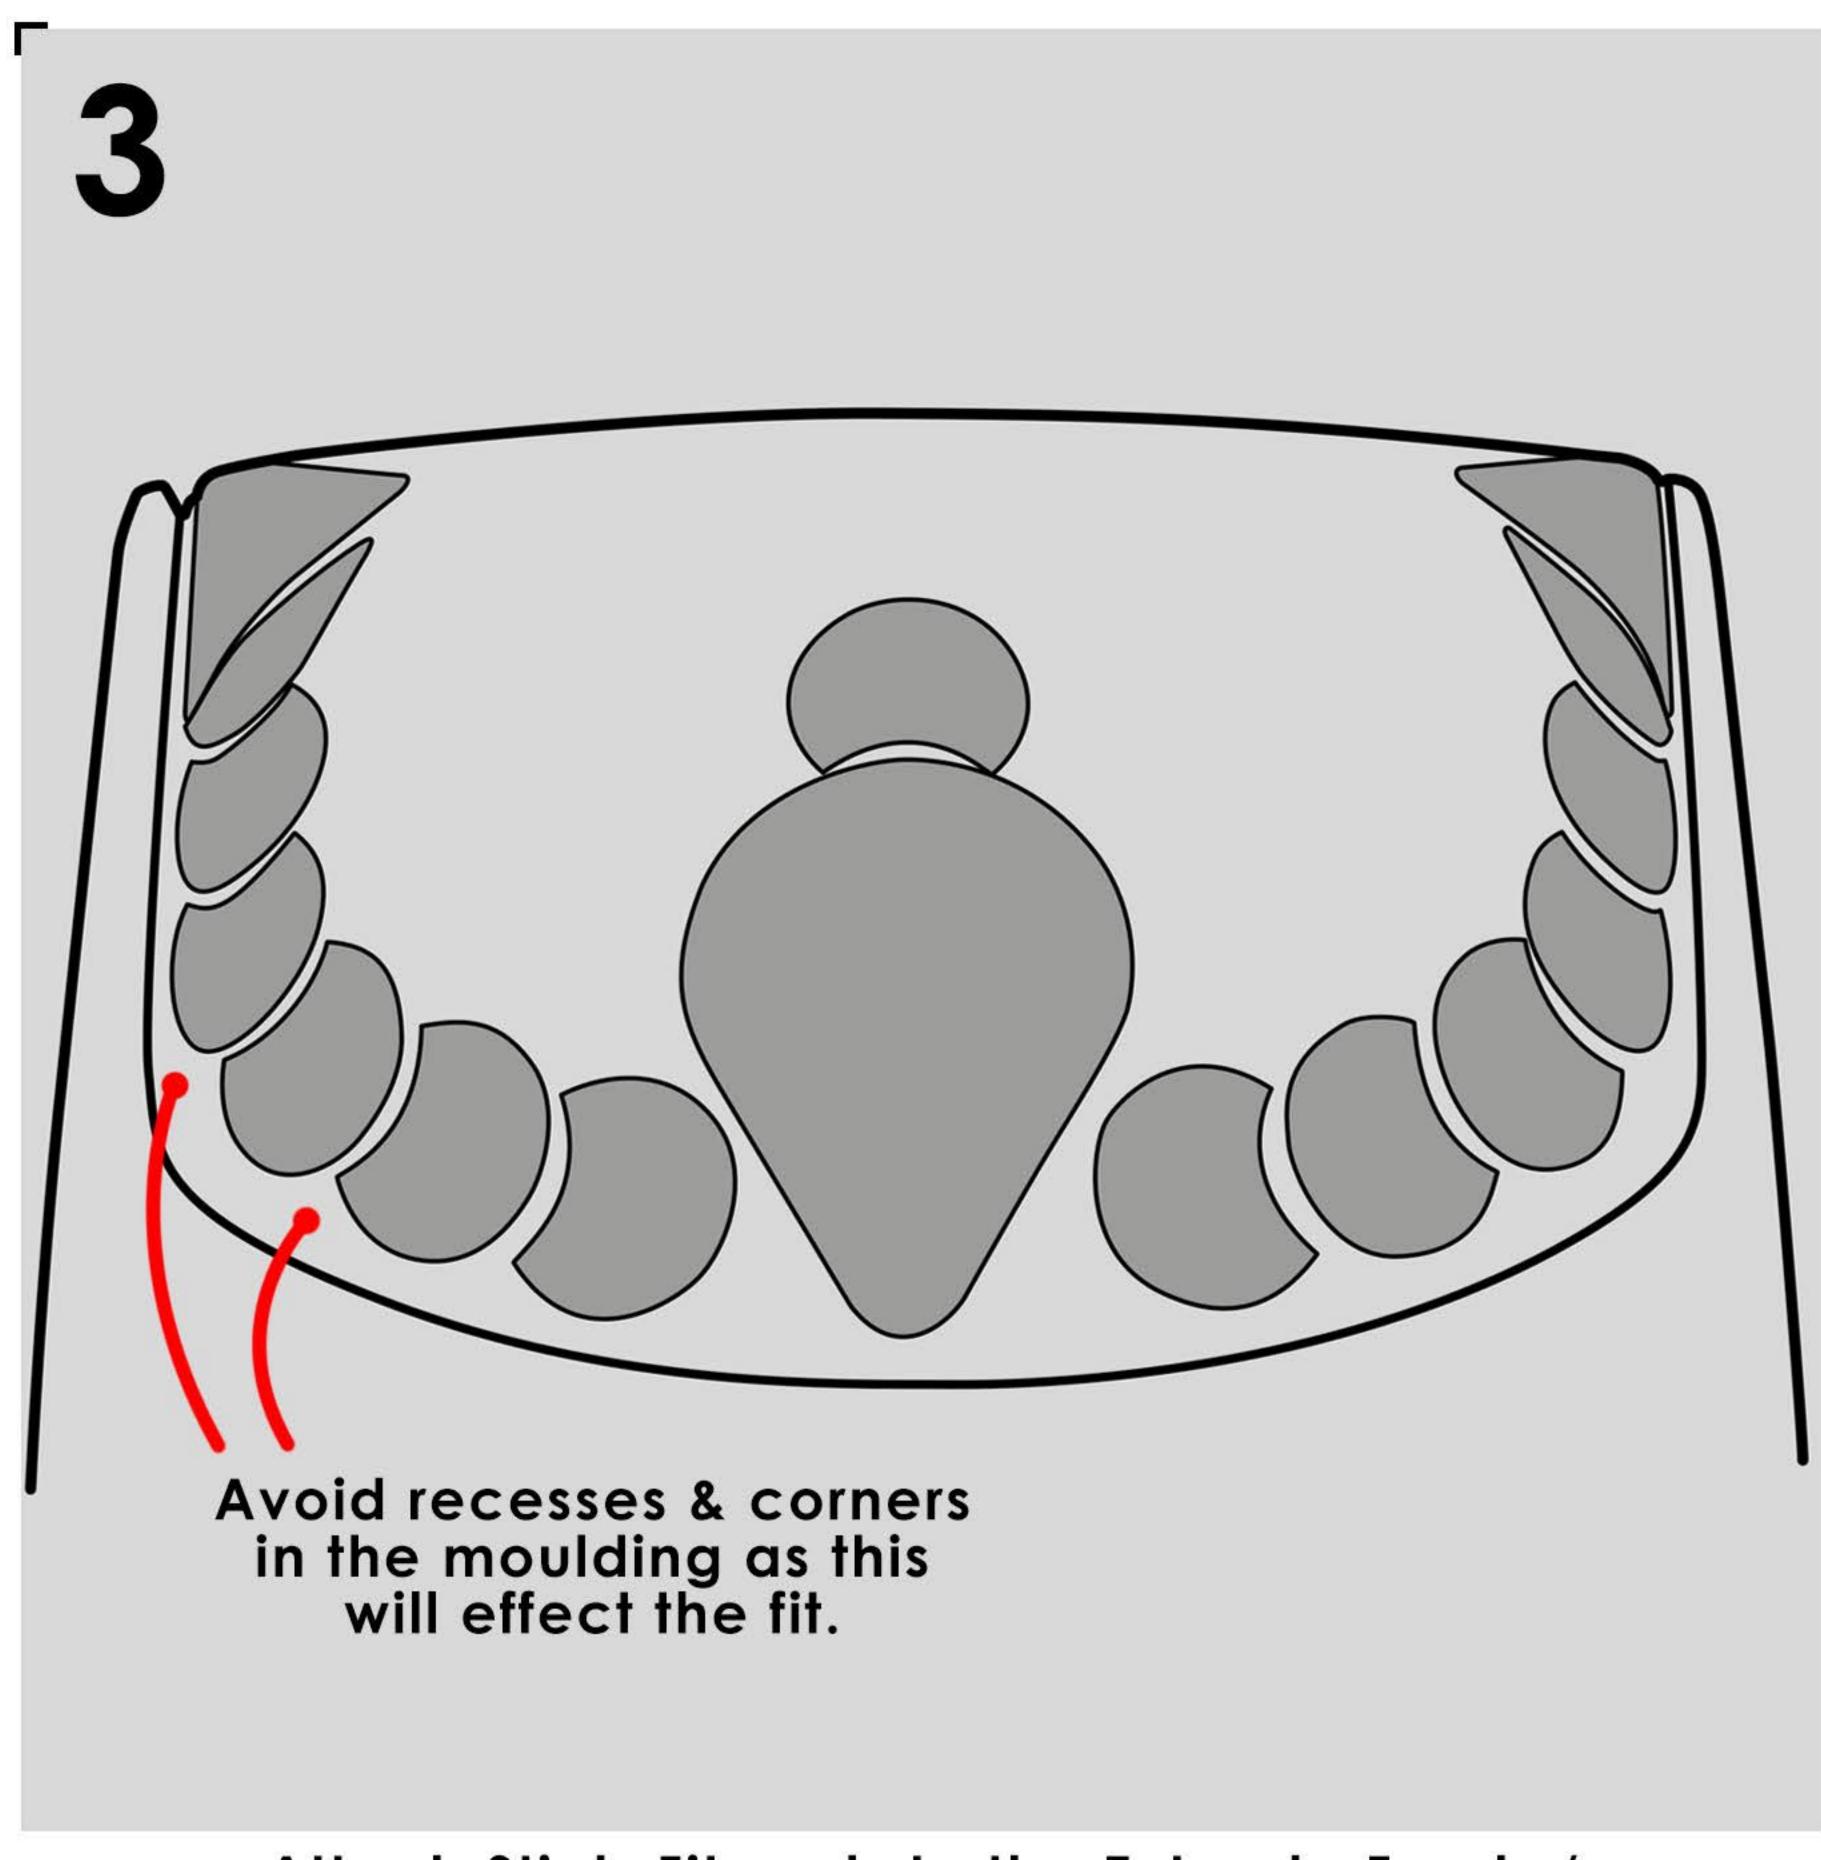


Attach Stick-Fit pads to the Extenda Fenda/ Hugger Extension using this diagram as a guide. Check alignment before step 4.

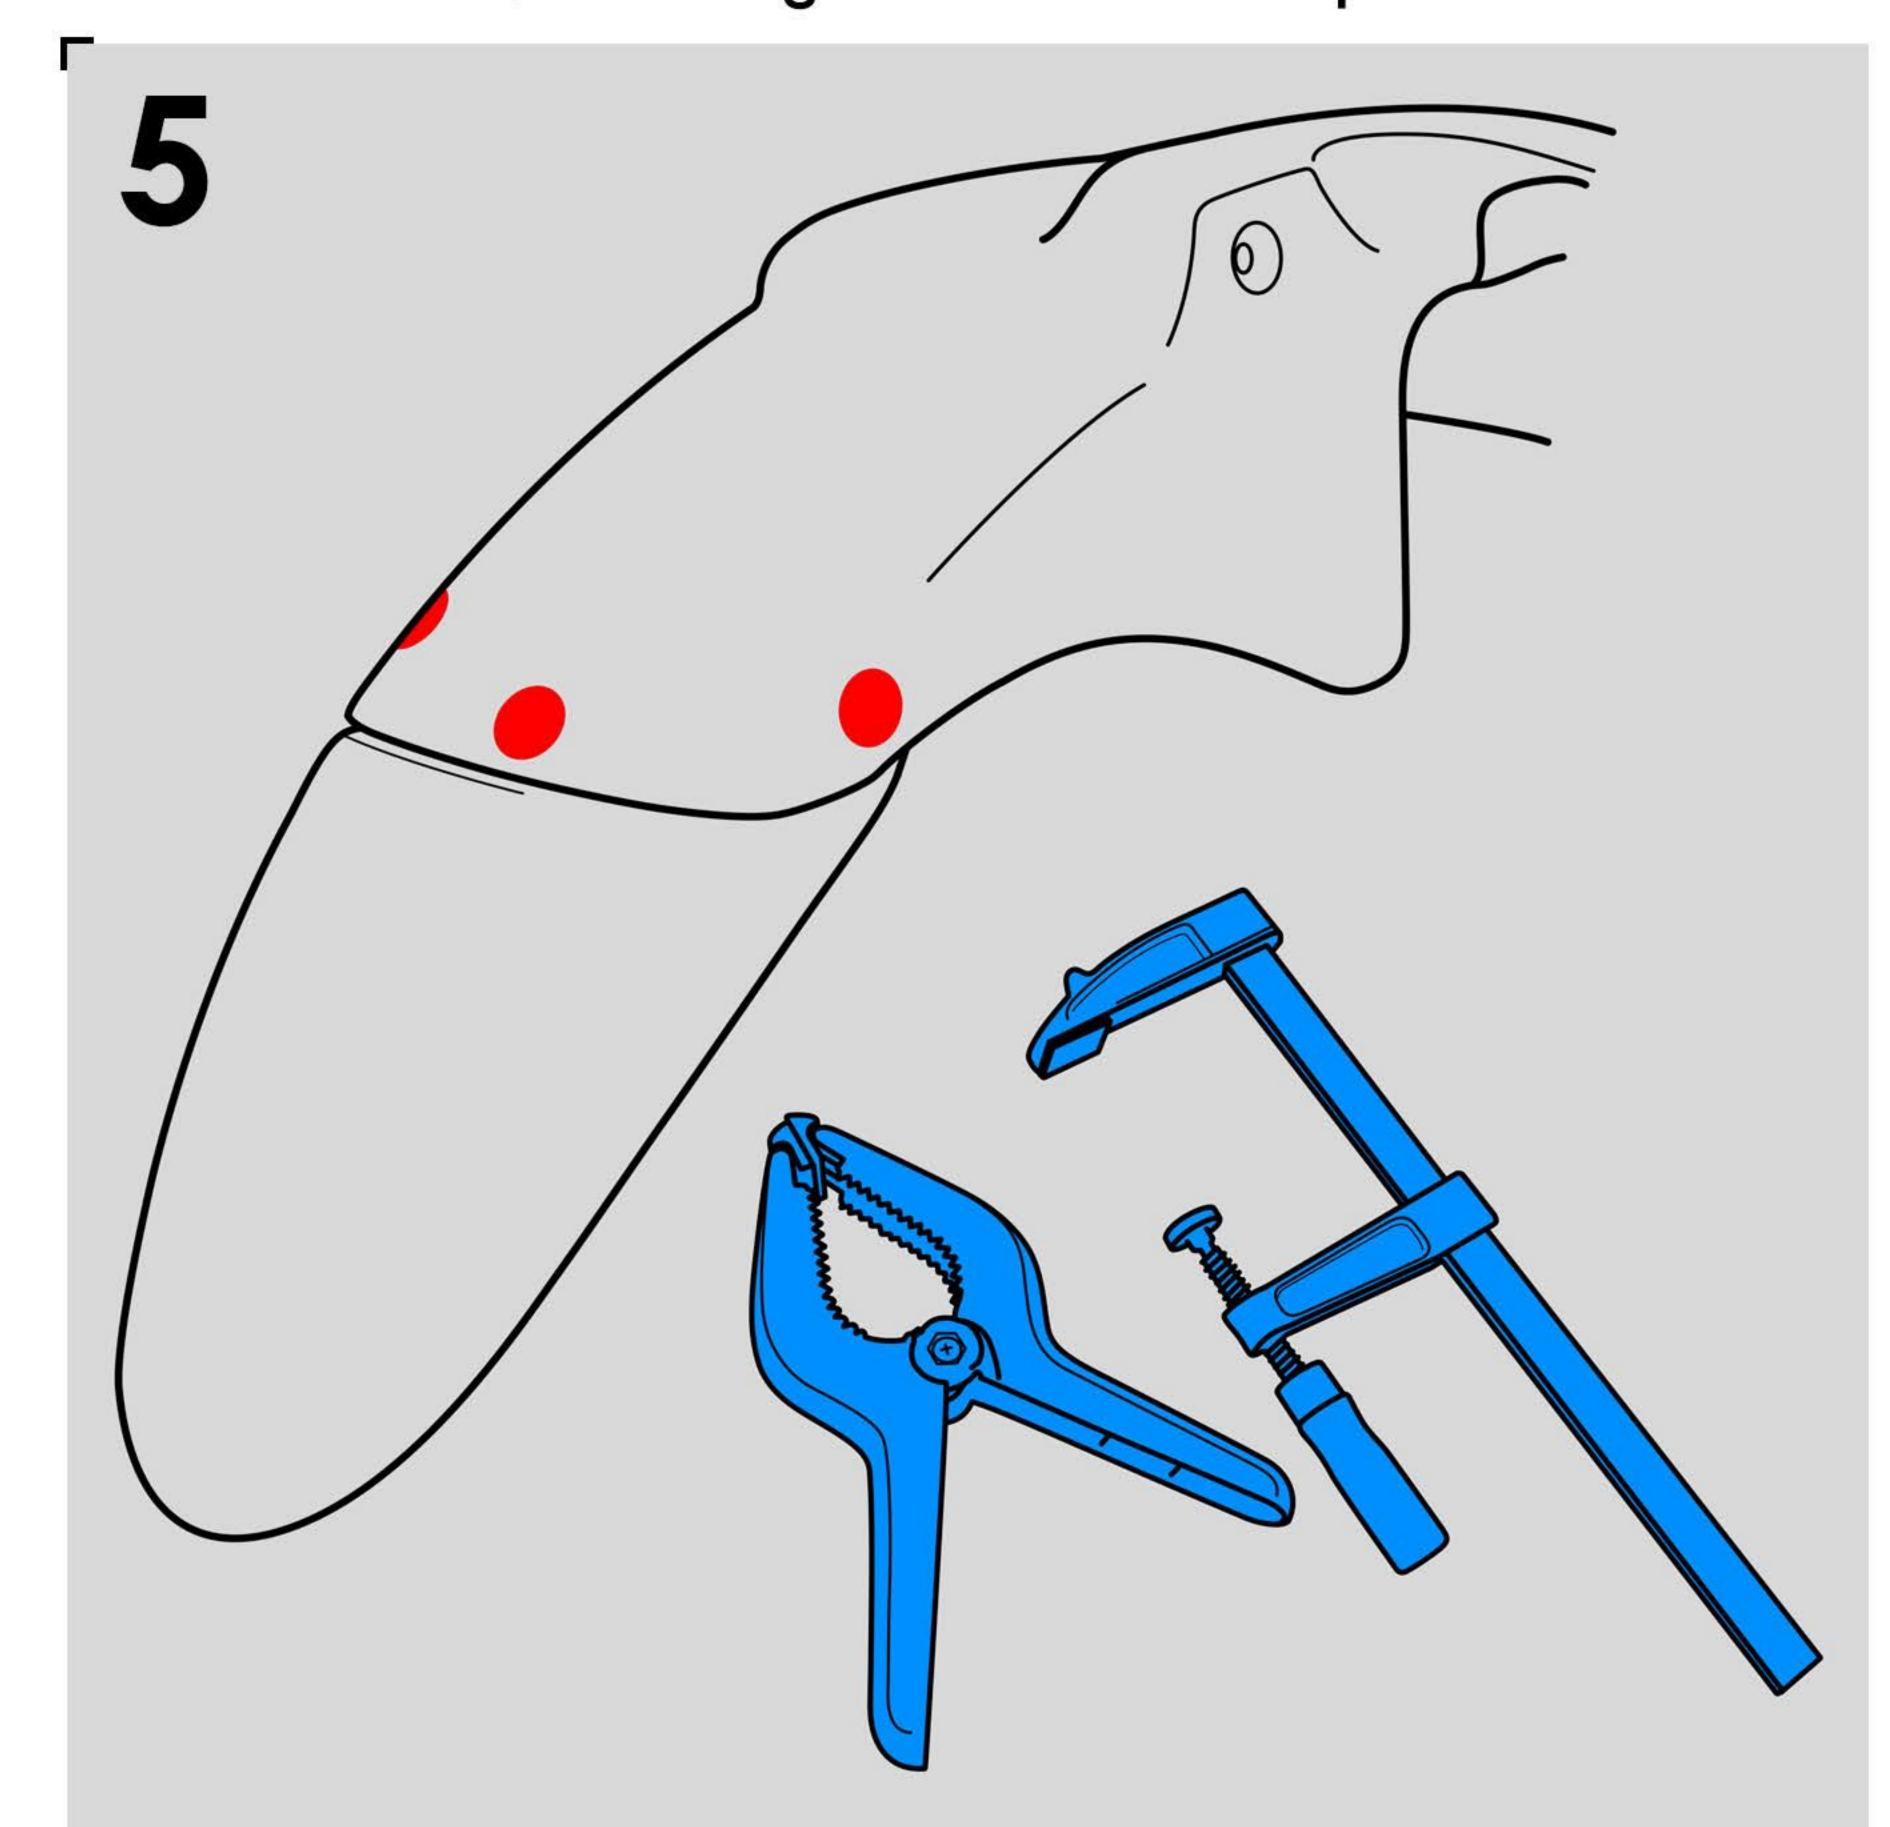


Fit Extenda Fenda/Hugger Extension and apply pressure evenly.

Pyramid suggest using clamps as shown in Blue.


(Appling pressure on the central and outer edges is crucial).

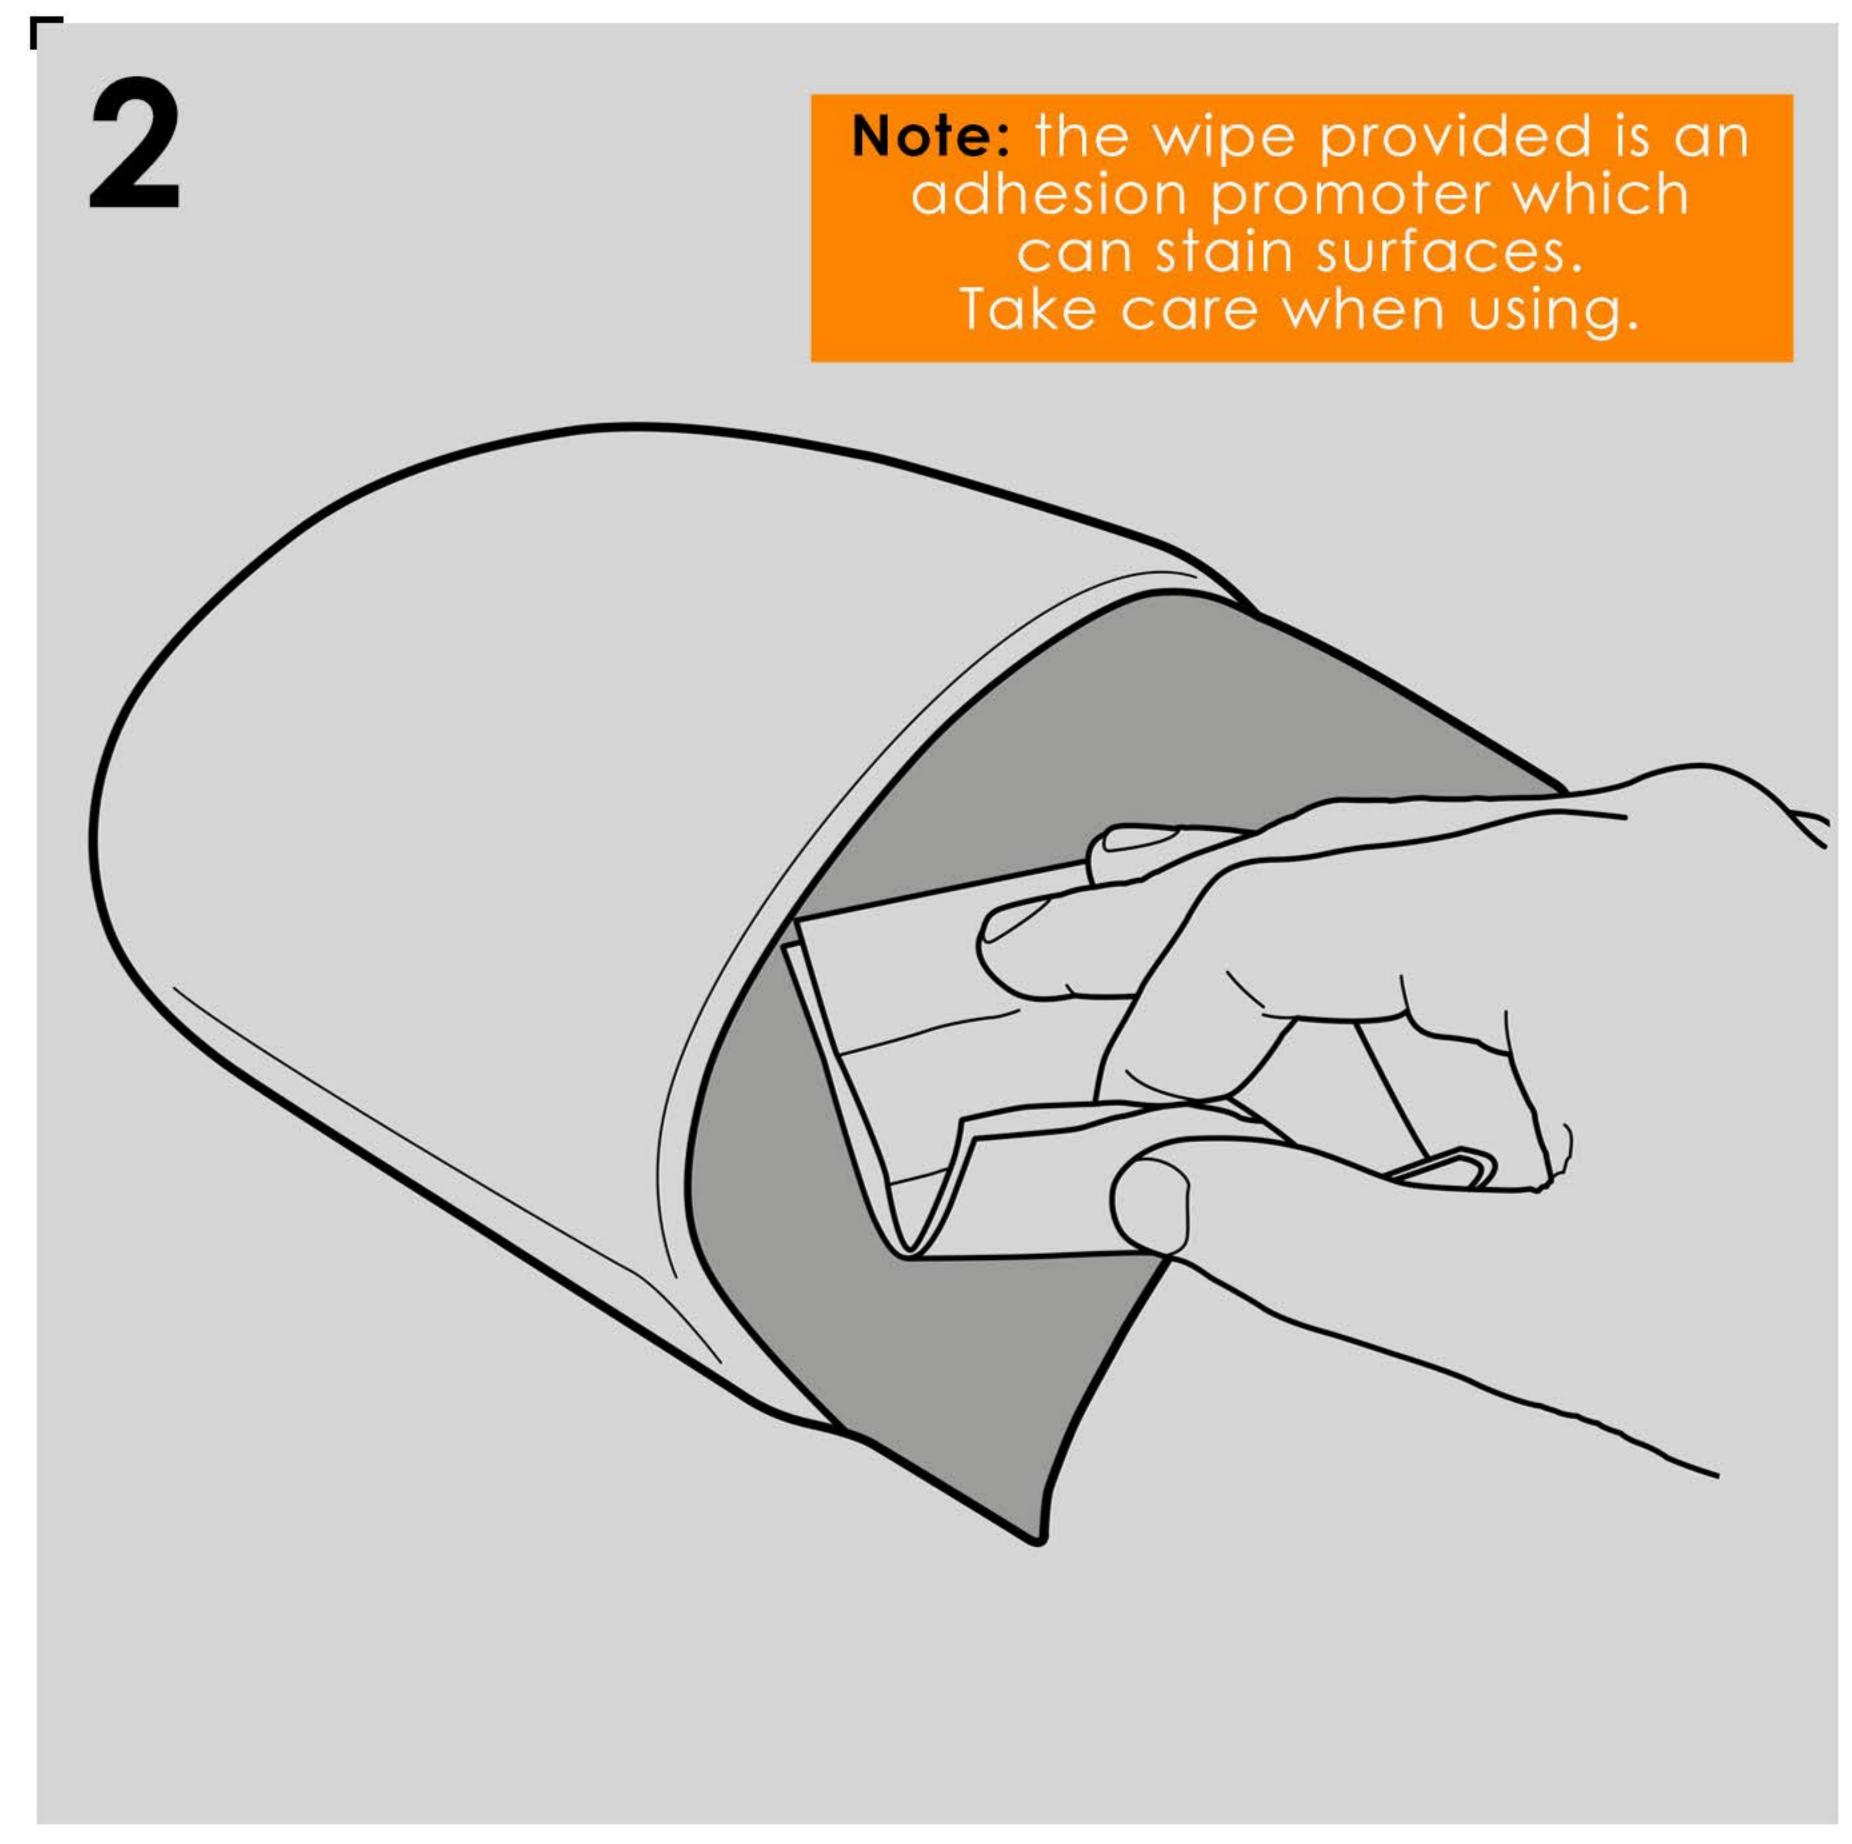

Prime the fitting areas of the OEM mudguard and Pyramid mudguard extension using the wipe supplied.

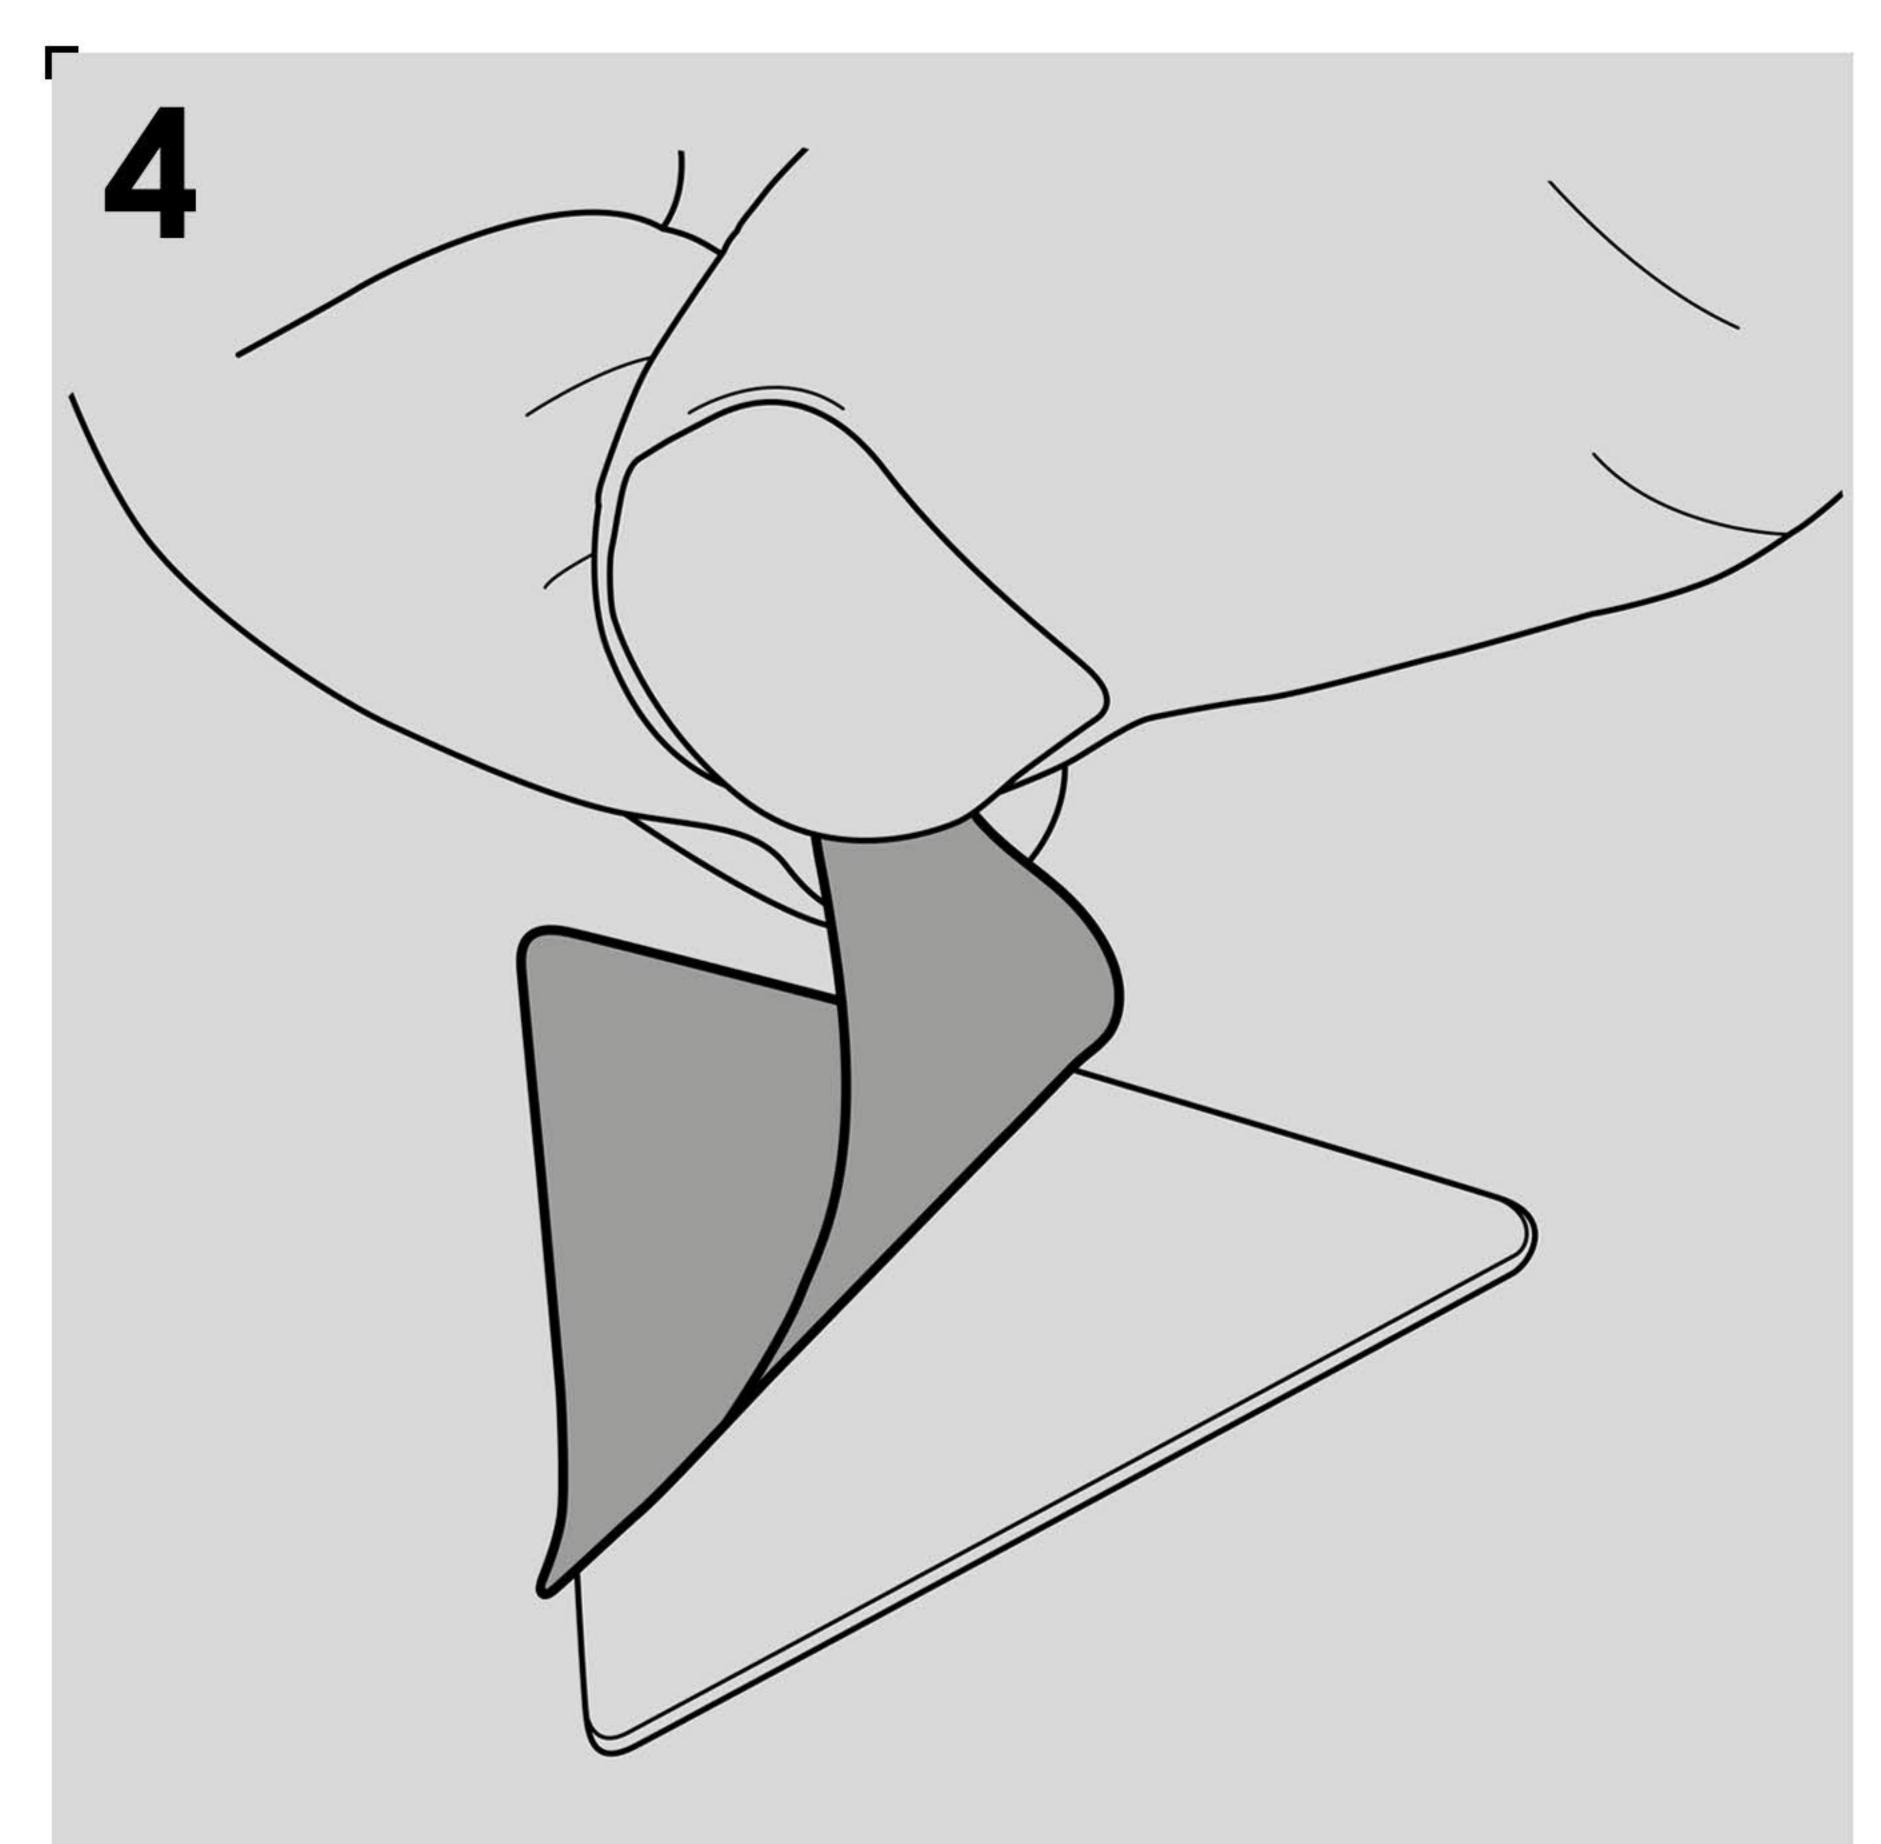

Peel backing paper from Stick-Fit pads.

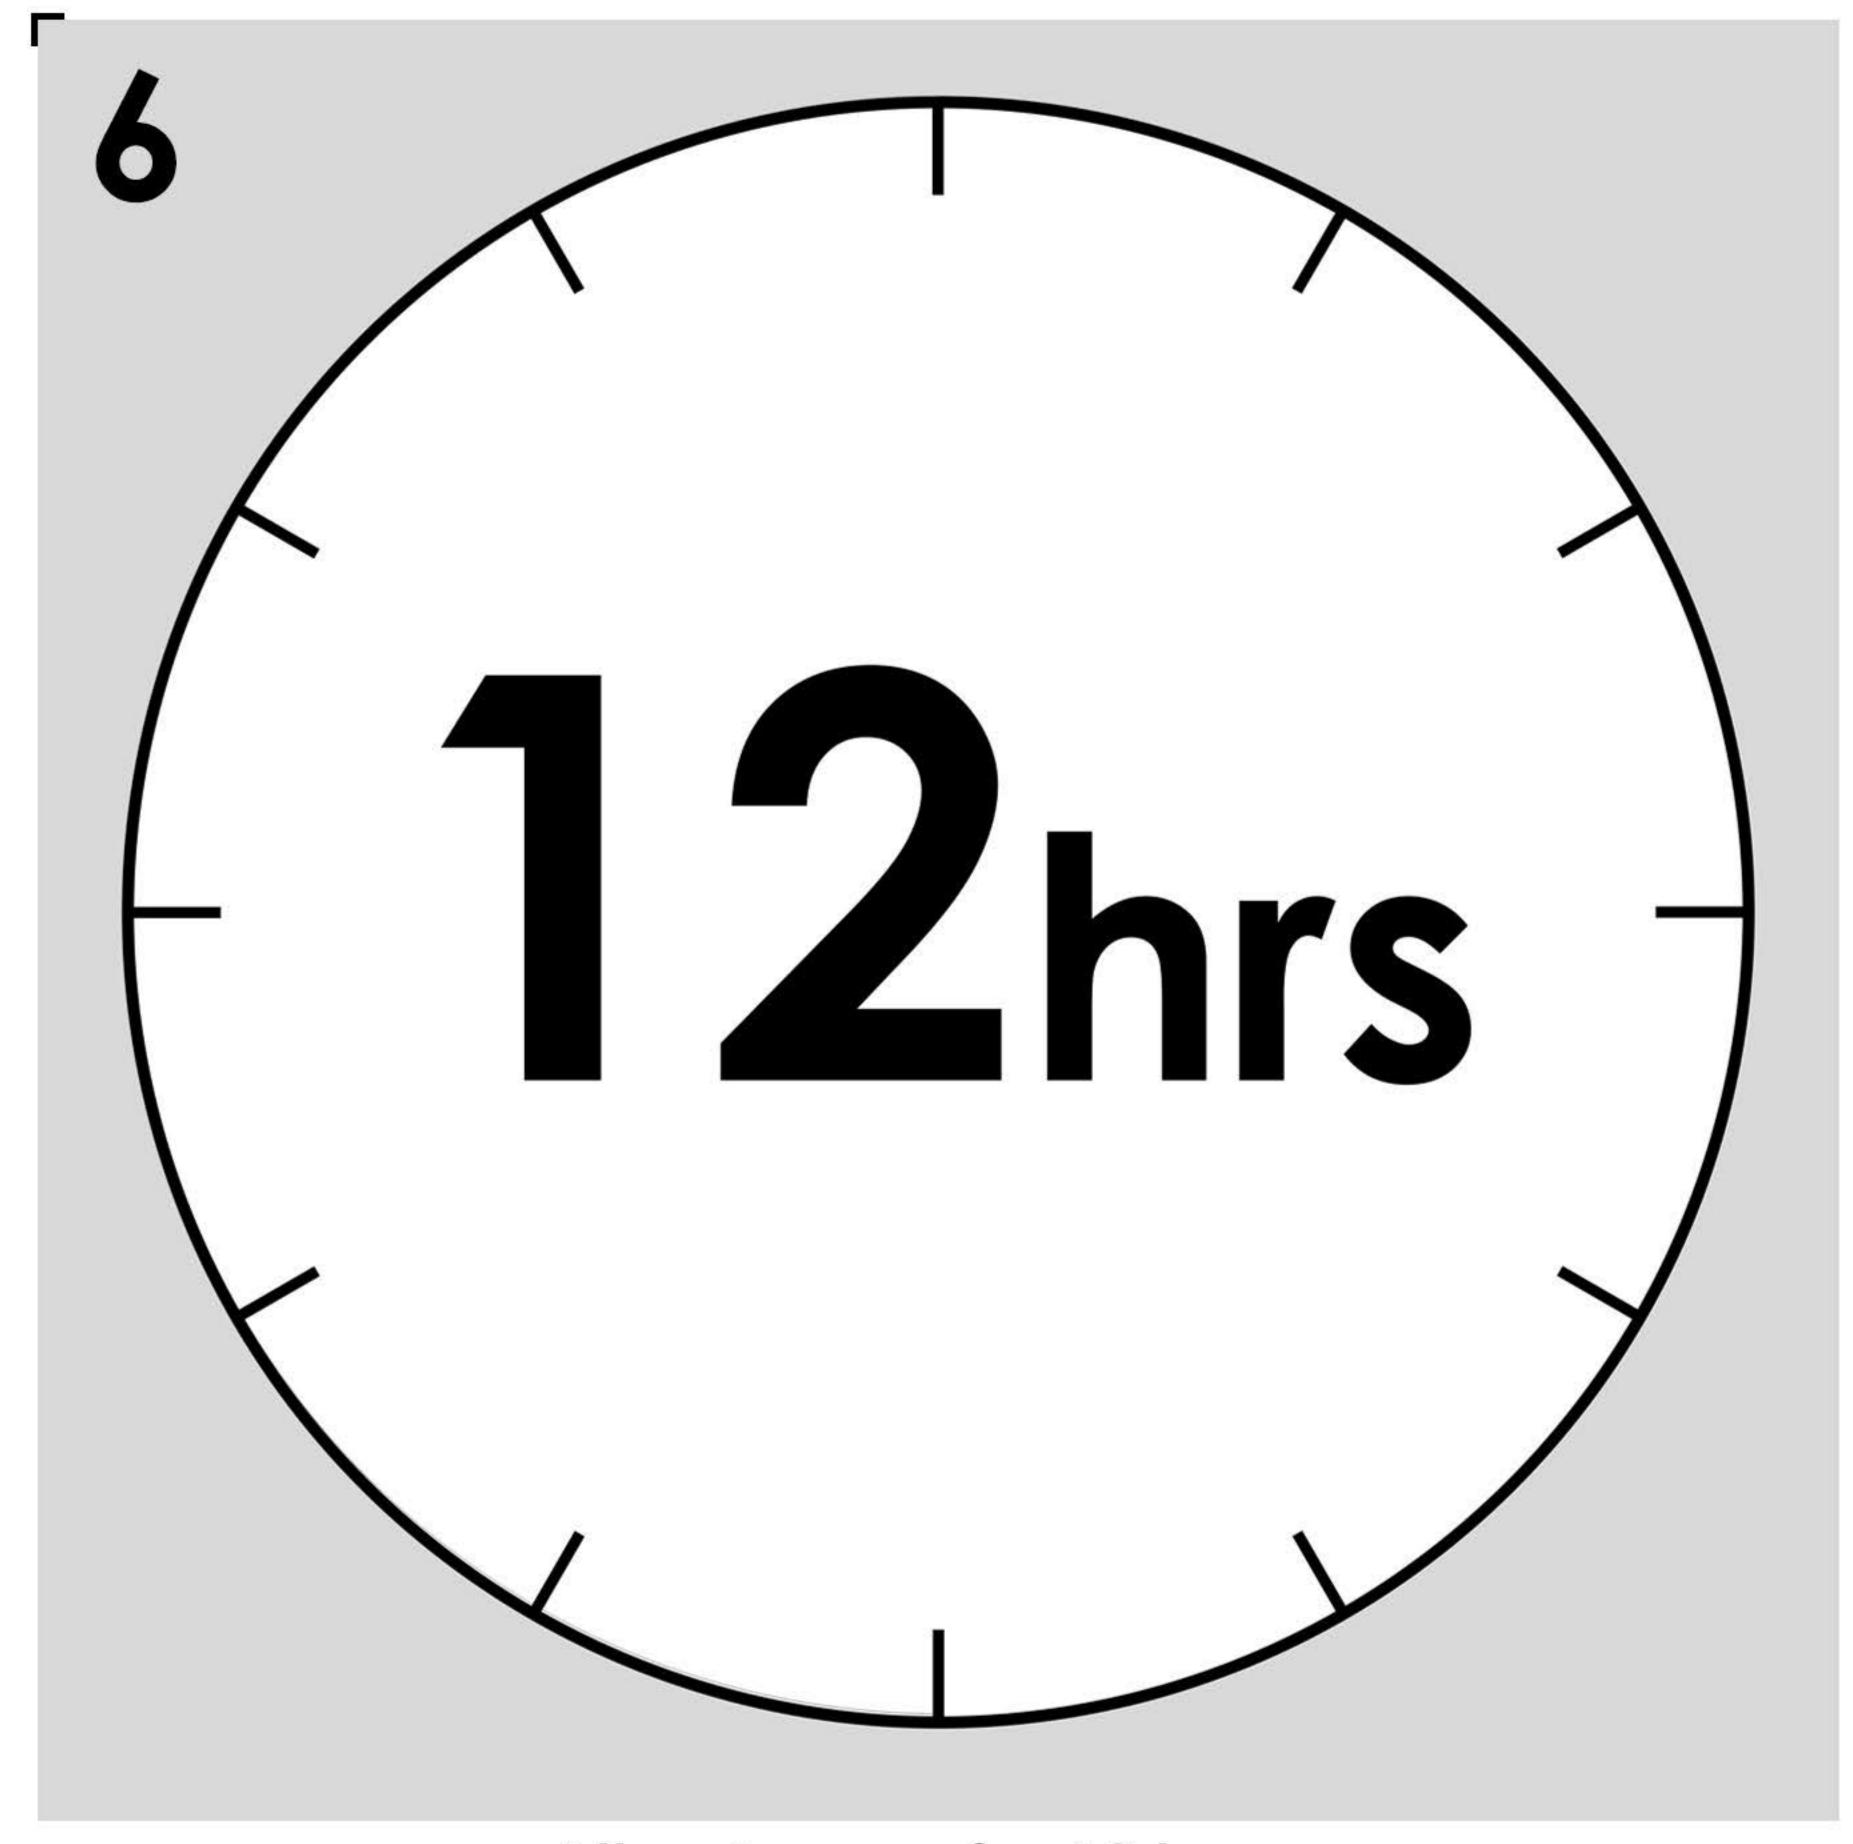

Allow to cure for 12 hours. Re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Stick-Fit Extenda Fenda/Hugger Extension