

Kit Includes:

1X Clear Guard C09005


CFK09005A & CFK09005B 2X Brackets

2X M8 X 40mm Bolts CBOL0305 4X M5 X 16mm Bolts CBOL2168 2X Spacers CSPA0023 4X Rubber Anchor Nuts CNUT0156 8X Washers CWAS0230

- Assemble the Pyramid headlight guard as shown in the diagram below. Don't over tighten.
- Remove the two bolts on each side of the headlight.
- Fit the Pyramid headlight guard using the M8 X 40mm bolts & spacers on each side.
- Start by fitting loosely on each side. Once happy with the positioning, tighten the side mountings.

Note: The slotted mounting holes in the brackets allow for any small adjustments backwards and forwards.

Check fixings periodically.

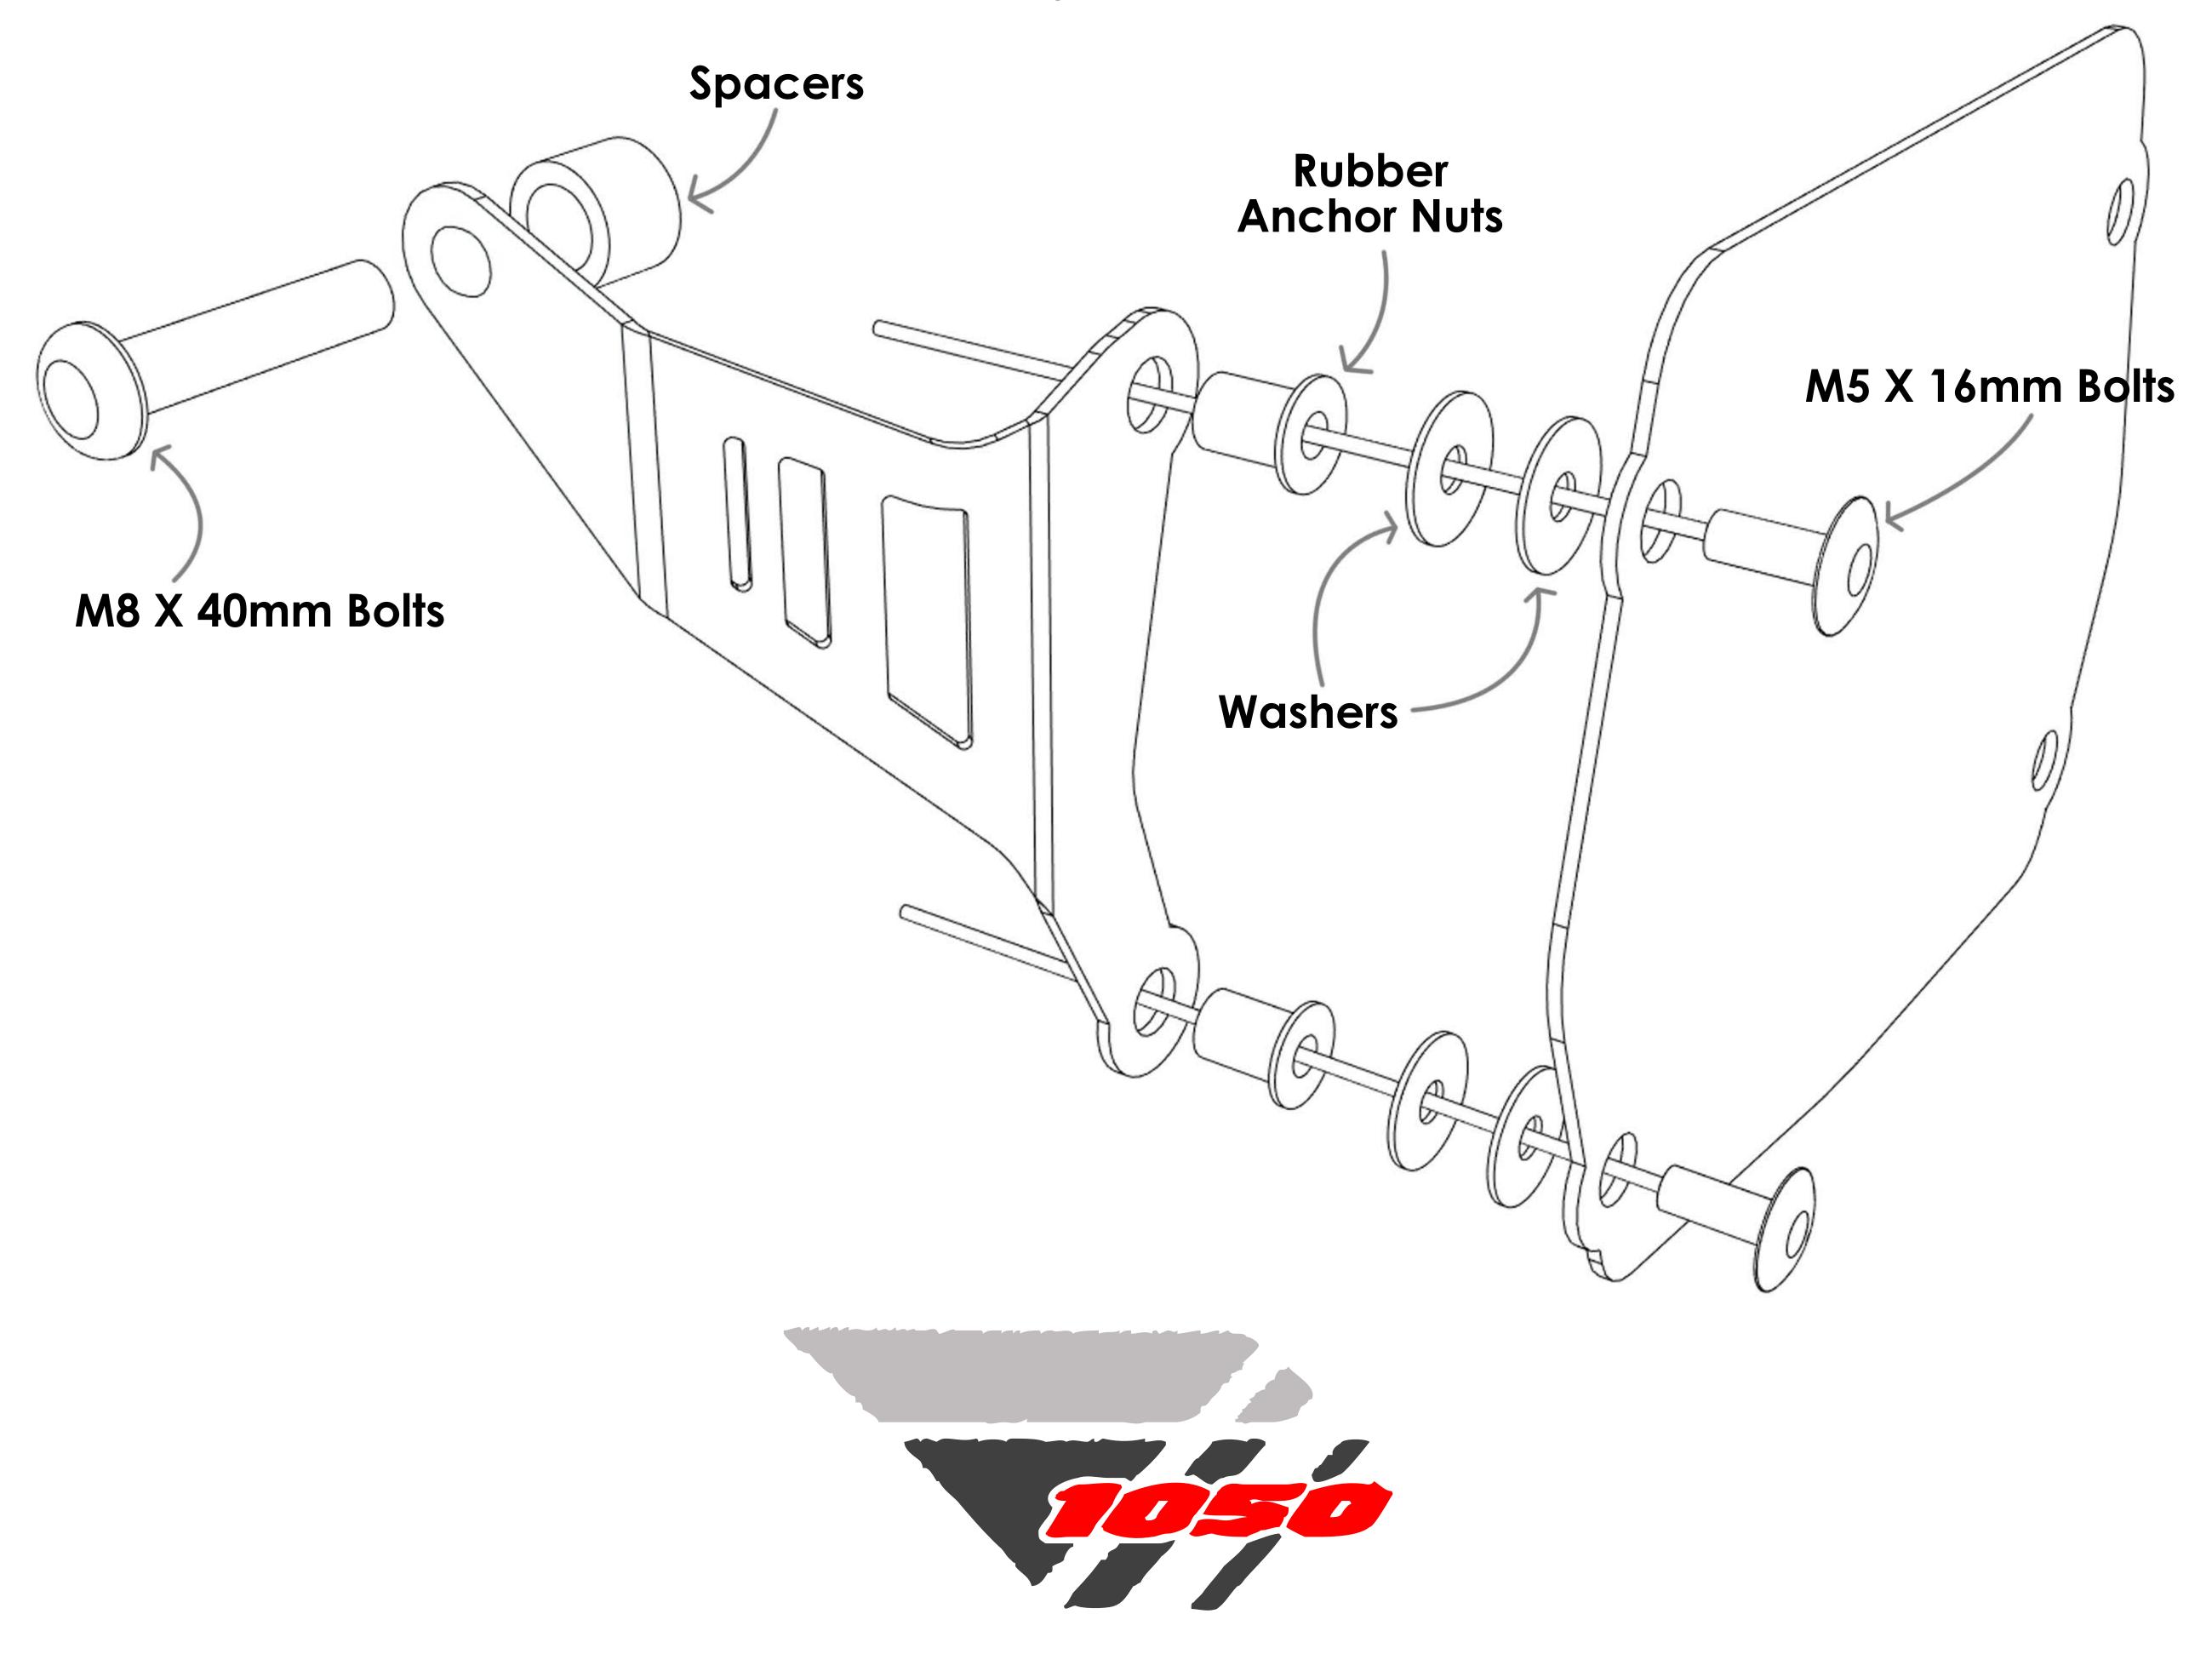

sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!







