

## 812002 Yamaha MT-09 Shock Shield Fitting Instructions

### Kit Includes:


1X	C24444	Rubber Flap
1X	CFK812002	Bracket
2X	CBOL0105	M5 X 10mm Stainless Bolt
2X	CNUT0150	M5 Stainless Nyloc Nut
2X	CWAS0100	M5 Washer
2X	CNUT0101	M6 Stainless Serrated Nut
2X	CBOL0220	M6 X 25mm Stainless Bolt
2X	CWAS0201	M6 Stainless Washer

**A magnetic telescopic pick-up tool and extendable socket set is important for fitting this product.**

- Remove the seat and unbolt the battery from its support. Temporarily move the battery out of the recess. The bolts at the bottom of the undertray will now be visible (See **Fig 1**).
- Replace the bolts at the bottom of the undertray with the longer **M6 X 25mm stainless bolts** and **M6 stainless washers** supplied.
- Now the bracket can be attached to these bolts using the **M6 stainless serrated nuts** as shown in **Fig 2**.
- Finally attach the **rubber flap** to the bracket using the remaining **M5** fixings supplied.


Check all fixings periodically.

**Fig 1**

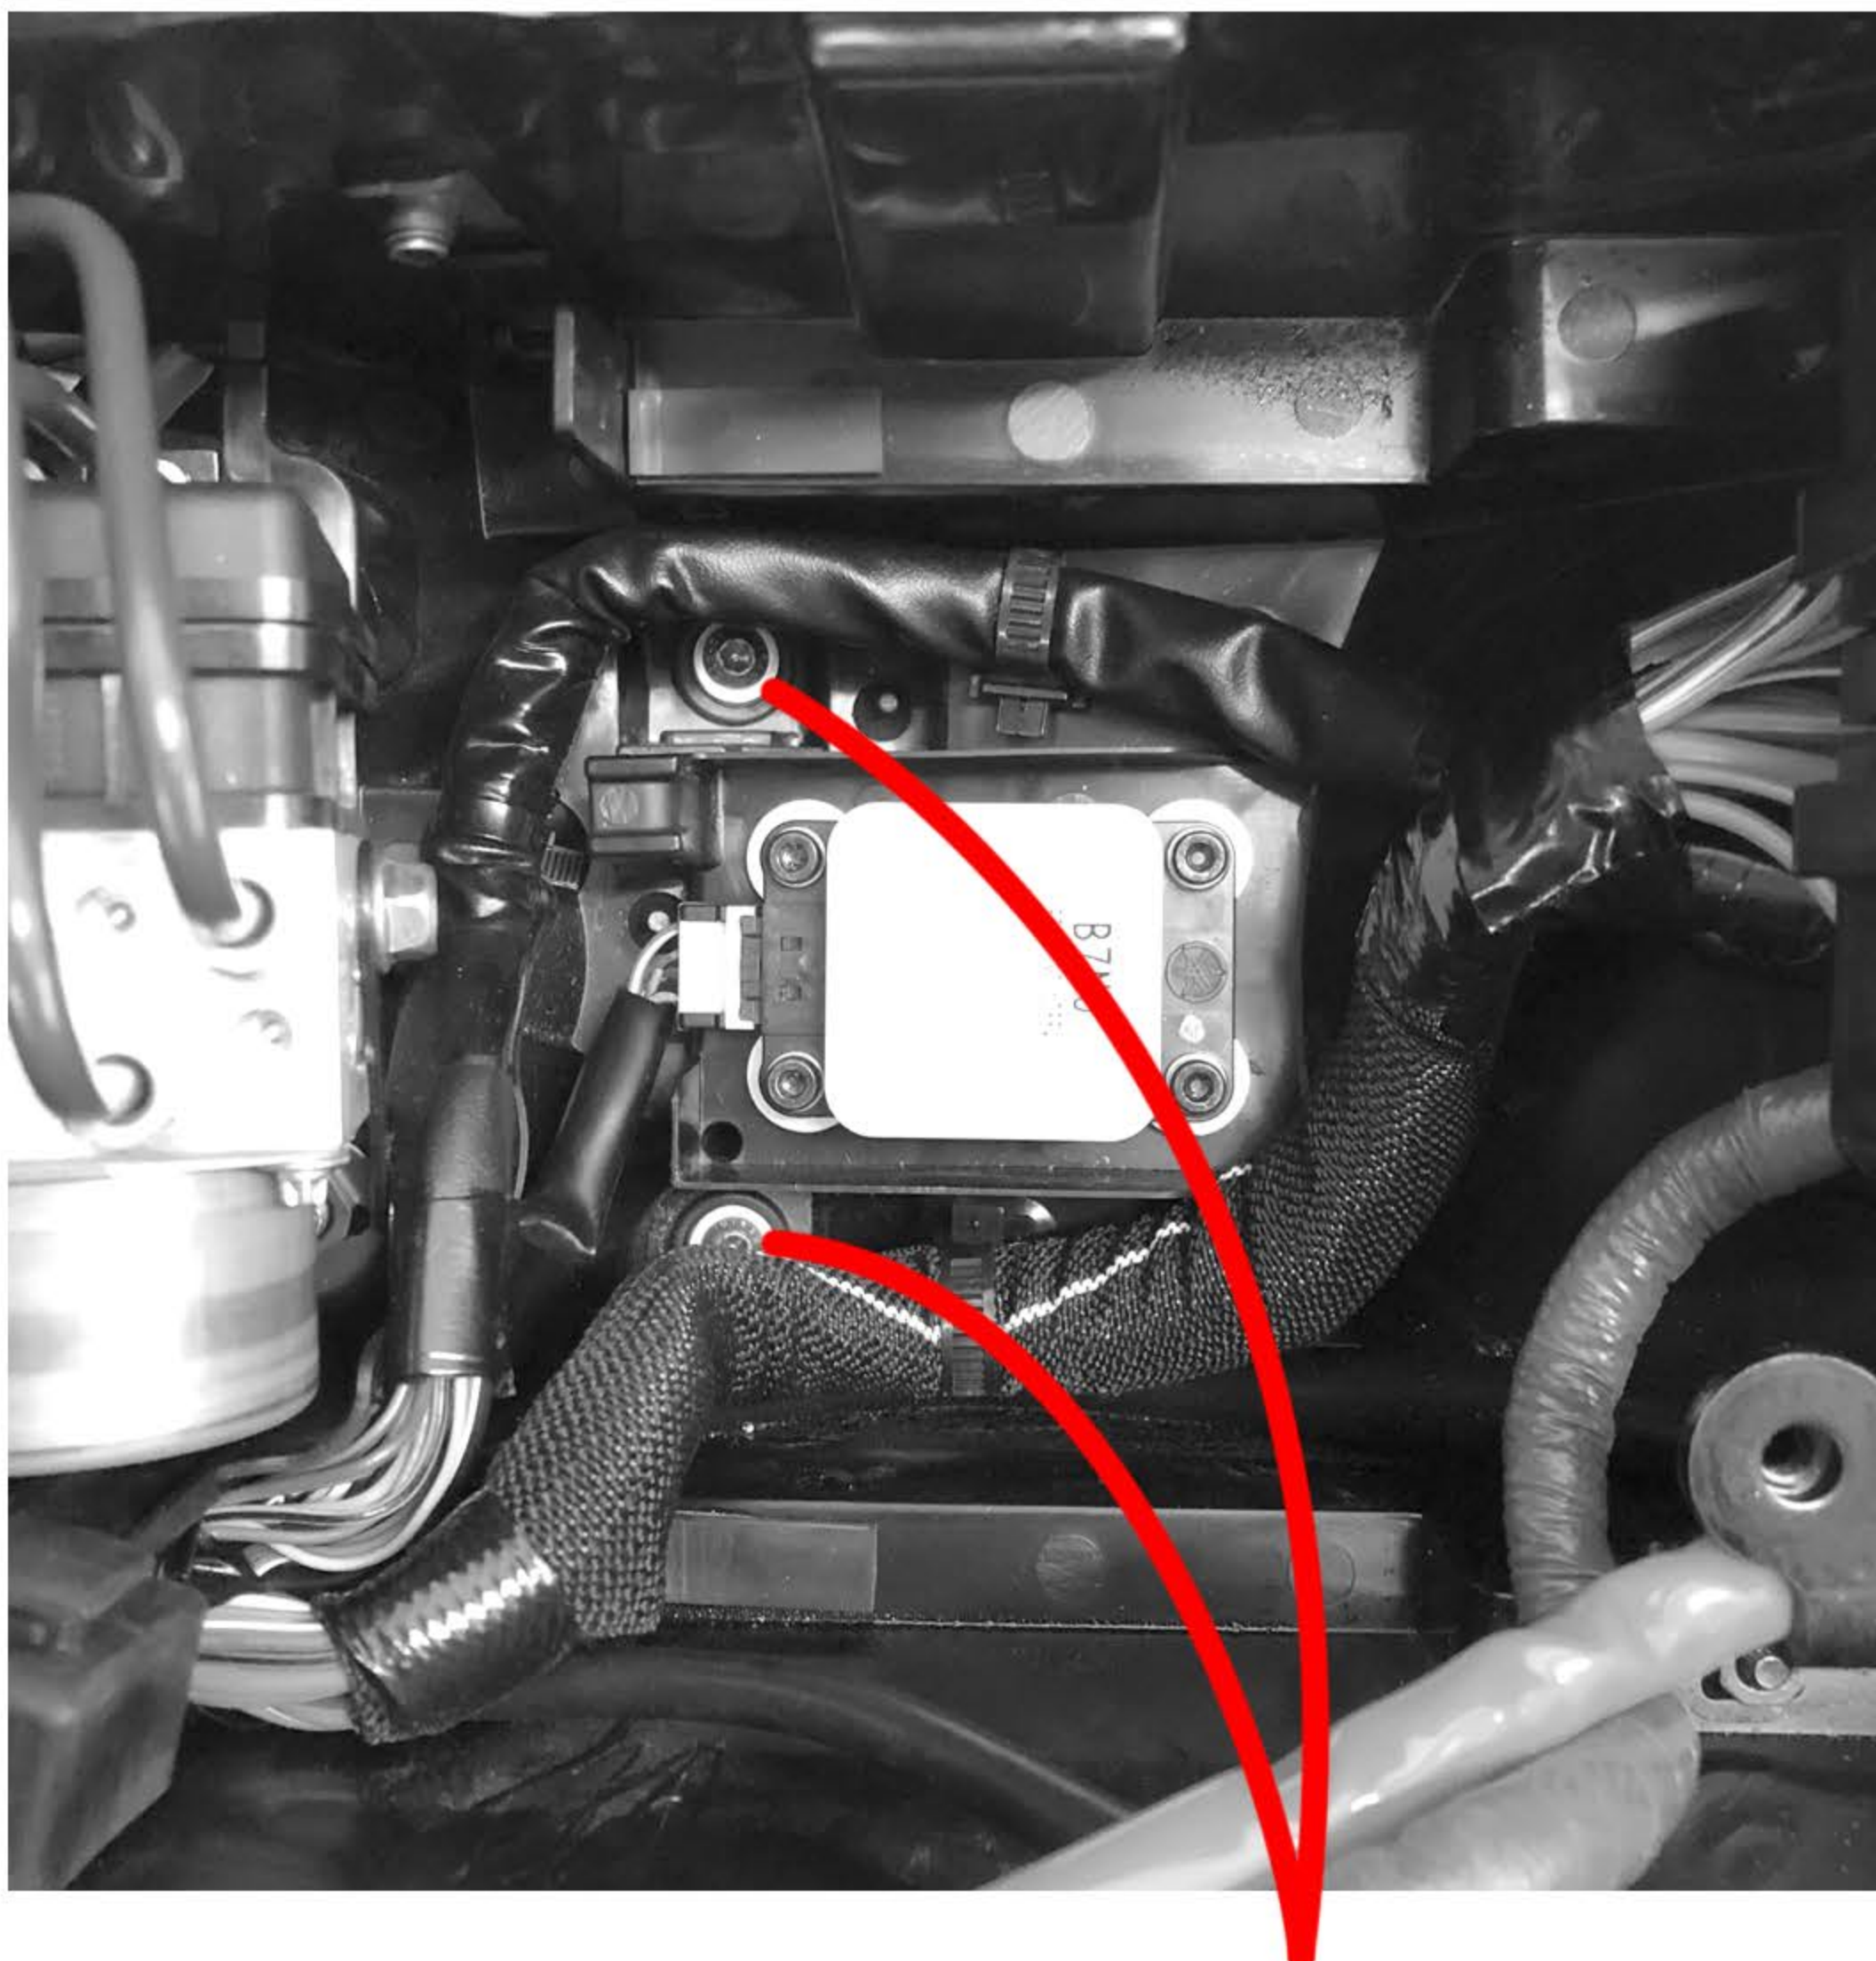

**Bullet point 2**

**Fig 2**

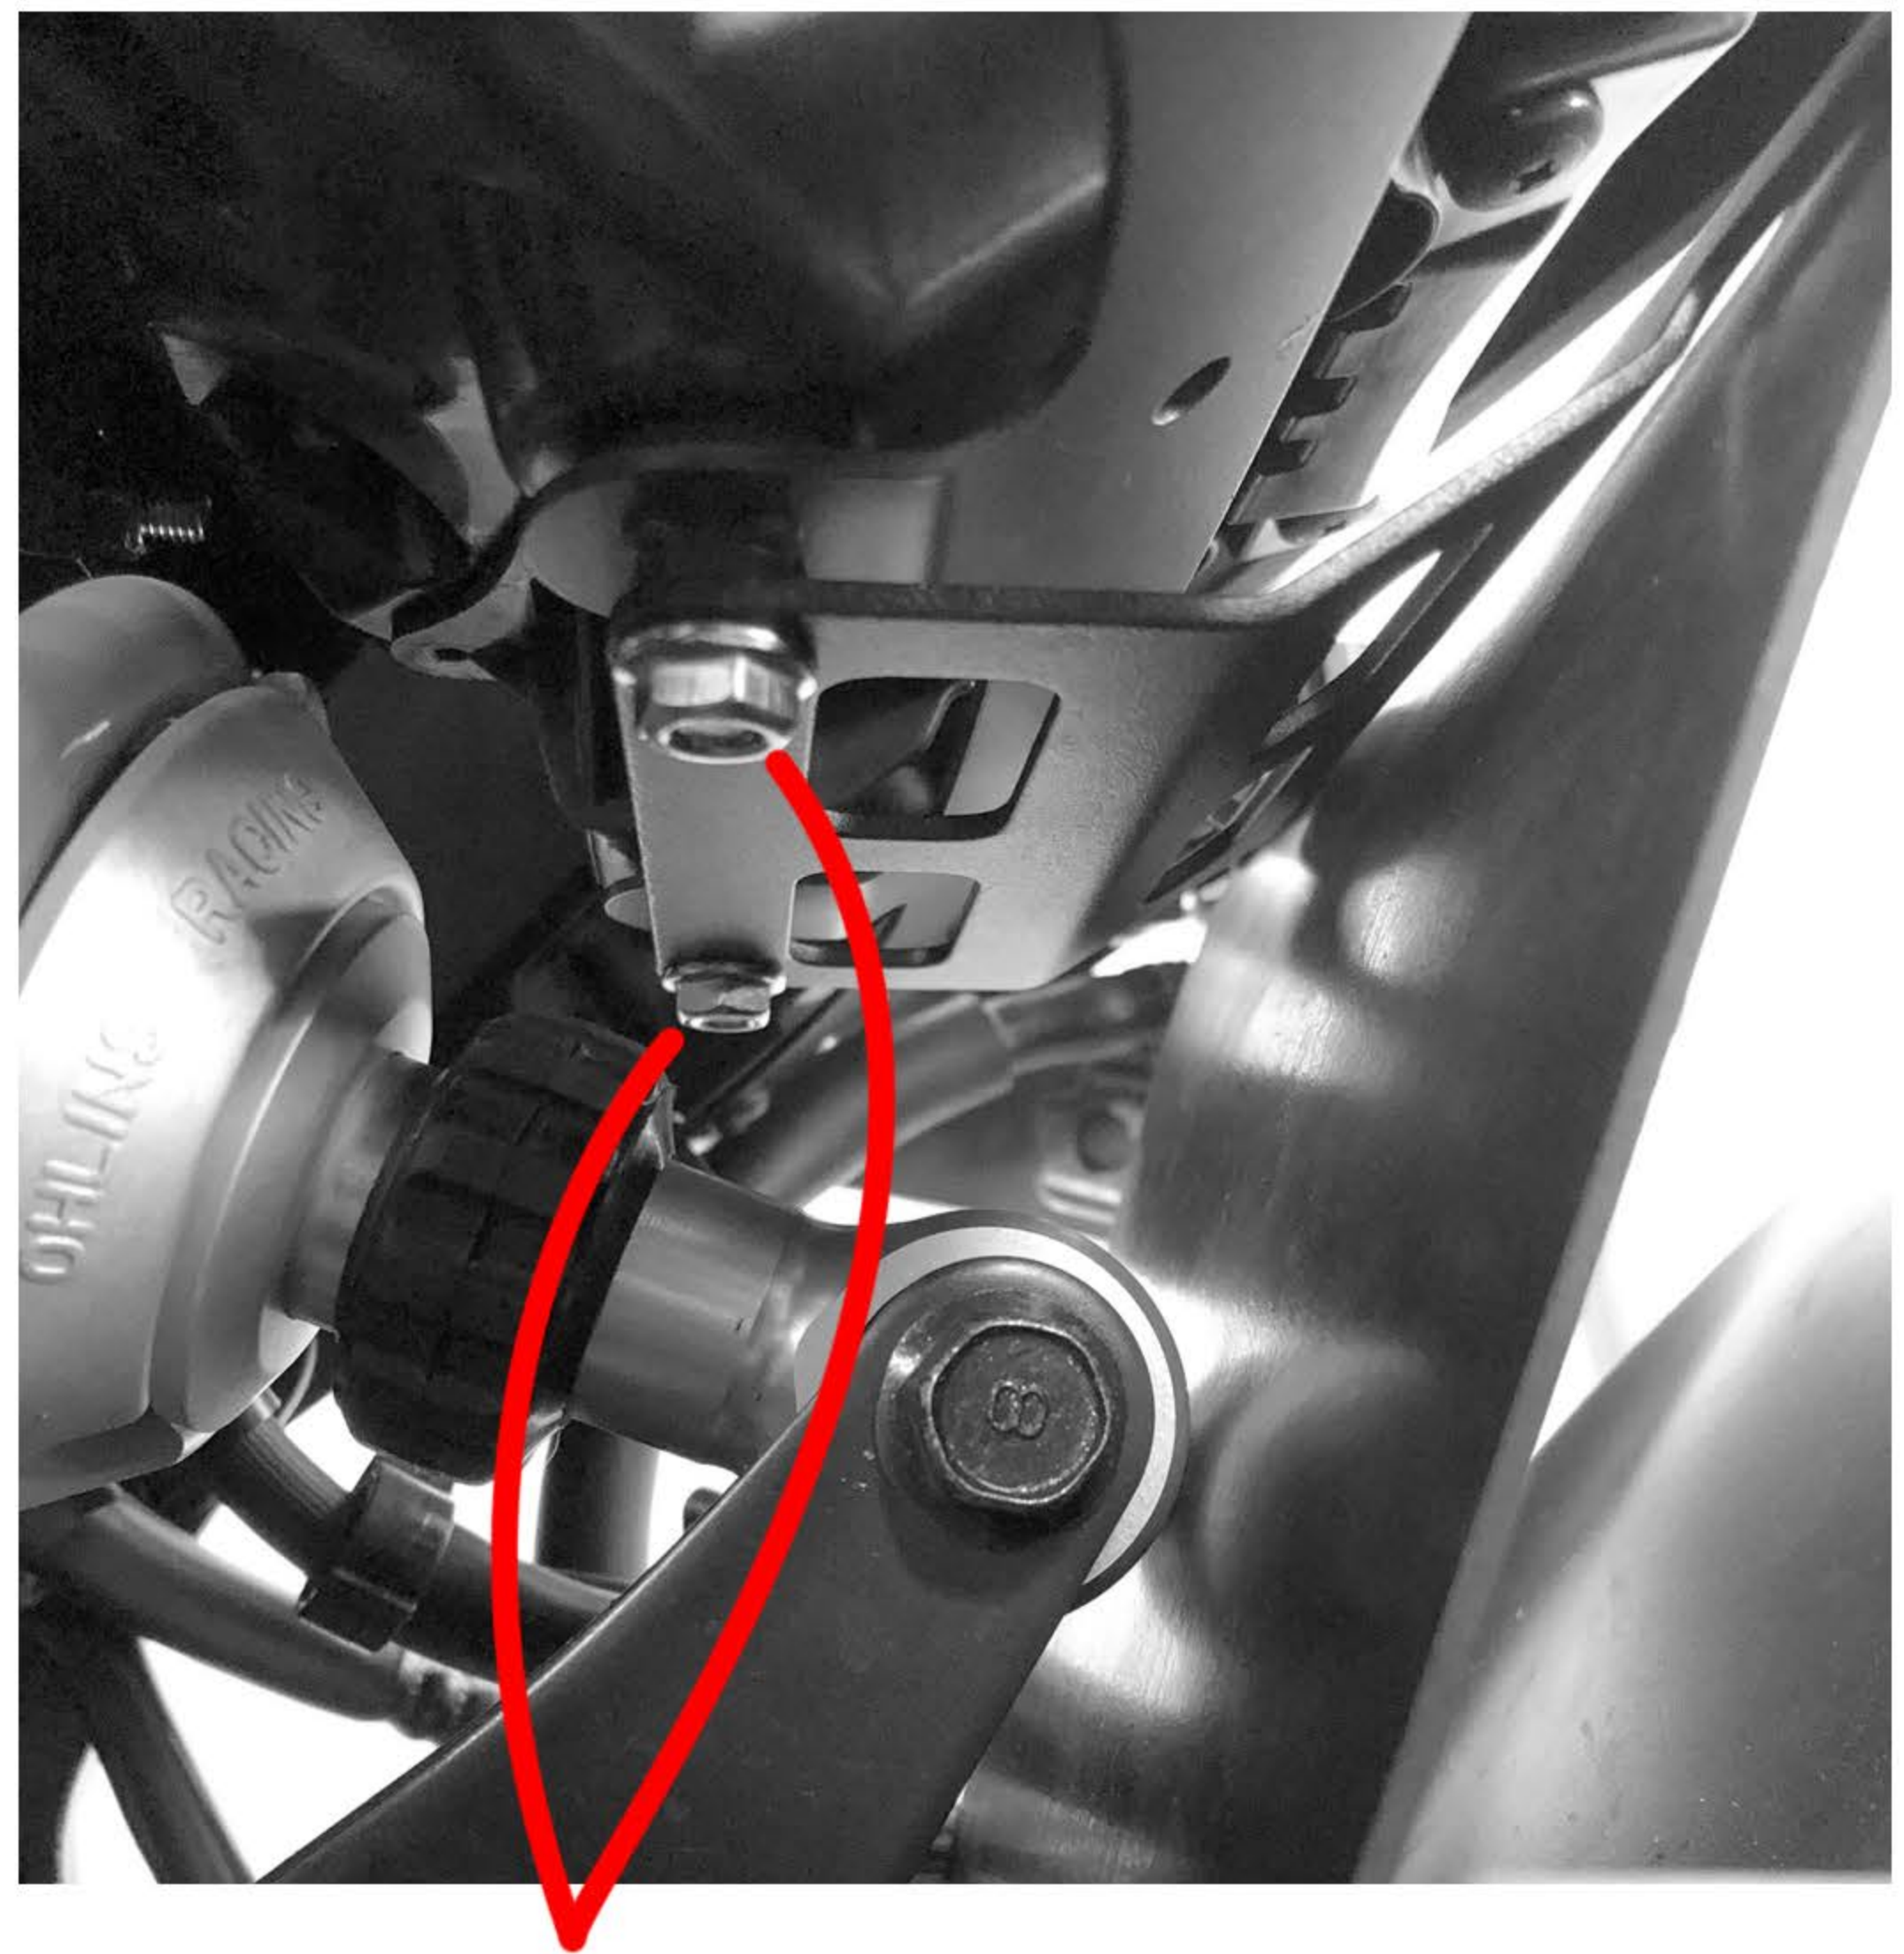

**Bullet point 3**

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
+44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and  
feel free to leave us a review!