



EVOTECH®
P E R F O R M A N C E


Installation Instructions

YAMAHA MT-09 2013 TAIL TIDY


Product Reference - 12795


Kit Contents


- | | |
|----------------------------------|--|
| A 1 x Main Tail Tidy | I 2 x M5 - 12 Socket Button Heads |
| B 1 x Light Mount Bracket | J 2 x M4 - 10 Socket Button Heads |
| C 1 x Licence Plate Light | K 2 x M3 - 12 Socket Button Heads |
| D 1 x Wiring Cover Plate | L 2 x Male Bullet Connectors |
| E 1 x Lock Cover Plate | M 2 x Plastic Screws and Nuts |
| F 1 x Rubber Cap | N 4 x M6 Flange Nuts |
| G 1 x Reflector Bracket | O 5 x Cable Ties |
| H 1 x Reflector | |

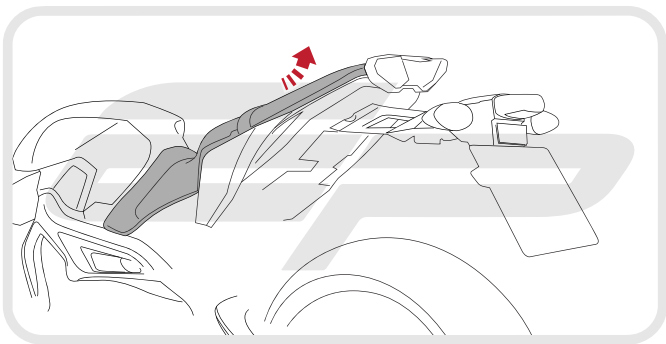


EVOTECH[®]
P E R F O R M A N C E

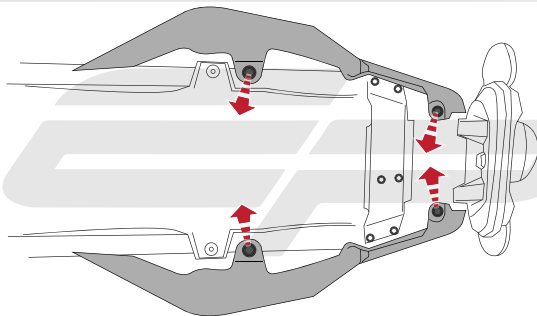


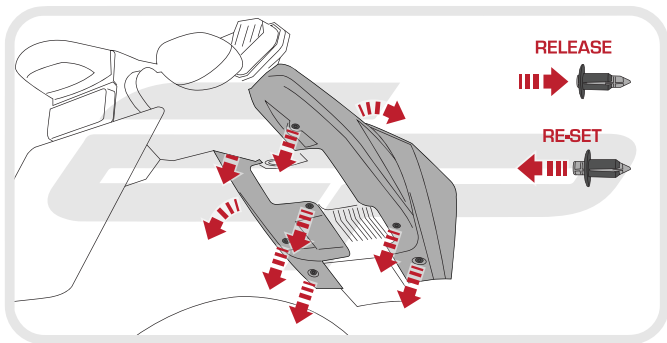


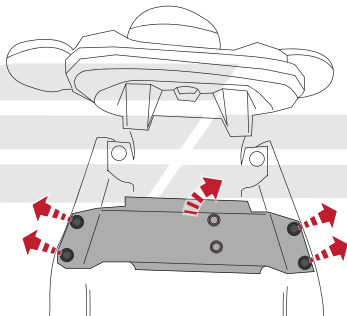


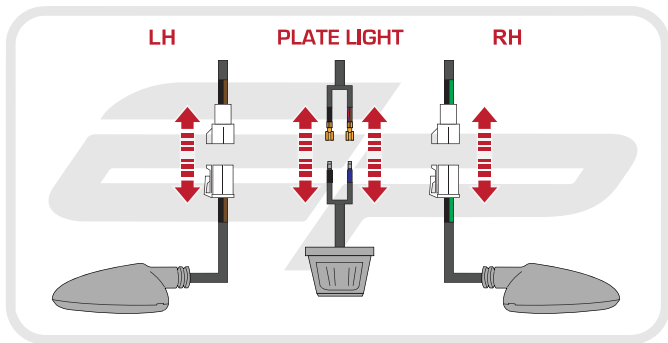


EVOTECH[®]
P E R F O R M A N C E

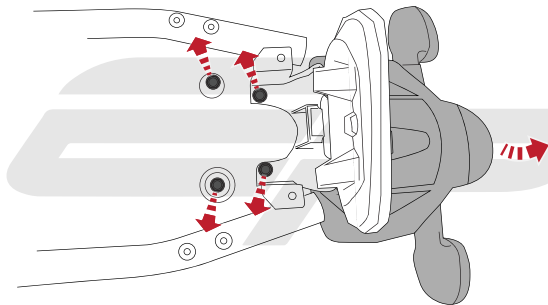


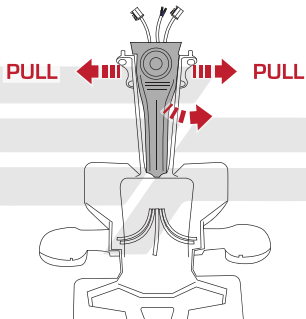


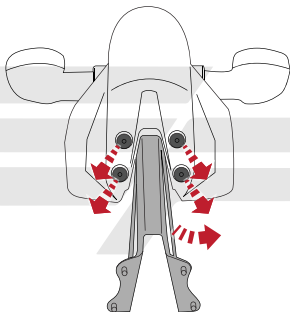


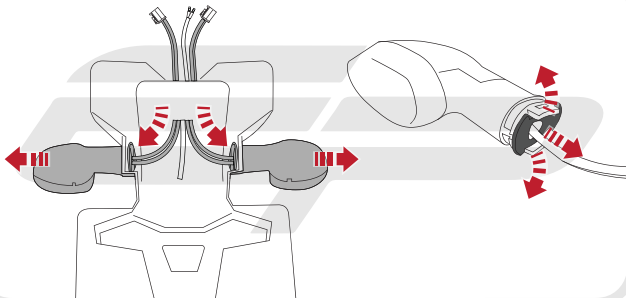


EVOTECH[®]
P E R F O R M A N C E

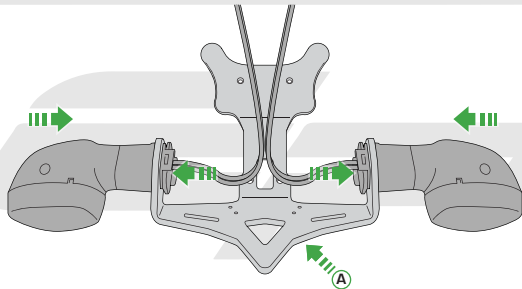

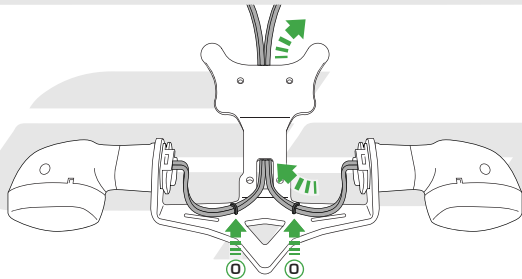

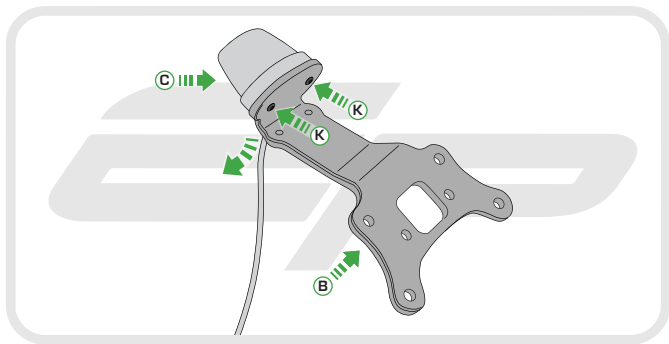


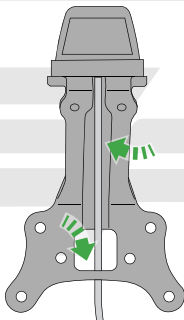





Caution

Ensure wires sit neatly in the groove between plates so they do not get trapped when tightening

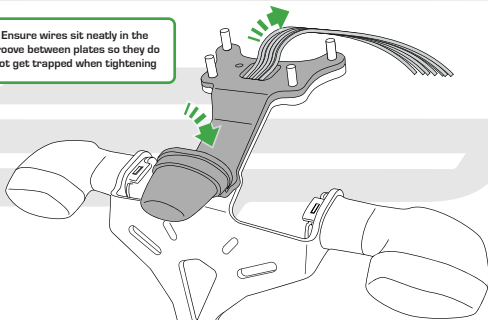


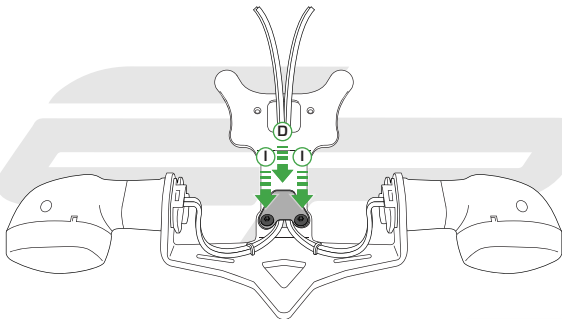



EVOTECH[®]
P E R F O R M A N C E

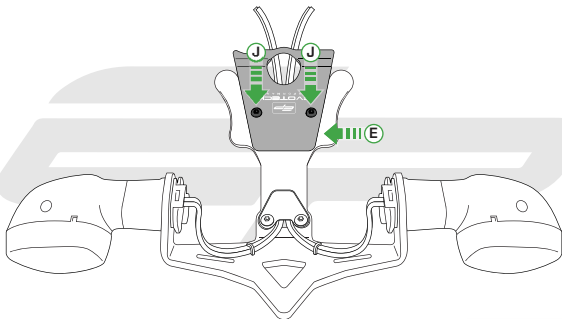

EVOTECH[®]
P E R F O R M A N C E

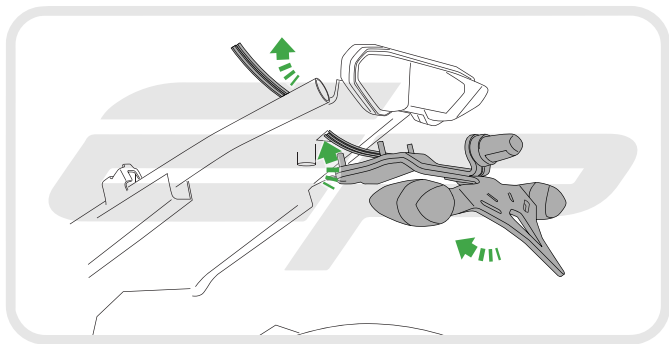

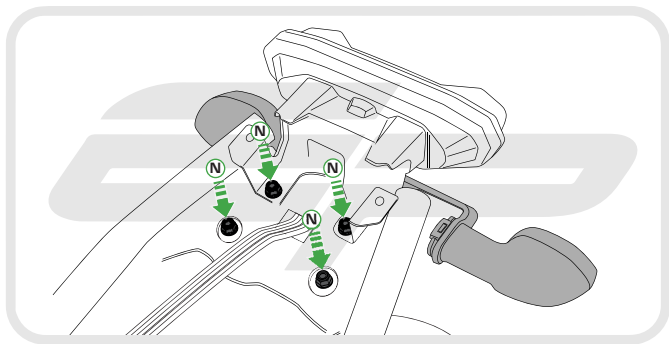

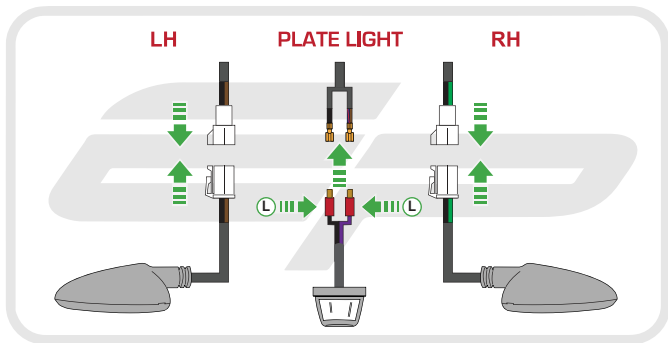




Reverse Stages
4, 3, 2, 1




Caution

Push rubber cap over
lock barrel

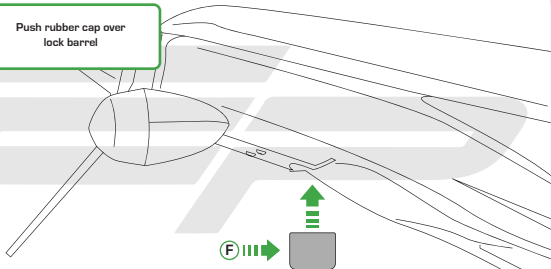

Reflector Bracket Installation

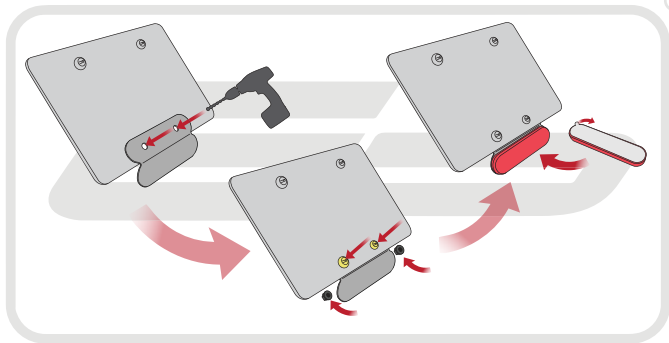

EVOTECH[®]
P E R F O R M A N C E



ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com