
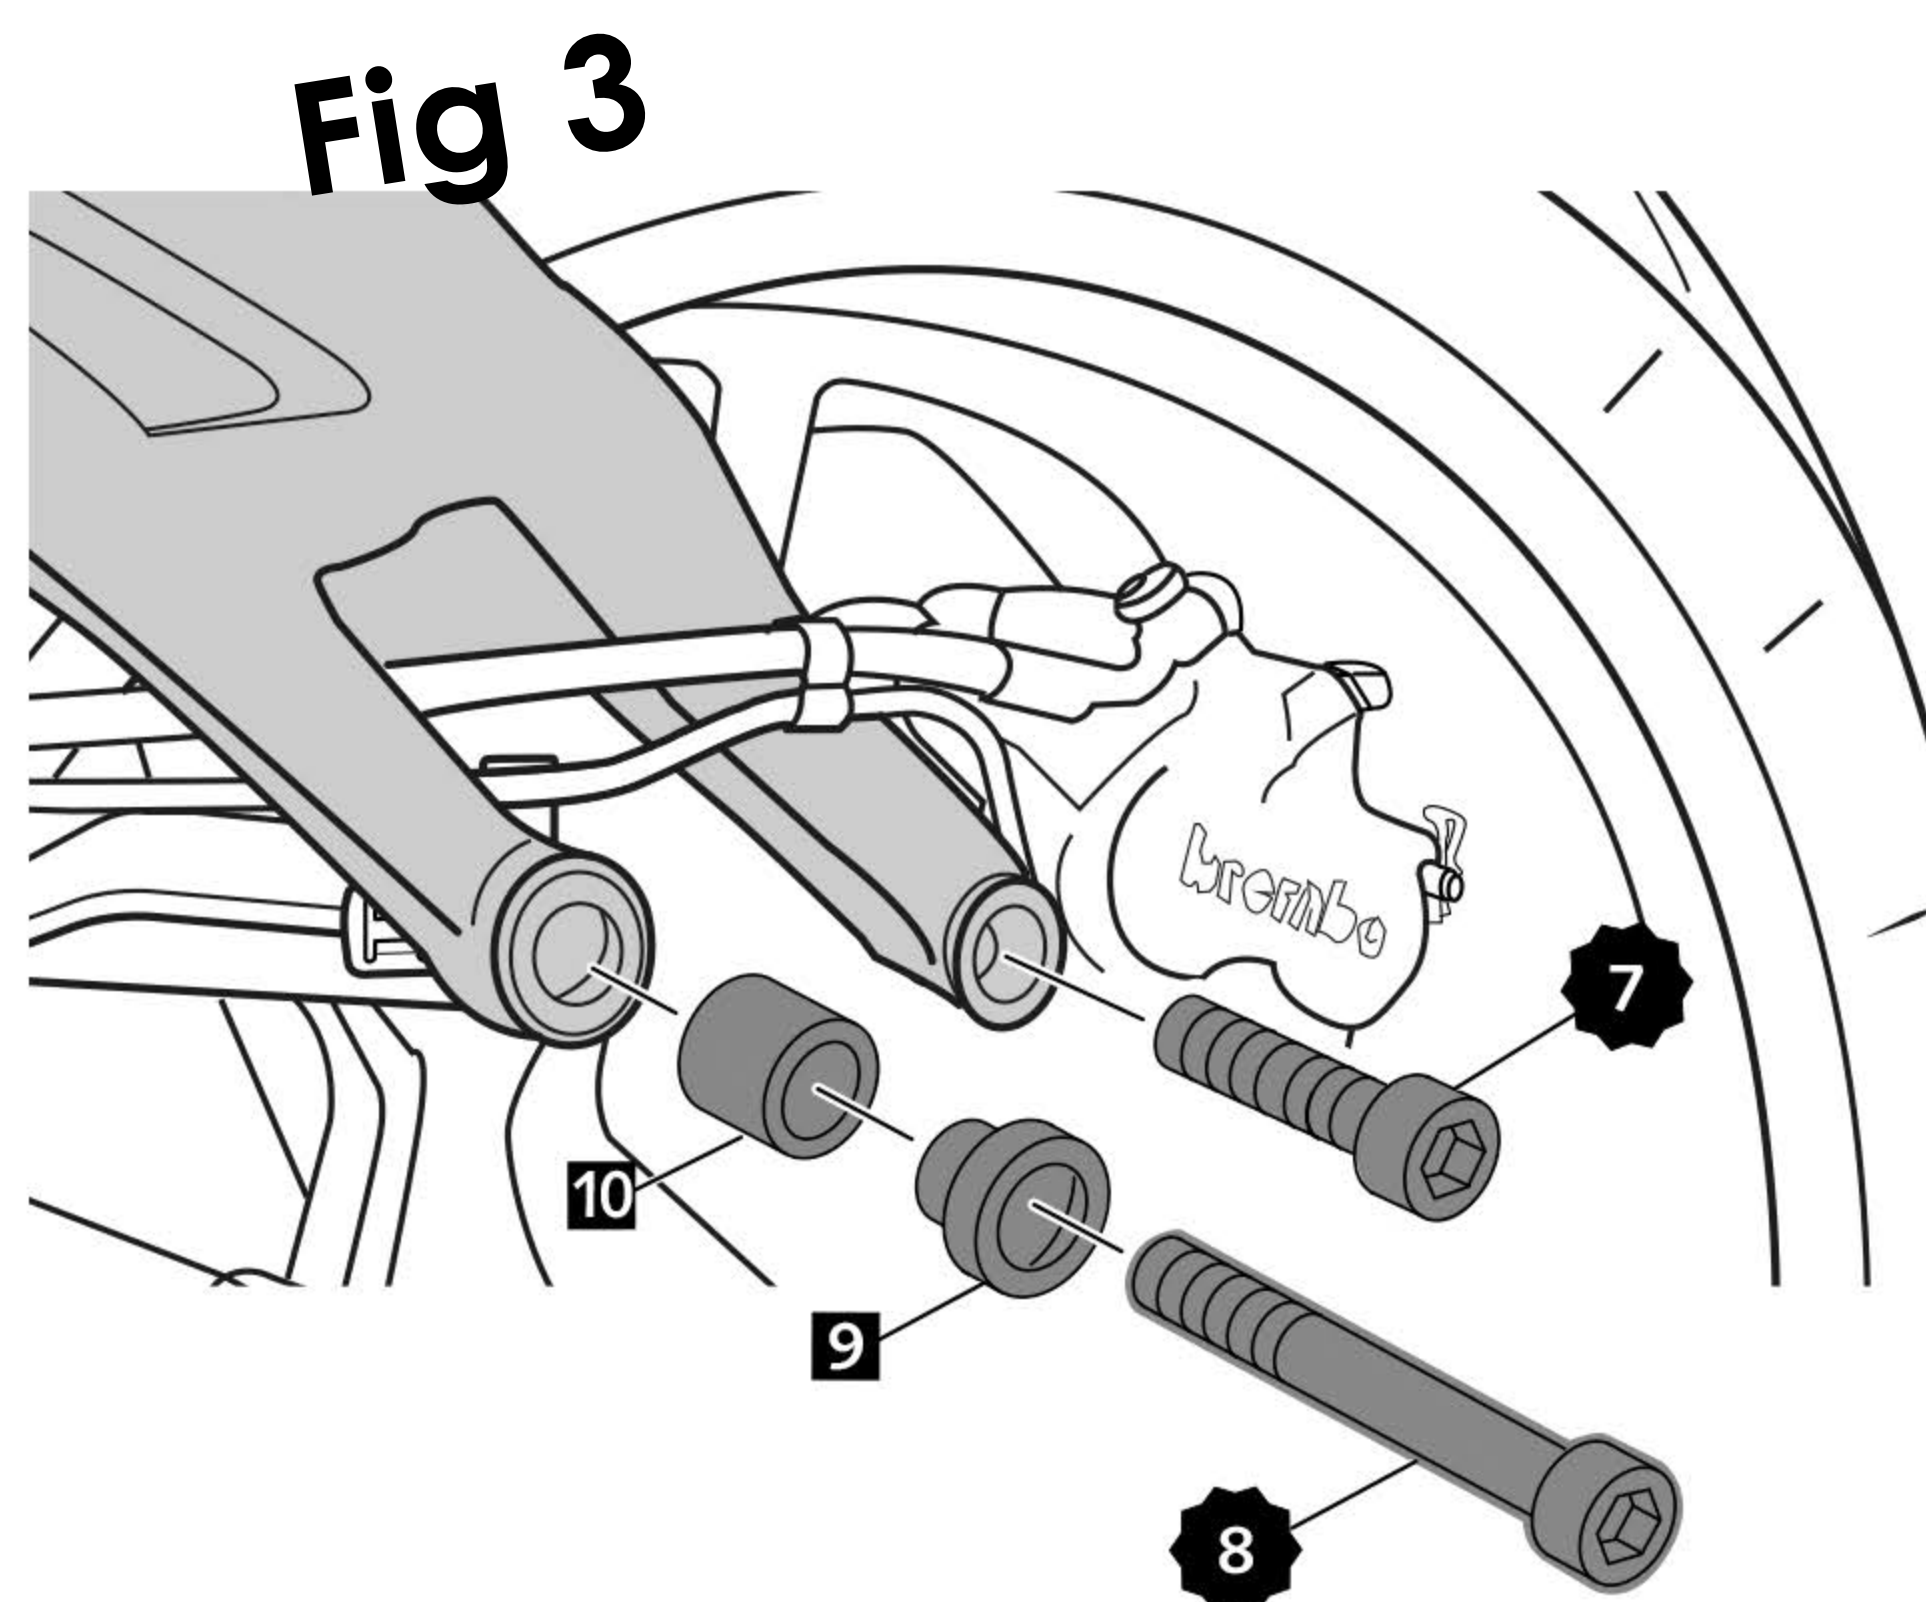
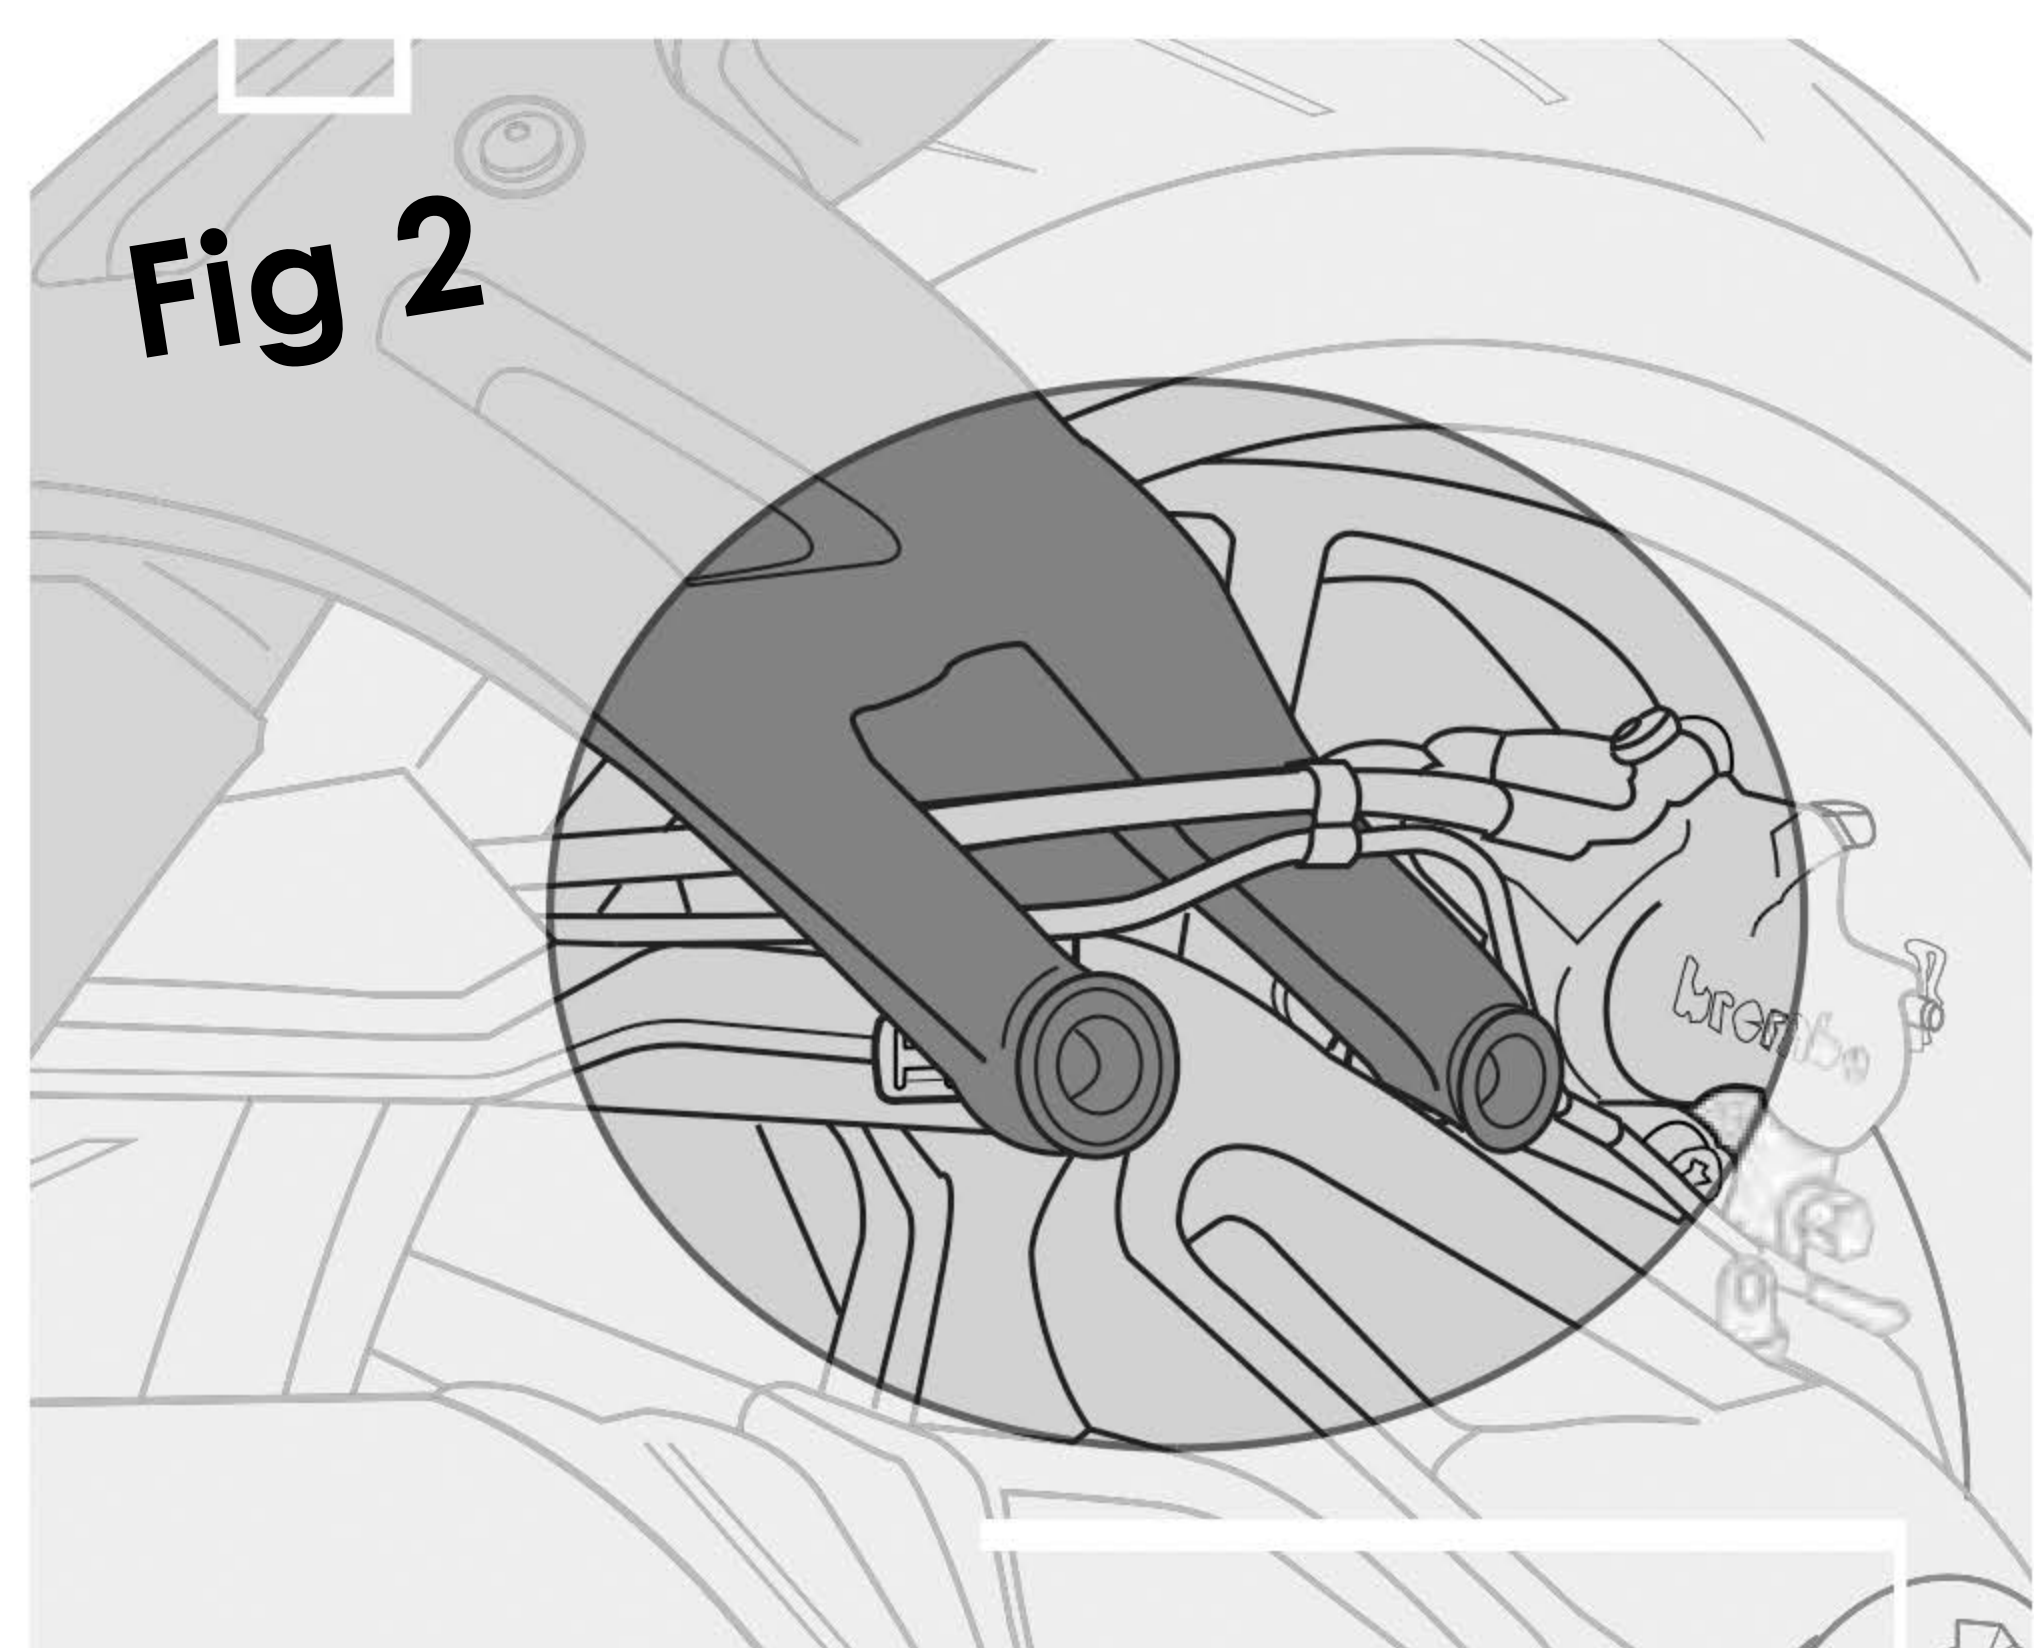


074267 BMW R1250R Hugger Fitting Instructions


Qty	ID	Description
1X	1	Moulding
1X	2	Bracket
3X	3	Rubber Grommet
3X	4	M5 X 11mm Bolt
3X	5	M5 Flanged Collar
3X	6	M5 Split Lock Washer
1X	7	M8 X 35mm Cap Head Bolt
1X	8	M10 X 75mm Cap Head Bolt
1X	9	M10 Flanged Collar (Ø inner 10,5 Øouter-(1)15 x Øouter-(2)21x19,5)
1X	10	Spacer (Ø inner 15 x Ø outer 17x15)
3X	11	M5 Bolt Caps

Follow the illustrations below for the fitting sequence.

Once the product is fitted, be sure to check fixings periodically.

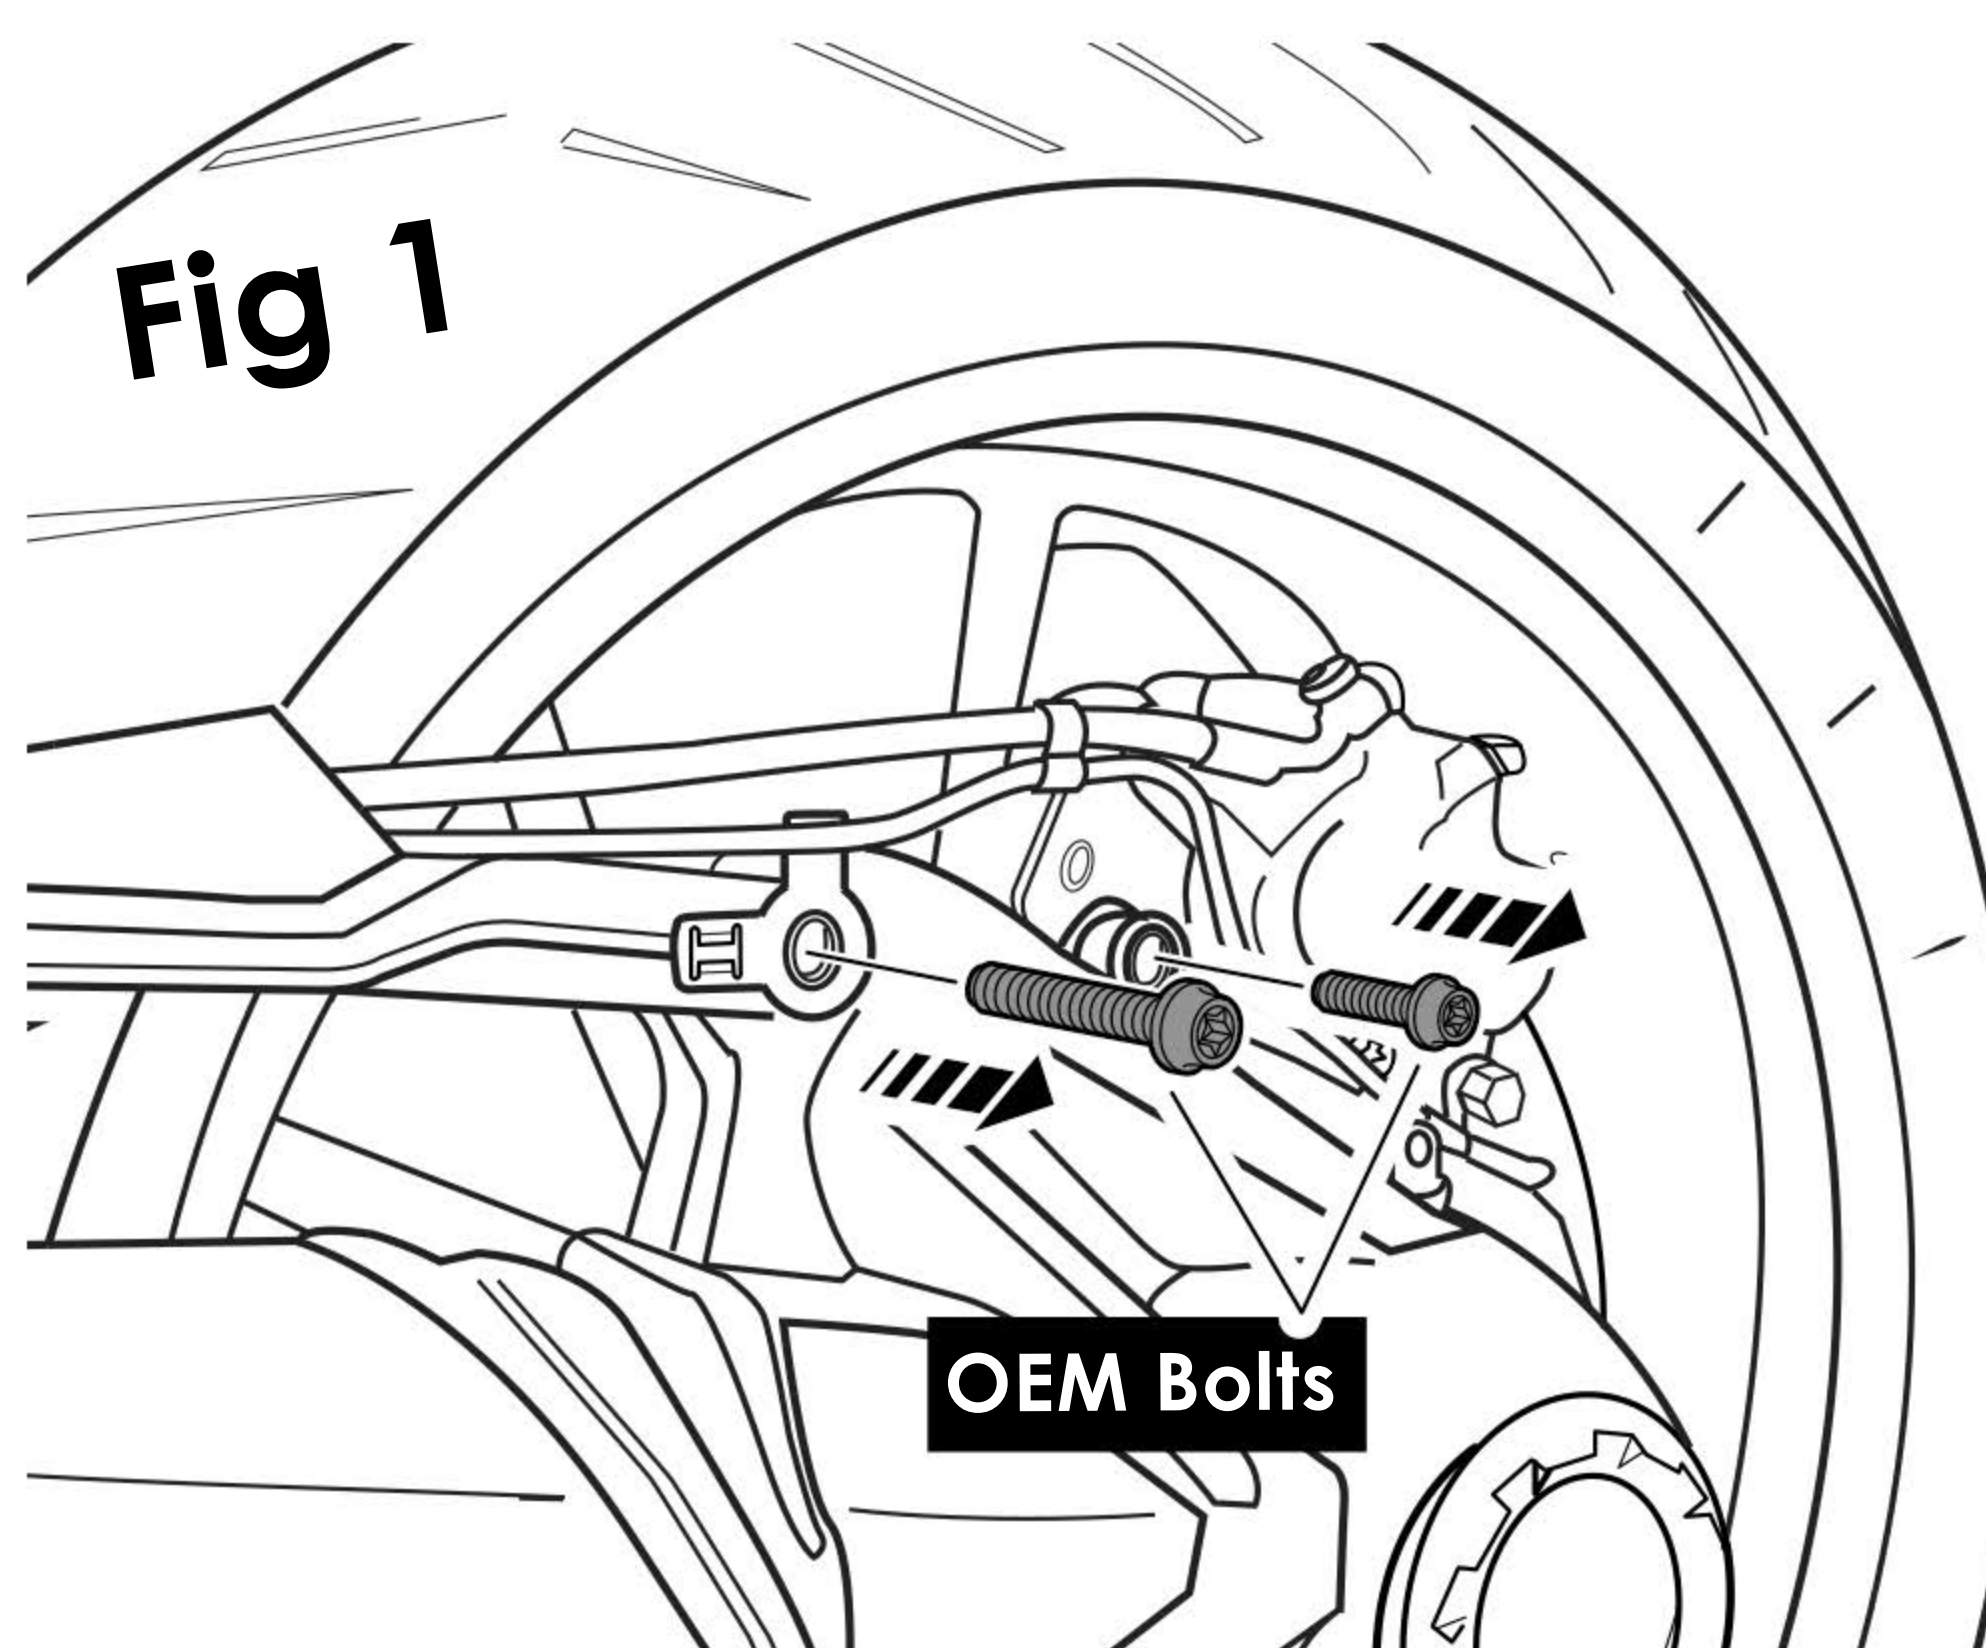

Torque settings: n° 7 (24Nm) n° 8 (56 Nm).

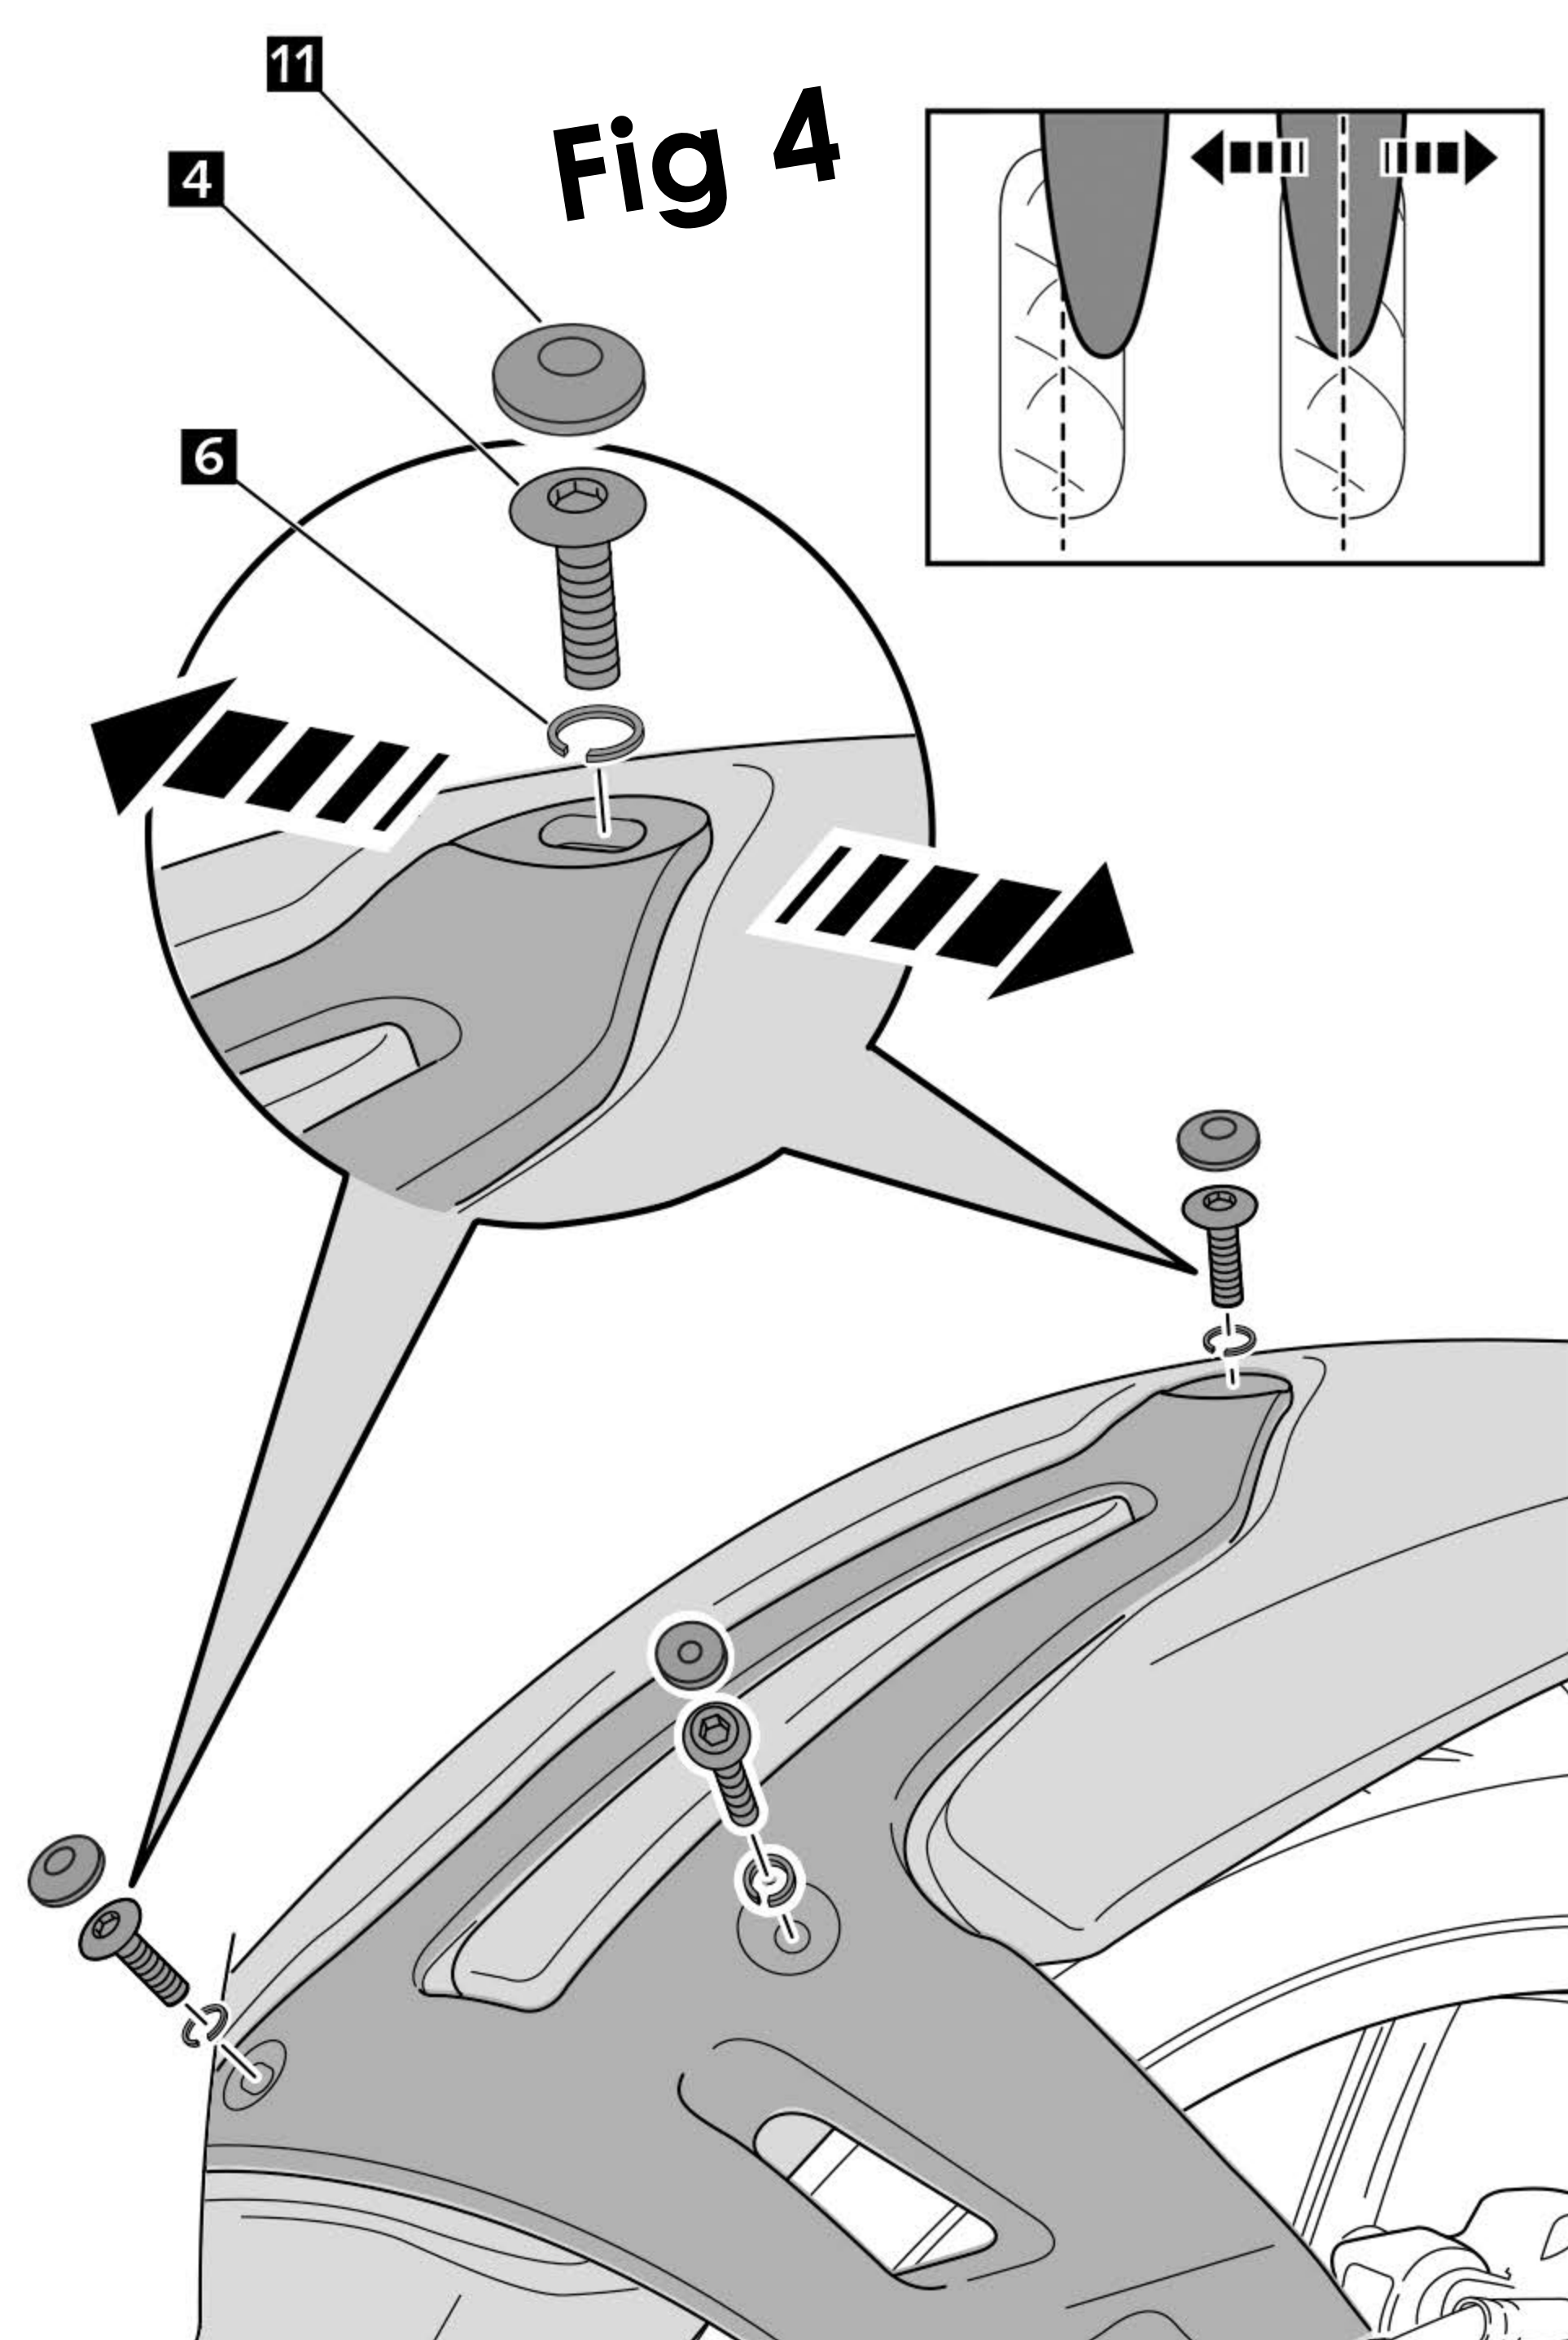

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!