




## 23500 Kawasaki Z900RS + Z650RS Fly Screen Fitting Instructions

Items from this list in GREY are **not needed** for fitment on the Z900RS & Z650RS

| ID. | DESCRIPTION                                                     | QTY. |
|-----|-----------------------------------------------------------------|------|
| 1   | Fairing                                                         | 1    |
| 2   | Screen                                                          | 1    |
| 3   | M6 X 20mm Bolt                                                  | 2    |
| 4   | Screen Kit (3X Well Nuts, M5 X 16mm Bolts, Washers & Bolt Caps) | 3    |
| 5   | Metal Brackets (pair)                                           | 2    |
| 6   | M6 X 8mm Bolts                                                  | 4    |
| 7   | M6 X 12mm Bolts & Nuts                                          | 2    |
| 8   | M6 Plastic Washers                                              | 4    |
| 9   | M8 Nuts                                                         | 2    |
| 10  | M8 X 35mm Bolts                                                 | 2    |
| 11  | M8 Steel Washers                                                | 2    |
| 12  | M8 X 15mm X 9mm Spacers                                         | 2    |
| 13  | M6 X 12mm X 8mm Spacers                                         | 2    |
| 14  | Rubber Trim                                                     | 1    |
| 15  | Yellow Ball Decals - two designs (for 23500P only)              | 2    |

CBRA08230P

Follow the diagrams below for assistance when fitting.

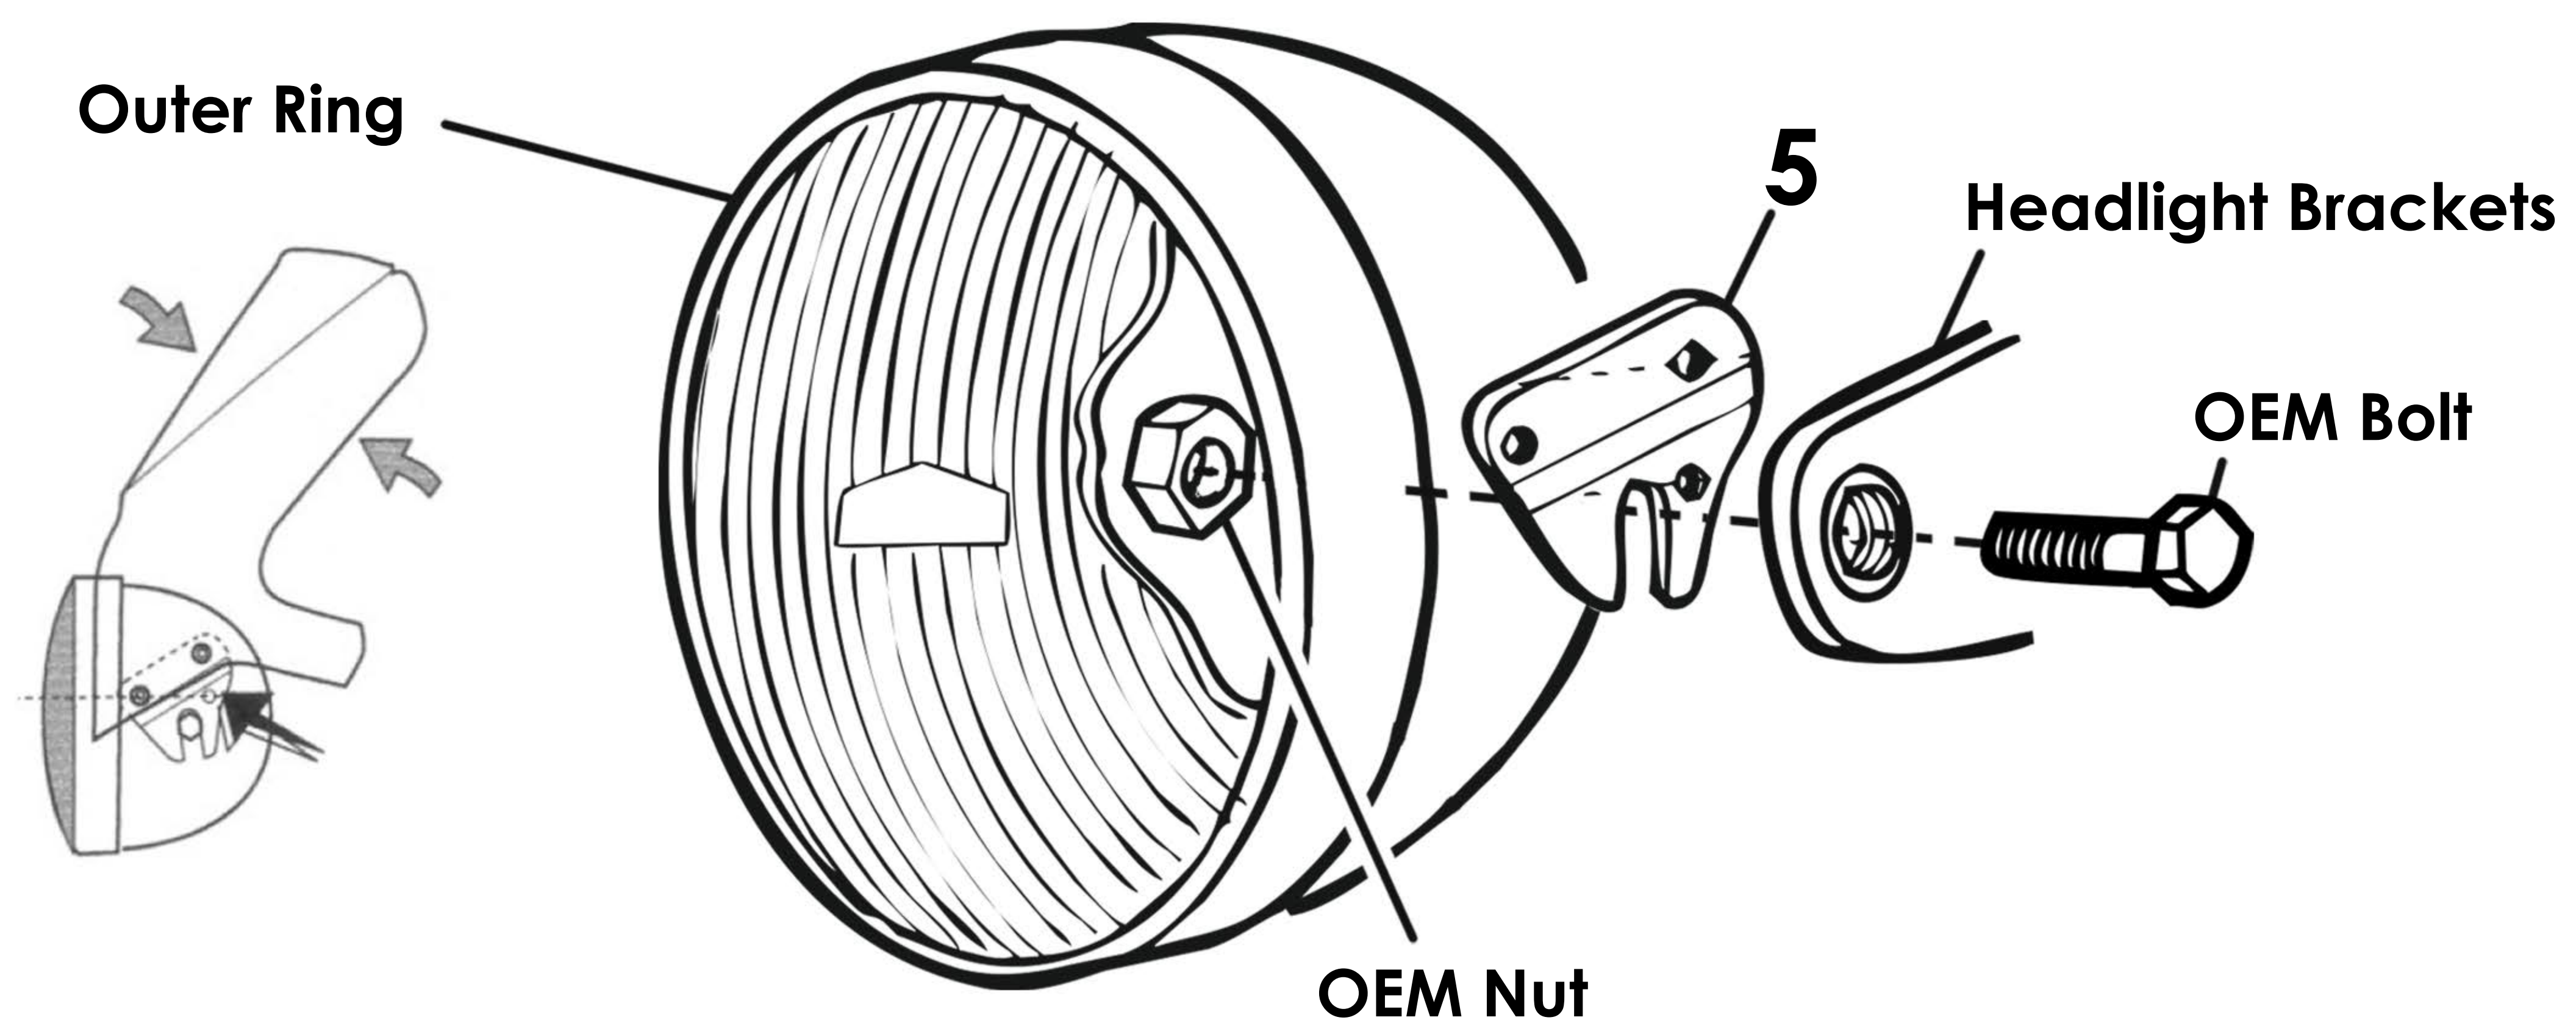

### Fitting notes:

The internal nut on the headlight needs to be accessed to tighten up the fly screen brackets.

To do this the outer ring of the headlight (shown in diagram above) needs to be removed temporarily. This can be achieved by removing the two small bolts on the underside of the headlight and unclipping the outer ring at the top.

The outer ring can be difficult to refit once the Pyramid Fly Screen is in place so it's best to remove the Pyramid Fly Screen from the brackets supplied (shown as '5' in diagram above) once the brackets are tightened up in the correct position.

Any questions?

[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)

+44 (0)1427 677990

[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and  
feel free to leave us a review!