

521203M Honda CB1000 Hornet Radiator Guard 2025> Fitting Instructions

Kit Includes:

1.	X1	C521203	Radiator Guard
2.	X2	CBOLM60011	M6 x 25 Flange Head Bolt
3.	X2	CSPAM60014	M6 Spacer
4.	X1	CBOLM60012	M6 x 30 Flange Head Bolt
5.	X3	CNUTM60003	M6 Nyloc Nut
6.	X2	CFOA0002	Foam Strip (40mm length)
7.	X2	CCAP0002	M6 Bolt Cap
8.	X3	CWASM60001	M6 Stainless Steel Washer

OEM Parts (From the Motorcycle):

9.	X1	OEM M6 Bolt
----	----	-------------

Assembly Instructions

- Begin by cutting the Foam Strips (Item 6) in half lengthways and fit them to the Radiator Guard (Item 1). Please see '**FIG. 3**' for reference.
- Remove the OEM Side panels to gain access to the mounting points shown in '**FIG. 2**'. See '**FIG. 1**' for reference and repeat for the other side.
- Using the fittings provided (Items 2, 3, 4, 5, 6 and 8) and the OEM M6 Bolt (Item 9), proceed to loosely attach the Radiator Guard as shown in '**FIG. 3**'.
- Once the Radiator Guard is in the correct position, fully tighten all fixings starting with the bolts on the rider's RHS. See '**FIG. 3**' for reference.
- Finally, attach the M6 Bolt Caps (Item 7) to the M6 Bolts and reattach the OEM Side panels.

FIG. 1


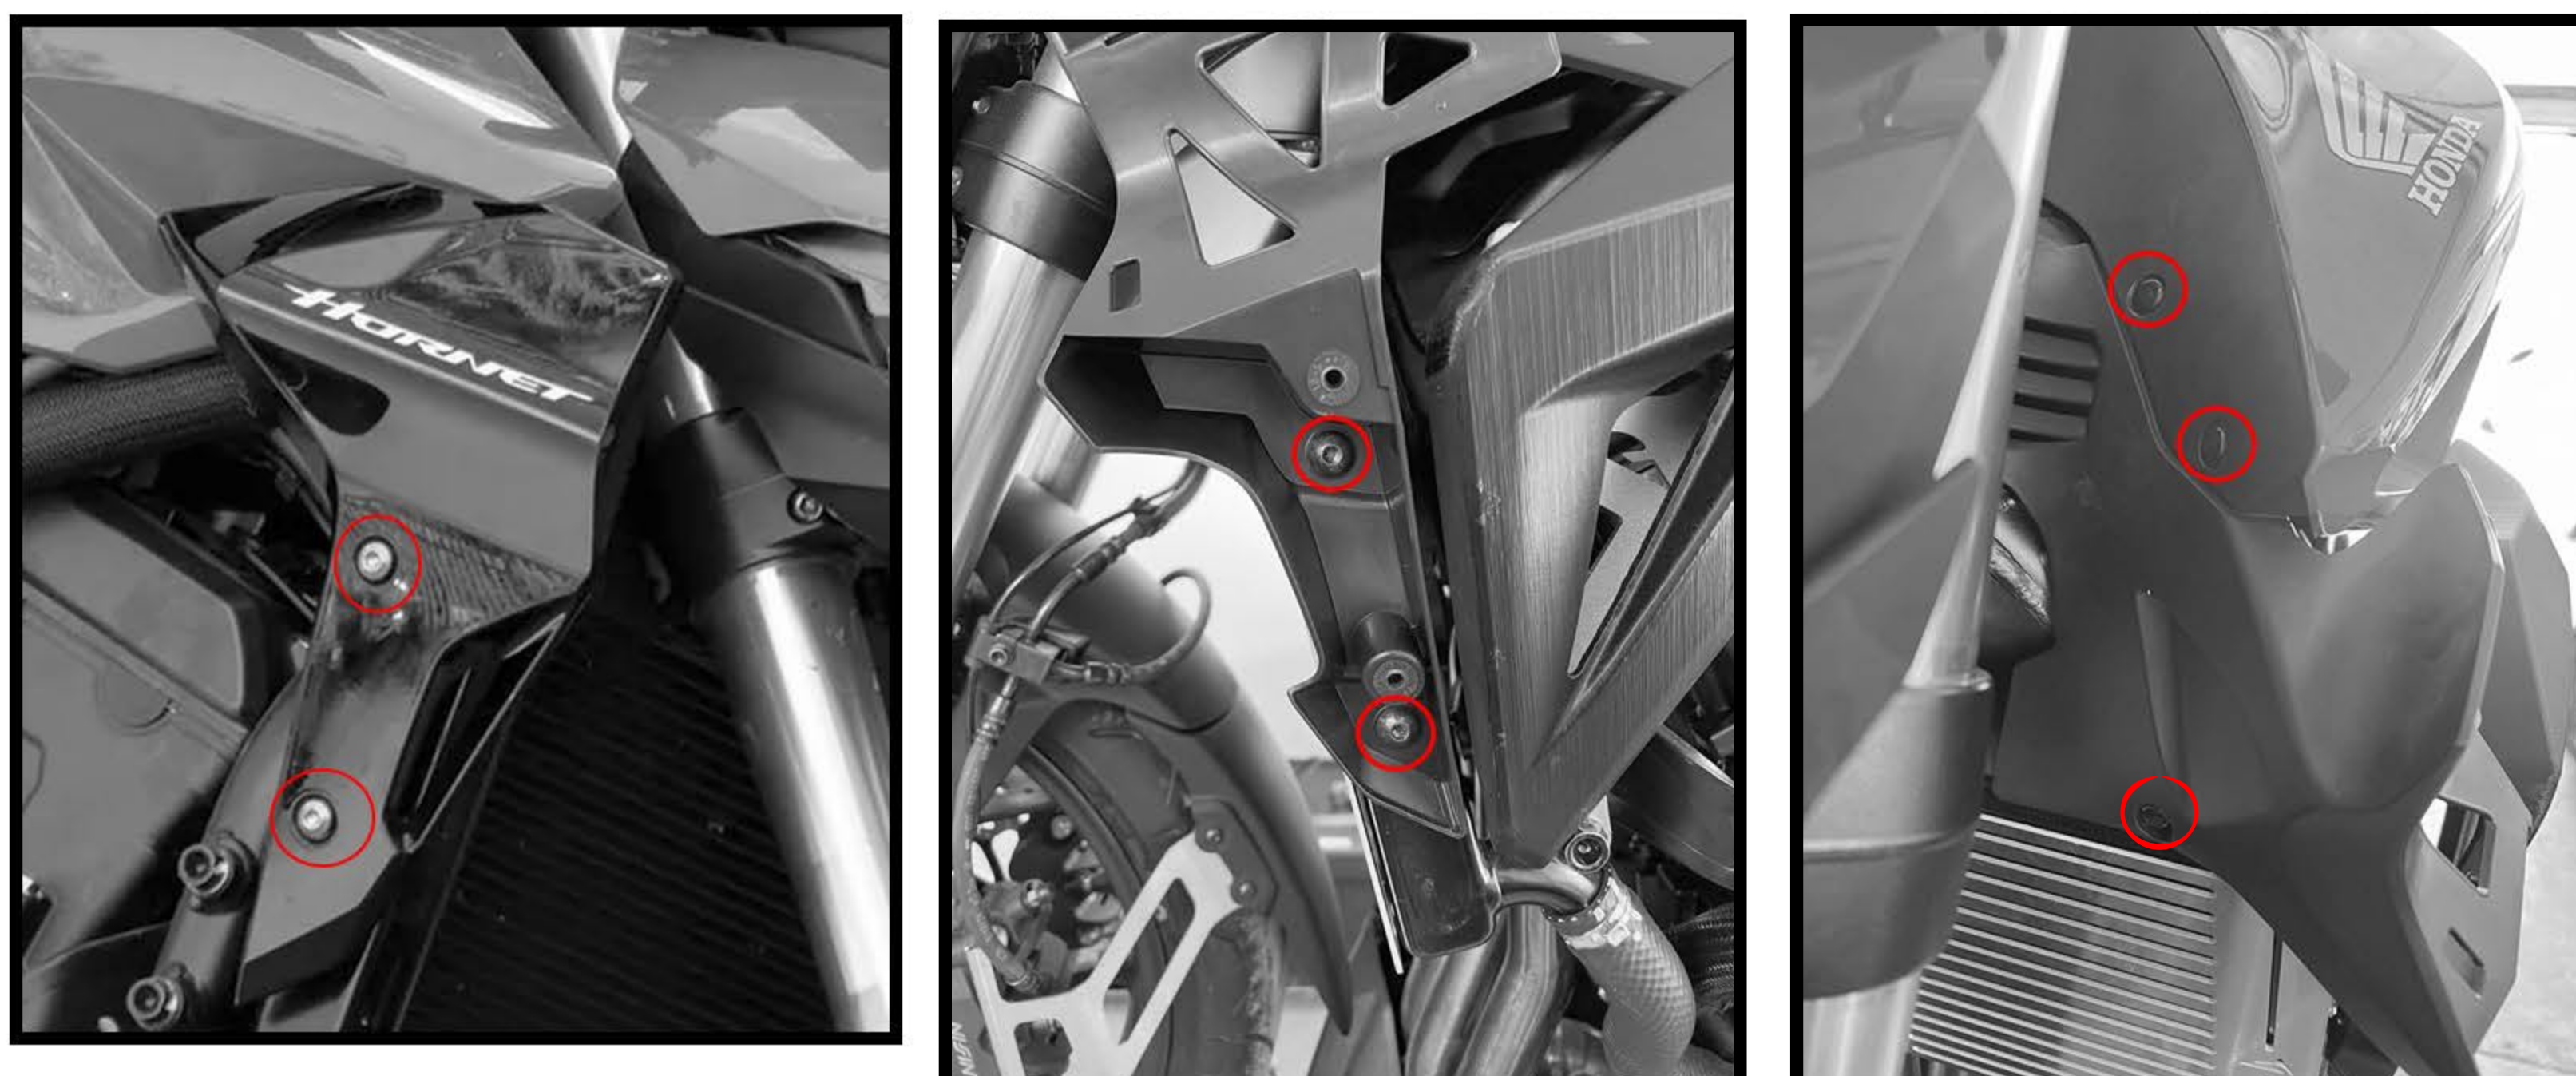


FIG. 2

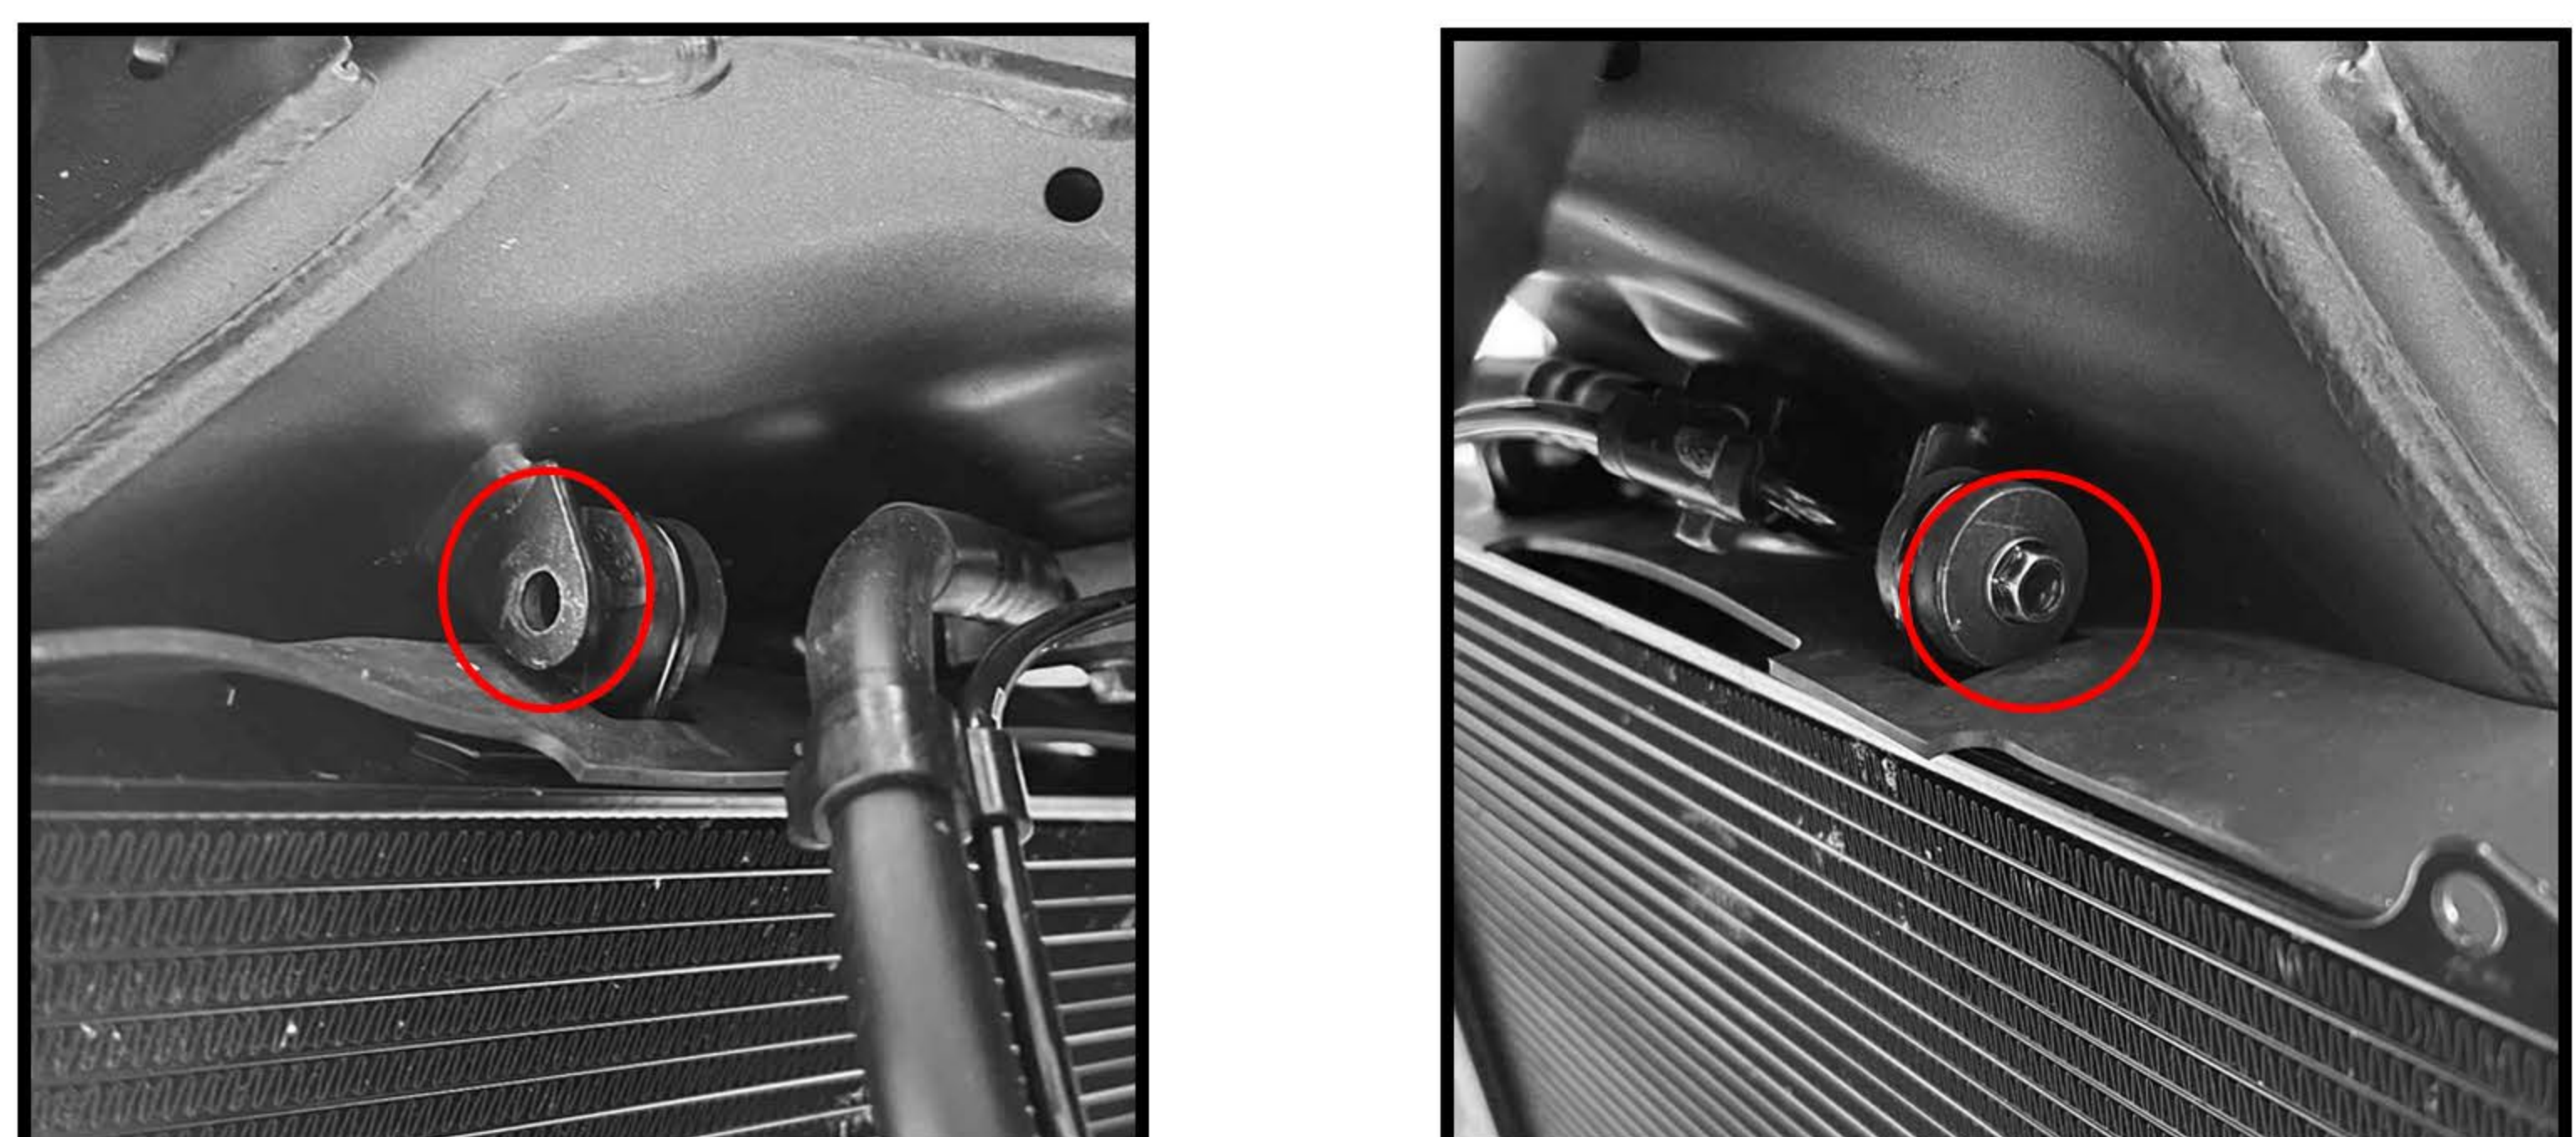

Please Note:

We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!

