



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Rocket
SP Connect Sat Nav Mount





- (A) 1 x M6 x 16 Countersunk Screw
- (B) 1 x Pivot Plate
- (C) 1 x SP Connect Plate
- (D) 1 x Spanner
- (E) 1 x Anti Vibration Plate Adaptor
- (F) 2 x P-clips (No.1)
- (G) 2 x P-clips (No.2)
- (H) 2 x P-clips (No.3)
- (I) 2 x P-clips (No.4)
- (J) 2 x Lobe Screw
- (K) 2 x Locking Washer
- (L) 2 x M5 Black Washer
- (M) 2 x M4 x 5mm Button Head Bolts
- (N) 2 x M5 x 10mm Caphead Bolts
- (O) 2 x M5 x 6mm Black Button Head Bolt
- (AA) 2 x M5 x 16mm Flange Bolt
- (BB) 1 x M5 x 20mm Flange Bolt


EPOTECH[®]
PERFORMANCE

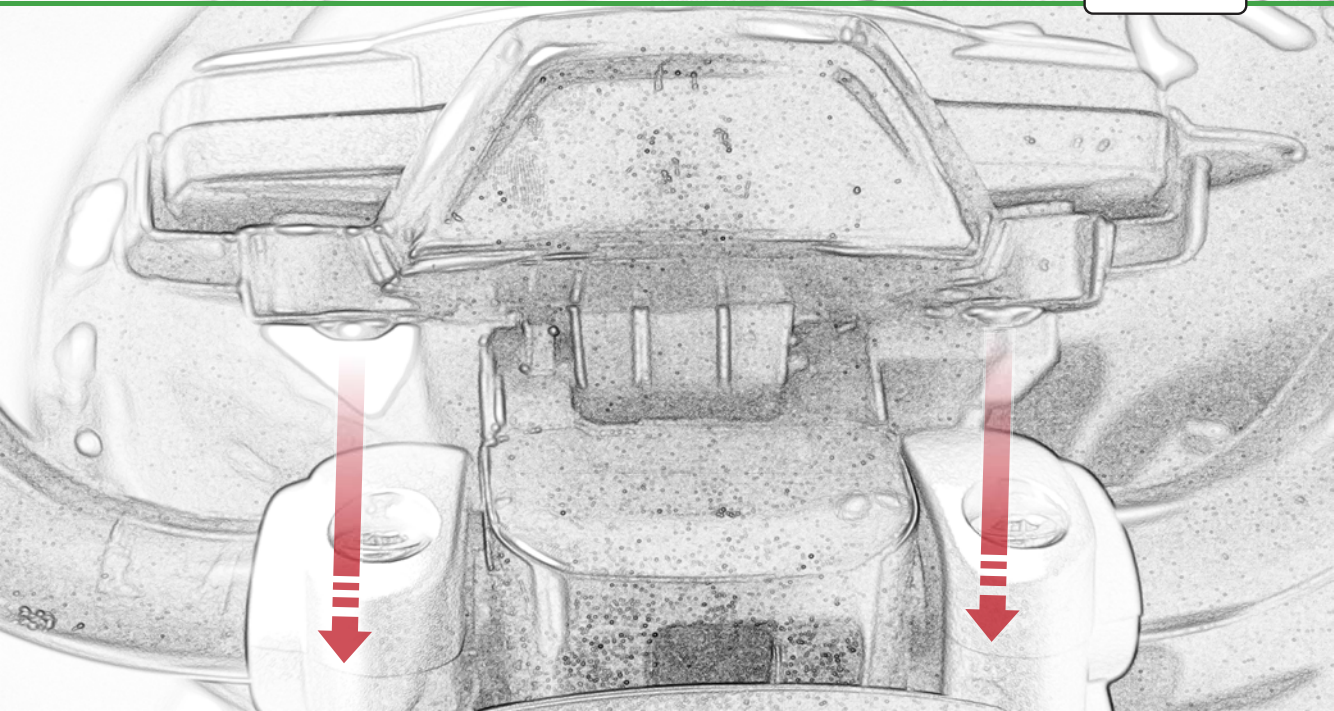


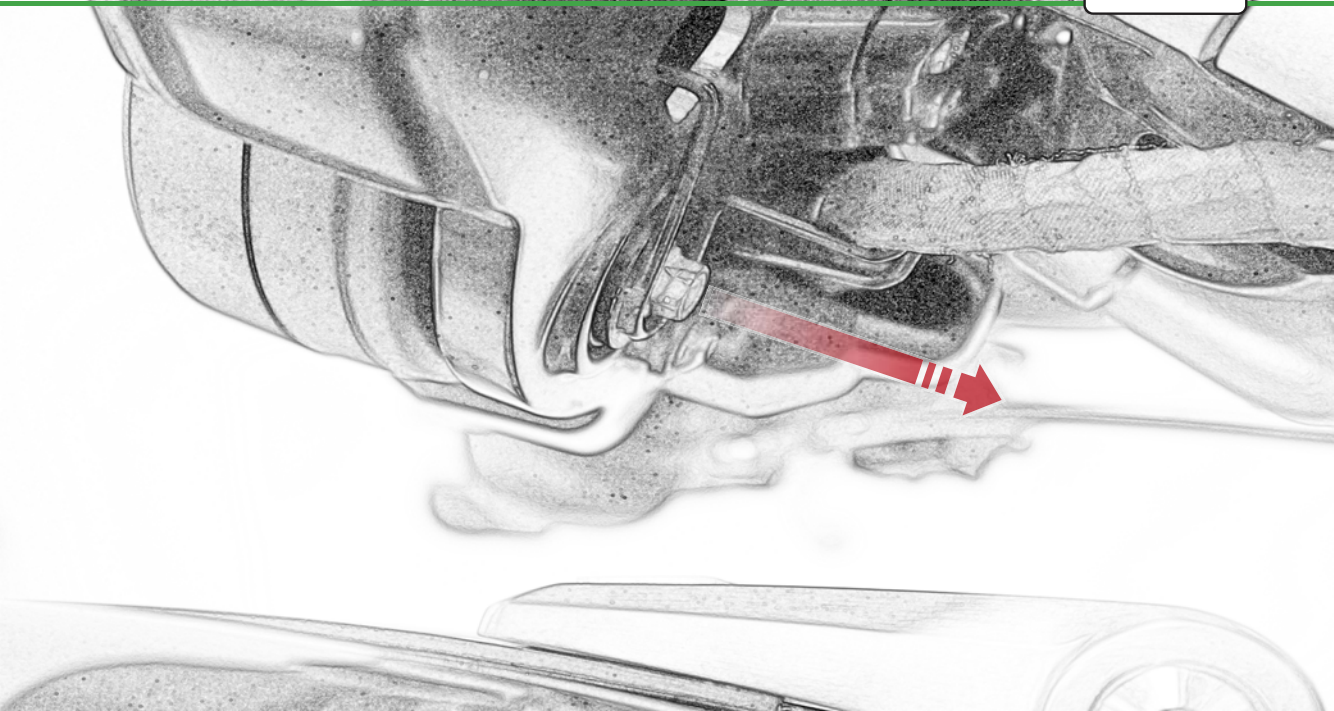


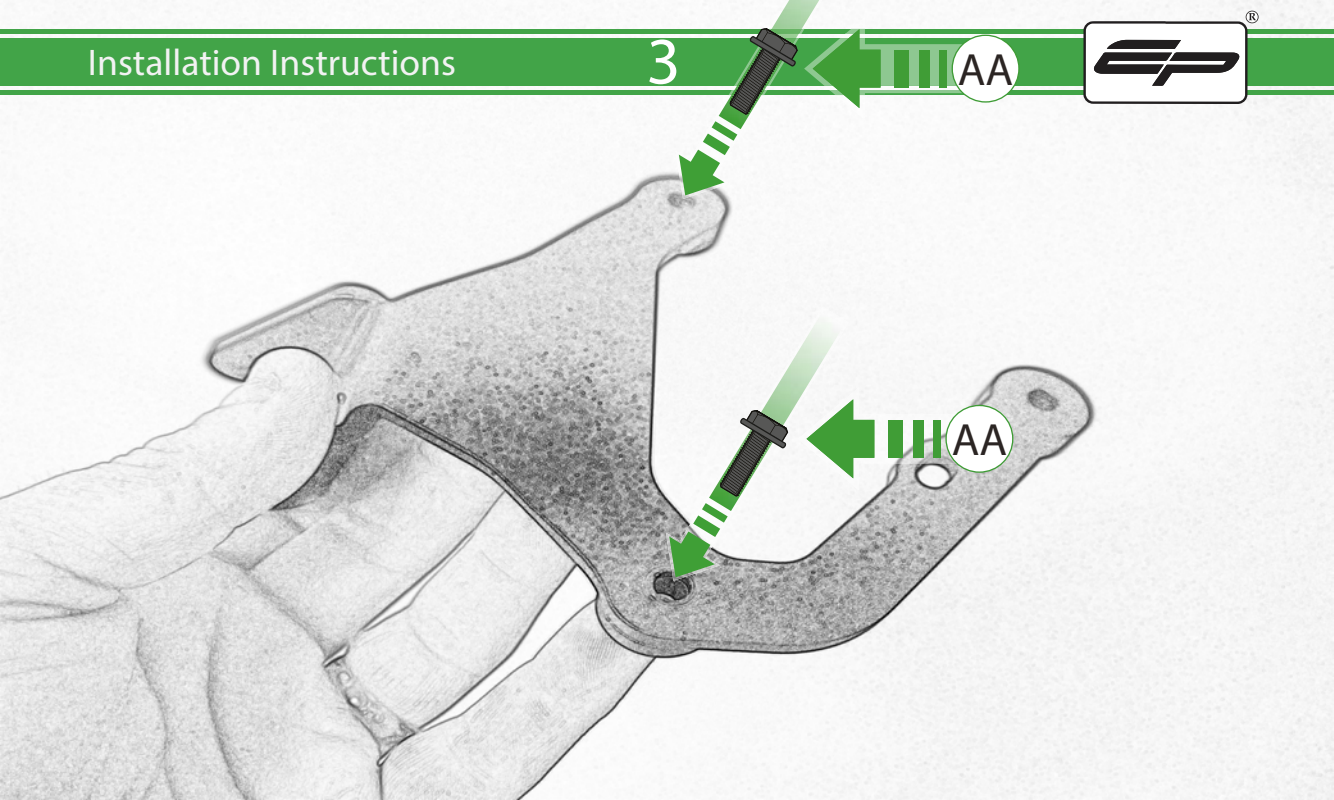


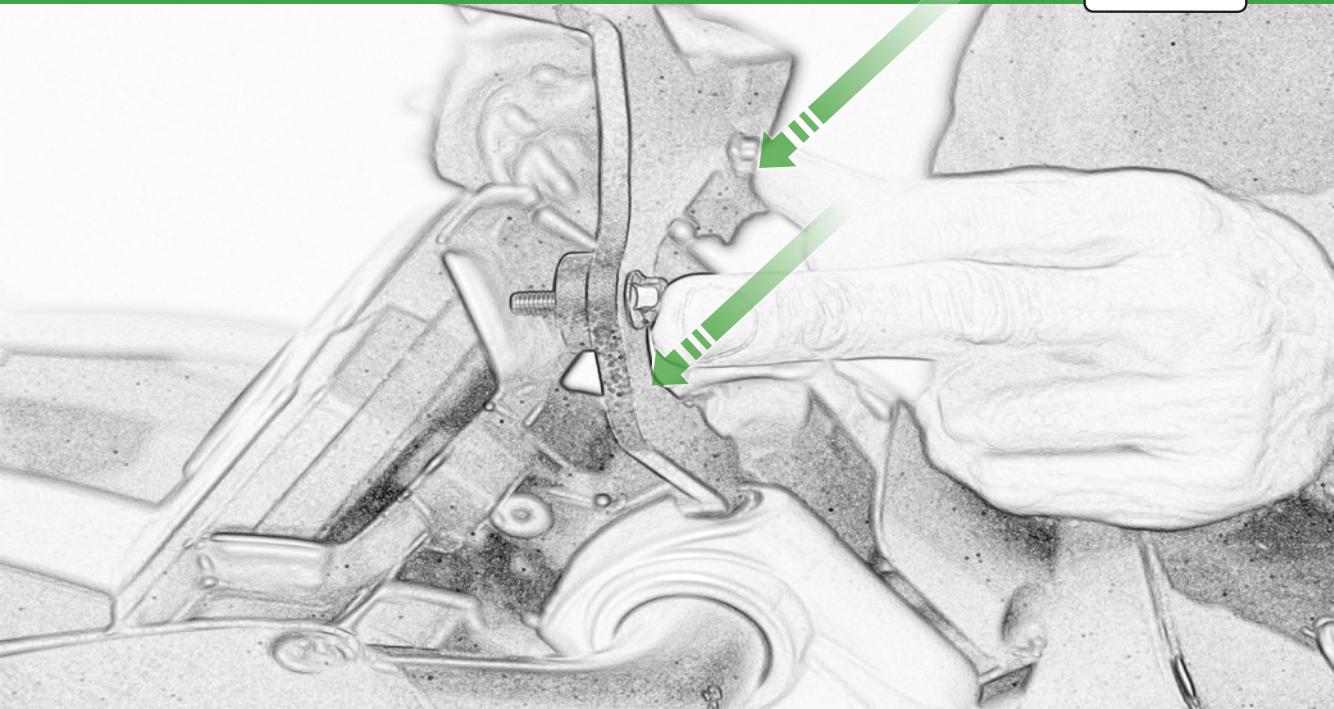

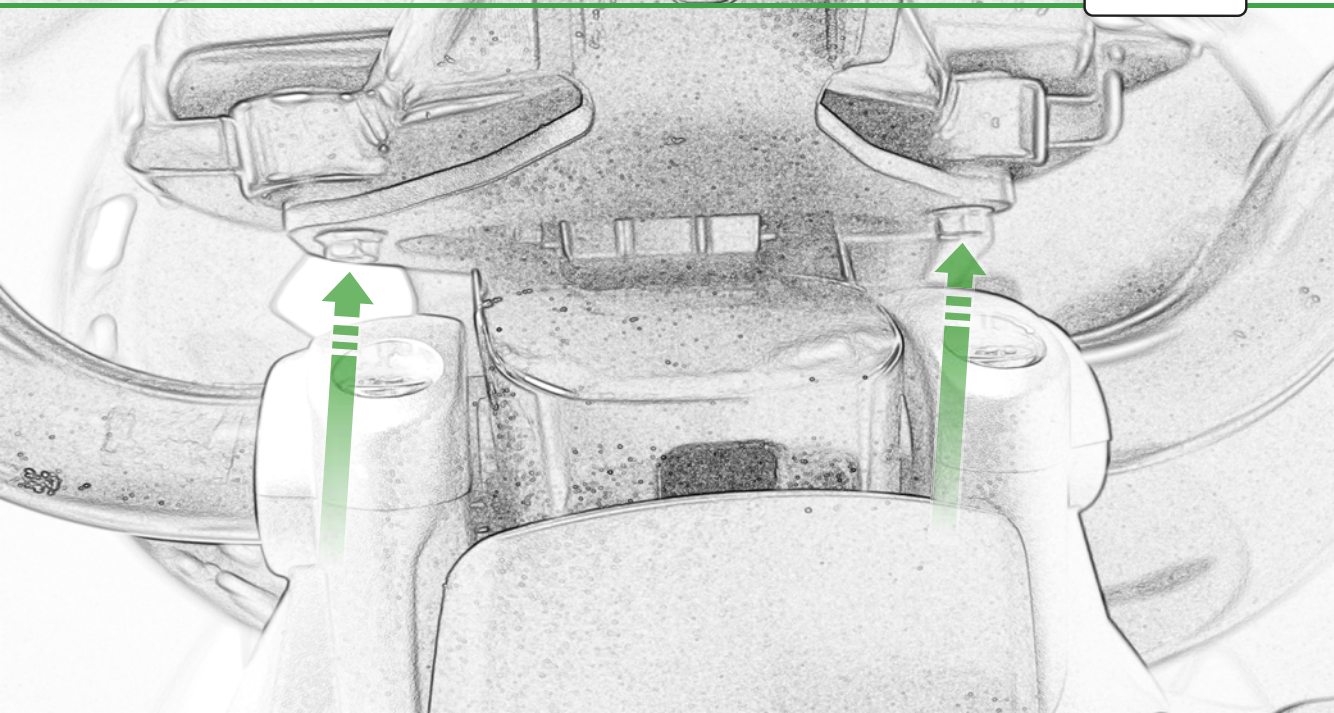

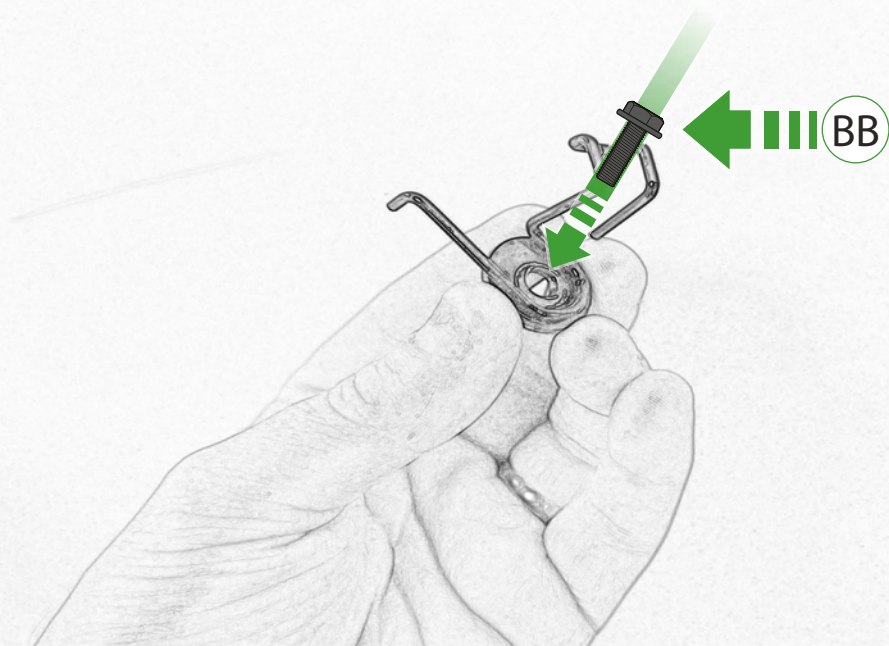

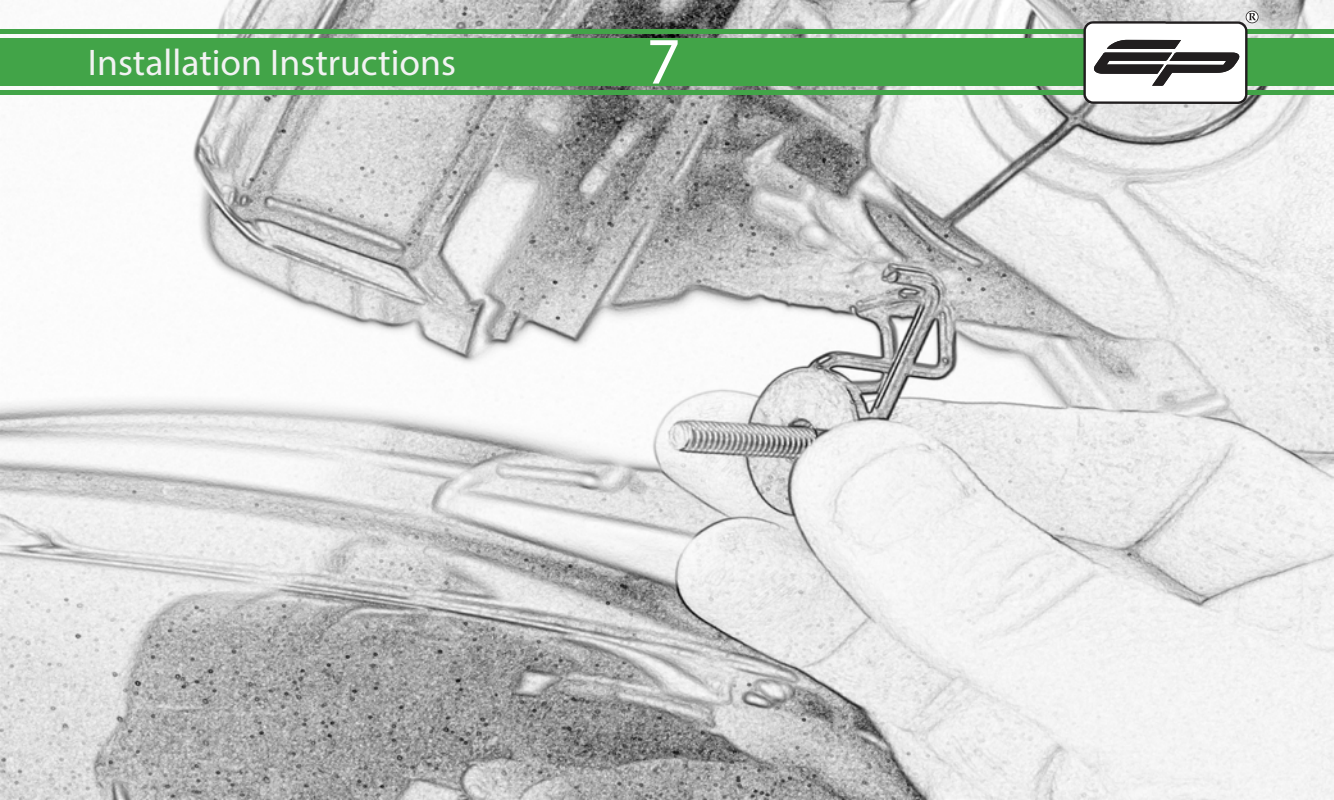

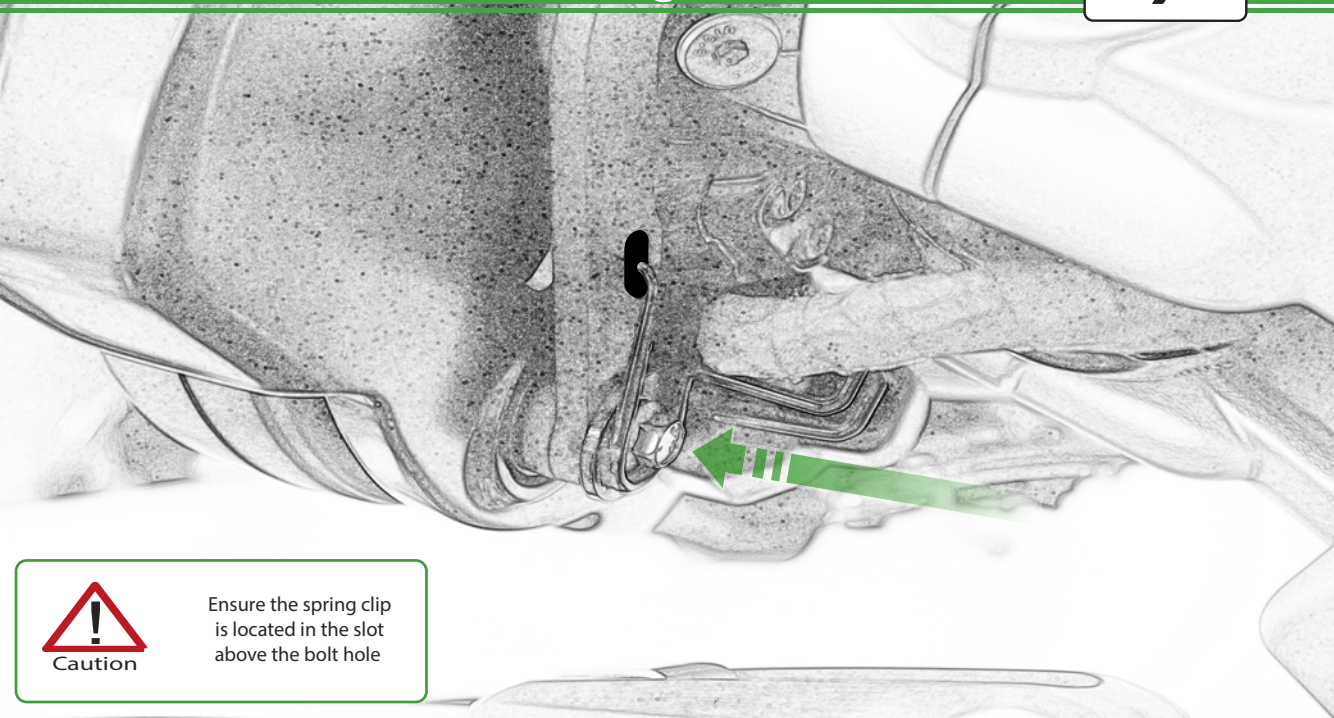

Caution

Ensure the spring clip
is located in the slot
above the bolt hole






SP Connect
Standard Mount





SP Connect
Anti Vibration Mount






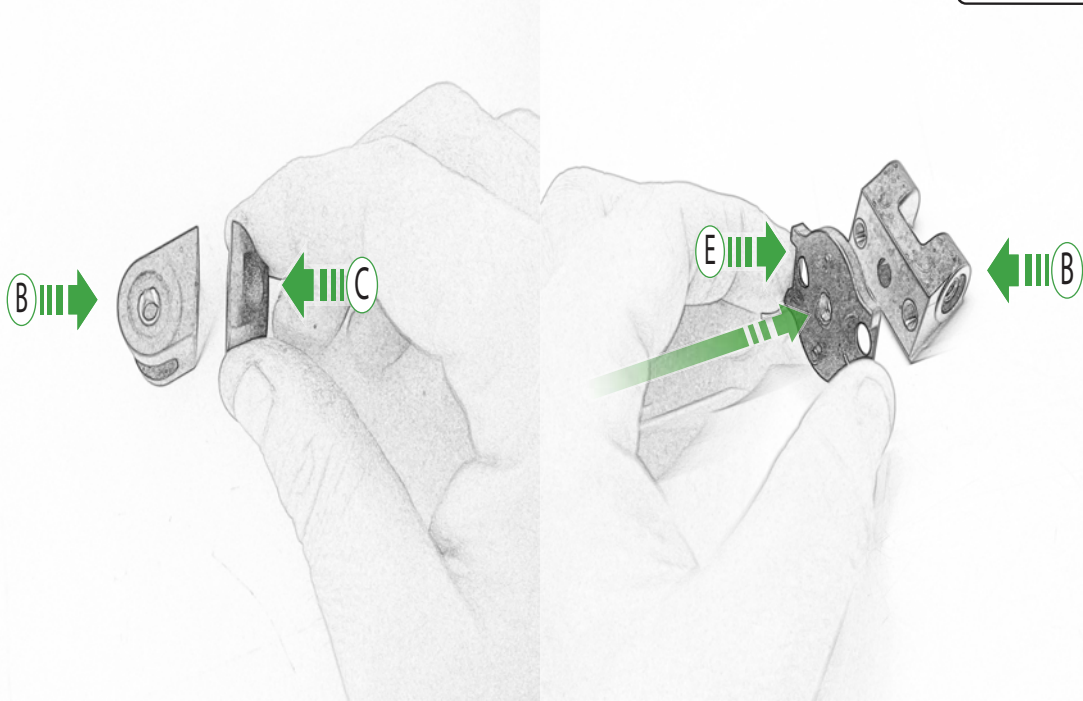


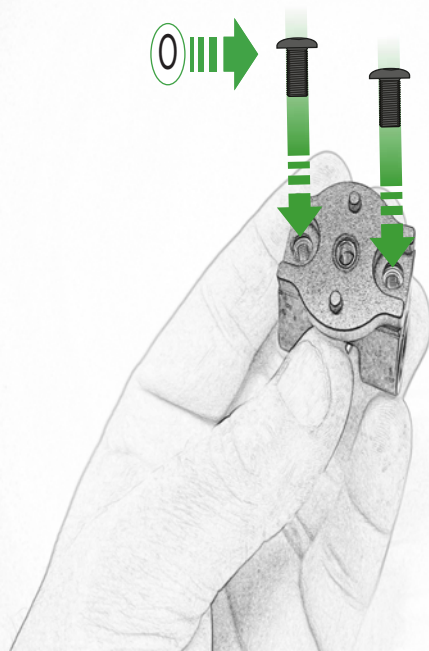
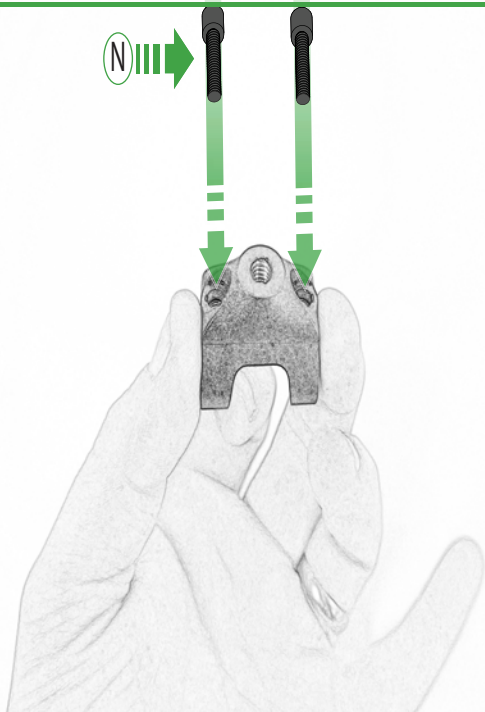


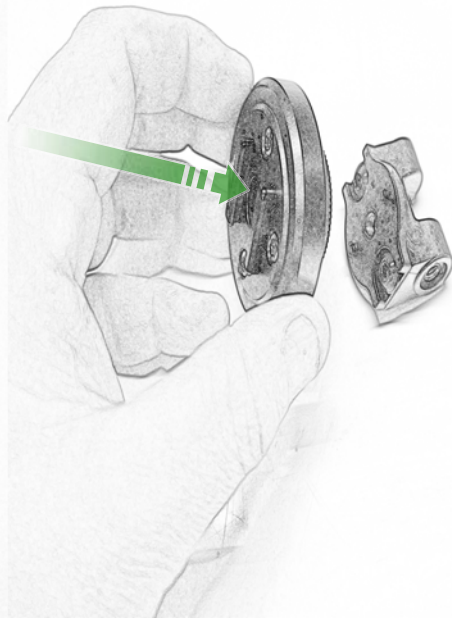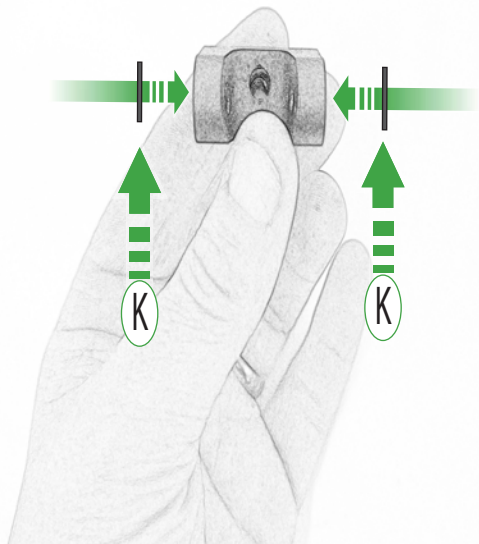



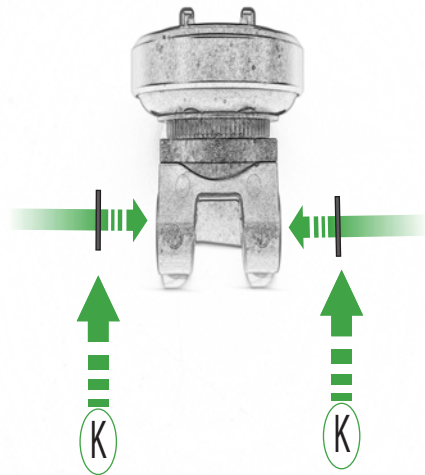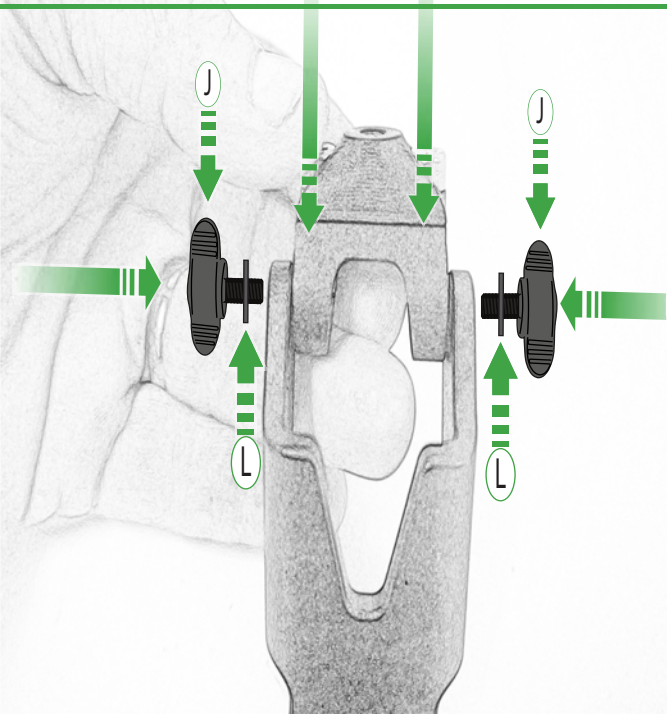

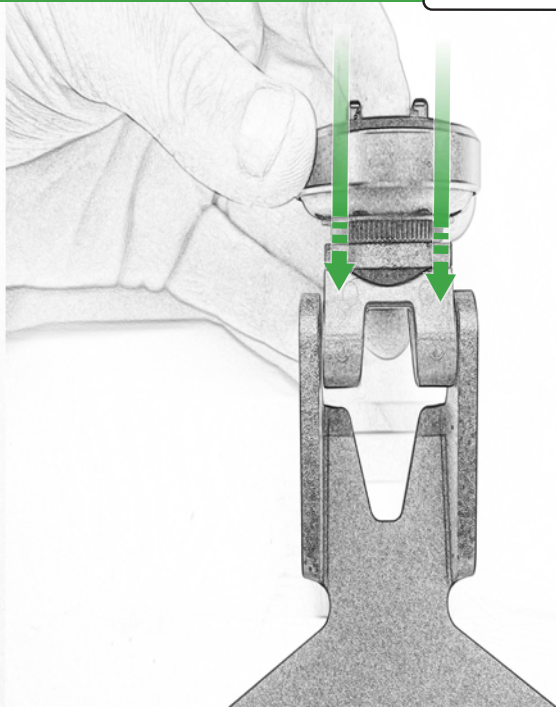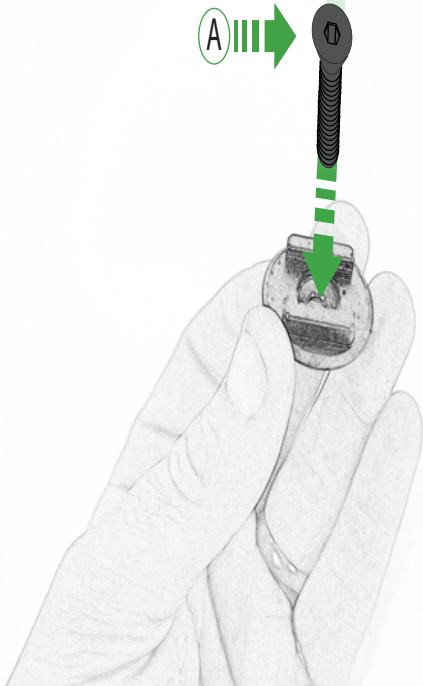

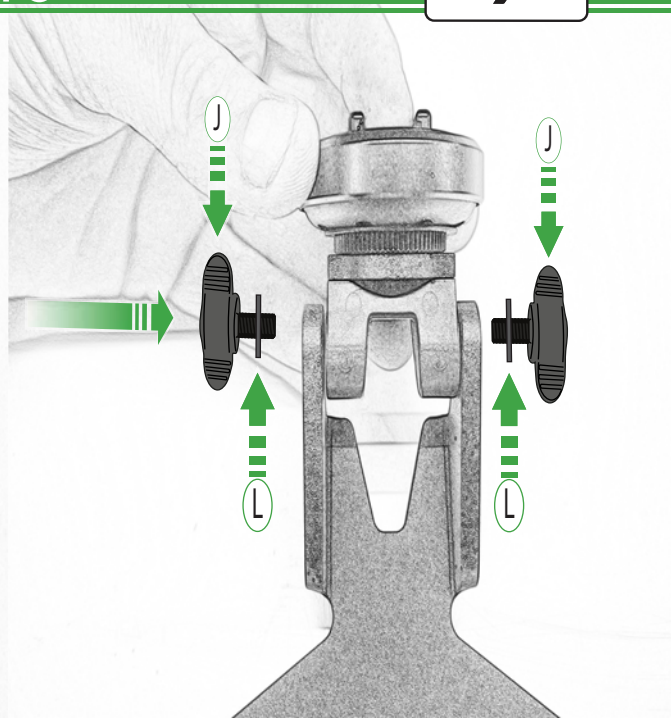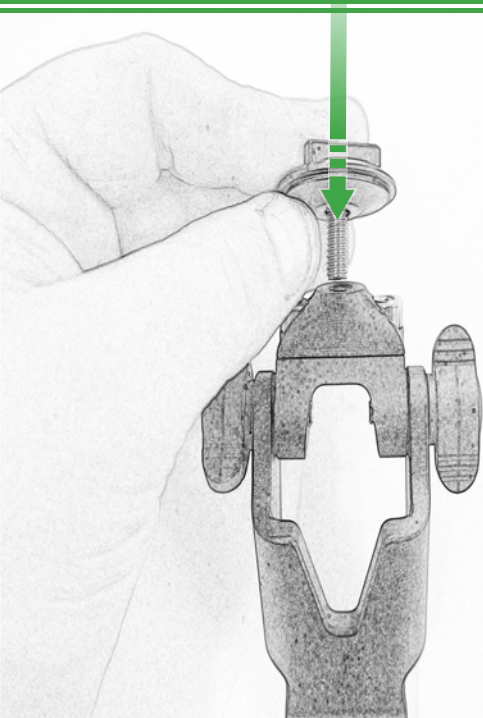



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Some smartphone models may also require an anti-vibration mount or dampener to further reduce vibration and help with image stabilisation.

It is the rider's responsibility to ensure that this is fitted correctly before use.

P E R F O R M A N C E



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com