

24430 BMW R1300GS Front Infill Panels Fitting Instructions

Kit Includes:

1.	X2	C24430	Panels (pair)
2.	X4	C09000	3M Dual Lock (X4 Squares)

OEM Parts:

3.	X4		OEM Bolts
----	----	--	-----------


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by removing the OEM infill panels (keep OEM bolts for later).
- Attach the 3M Dual Lock squares as shown in **Fig 1 + 2**. **Fig 2** illustrates how the 3M Dual Lock should be fitted.
- Once the 3M Dual Lock is in place with the backing removed, fit the Pyramid infill panels using the OEM bolts and press down on the area around the 3M Dual Lock to ensure good adhesion.
- Check fixings periodically.

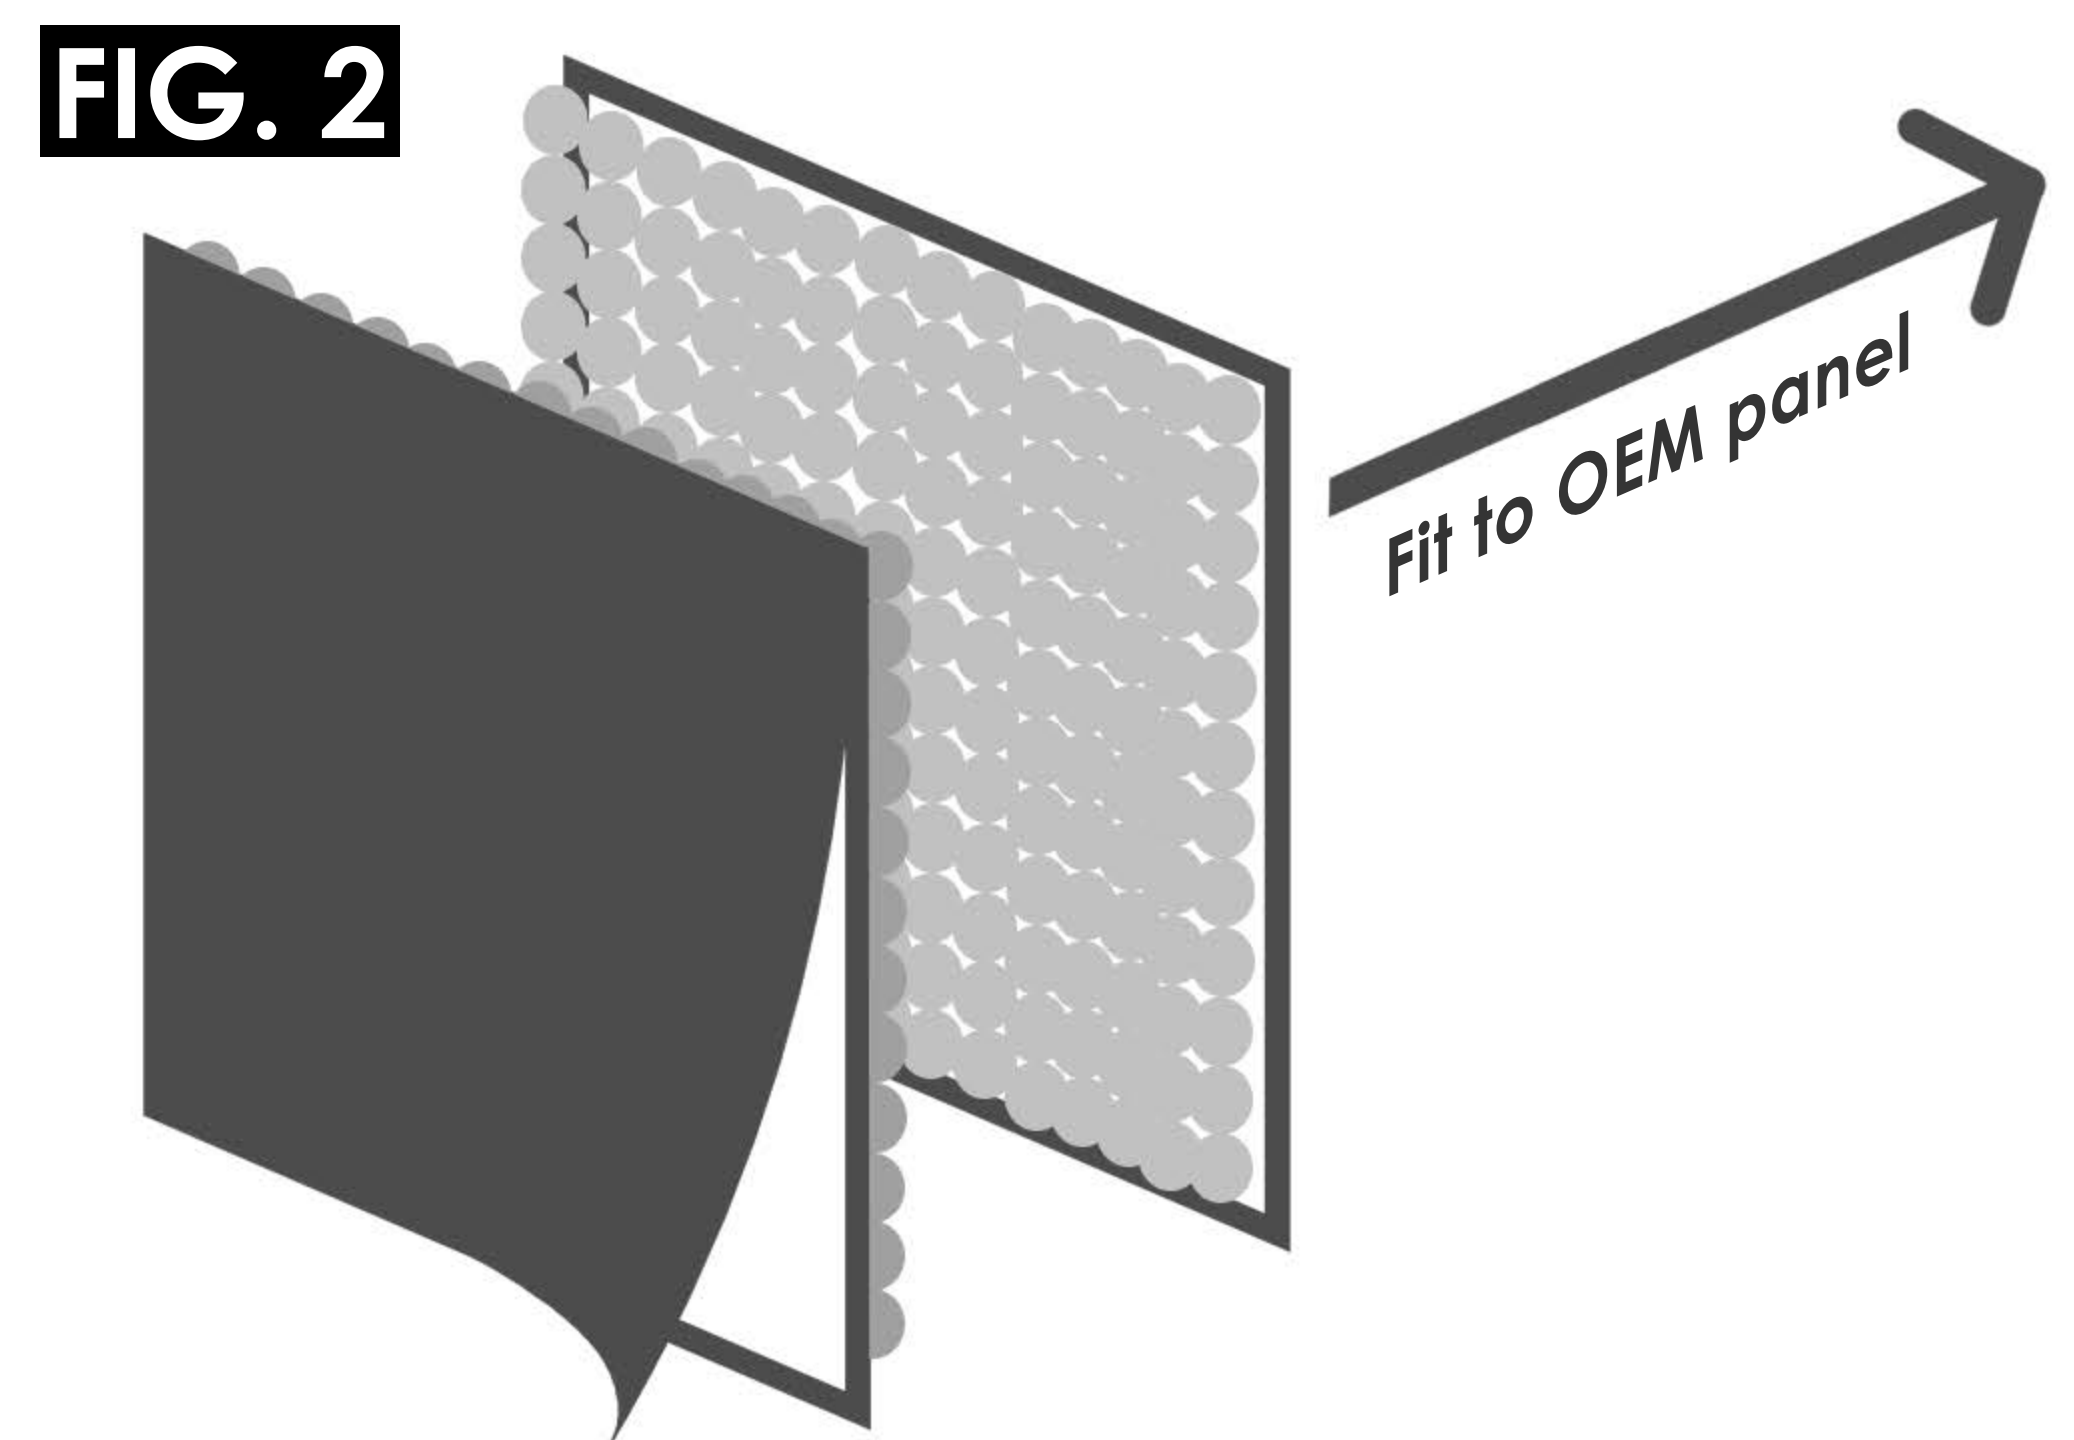

Remove backing and attach one square to the motorcycle.
Attach another square using the interlocking surfaces and remove the
backing ready for fitment with the new Pyramid infill panel.

FIG. 3

