

11580 Honda Hornet 1000 Seat Cowl Fitting Instructions

Kit Includes:

1.	X1	C11580	Seat Cowl	
2.	X2	CTAB0001	Mounting Tabs	Pre-fitted by Pyramid
3.	X2	C090001	3M Dual Lock (2x 25mm Squares)	
4.	X1	CPAD0400	Foam Seat Pad	

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Remove the pillion seat and place it inside the seat cowl as shown in **Fig 1**. It may be necessary to push the pillion seat past the mounting tabs using some pressure - do not hesitate as the tabs are flexible and will not break.
- Reattach the pillion seat to the motorcycle with the seat cowl incorporated. With the seat cowl secured, fit the Foam Seat Pad by peeling off the adhesive back and sticking it to the cowl. See '**FIG. 3**' for reference.
- Fit both 3M Dual Lock squares together using the dual lock mechanism. Remove the backing from both sides and lift the cowl slightly at the rear to position the dual lock as shown in **Fig 2**. Once the 3M Dual Lock is between the cowl and the tail of the motorcycle, press down firmly at the rear of the cowl for a few seconds to ensure proper adhesion.
- Once the 3M Dual Lock has had a few minutes to fully adhere, it is possible to remove the pillion seat when necessary. Simply pull upwards at the rear of the cowl to release the dual lock mechanism.

Fig 1

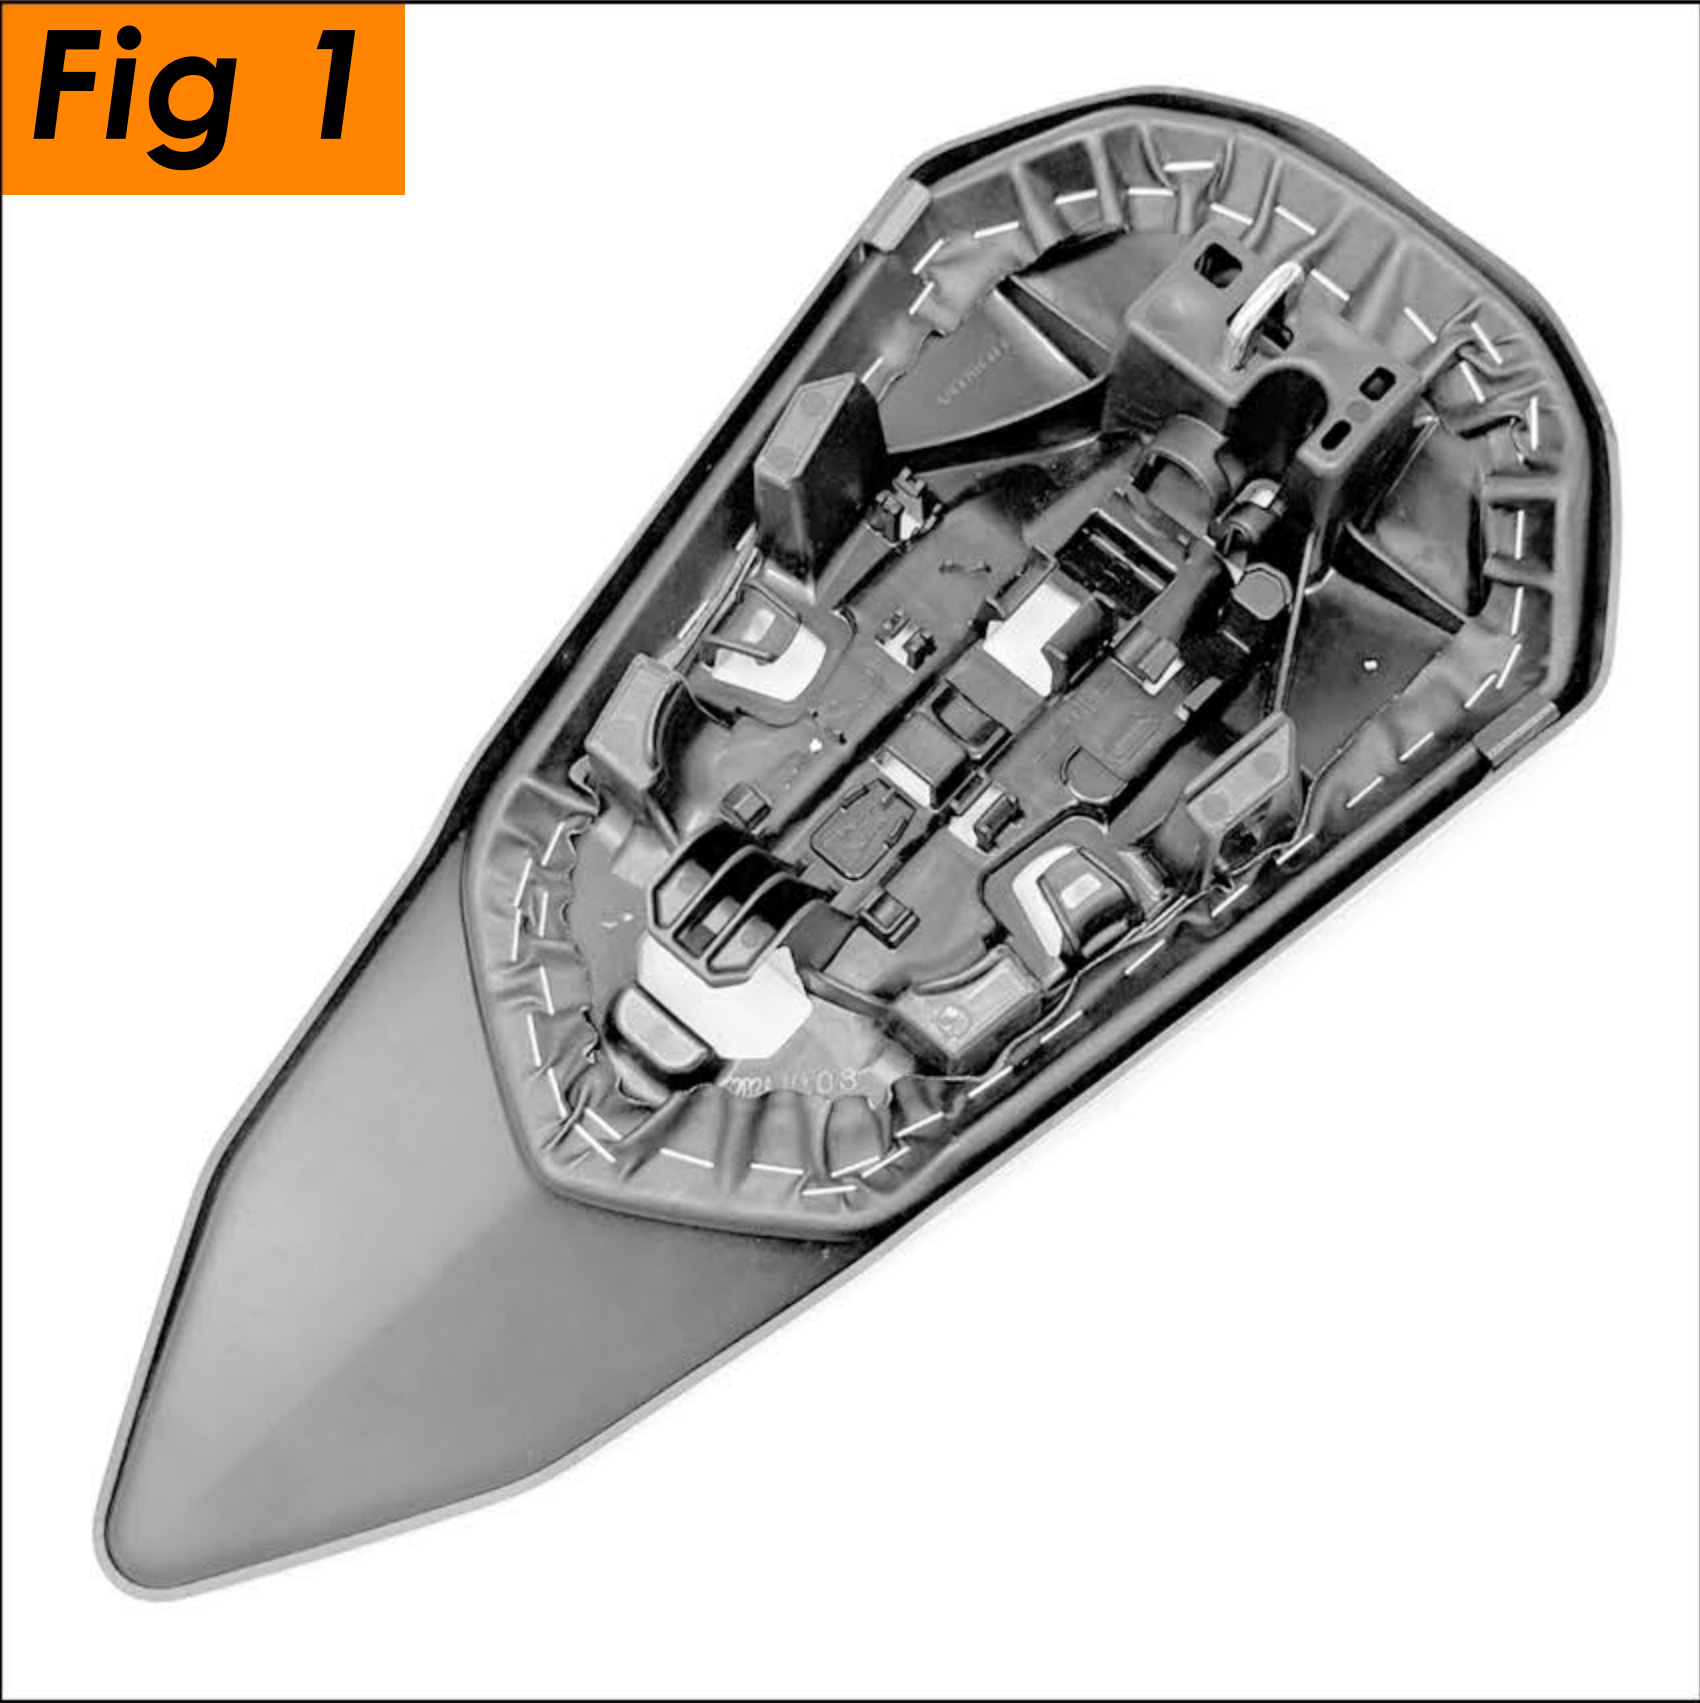


Fig 2

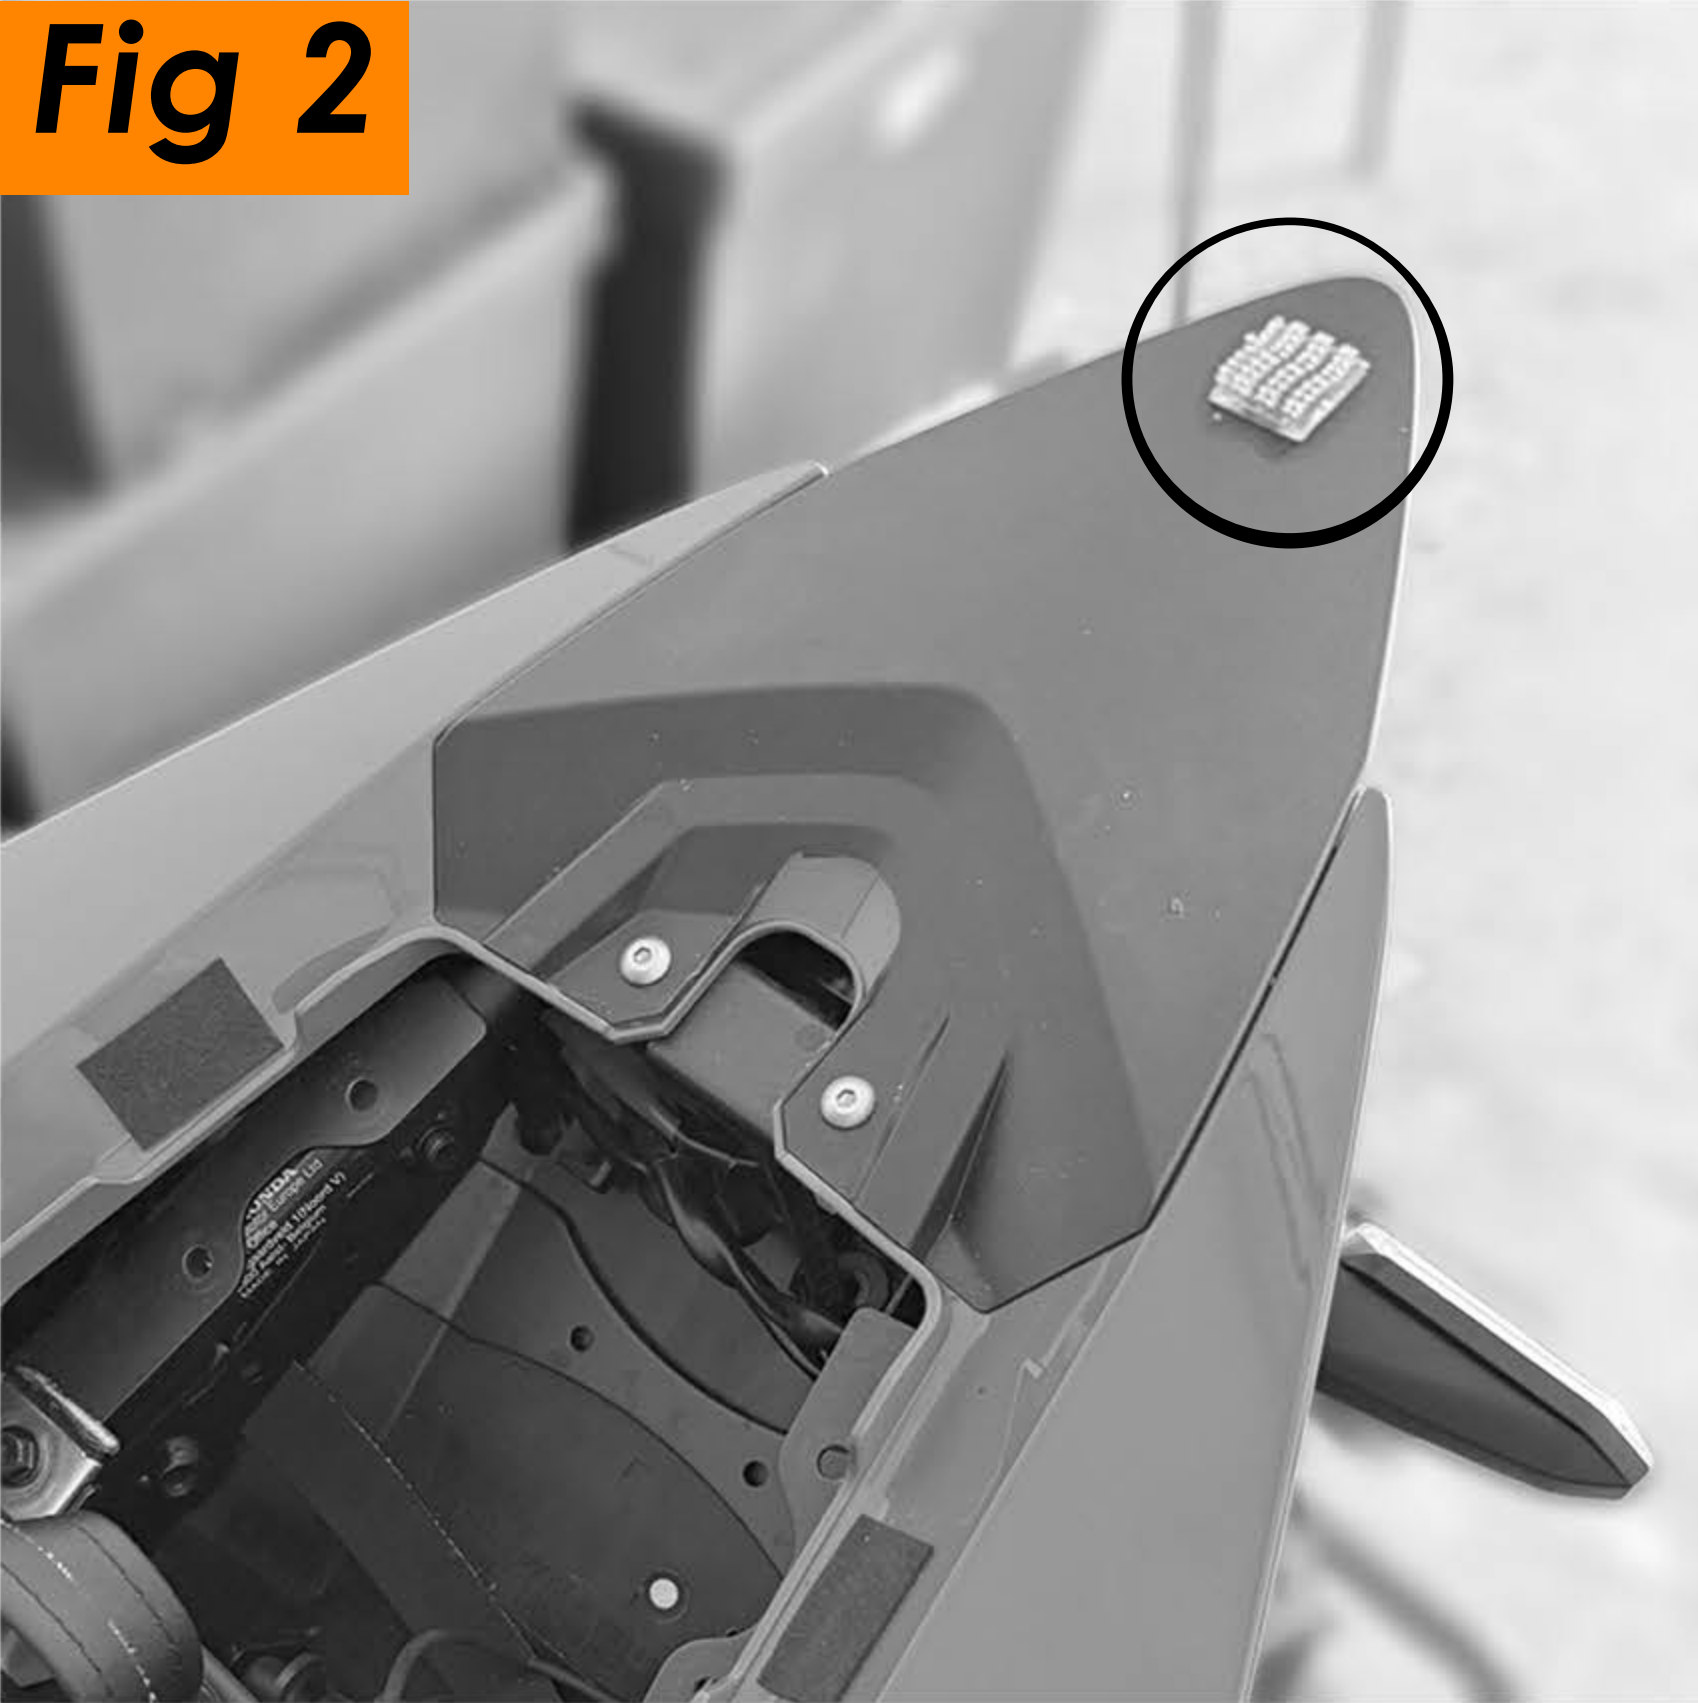


Fig 3



11580 Honda Hornet 1000 Seat Cowl Fitting Instructions

Kit Includes:

1.	X1	C11580	Seat Cowl	
2.	X2	CTAB0001	Mounting Tabs	Pre-fitted by Pyramid
3.	X2	C090001	3M Dual Lock (2x 25mm Squares)	
4.	X1	CPAD0400	Foam Seat Pad	

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Remove the pillion seat and place it inside the seat cowl as shown in **Fig 1**. It may be necessary to push the pillion seat past the mounting tabs using some pressure - do not hesitate as the tabs are flexible and will not break.
- Reattach the pillion seat to the motorcycle with the seat cowl incorporated. With the seat cowl secured, fit the Foam Seat Pad by peeling off the adhesive back and sticking it to the cowl. See '**FIG. 3**' for reference.
- Fit both 3M Dual Lock squares together using the dual lock mechanism. Remove the backing from both sides and lift the cowl slightly at the rear to position the dual lock as shown in **Fig 2**. Once the 3M Dual Lock is between the cowl and the tail of the motorcycle, press down firmly at the rear of the cowl for a few seconds to ensure proper adhesion.
- Once the 3M Dual Lock has had a few minutes to fully adhere, it is possible to remove the pillion seat when necessary. Simply pull upwards at the rear of the cowl to release the dual lock mechanism.

Fig 1



Fig 2

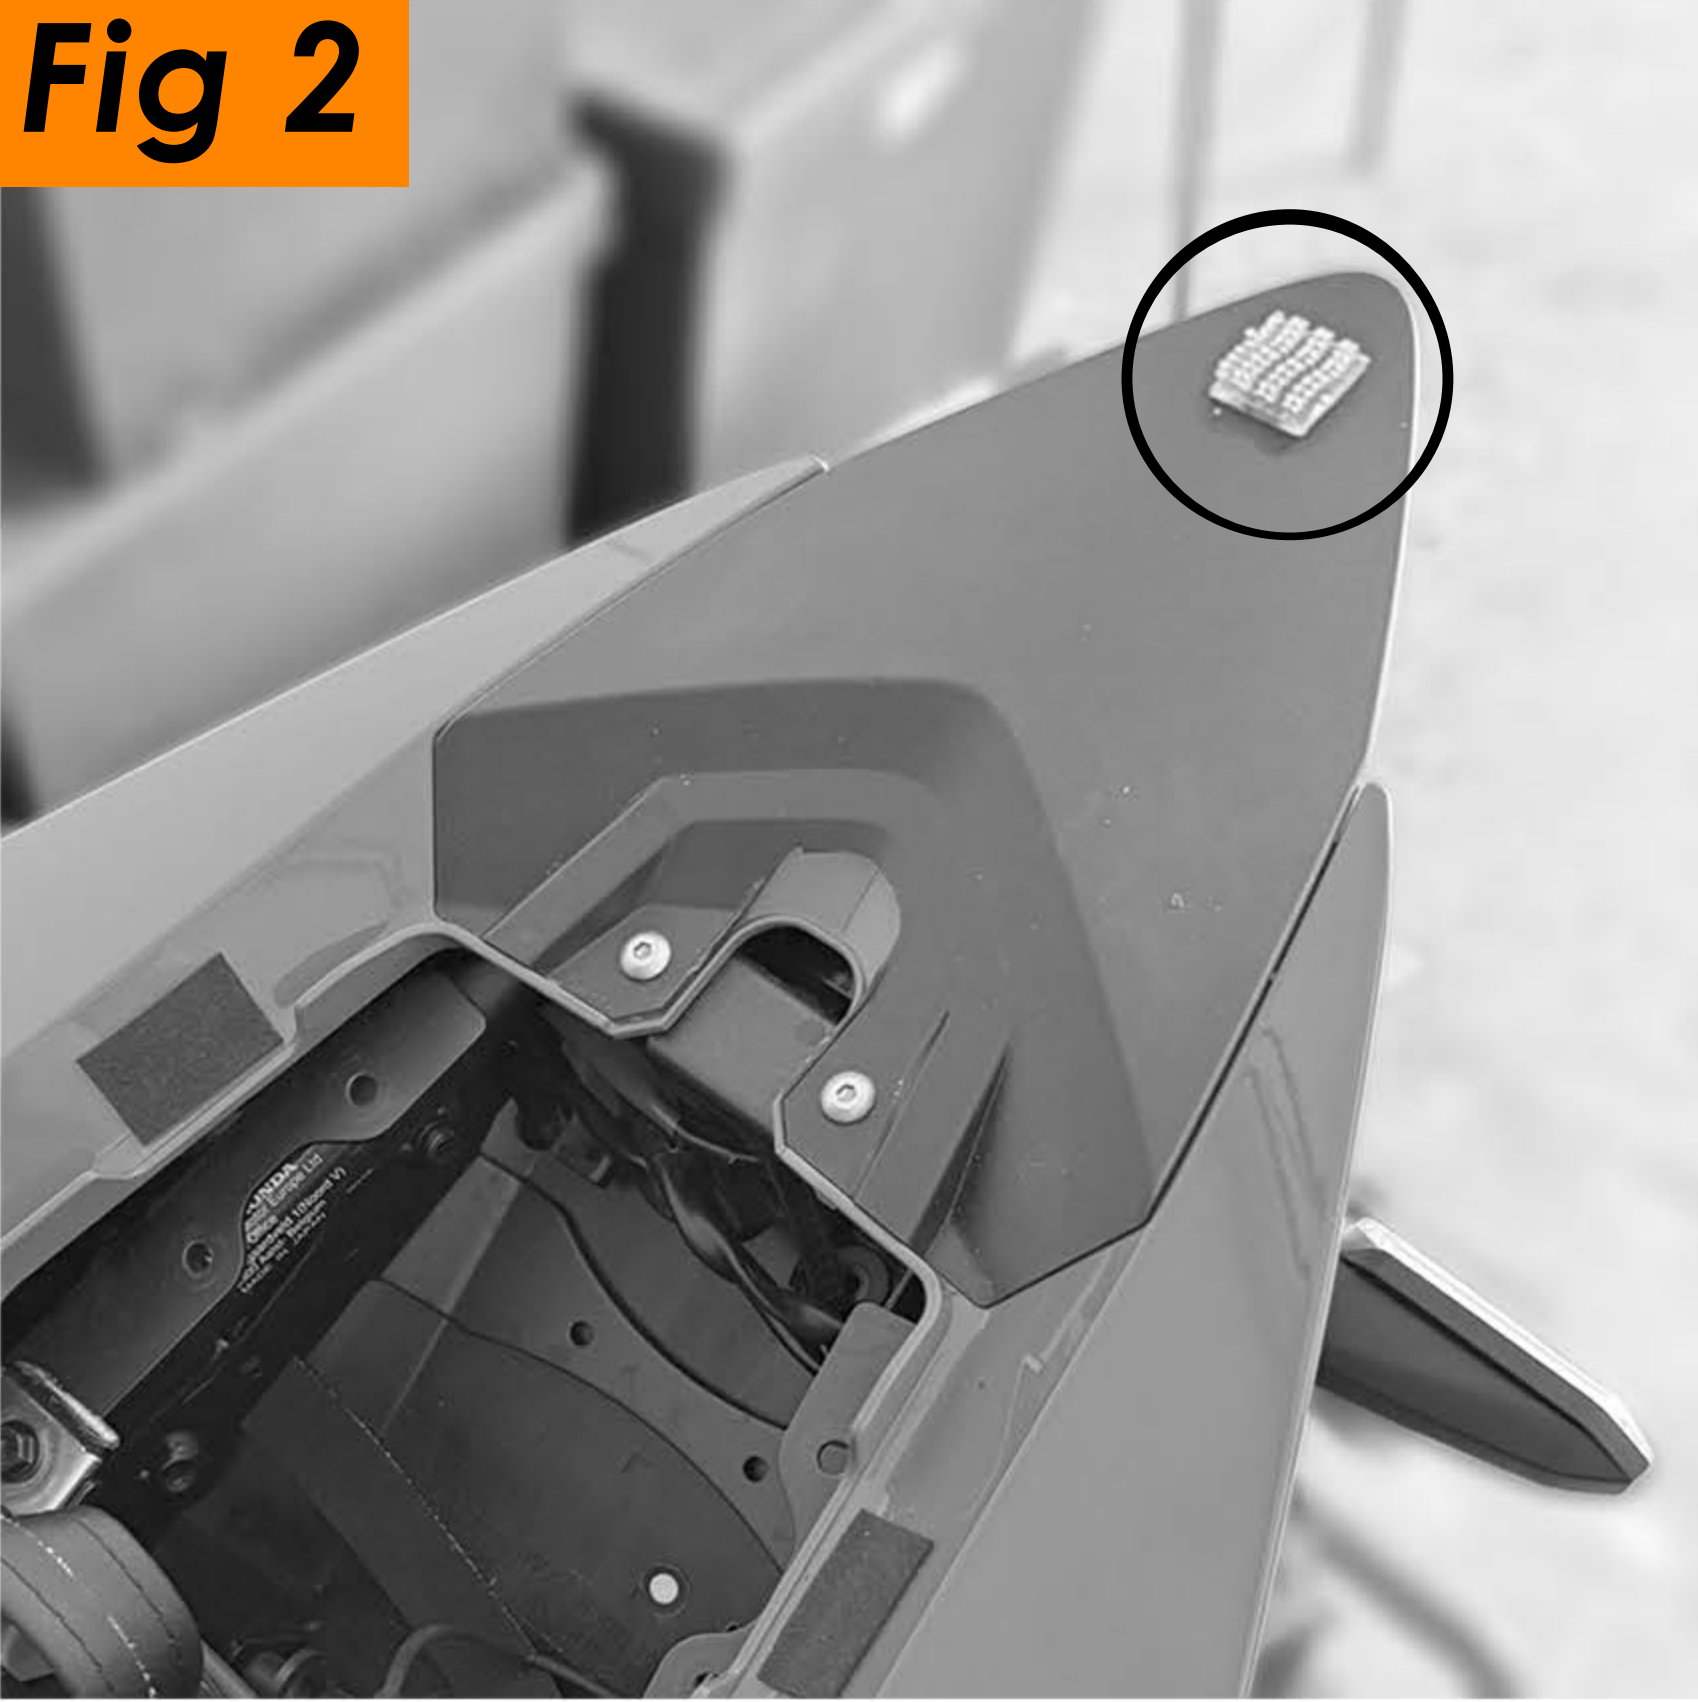


Fig 3

