


29450 BMW F900R & F900XR Engine Guard Fitting Instructions

Kit Includes:


1X	C24950	Engine Guard
1X	CFK24950A	Front Bracket
1X	CFK24950B	Rear Bracket
4X	CBOLM60001	M6 X 16mm Black Bolt
1X	CBOL0299	M8 X 20mm Bolt
2X	CBOL0123	M6 X 12mm Bolt
4X	CNUT0304	M6 Black Nut
4X	CWAS0221	M6 Washer
4X	CWAS0202	M6 Shakeproof Washer

- Note that both brackets need to be fitted to the previously unused threaded holes. We advise the use of a thread-locking fluid on the bolts prior to insertion in these mounting points.
- Attach the **front bracket** using the **M6 X 12mm bolts**. Attach the **rear bracket** using the **M8 X 20mm bolt**. Fit the brackets loosely initially, as this makes it easier to fit the engine guard to the brackets.
- Once the brackets are loosely in place, attach the engine guard to the brackets using the **M6 X 16mm black bolts**, **M6 black nuts**, **M6 shakeproof washers** and the **M6 washers**. Please see the diagram below for the fitting sequence for these components. Thread-locking fluid is advised here.
- Now fully tighten all the mounting points. Check your fixings periodically.

Underside of the bike shown from the left-hand side

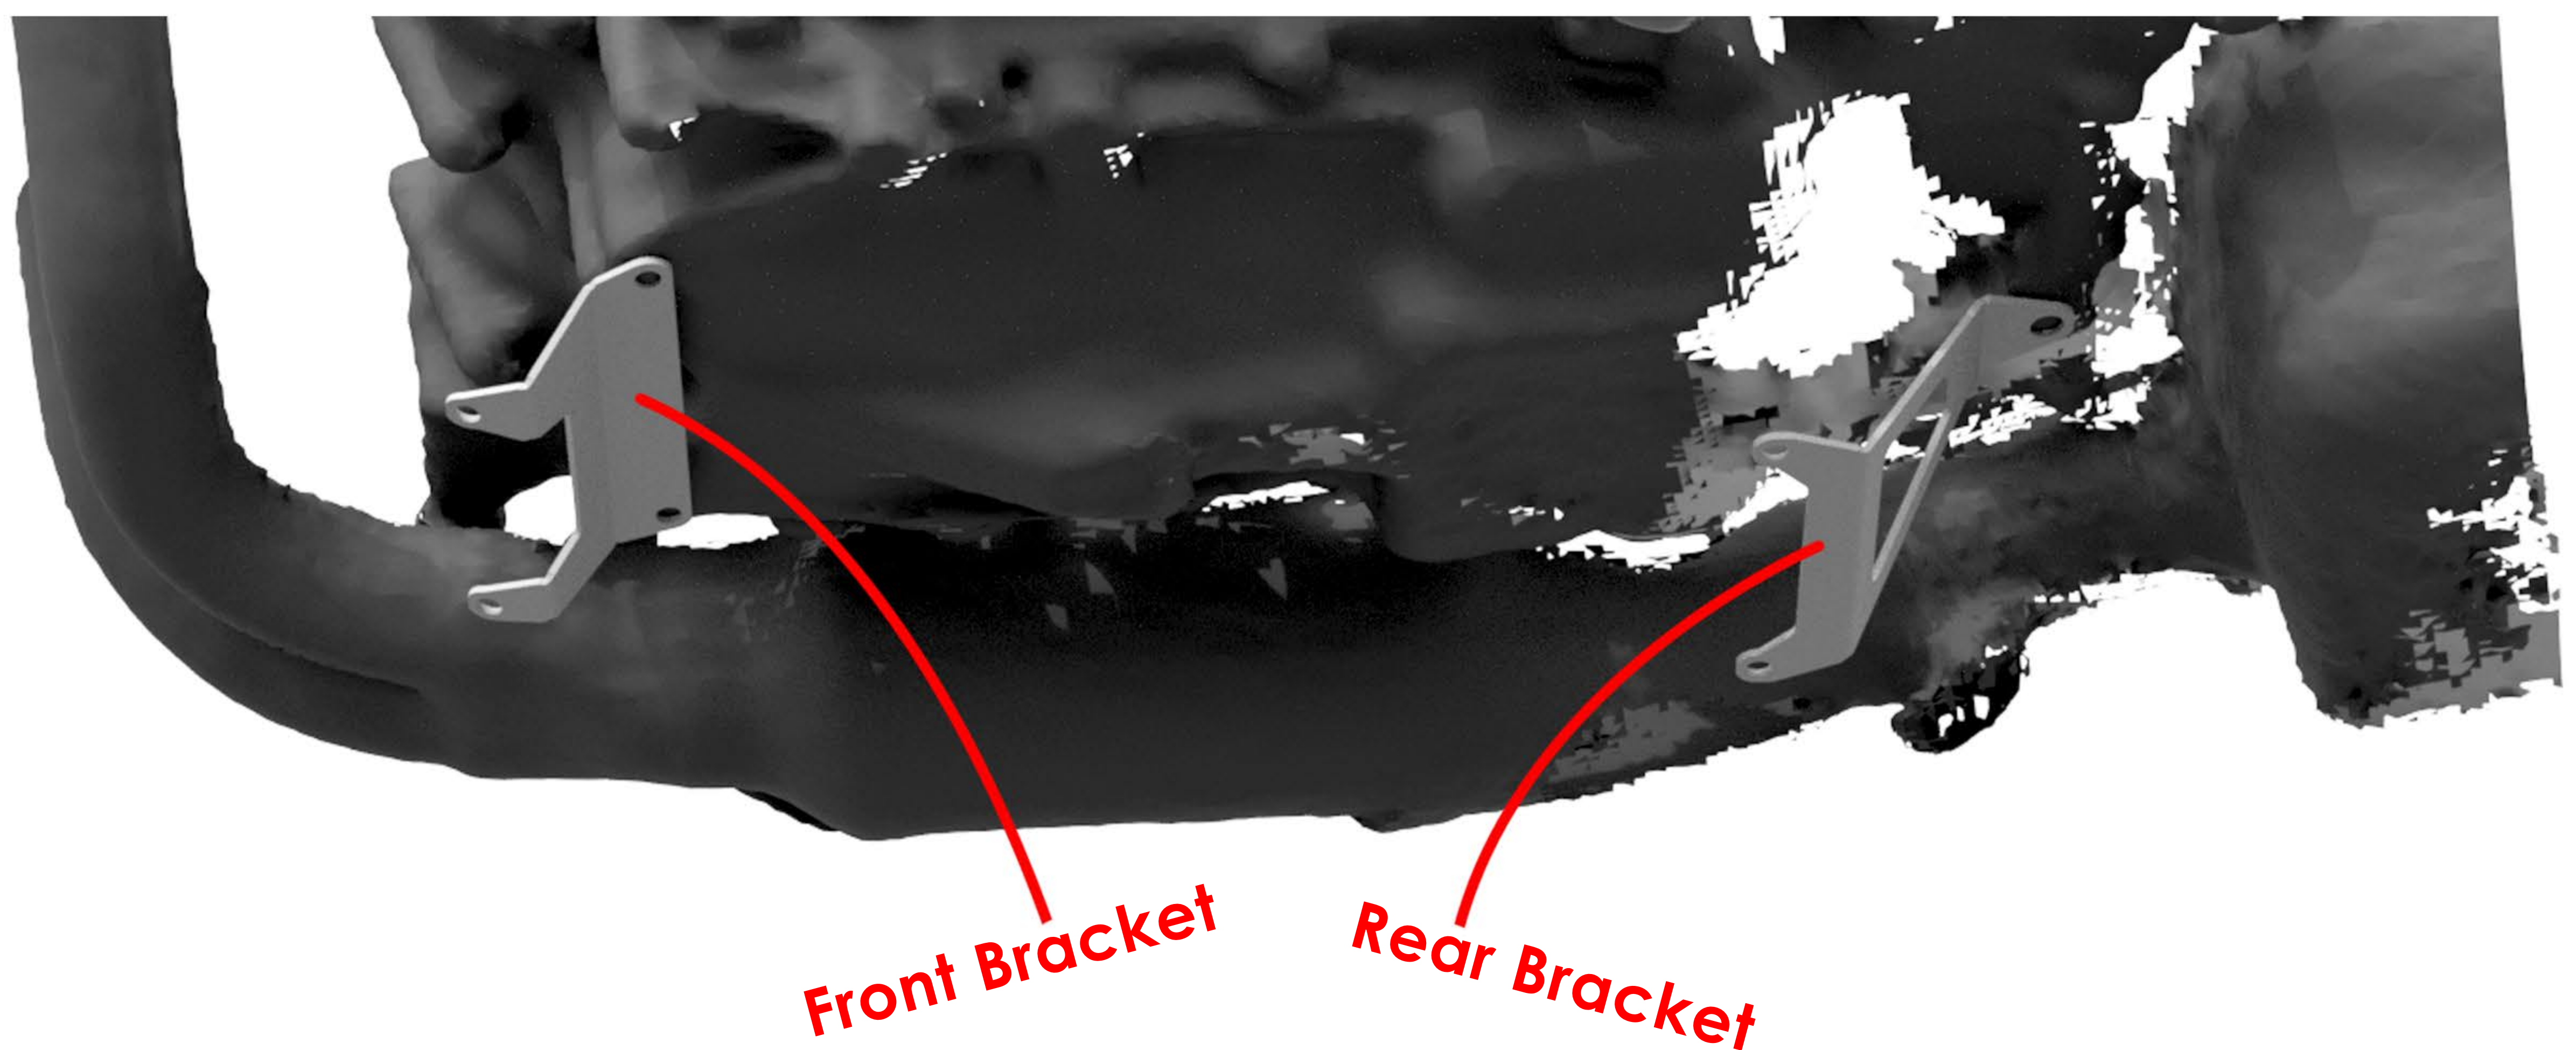

Sequence for components (bullet point 3)

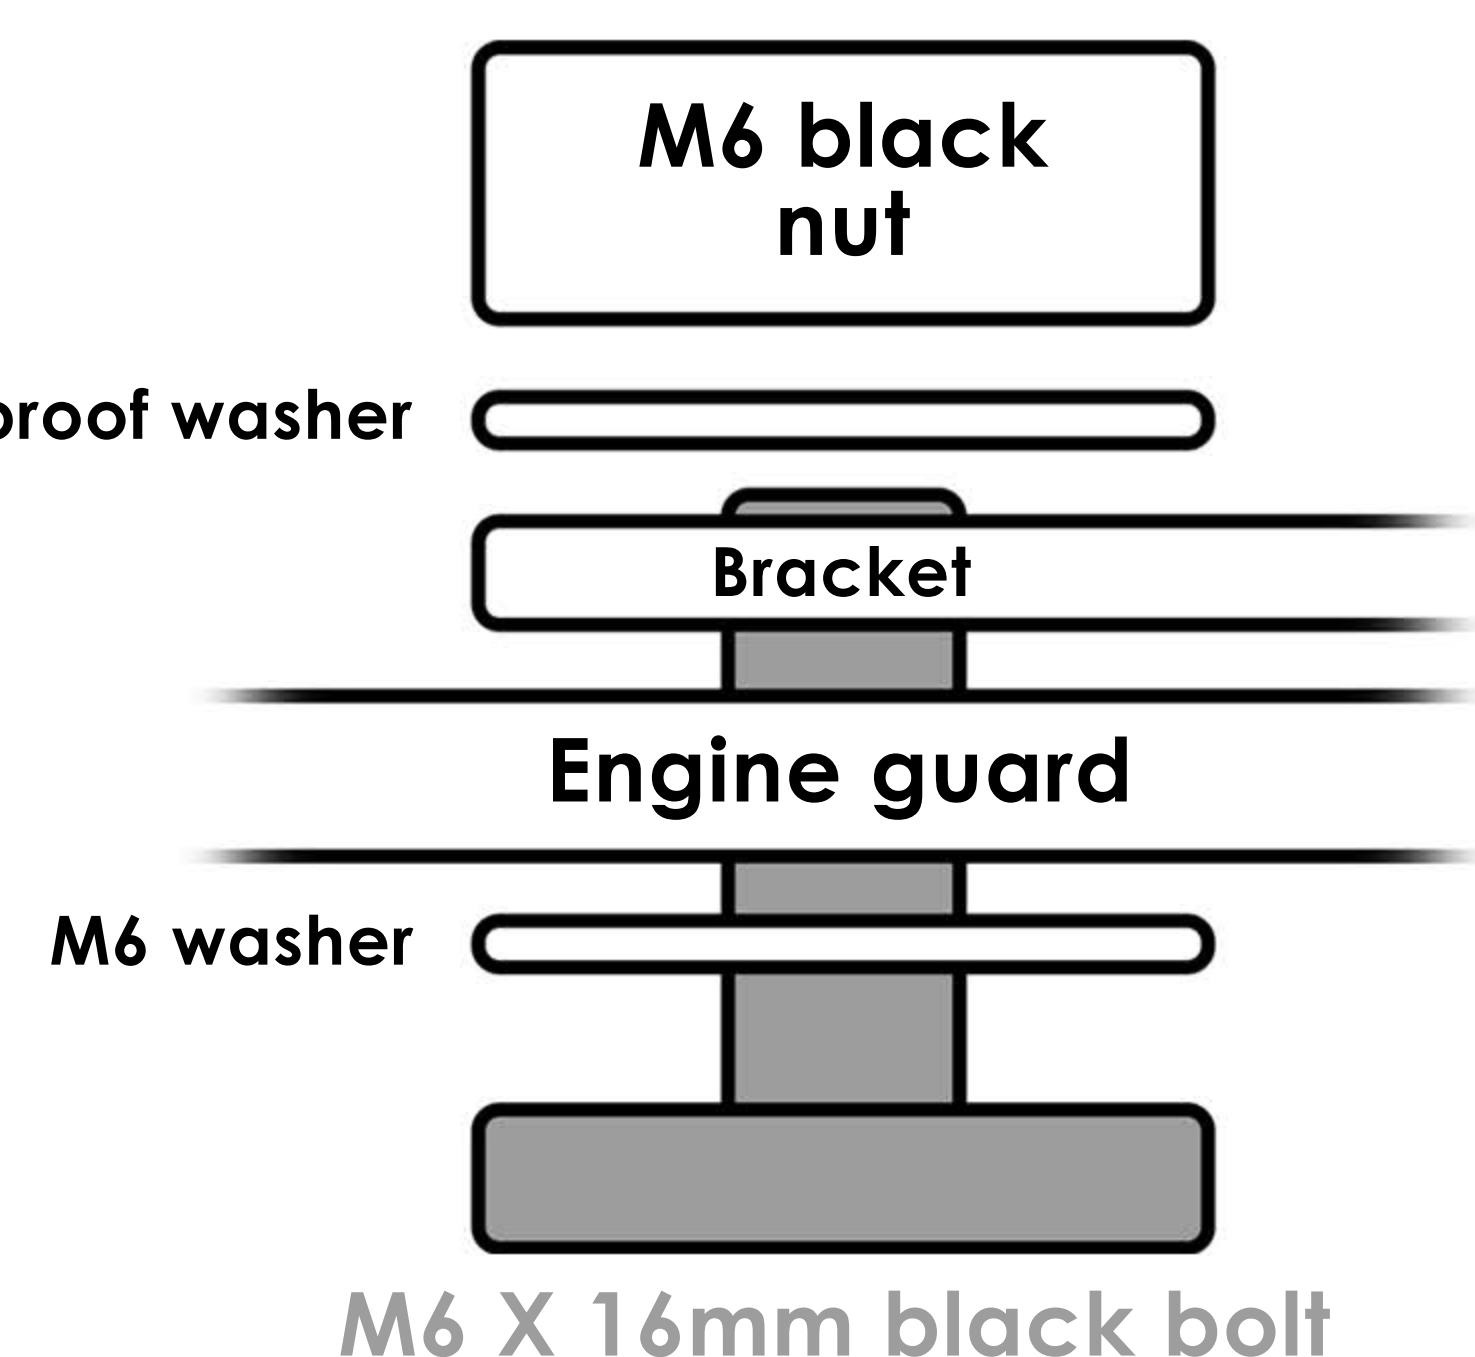

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!