


PYRAMID

26000 Triumph Speed Twin Fly Screen Fitting Instructions

Items highlighted in GREY are **not needed** for fitting.

ID.	DESCRIPTION	QTY.
1	Fairing	1
2	Screen	1
3	M6 X 20mm Bolt	2
4	Screen Kit (3X Well Nuts, M5 X 16mm Bolts, Washers & Bolt Caps)	3
5	Metal Brackets (pair)	2
6	M6 X 8mm Bolts	4
7	M6 X 12mm Bolts & Nuts	2
8	M6 Plastic Washers	4
9	M8 Nuts	2
10	M8 X 35mm Bolts	2
11	M8 Steel Washers	2
12	M8 X 15mm X 9mm Spacers	2
13	M6 X 12mm X 8mm Spacers	2
14	Rubber Trim	1

Follow the diagrams below for assistance when fitting.

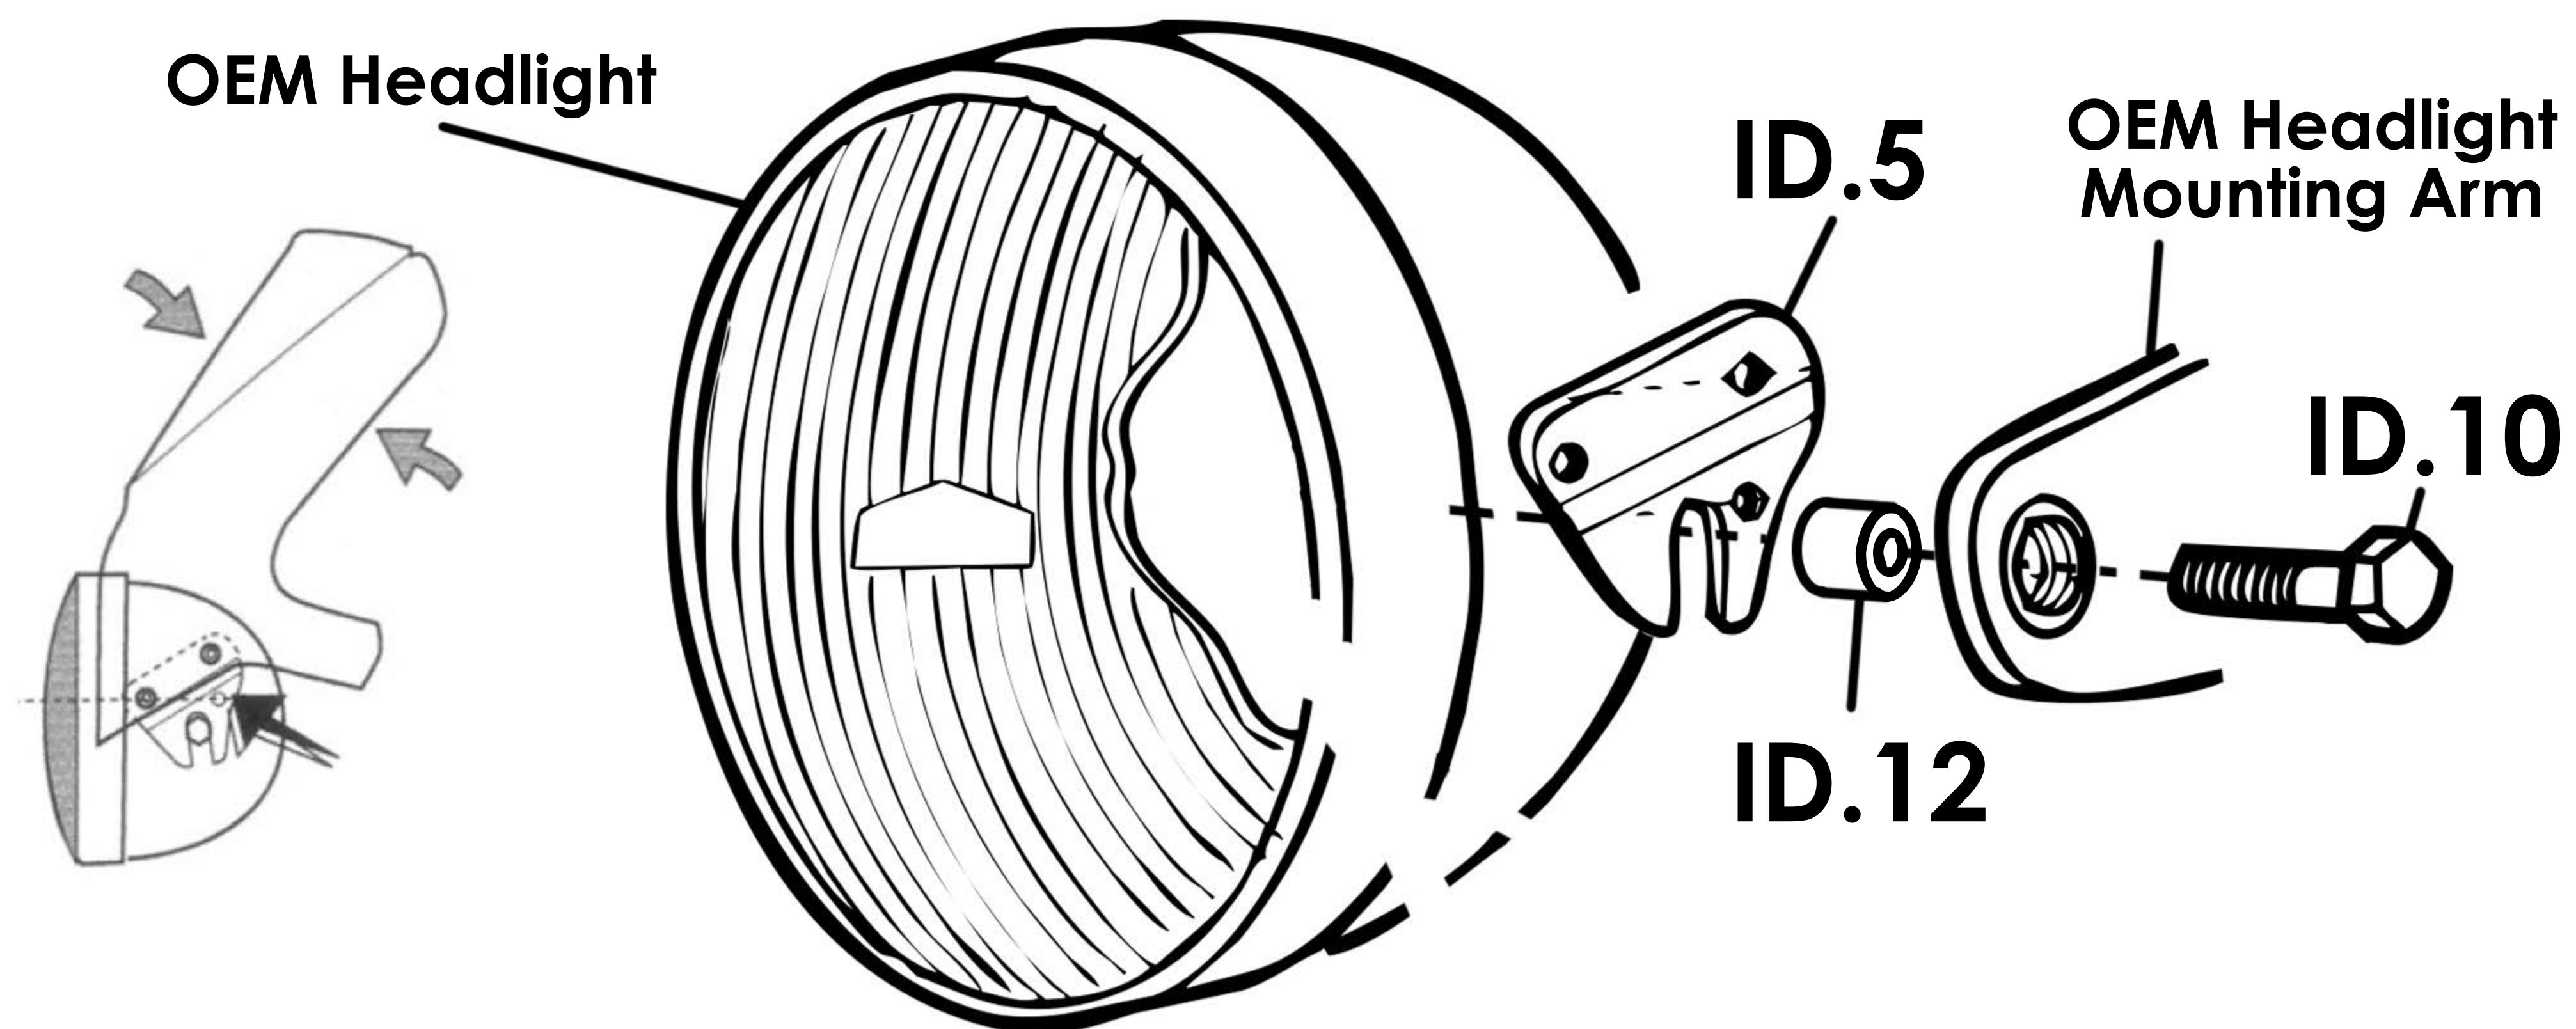

Fitting notes:

Remove the OEM side mounting bolts (left & right) on the headlight.

Fit the Fly Screen to the Metal Brackets (**ID.5**) using the M6 x 8mm Bolts (**ID.6**) & M6 Plastic Washers (**ID.8**).

The Fly Screen is then fitted as shown in the diagram above.

Check all fixings periodically.

SPEED TWIN

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!