


22286 Yamaha XSR900 Fly Screen Fitting Instructions

Kit Includes:

1X	C21250	Fairing and Fly Screen
1X	CFK22286	Brackets (pair)
3X	SMOT (puig)	M5 X 16mm Bolt
3X	SMOT (puig)	M5 Rubber Anchor Nut
3X	SMOT (puig)	M5 Washer
3X	SMOT (puig)	Bolt Cap
1X	SMOT (puig)	Rubber Trim
4X	CBOLM60002	M6 X 12mm Bolt
4X	CNUTM60003	M6 Nyloc Nut
8X	CWASM60003	M6 Washer

- Attach the brackets to the fairing as shown in **Fig 1**.
- Attach the fly screen to the fairing using the M5 fittings as shown in **Fig 2**. Tighten the bolts until the rubber anchor nuts expand, holding the fly screen in place.
- Fit the fairing and fly screen assembly to the bike using the OEM bolts as shown in the **Fig 3**. The brackets fit to the outside of the headlight brackets.
- The rubber trim provided can be fitted around the aperture of the fairing.
- Check fixings periodically.

Fig 1

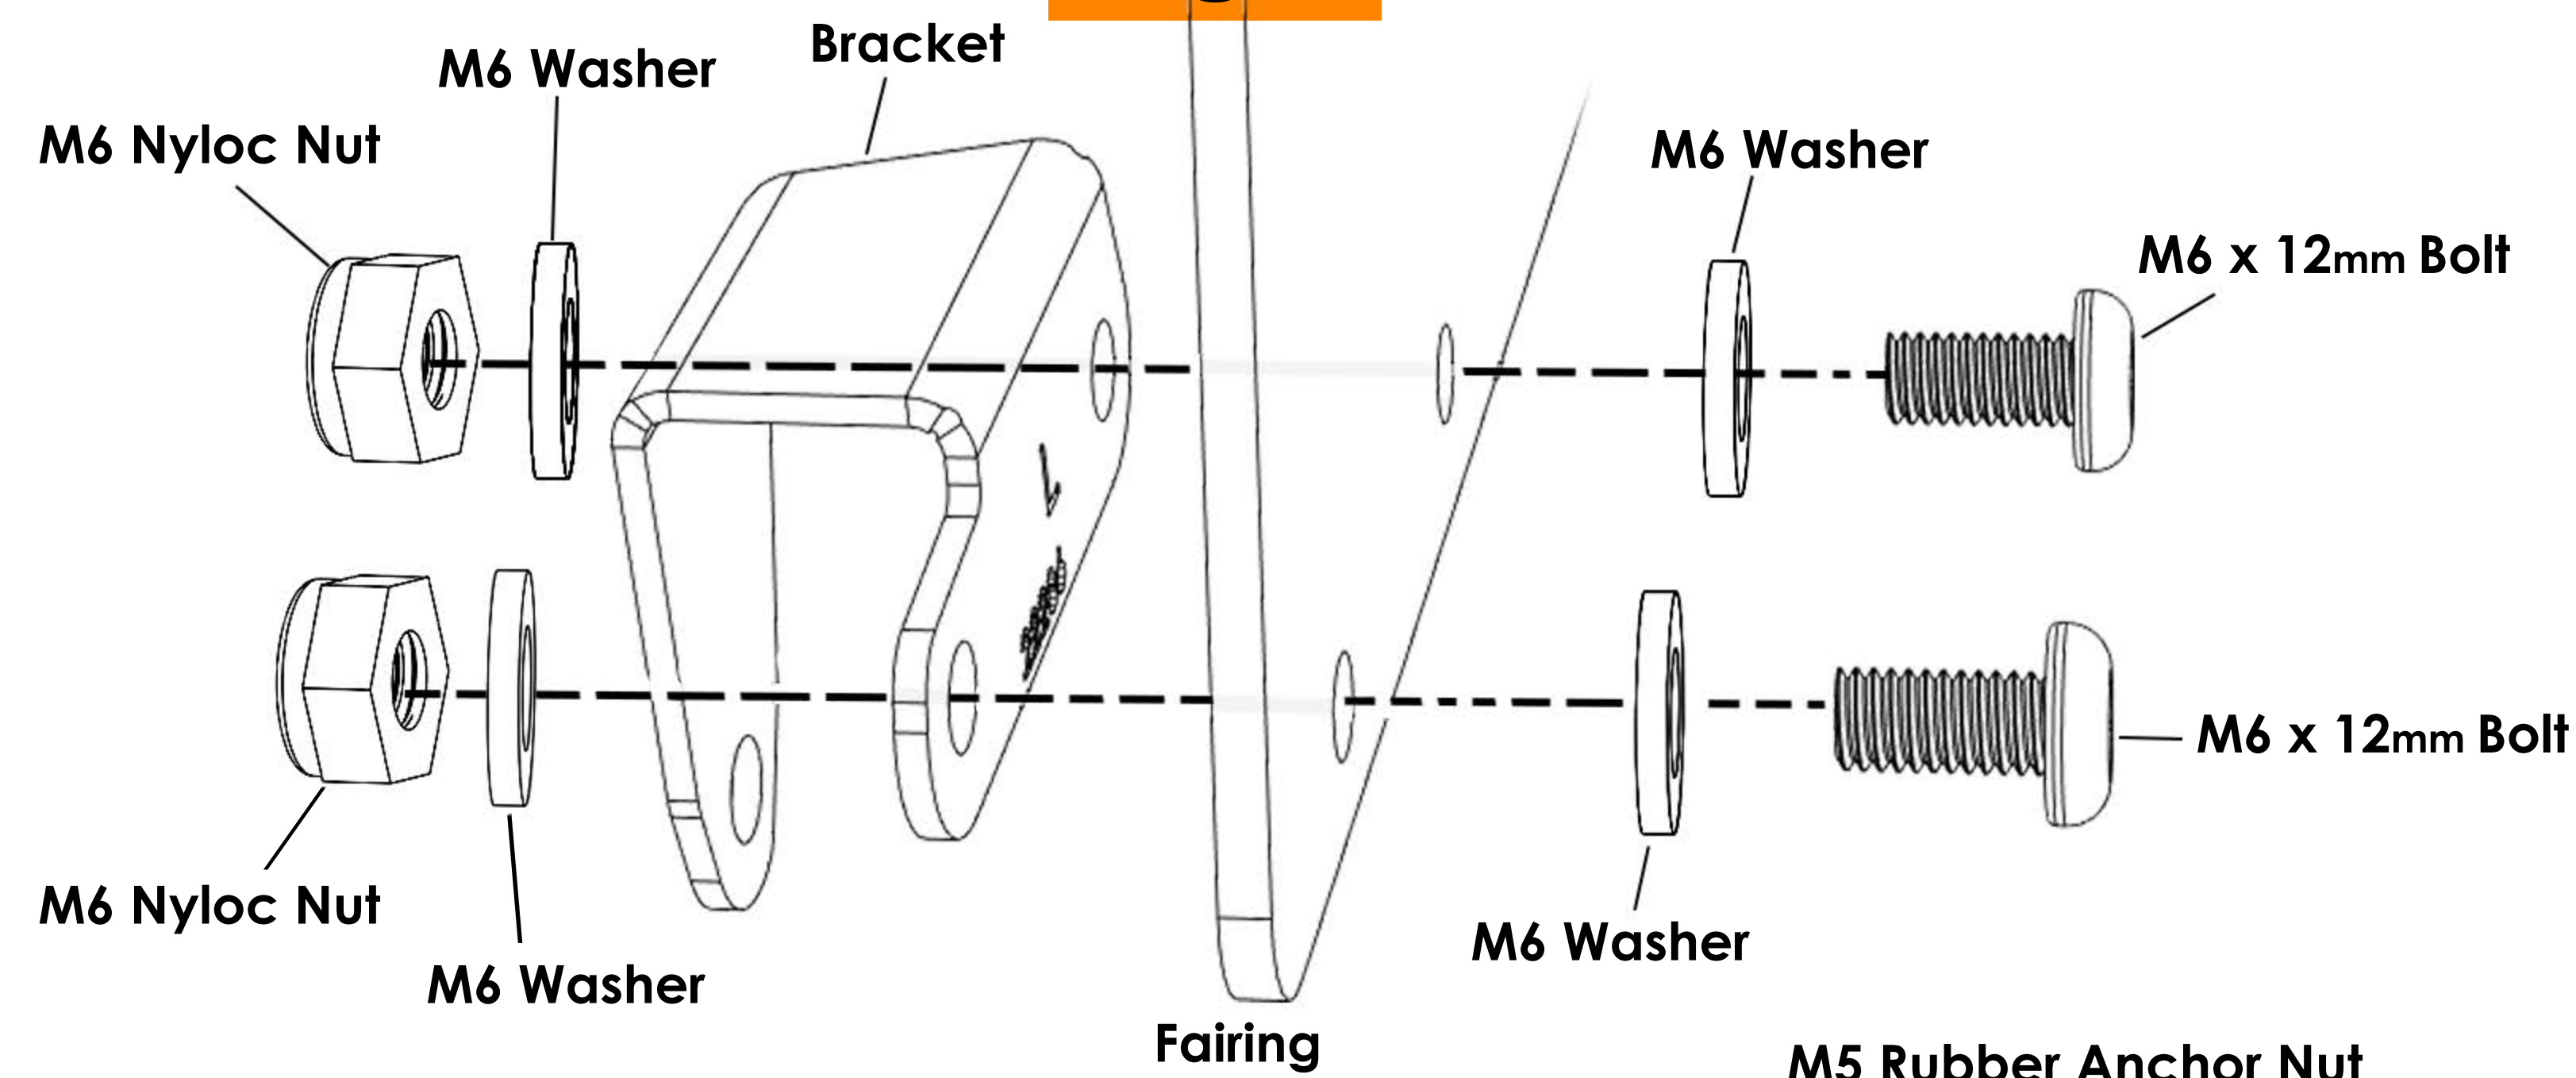

Rubber trim fitted around edge

Fig 2



Bolt caps provided
to be fitted here

Fig 3

