

39455M Royal Enfield Himalayan 450 Pillion Luggage Rack 2023> Fitting Instructions

Kit Includes:

1.	X1	C39455M	Cover Plate
2.	X1	CFK39455A	Mounting Plate
3.	X2	CBOLM50005	M5 x 12mm Button-Head Bolt
4.	X2	CWASM50003	M5 Washer
5.	X2	CNUTM50002	M5 Nyloc Nut
6.	X2	CBOLM60042	M6 x 16mm Button-Head Bolt
7.	X4	CBOLM60014	M6 x 20mm Countersunk Bolt
8.	X7	CWASM60001	M6 Washer
9.	X7	CNUTM60003	M6 Nyloc Nut
10.	X1	CSPAM50007A	M5 Seat Spacer (LHS)
11.	X1	CSPAM50007A	M5 Seat Spacer (RHS)
12.	X2	CSPAM60026	M6 x 5mm Spacer
13.	X1	CPIN0002	M6 Seat Lock Pin
14.	X2	CBUNG0001	Rubber Bumper Stop

OEM Parts (From the Motorcycle):

15.	X2	OEM Fixing	M6 Flanged-Hex Bolt
-----	----	------------	---------------------

Assembly Instructions

- Begin the installation by pre-assembling the mounting plate (**Item 2**) with the components illustrated in '**FIG. 4**'. Please use '**FIG. 1**' for location reference of the 2 x silicon bumper stops (**Item 14**) and '**FIG. 2** for the 2 x seat spacers (**Items 10 & 11**). Rotate the seat lock pin (**Item 13**) 45 degrees anticlockwise and **tighten fully**.

*Please note: Only loosely thread the 2 x M6 button-head bolts (**Item 6**) located in the slotted holes as these will need adjusting around the rider's seat.*

- Remove the Pillion seat, along with the 2 x M6 OEM flanged bolts (**Item 15**) and ensure the rider's seat is in the lower position. Fit the assembled mounting plate to the motorbike, re-using the 2 x M6 OEM bolts. There is no need to fully tighten at this stage.
- Adjust the 2 x M6 button-head bolts (**Item 6**) and M6 spacers (**Item 12**) in the slotted holes so that they press against the sides of the moulding on the rider's seat. Once positioned correctly, secure their position by **fully tightening** the bolts.
- Remove the mounting plate from the motorbike and continue the installation by fitting the cover plate (**Item 1**), using the fixings illustrated in '**FIG. 3**'. Please ensure these are **fully tightened**.
- Adjust the rider's seat to the preferred position and then fit the assembled pillion luggage rack to the motorbike. Use the key to rotate the lock, slotting the part into position. Place the 2 x M6 OEM flanged bolts through the allocated holes in the cover plate, securing the mounting plate in position. **Please tighten fully**.
- The installation of your Pyramid Pillion Luggage Rack is now complete.



Please Note:

We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!

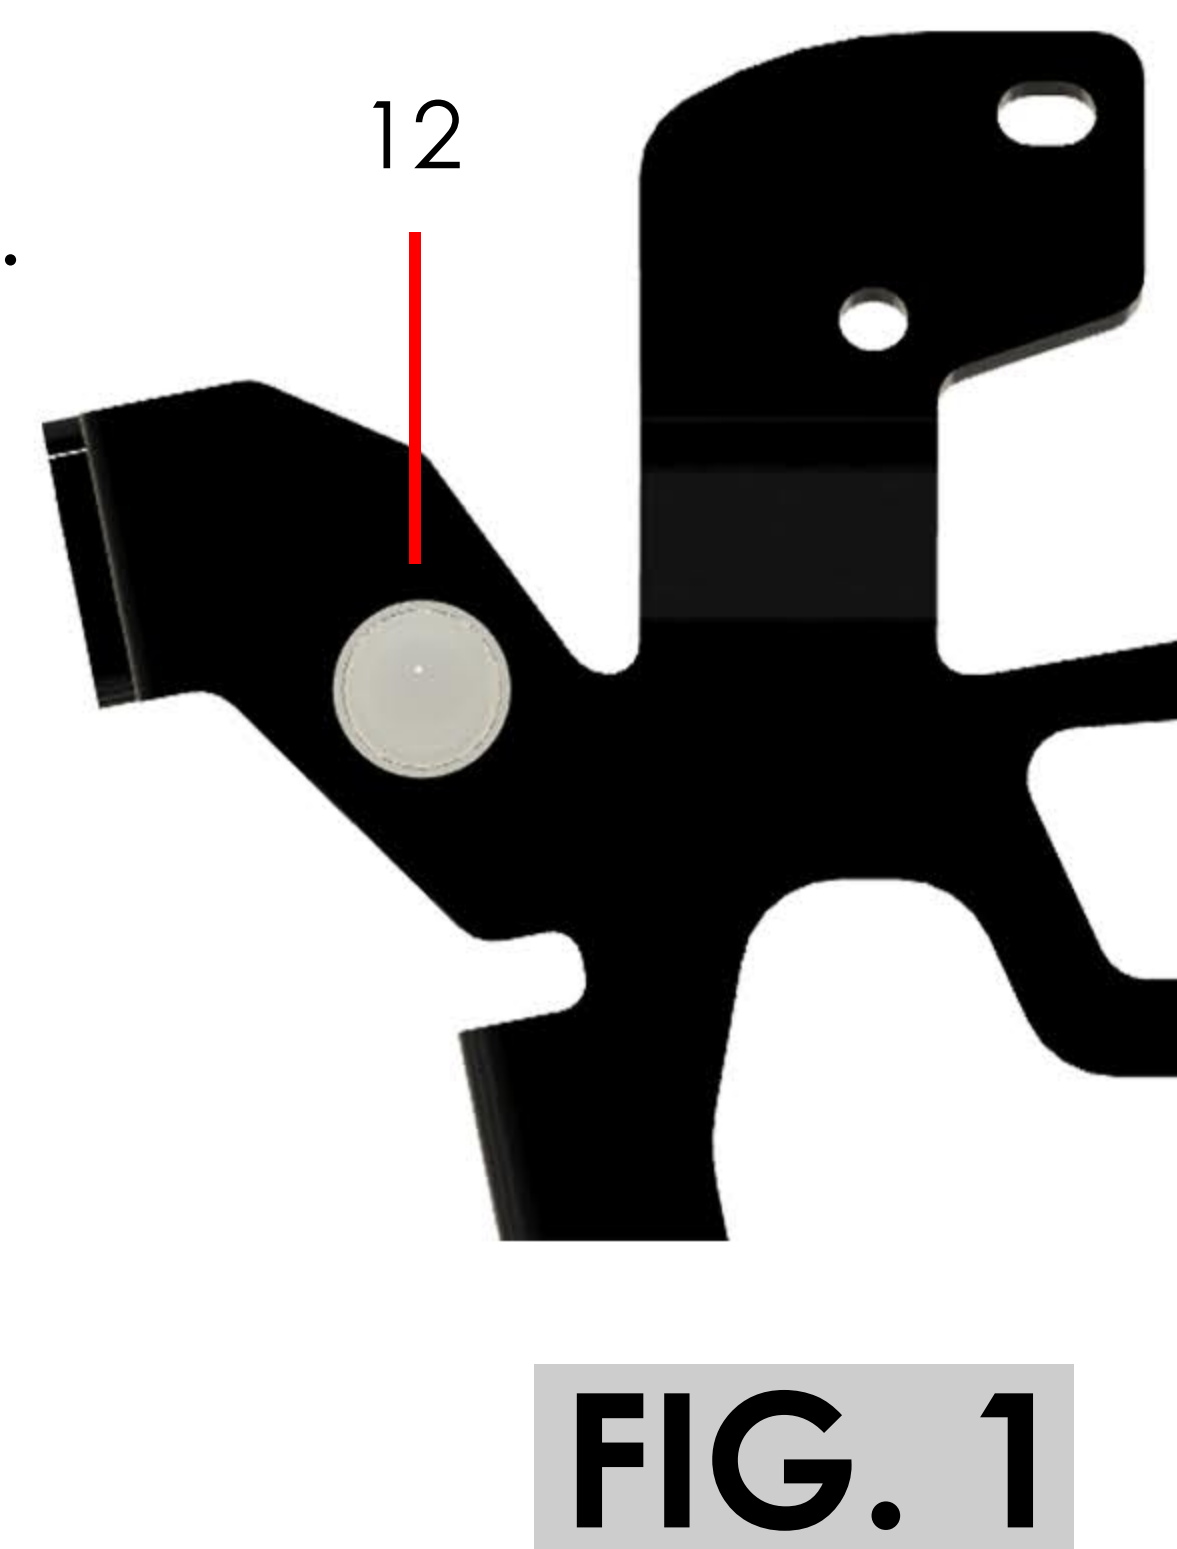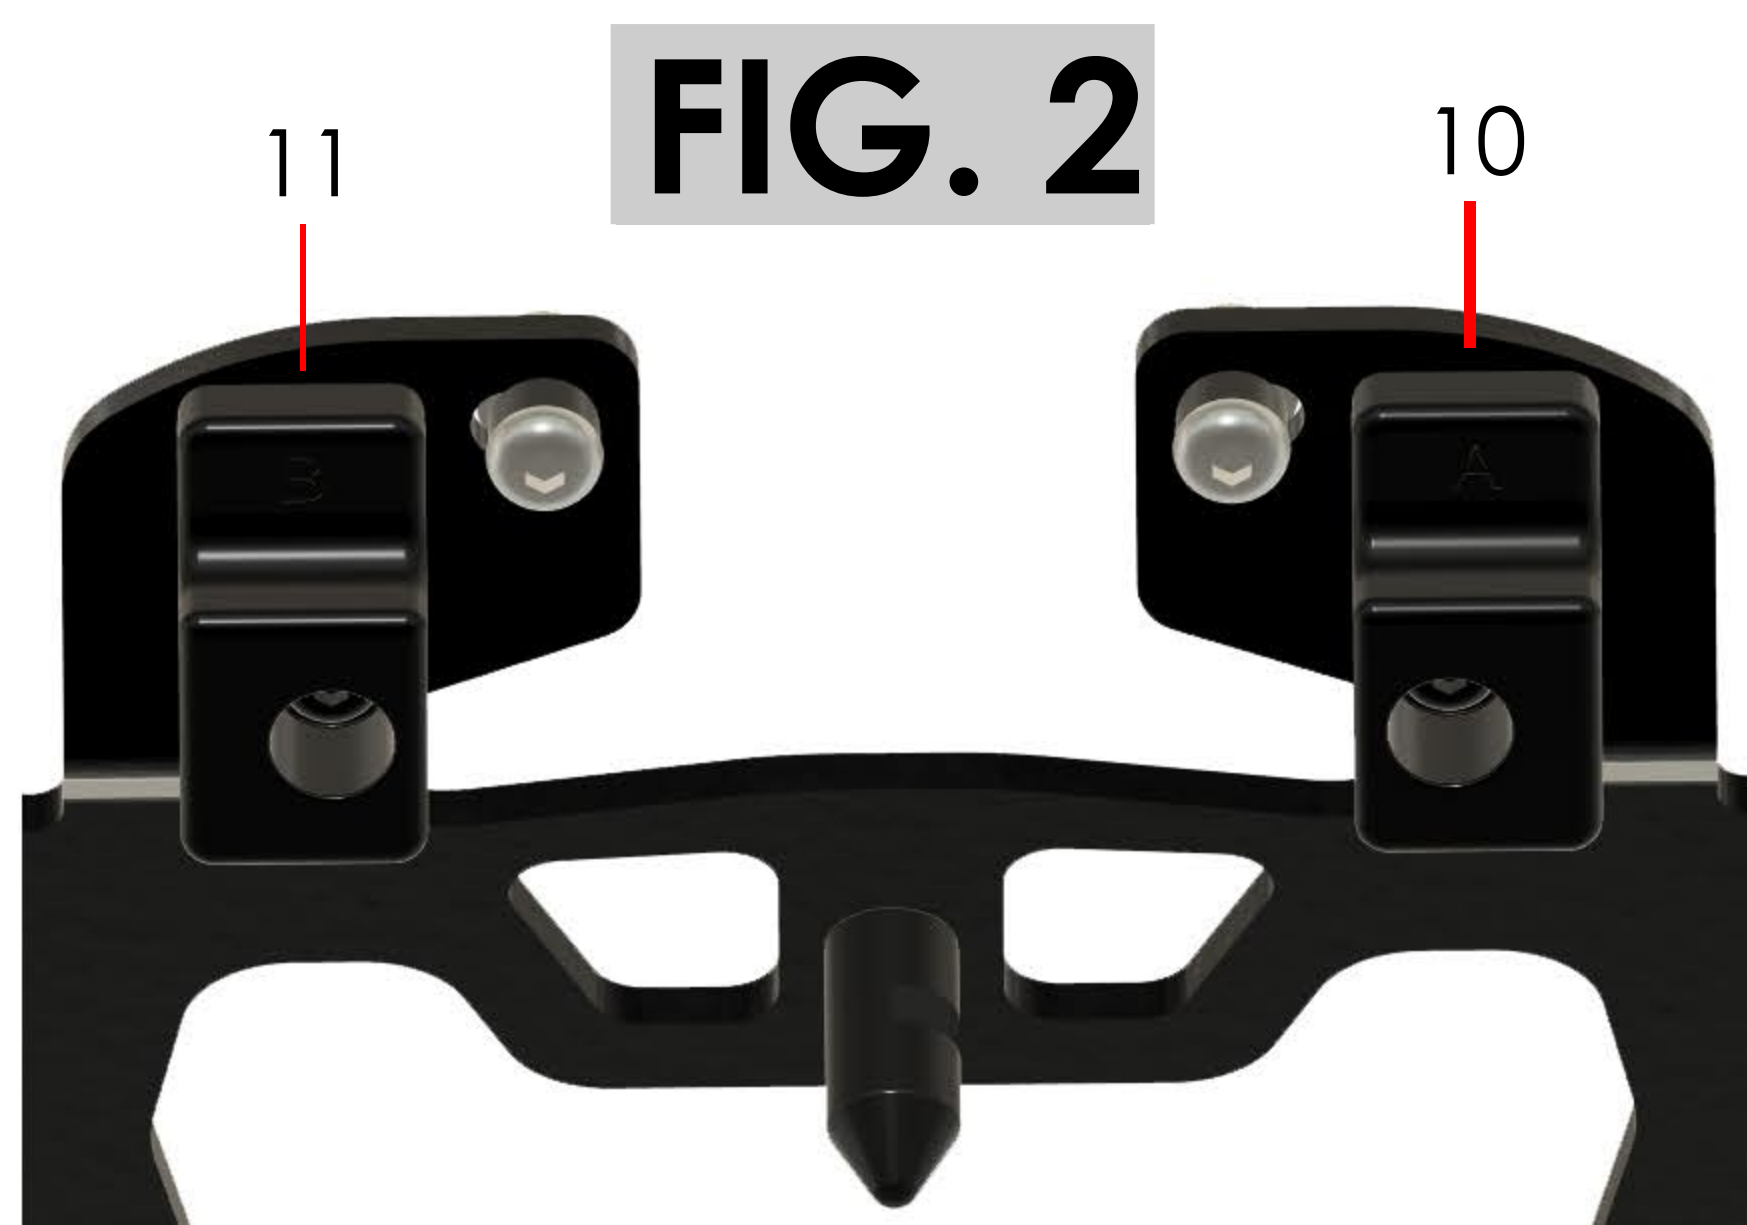

39455M Royal Enfield Himalayan 450 Pillion Luggage Rack 2023> Fitting Instructions

Please refer to 'FIG. 3' & 'FIG. 4' below as reference to the assembly of the product.

FIG. 3


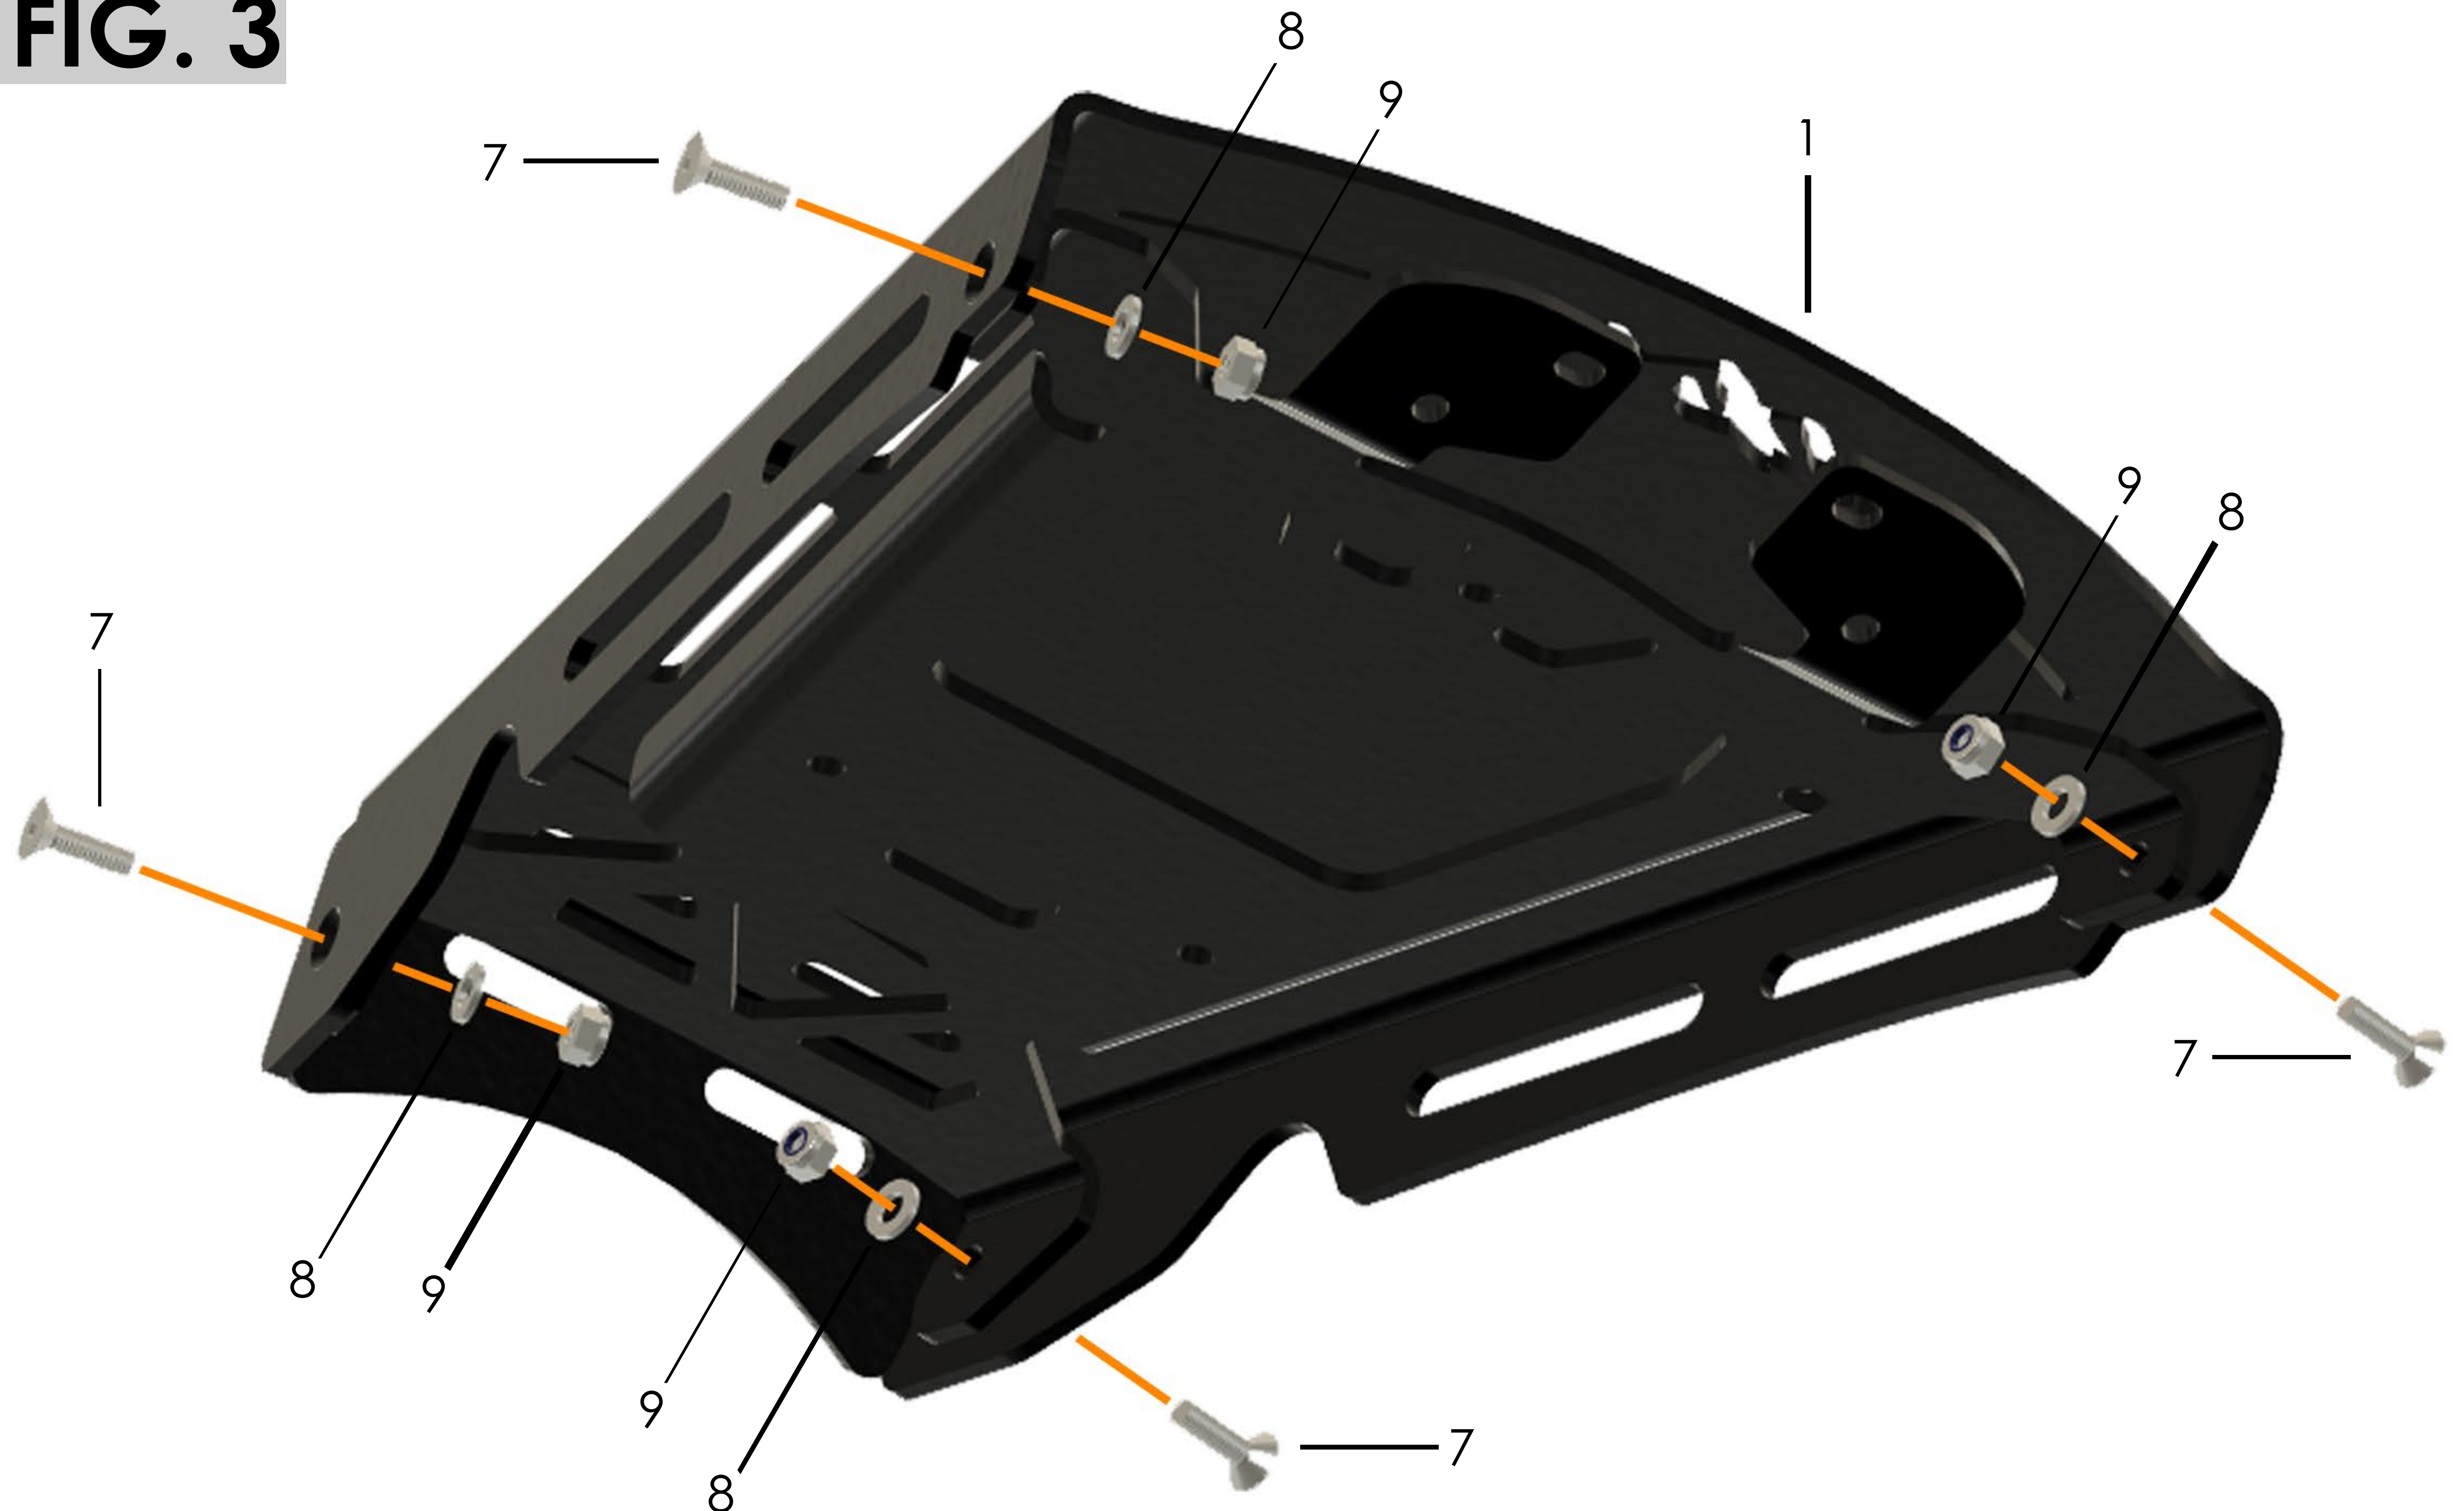


FIG. 4



Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk

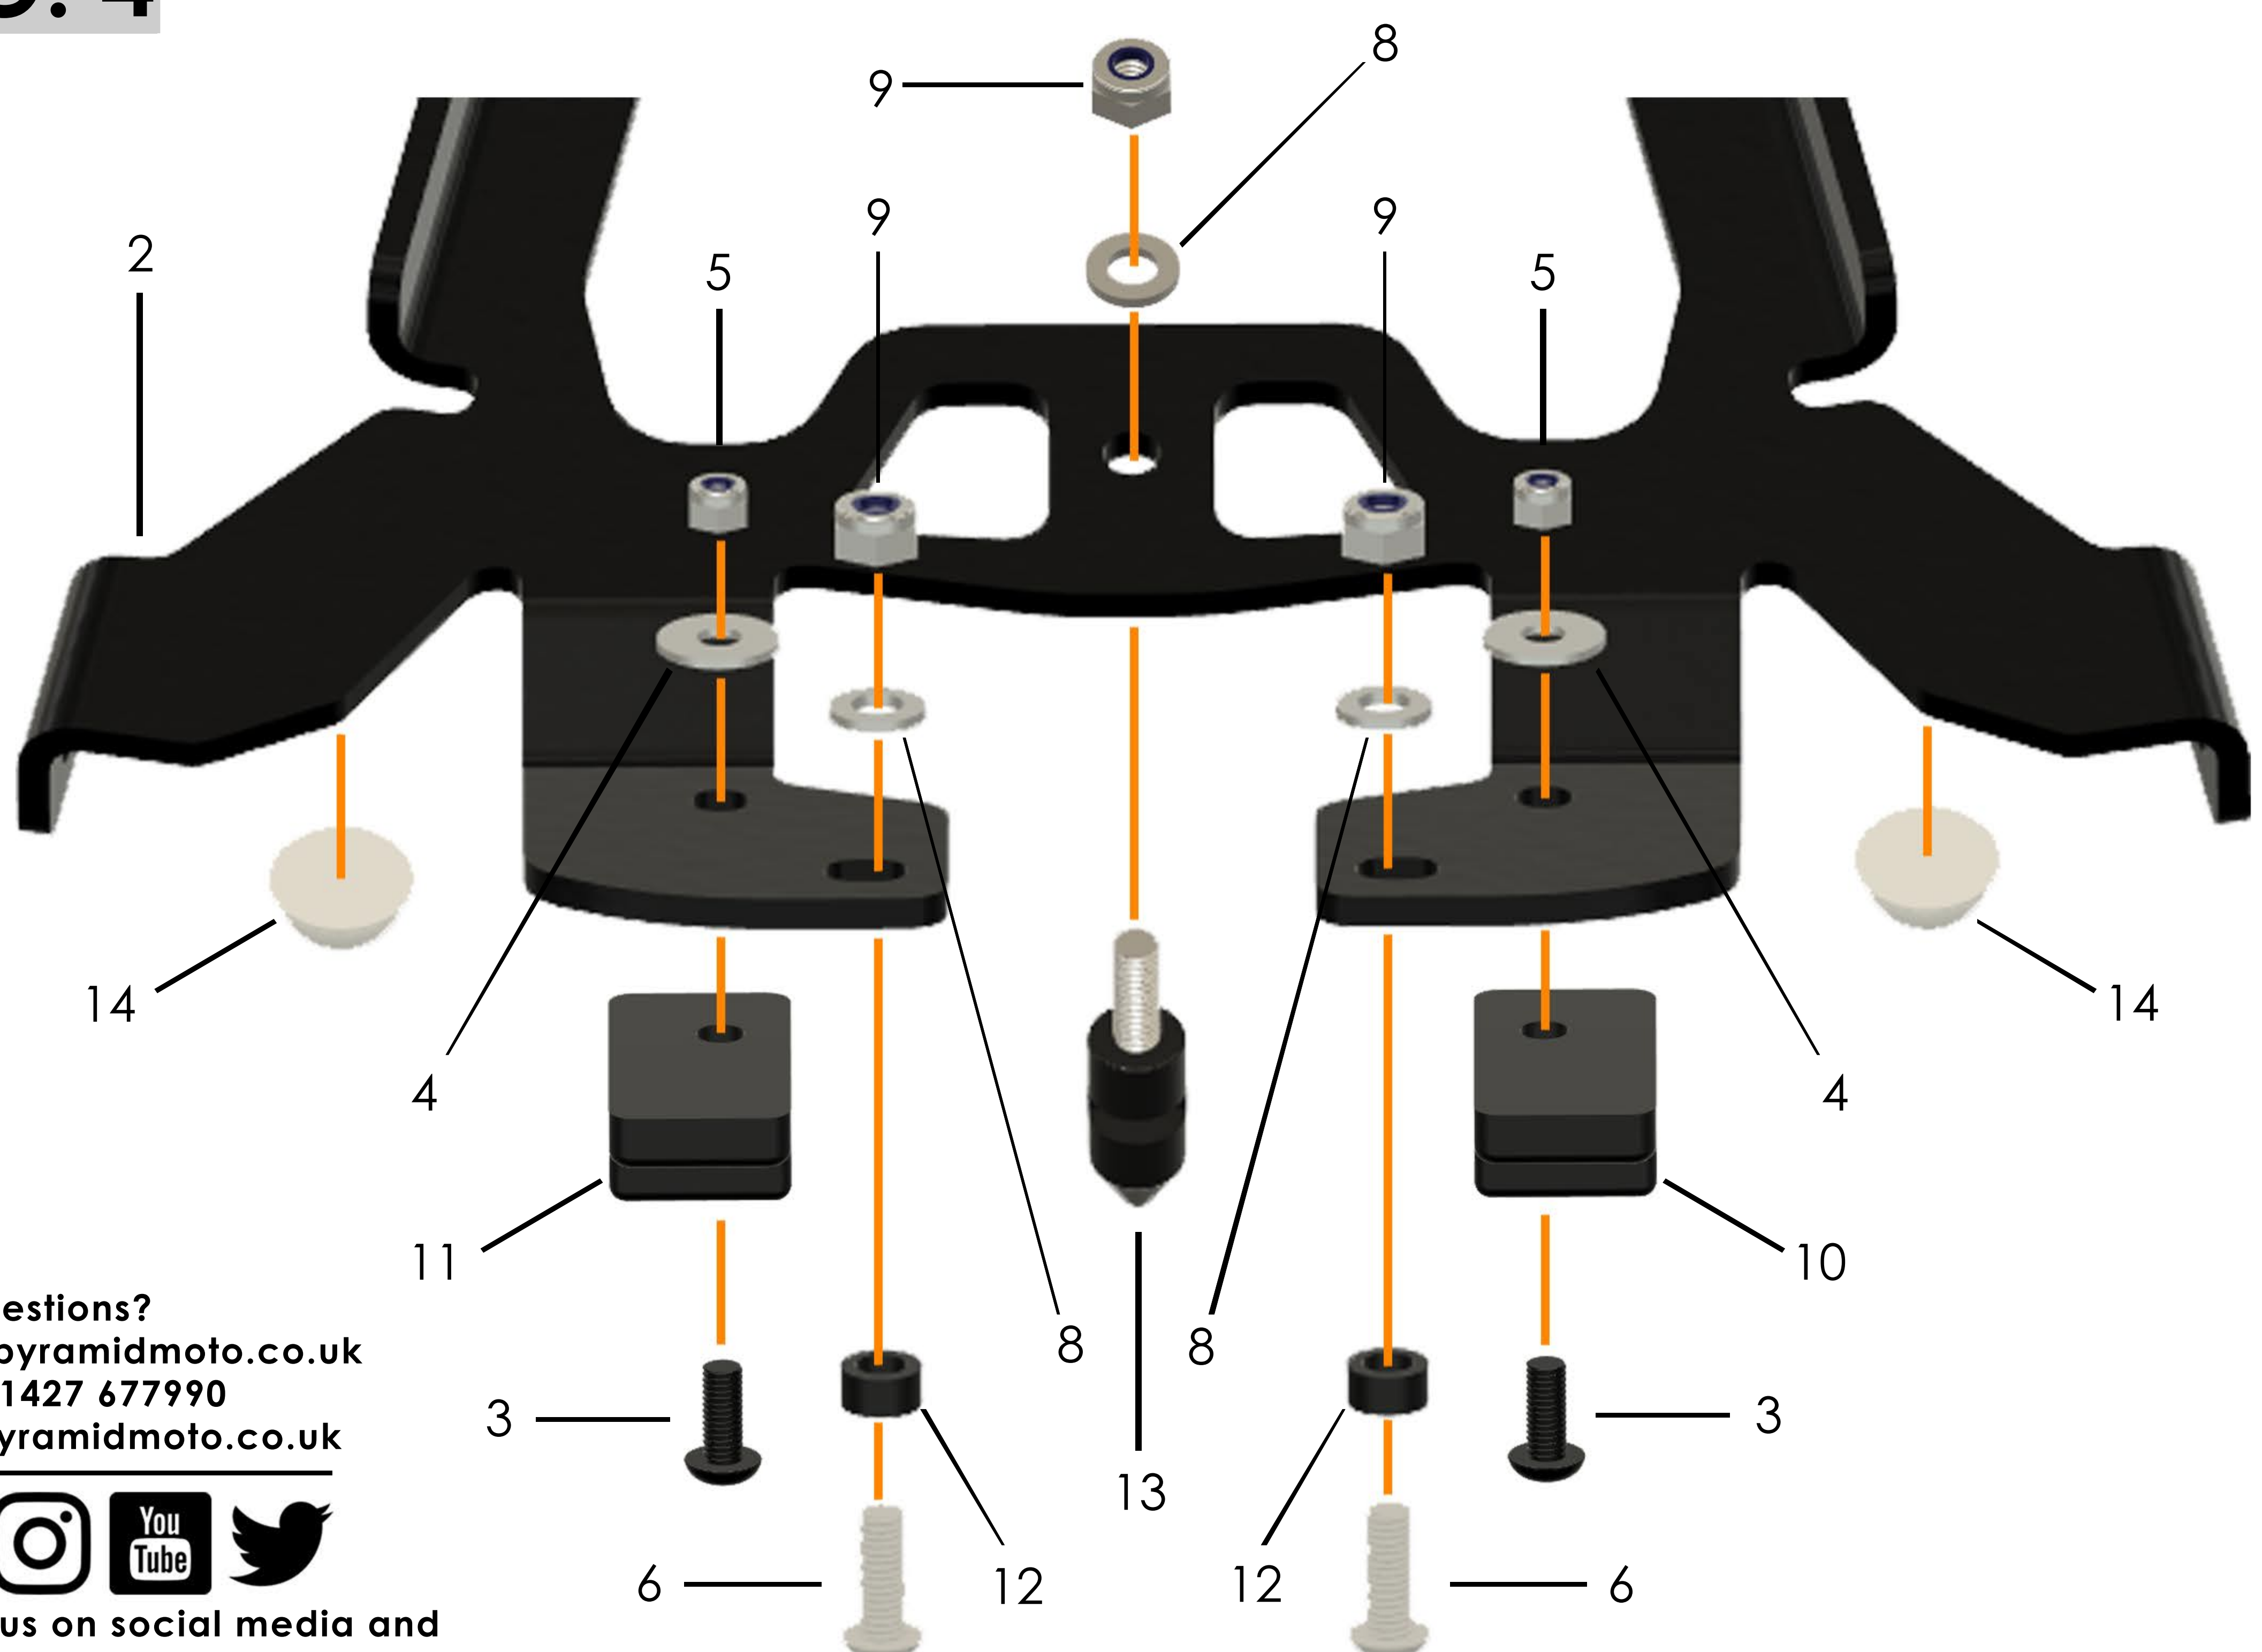

Follow us on social media and
 feel free to leave us a review!

39455M Royal Enfield Himalayan 450 Pillion Luggage Rack 2023> Fitting Instructions

Please refer to 'FIG. 5' below when attaching the product to your motorbike.

FIG. 5



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!