

36100M Triumph Speed 400 Sensor Cover 2023> Fitting Instructions

Kit Includes:

1.	X1	C36100	Sensor Cover
2.	X1	CFK36100	Sensor Cover Bracket
3.	X3	CBOLM60022	M6 x 40mm Hex Bolt
4.	X2	CSPAM60010	White Spacer
5.	X1	CSPAM60022	Black Spacer
6.	X3	CWASM60001	M6 Stainless Steel Washer

OEM Parts (From the Motorcycle):

7.	X3	M6 OEM Bolt
----	----	-------------

Assembly Instructions


- Begin by removing the M6 OEM Bolts (**Item 7**) as shown in '**FIG. 1**' to gain access to the mounting points.
- Attach the Sensor Cover (**Item 1**) and the Bracket (**Item 2**) to the mounting points referenced in '**FIG. 1**' using the fixings provided (**Items 3, 4, 5 and 6**). See '**FIG. 2**' for reference. Once in the correct position, fully tighten the fixings.

Please Note: We advise that all fixings are checked periodically.

FIG. 1



FIG. 2

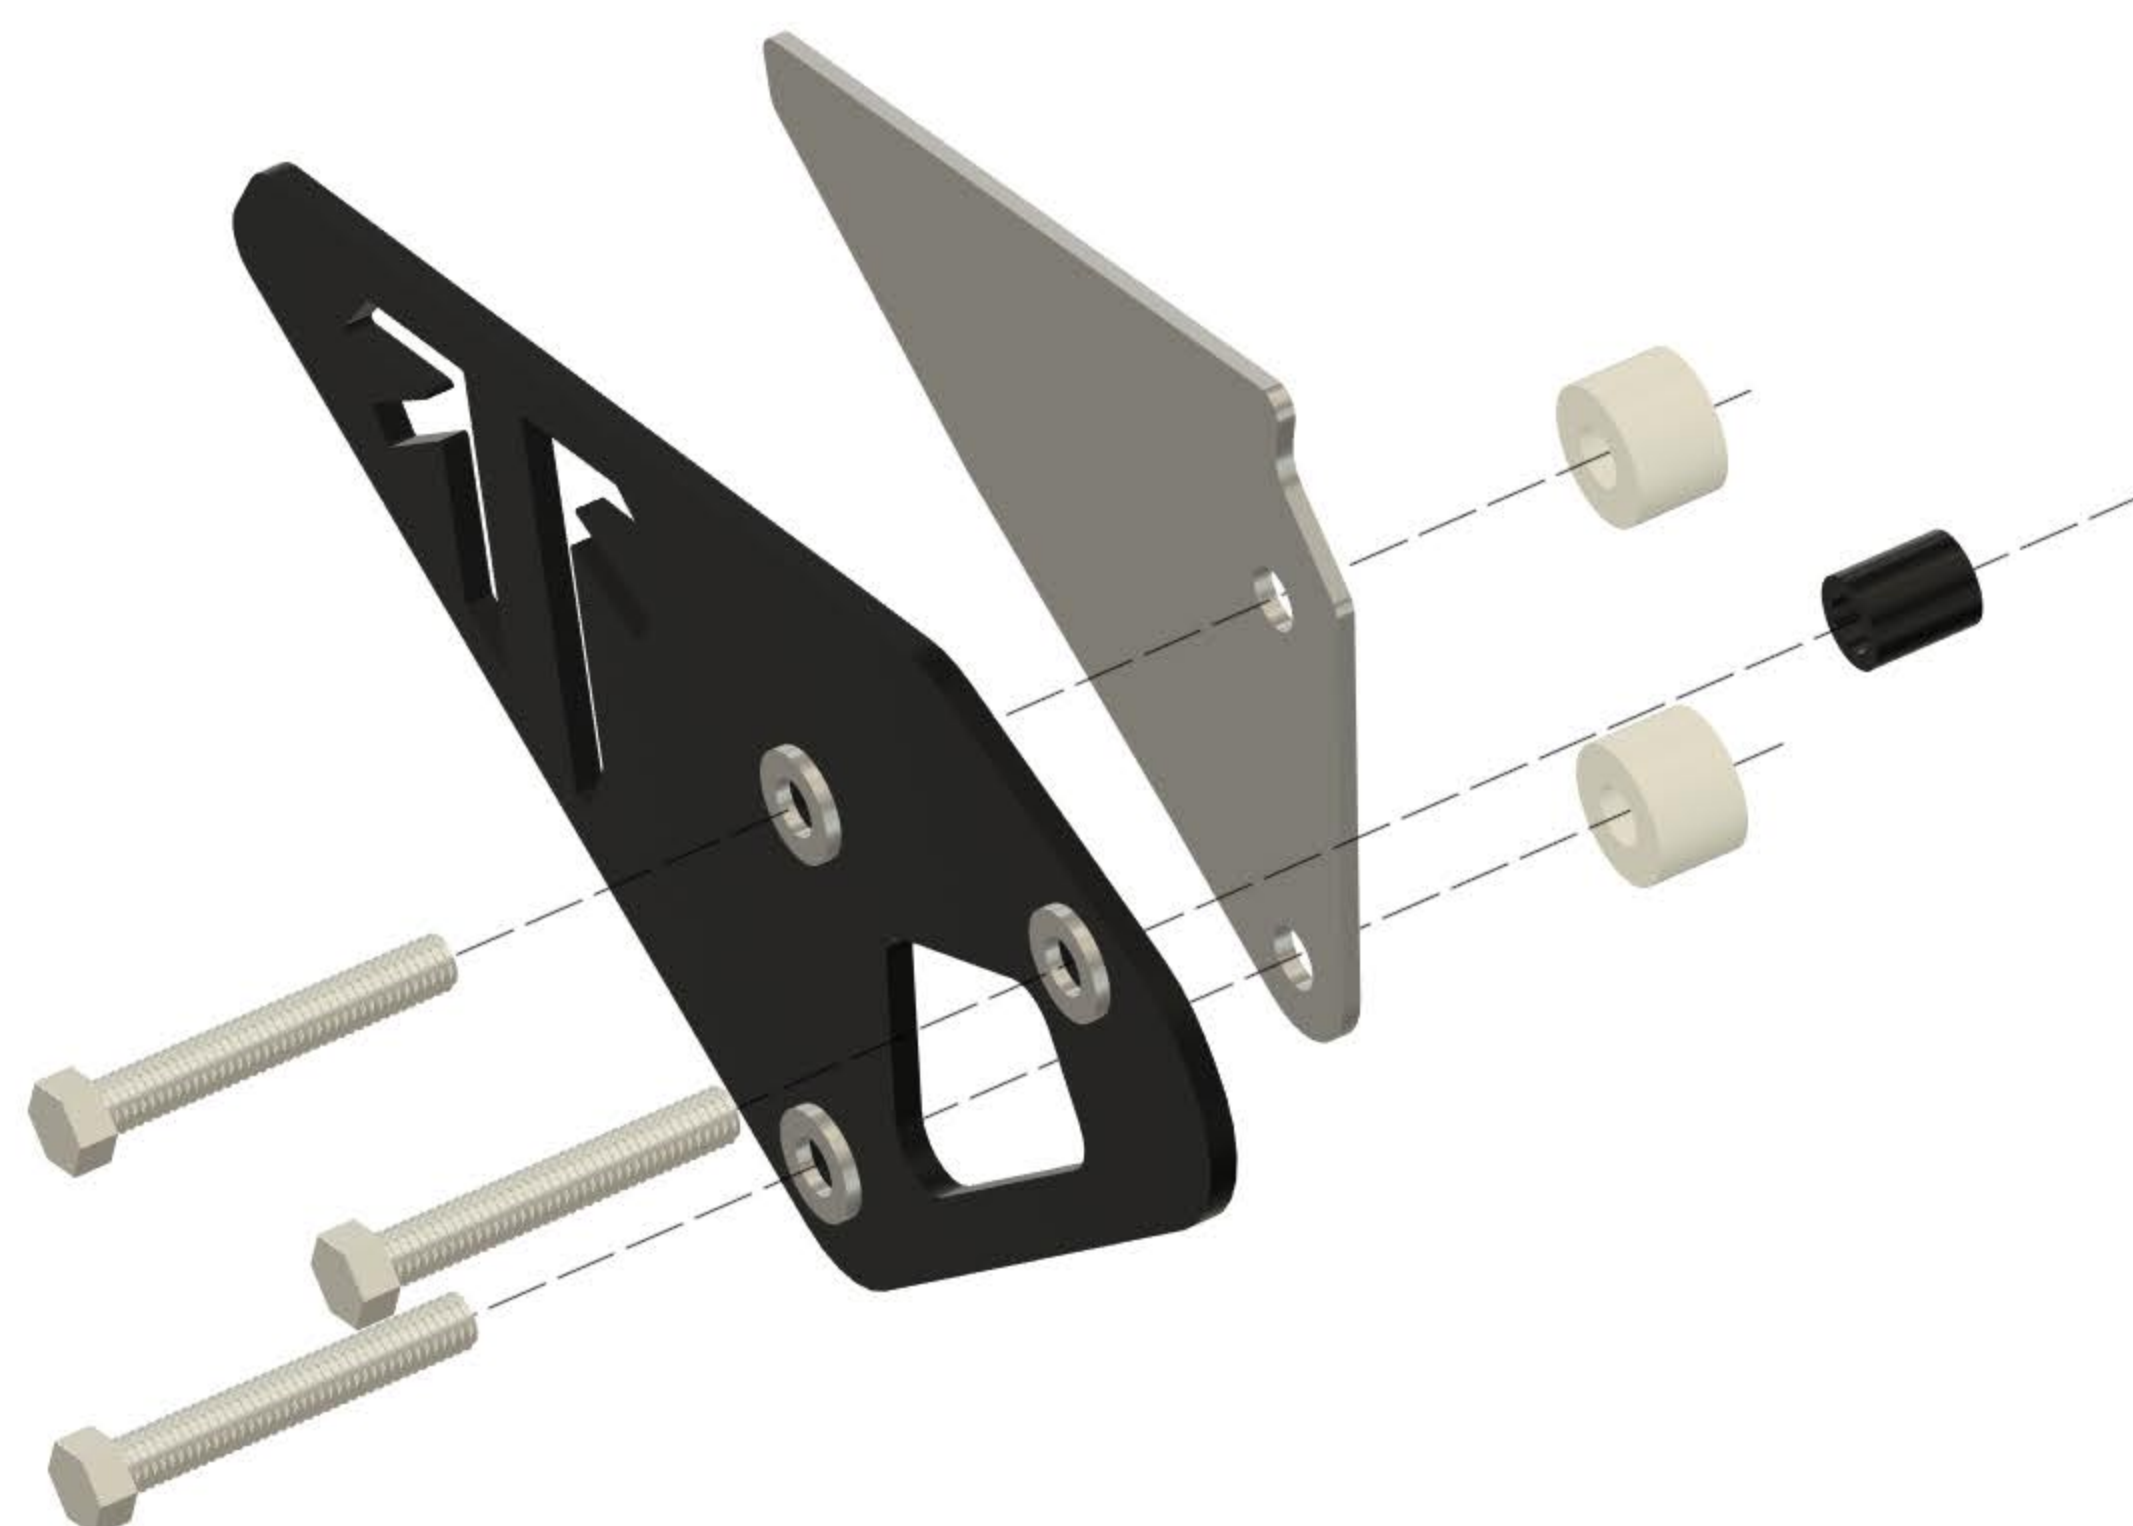

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!