

30209M Yamaha MT-09 Handguards 2024> Fitting Instructions

Kit Includes:

1.	X2	C30203M	Handguards (pair)
2.	X1	CFK30209A	Bracket (LHS)
3.	X1	CFK30209B	Bracket (RHS)
4.	X4	CBOLM50007	M5 x 16mm Bolt
5.	X4	CWASM50002	M5 Washer
6.	X4	CNUTM50002	M5 Nyloc Nut
7.	X2	CBOLM80002	M8 x 50mm Bolt
8.	X2	CWASM80001	M8 Washer
9.	X4	CSPAM50003	M5 Collar

Assembly Instructions

- Begin by loosely attaching both Handguard brackets (Items 2 and 3) to the Handguards (Item 1). Use the following for both Handguards: 2 x M5 Bolt (Item 4), 2 x M5 Collar (Item 9), 2 x M5 Washer (Item 5), 2 x M5 Nyloc Nut (Item 6). Please see '**FIG. 2**' for reference.
- Starting with the RHS, remove the Bar End and Mirror. Please see '**FIG. 1**' for reference.
- Insert the Bar End into the Handguard and loosely reattach the Bar End. When reattaching the Bar End, please use the M8 Bolt and M8 Washer provided (Items 7 and 8).
- Place the RHS Handguard bracket at the mirror mounting point and loosely thread the RHS mirror.
- Make sure all fittings are in position before tightening.
- Tighten all fixings accordingly, starting with the Bracket to Handguard fixings, followed by the Bar End and finally the Mirror. Please tighten until sufficient resistance is felt.
- Repeat the above steps for the LHS.

Please Note:


We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and feel free to leave us a review!

FIG. 1

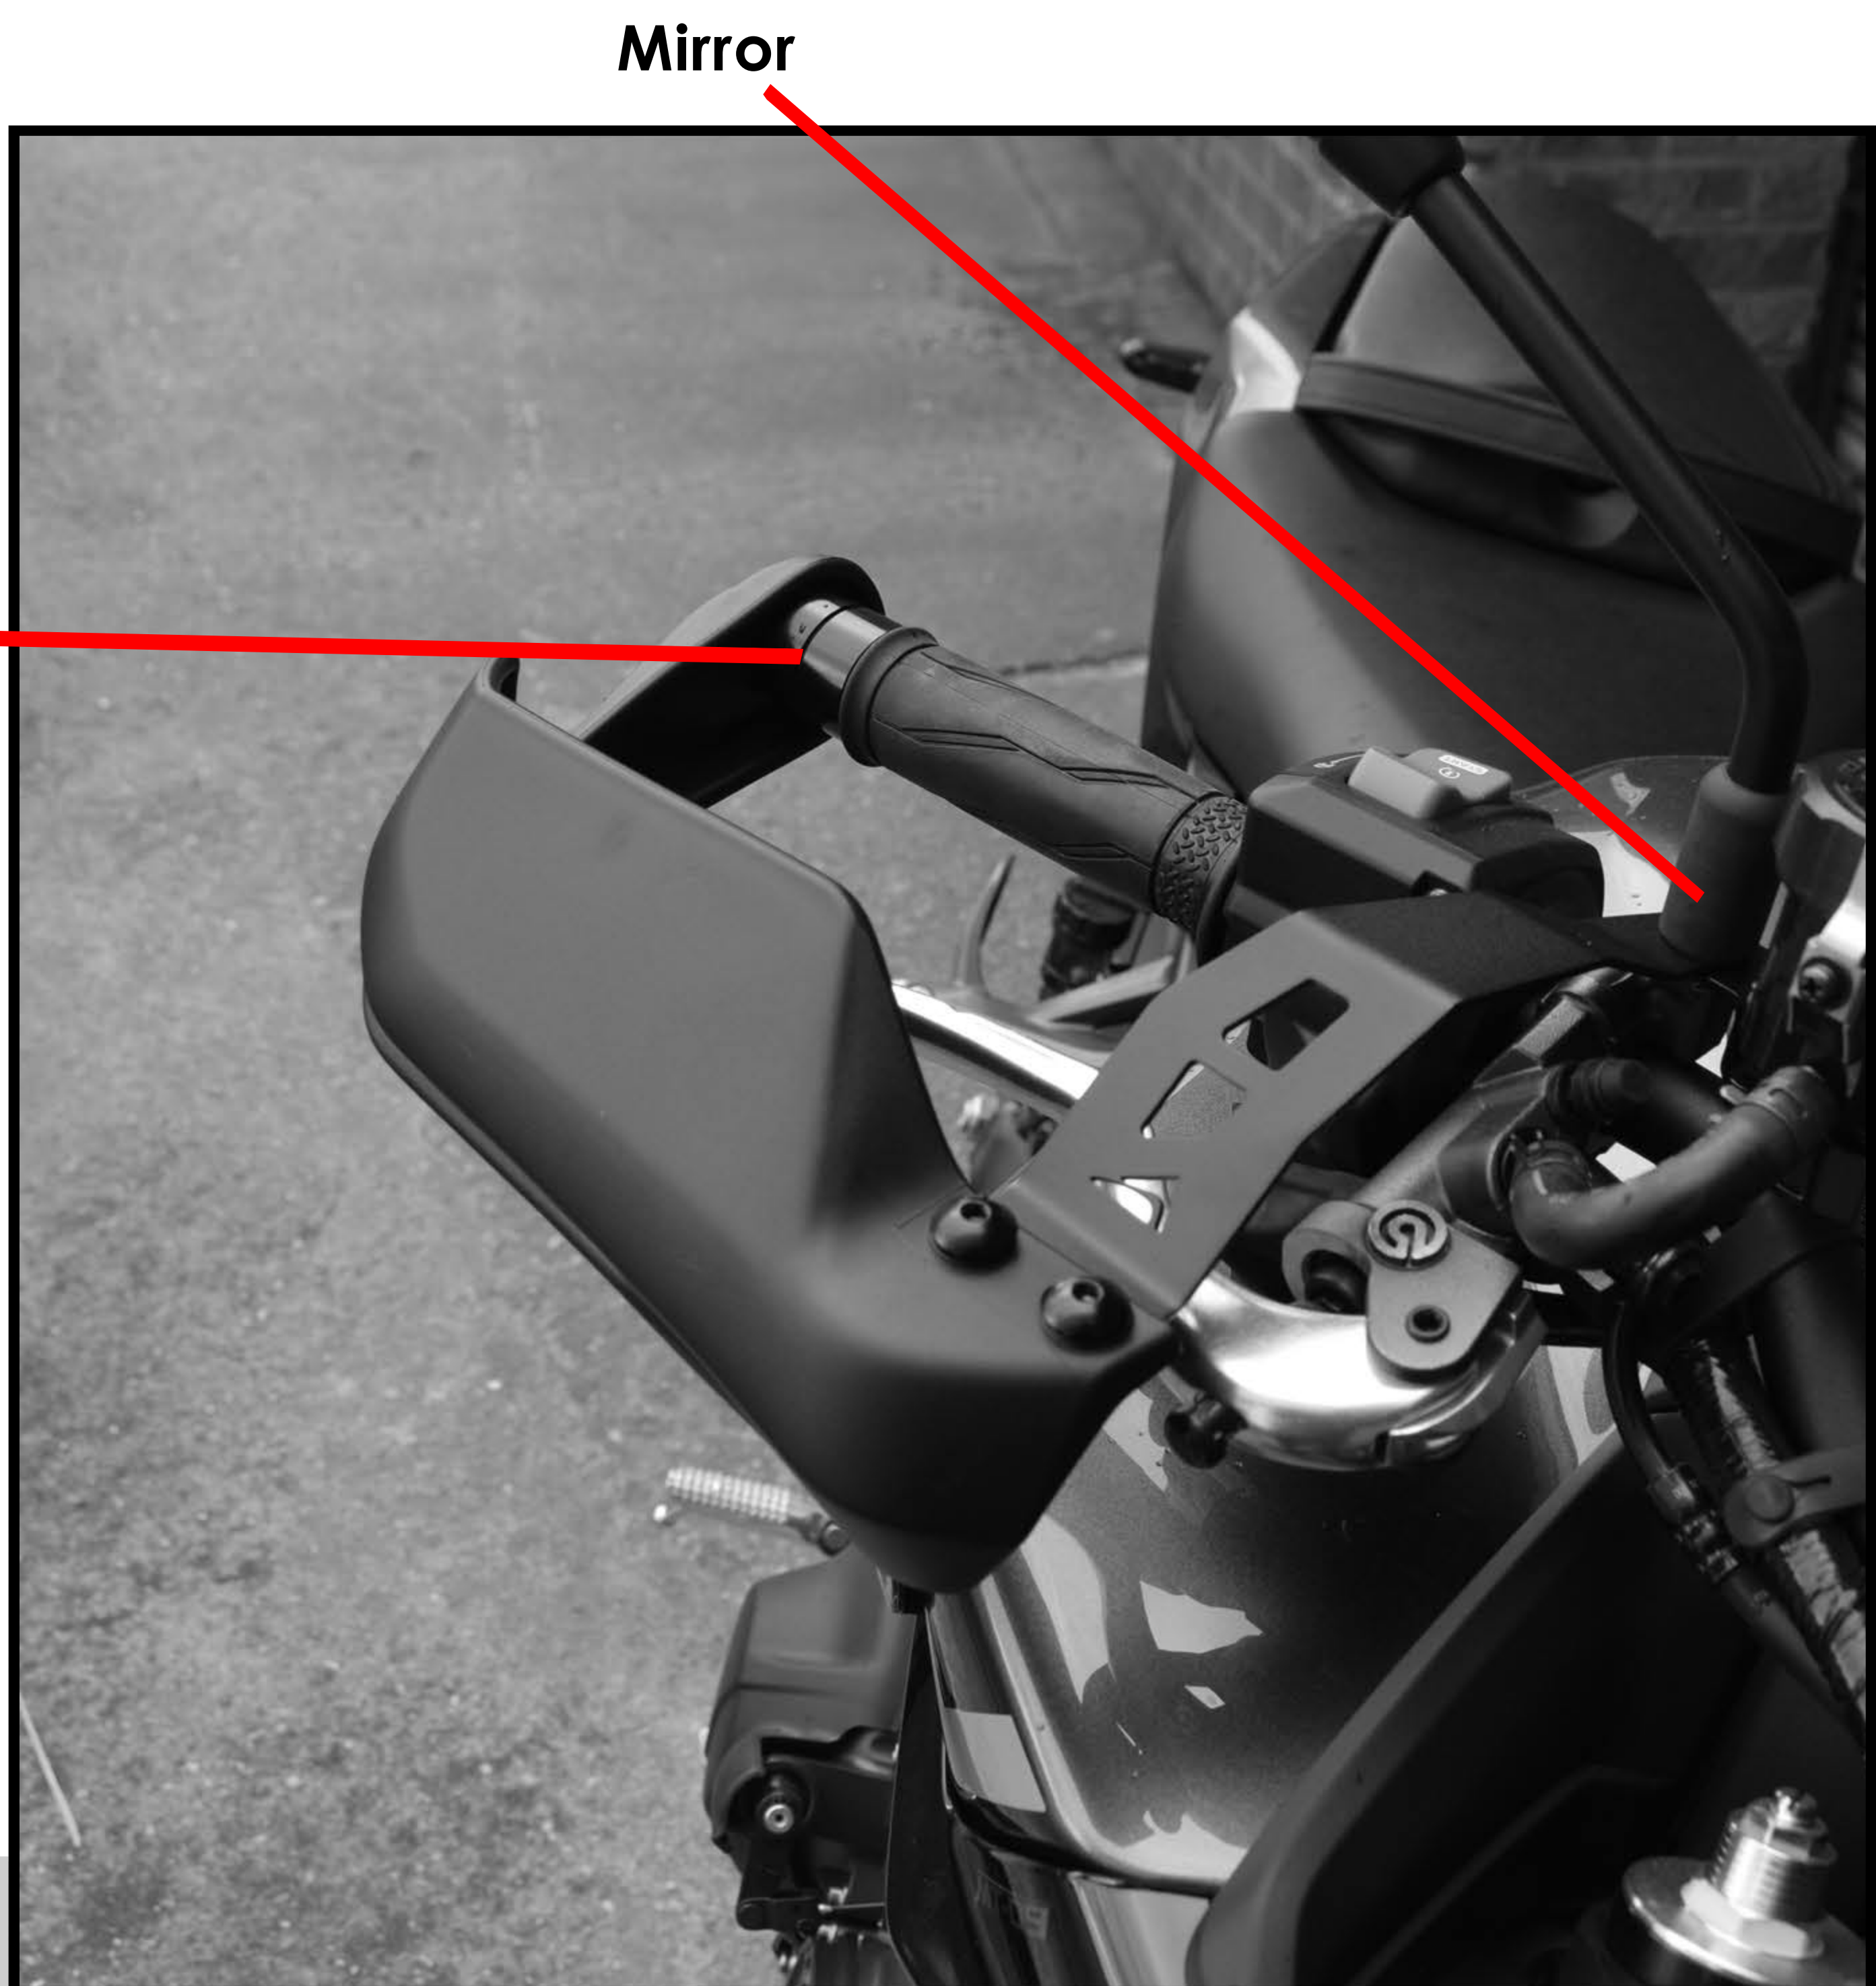

30209M Yamaha MT-09 Handguards 2024> Fitting Instructions

Please rotate the page for full clarity of the illustration below. Please note the figure below illustrates the LHS Handguard configuration.

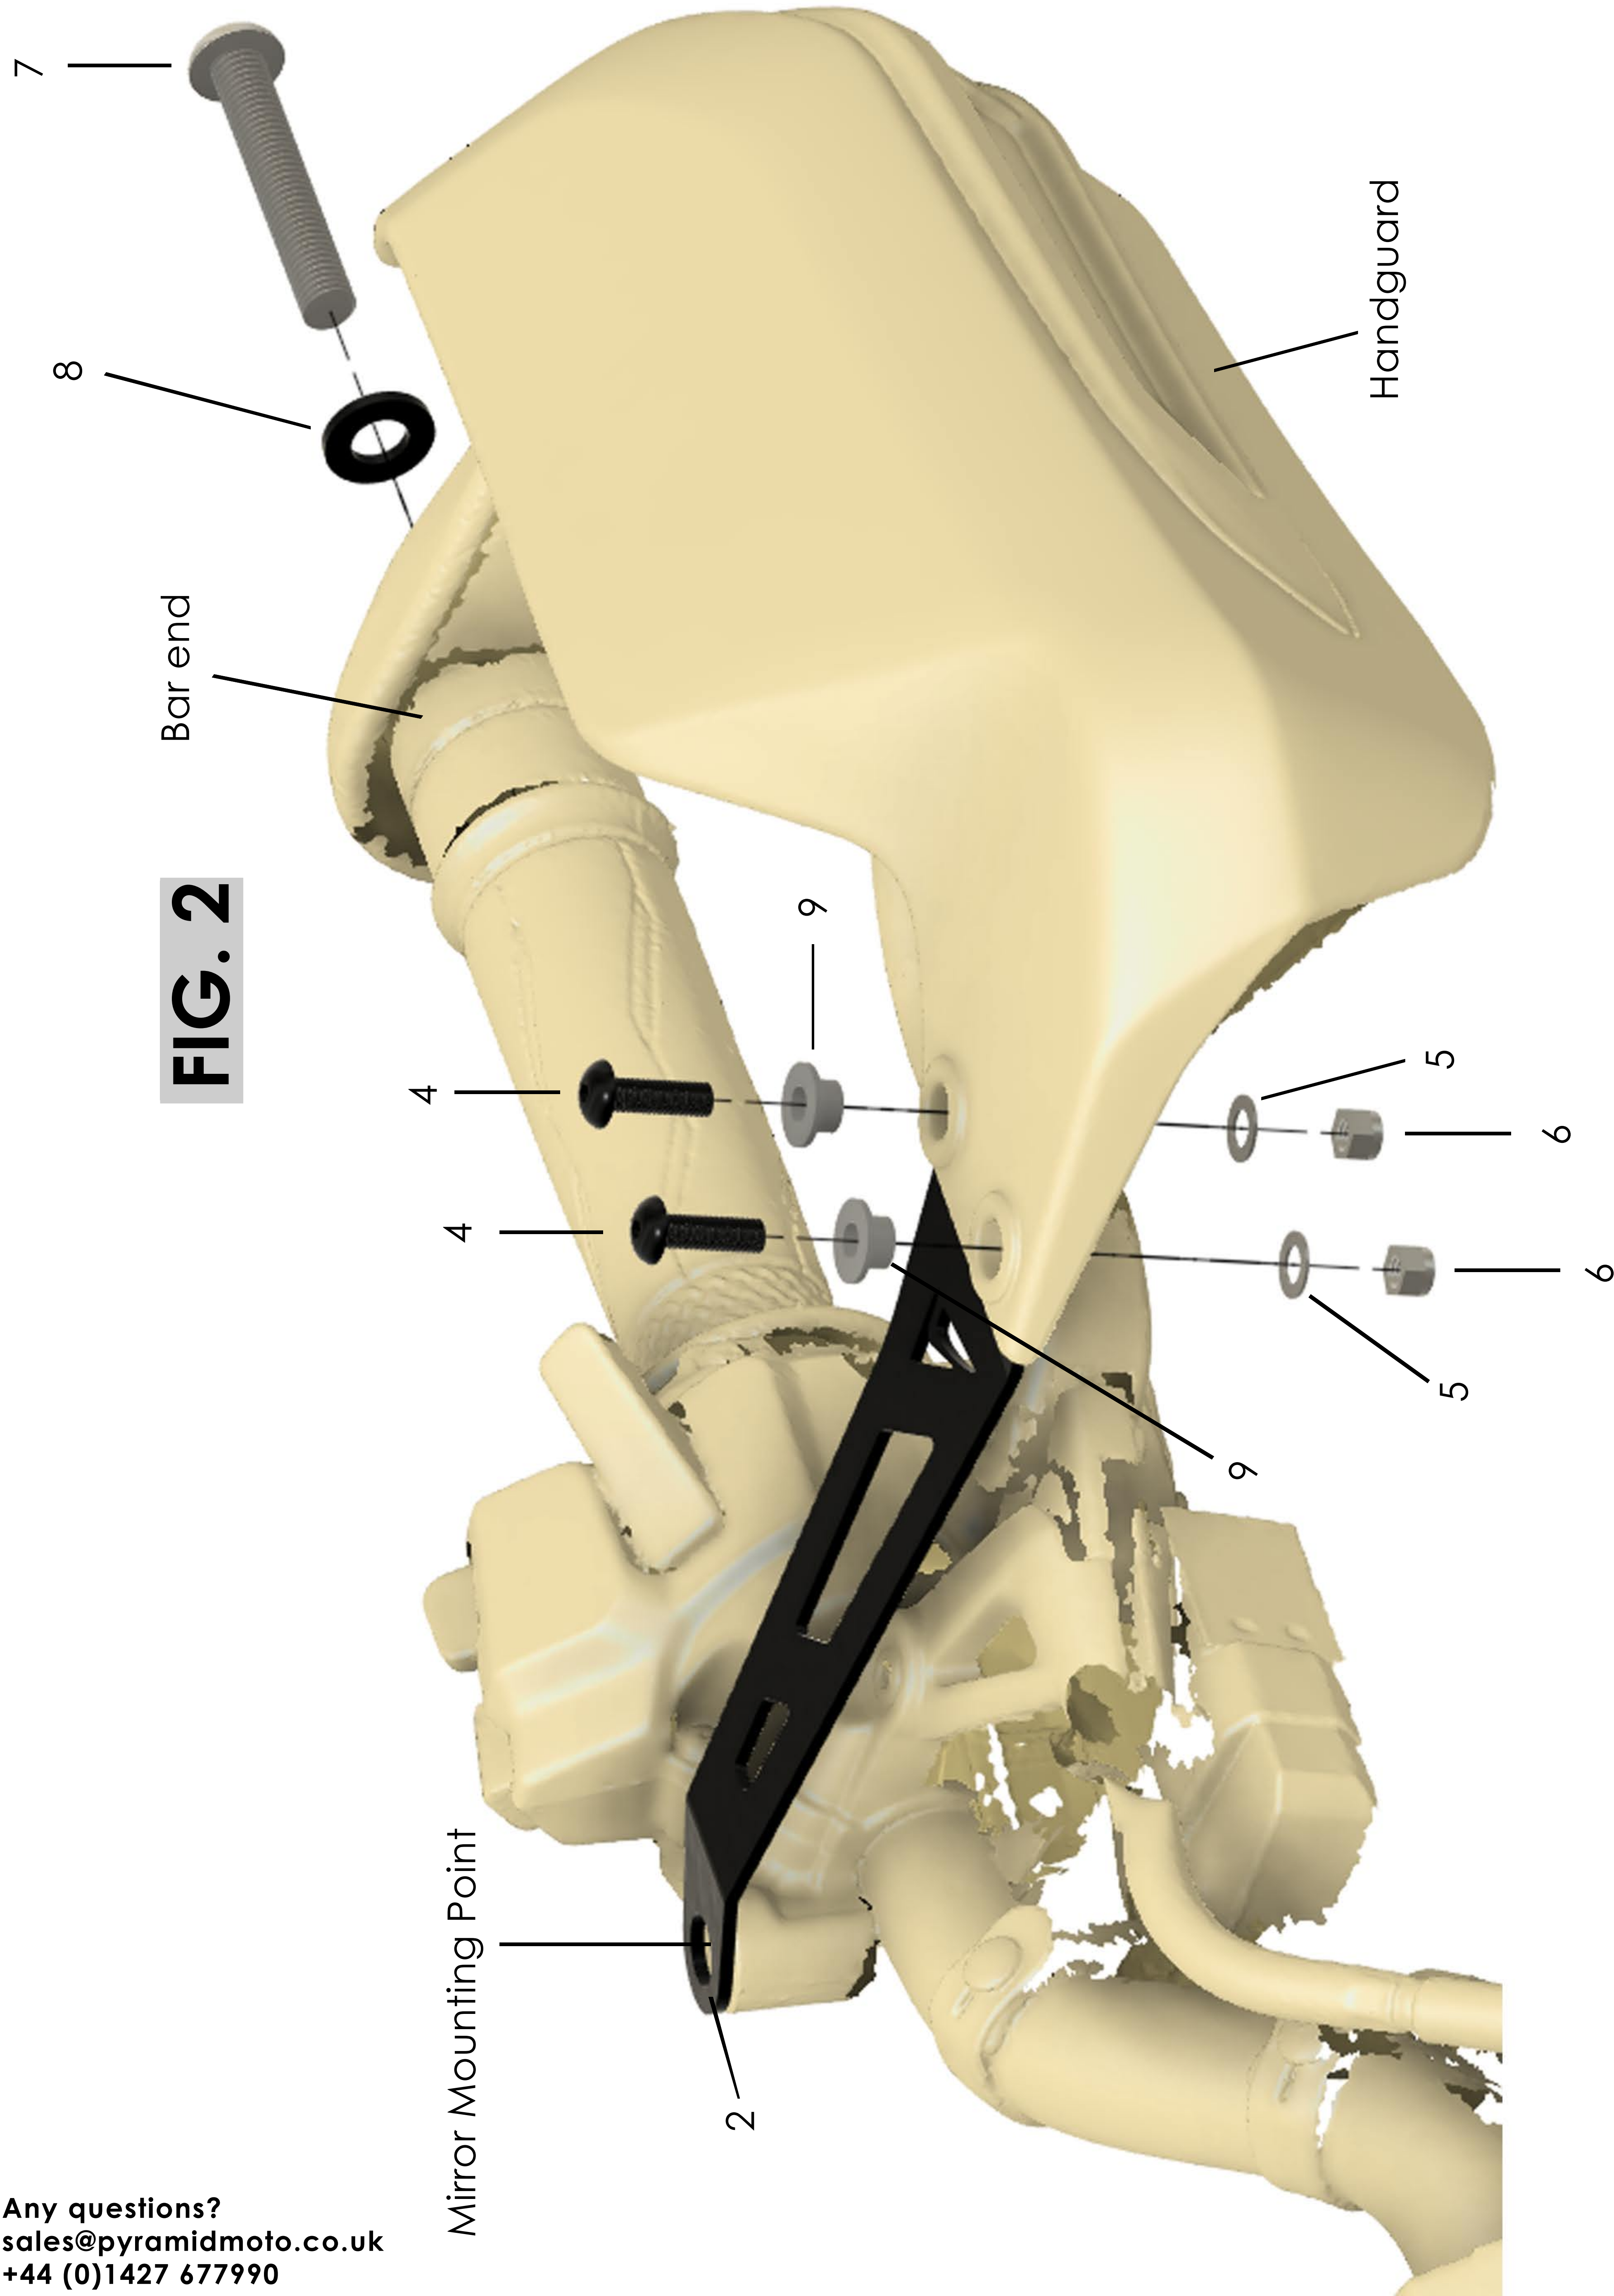

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!