

22190 Yamaha MT-09 Fly Screen 2024> Fitting Instructions

Kit Includes:

1.	X1	C22190	Fly Screen
2.	X1	CFK22190A	Bracket A (pre-fitted)
3.	X1	CFK22190B	Bracket B
4.	X1	CFK22190C	Bracket C
5.	X3	CBOLM50018	M5 Flanged Button Bolt
6.	X3	CNUTM50005	M5 Anchor Nut
7.	X1	CFOA0004	Foam Strip (30mm Length) (pre-cut by pyramid)

OEM Parts (From the Motorcycle):

8.	X2	OEM M6 Bolt
9.	X2	OEM No. 8 Screw
10.	X2	OEM M5 Washer
11.	X2	OEM M6 Washer

Assembly Instructions

- Begin by removing the OEM fixings as shown in '**FIG. 1**'. Take care when removing the OEM fixings as the Head Unit will become loose.
- Using the M5 Bolts and anchor nuts provided (Items 5 and 6) attach Bracket B (Item 3) to Bracket A (Item 2) making sure not to overtighten the fixings. Following this, attach the Foam Strip (Item 7) to the Fly Screen (Item 1). See '**FIG. 2**' for reference.
- Using the OEM Screws and M5 OEM Washers (Items 9 and 10), fit Bracket C (Item 4) to the mounting points shown in '**FIG. 1**' and fully tighten the fixings.
- Align Bracket B with the slots on Bracket C until it locks into place. See '**FIG. 2**' for reference.
- Finally, using the M6 OEM fixings (Items 8 and 11) secure the Fly Screen into position. Once the Fly Screen is in the correct position, fully tighten all fixings.

OEM Screws
Bracket C Mounting Points

OEM M6 Bolts

Please Note:

We advise that all fixings
are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and
feel free to leave us a review!

FIG. 1



FIG. 2

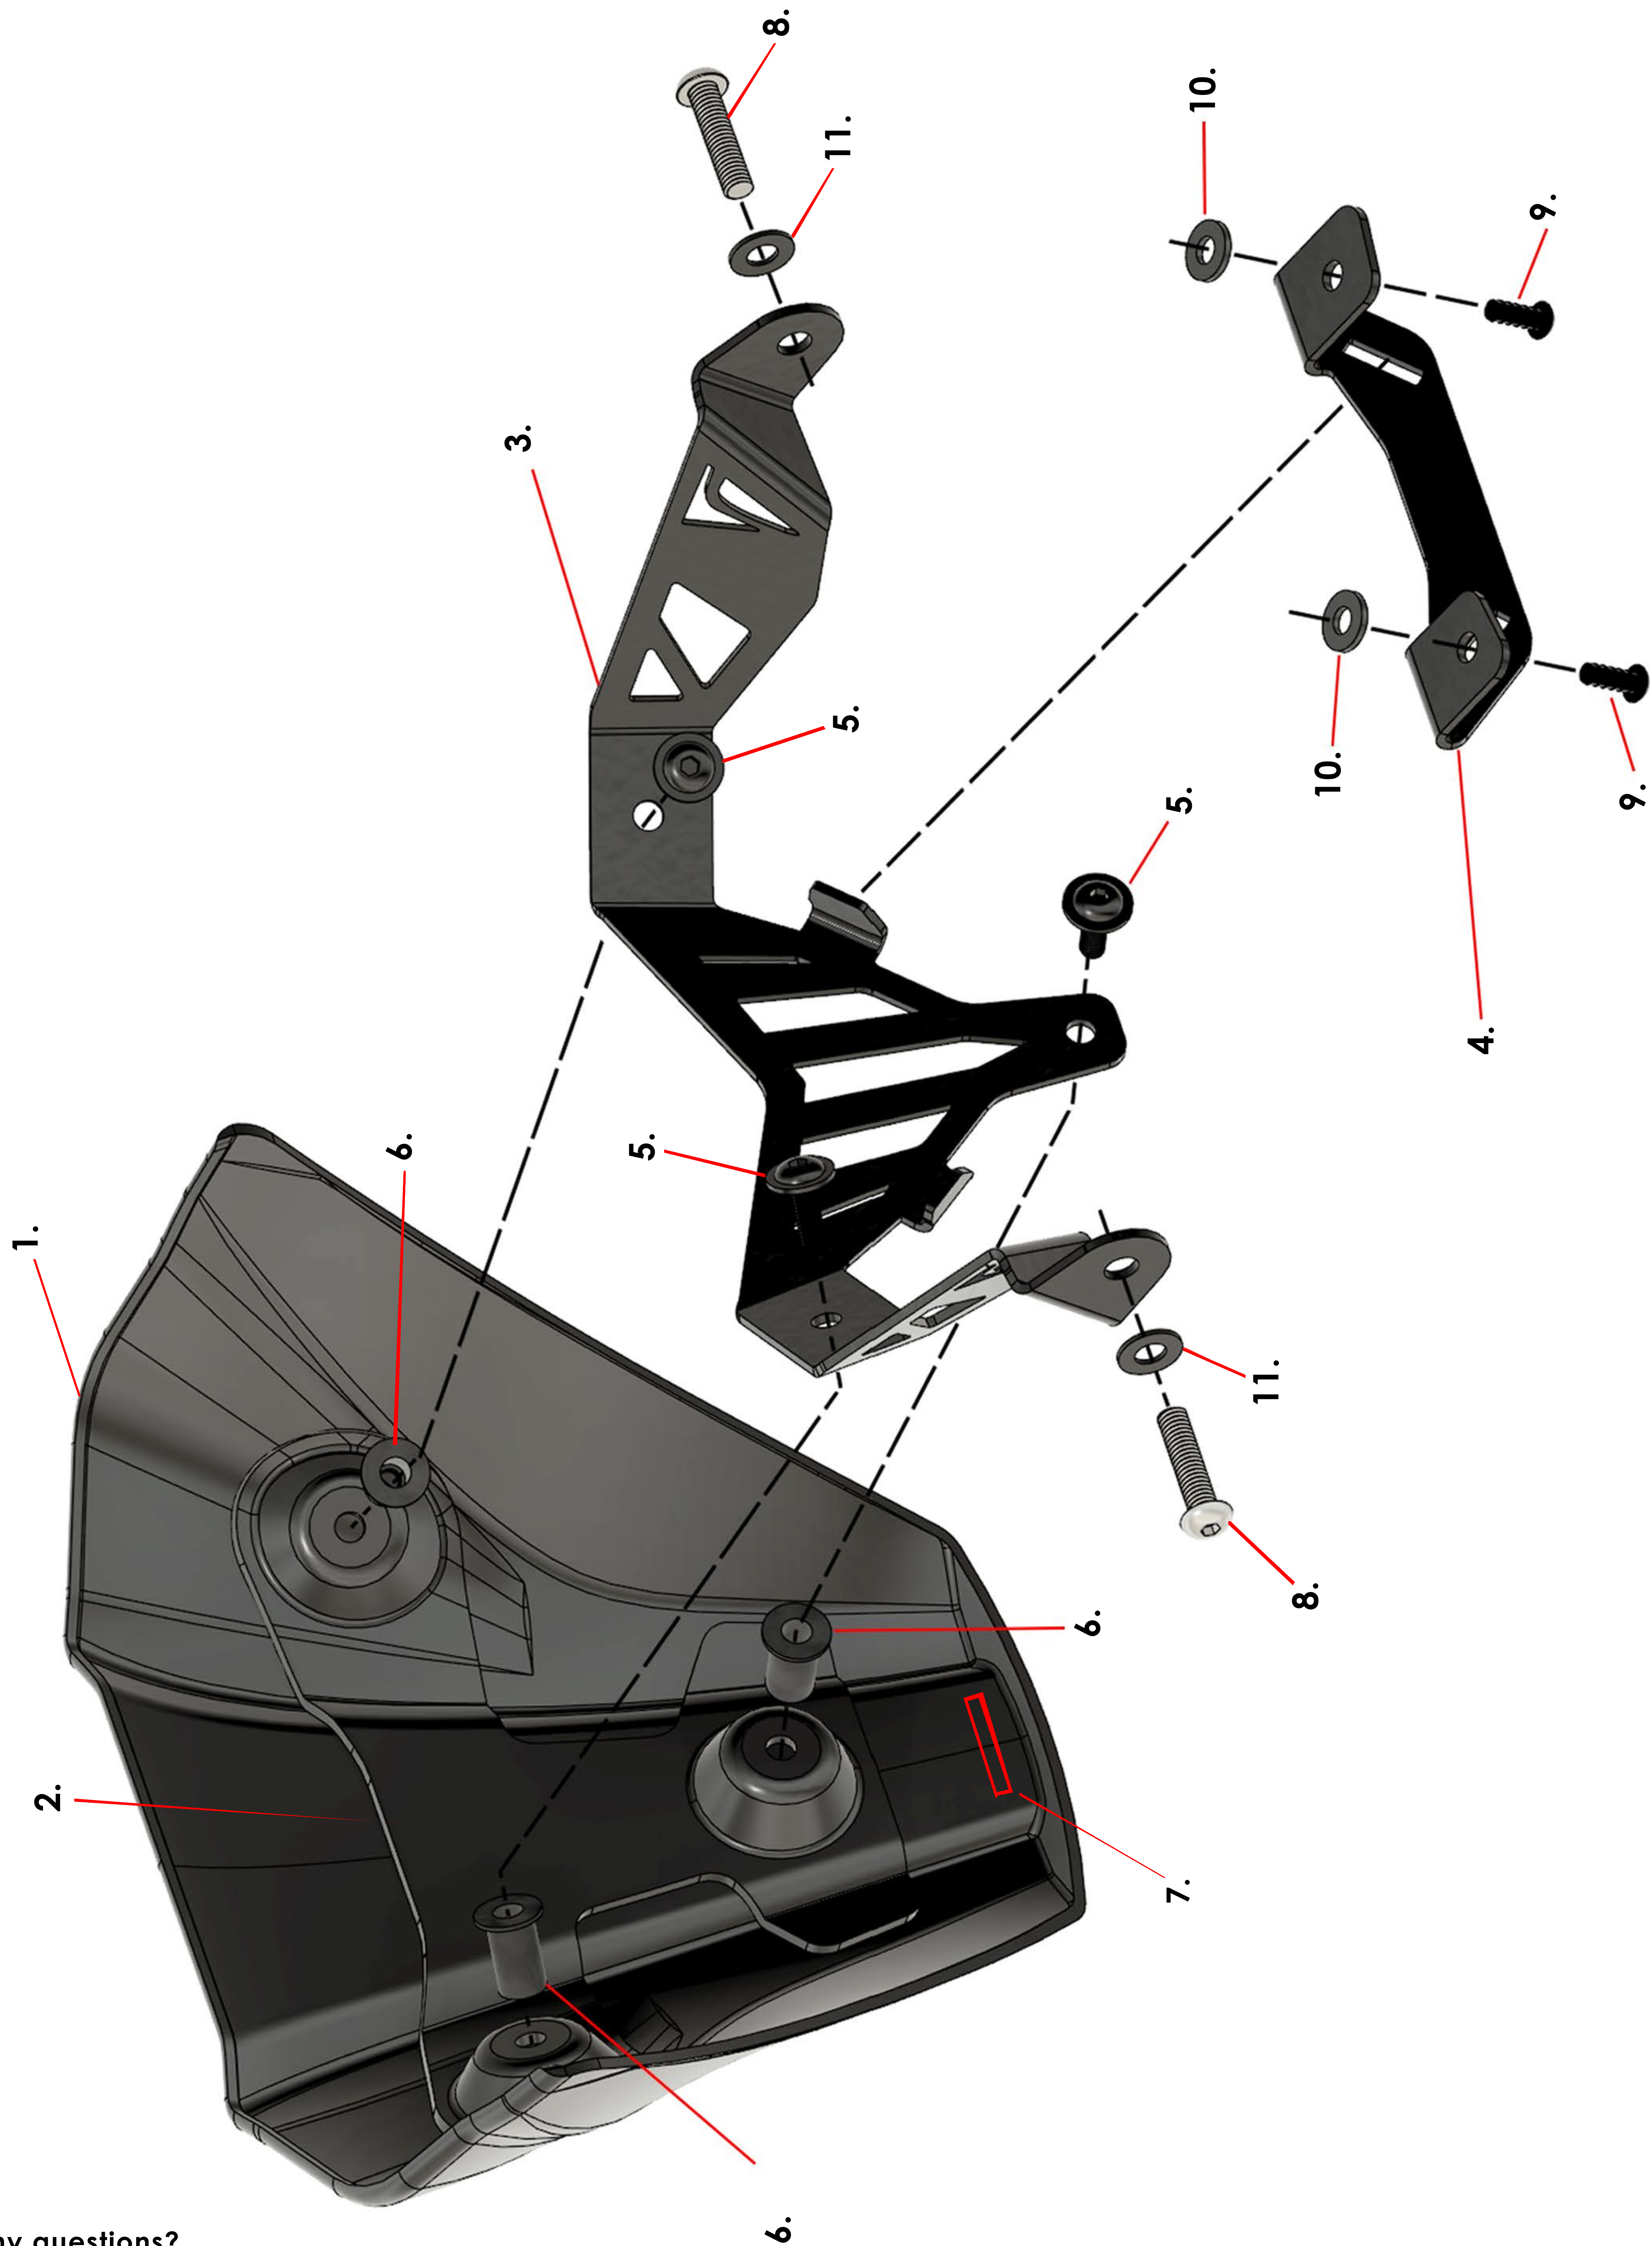

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!