

34970M BMW R 1300 GS Oxygen Sensor Covers 2023>Current Fitting Instructions

Kit Includes:

1.	X1	C34970A	Sensor Cover (LHS)
2.	X1	C34970B	Sensor Cover (RHS)

OEM Parts (From the Motorcycle):


3.	X4	M6 OEM Bolt
----	----	-------------

Assembly Instructions

- Begin by removing the M6 OEM Bolts (Item 3) as shown in '**FIG. 1**' and '**FIG. 2**'.
- Using the M6 OEM Bolts, loosely fit the Sensor Covers (Items 1 and 2) to the mounting points shown in '**FIG. 1**' and '**FIG. 2**'.
- Once the Sensor Covers are in the correct position, fully tighten all fixings.

Please Note: We advise that all fixings are checked periodically.


FIG. 1

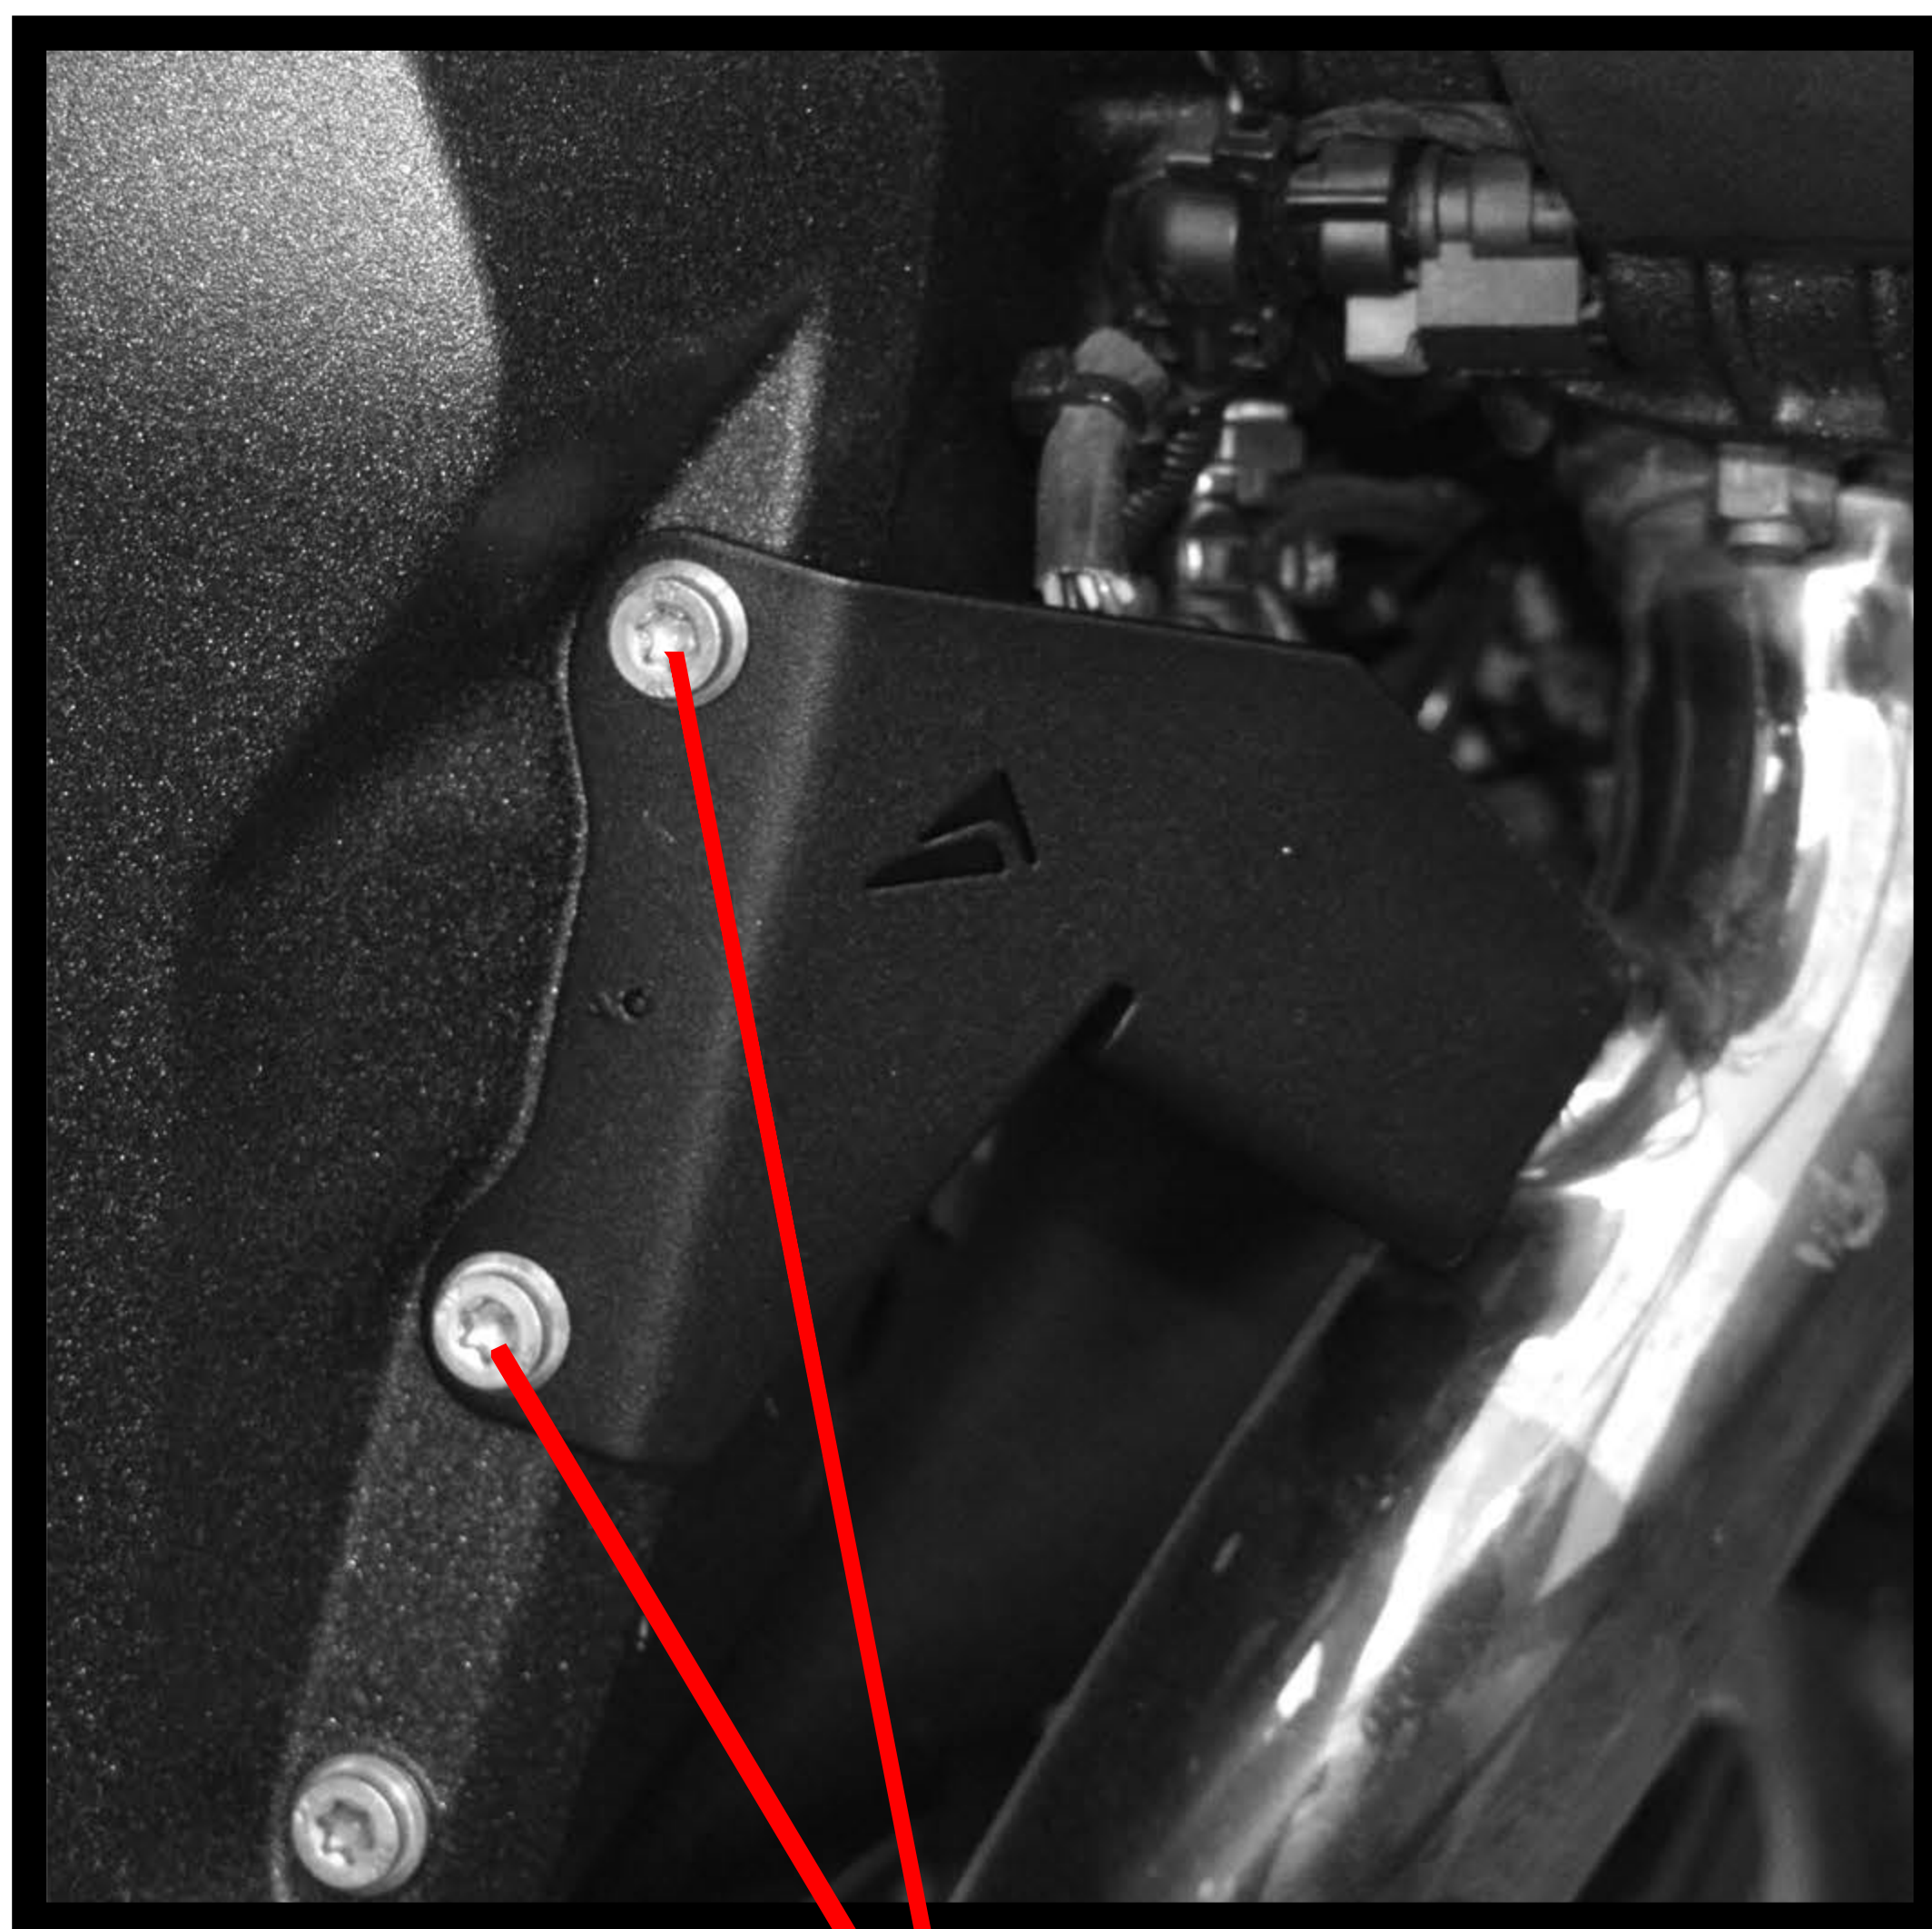

LHS

M6 OEM Bolts and Mounting Points

FIG. 2

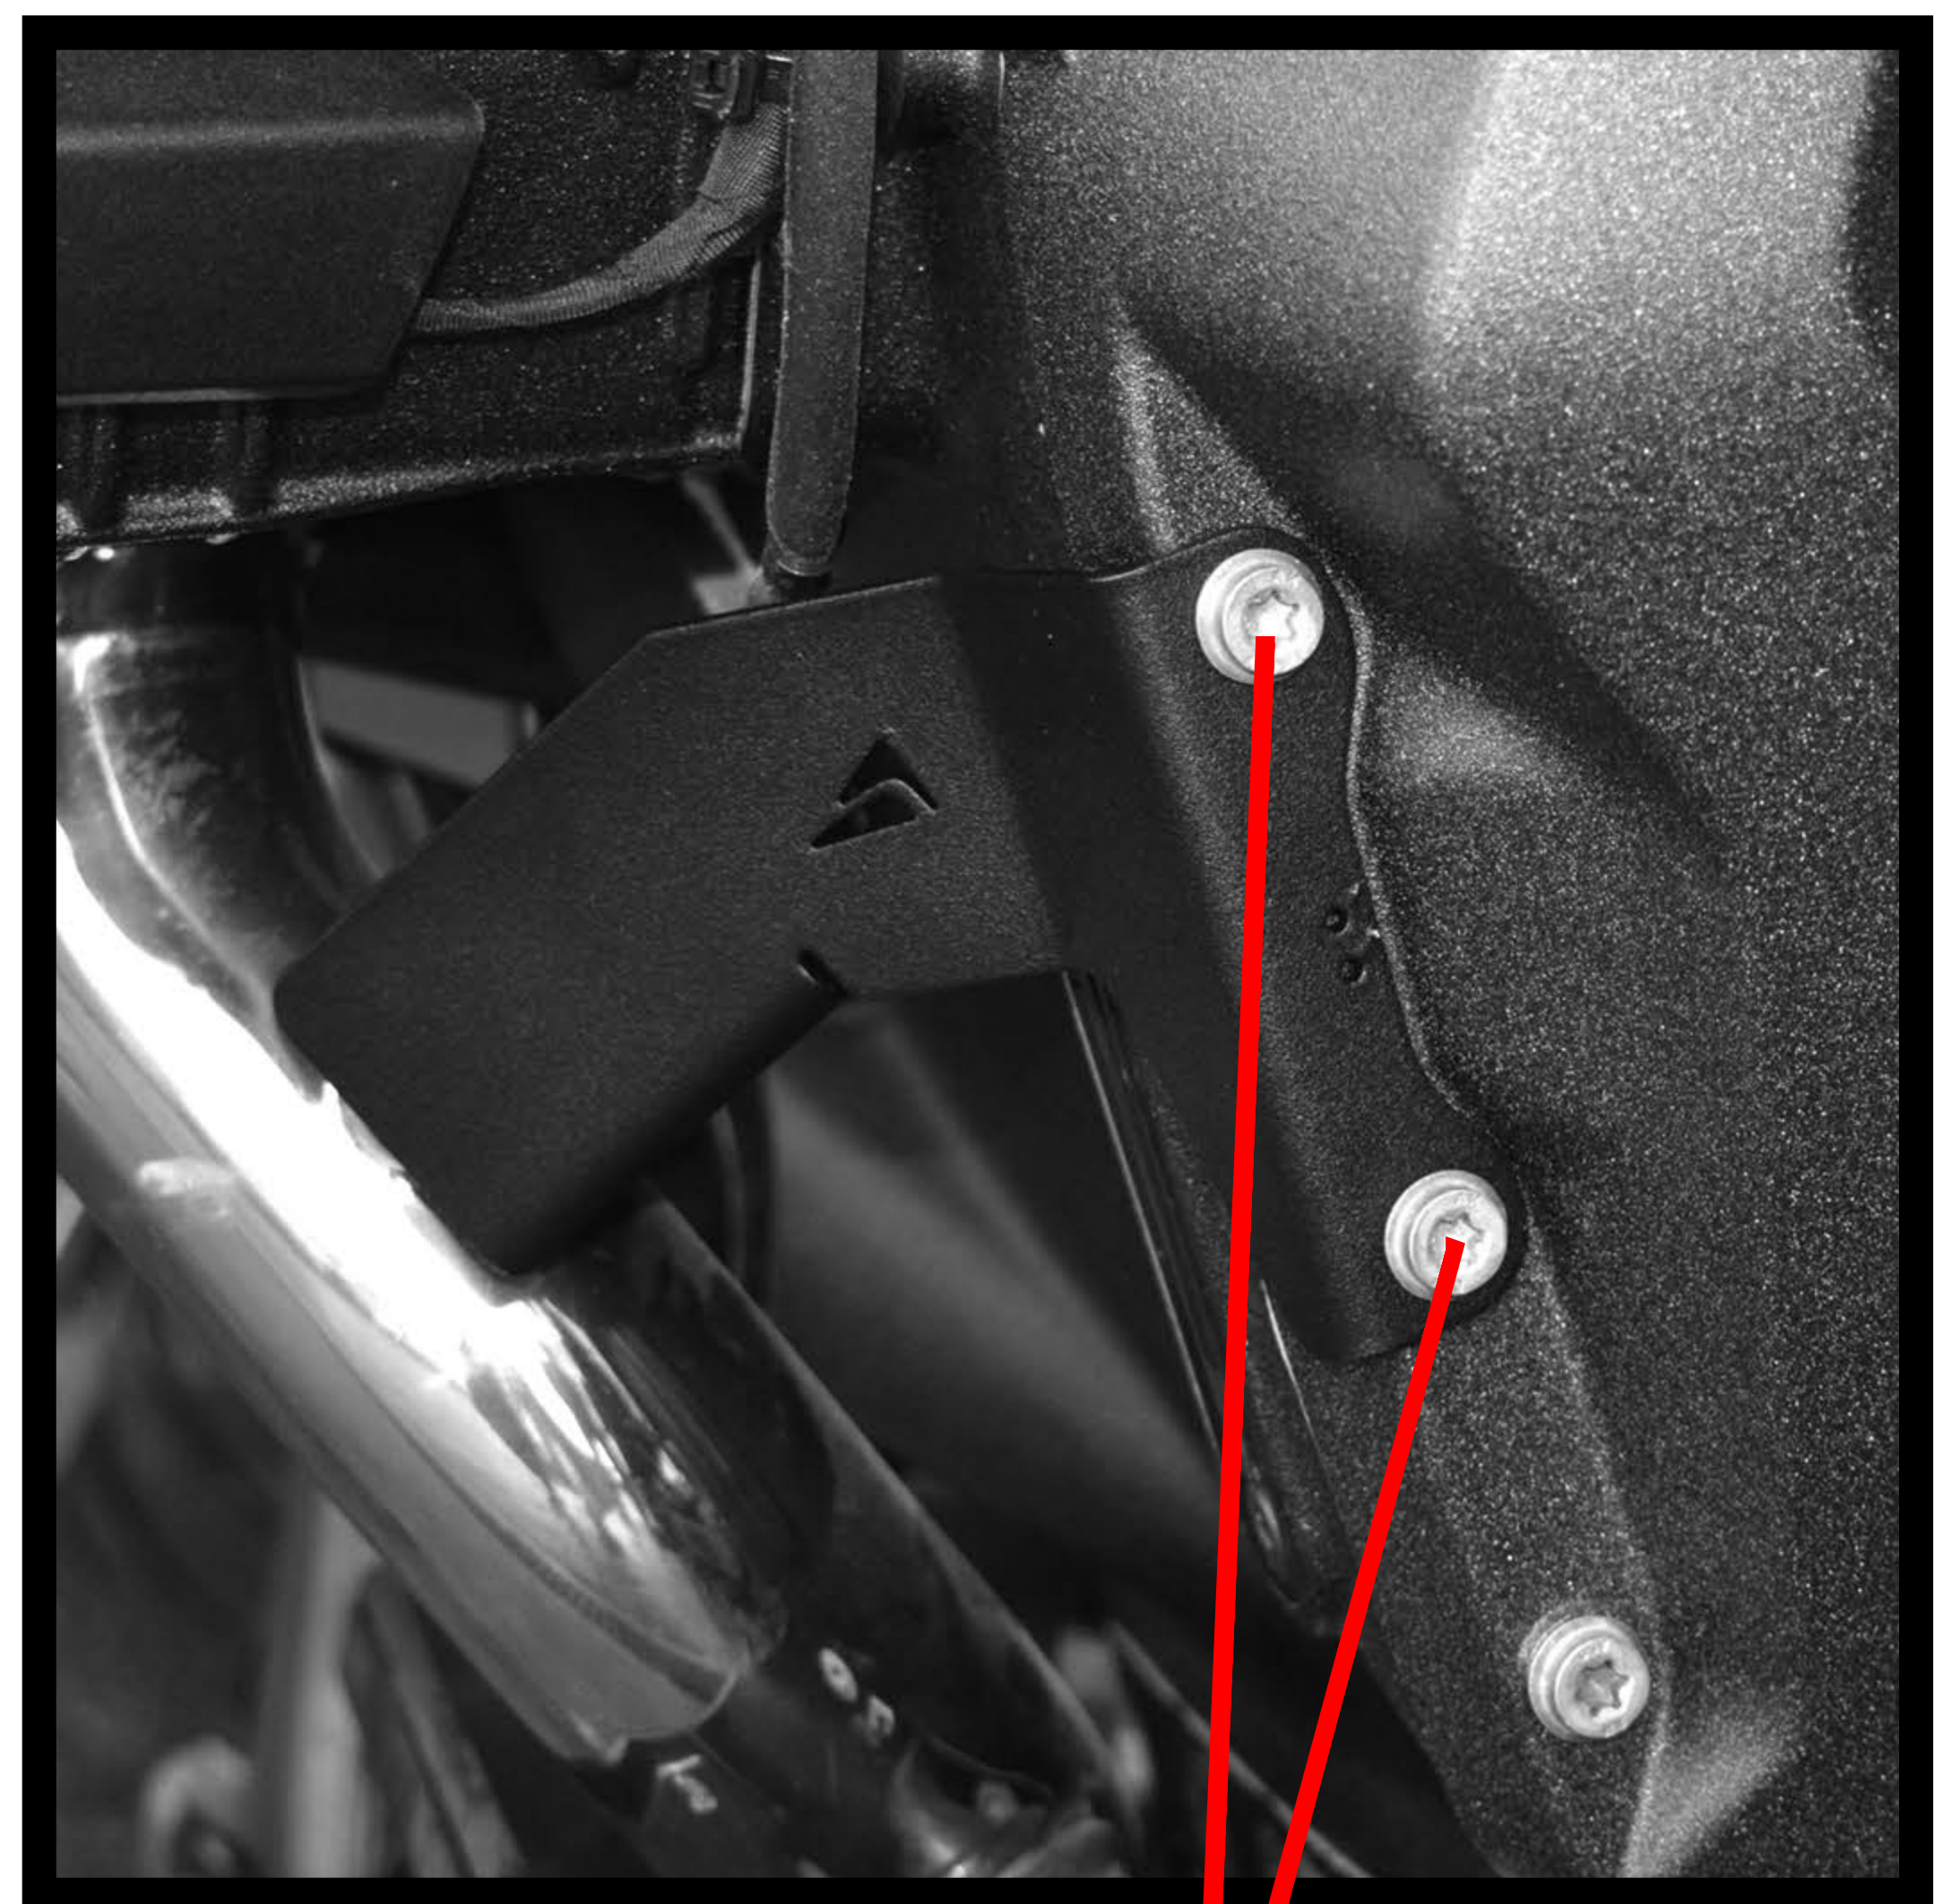

RHS

M6 OEM Bolts and Mounting Points

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!