



814850 BMW F750GS & F850GS Shock Shield Instructions

Kit Includes:

1X	Moulding	C814850M	
2X	M6 X 25mm Bolts	CBOL0220	
2X	M6 Nyloc Nuts	CNUT0200	
2X	Small Washers	CWAS0221	
2X	Spacers	CSPA0022	
1X	Foam Strip	CFOA0001	Pre-fitted

- **Fig 1** - illustrates the OEM rubber shock shield, remove the plastic pins highlighted **RED**.
- **Fig 2** - side profile showing the fitment of the Pyramid shock shield.

Check fixings periodically.

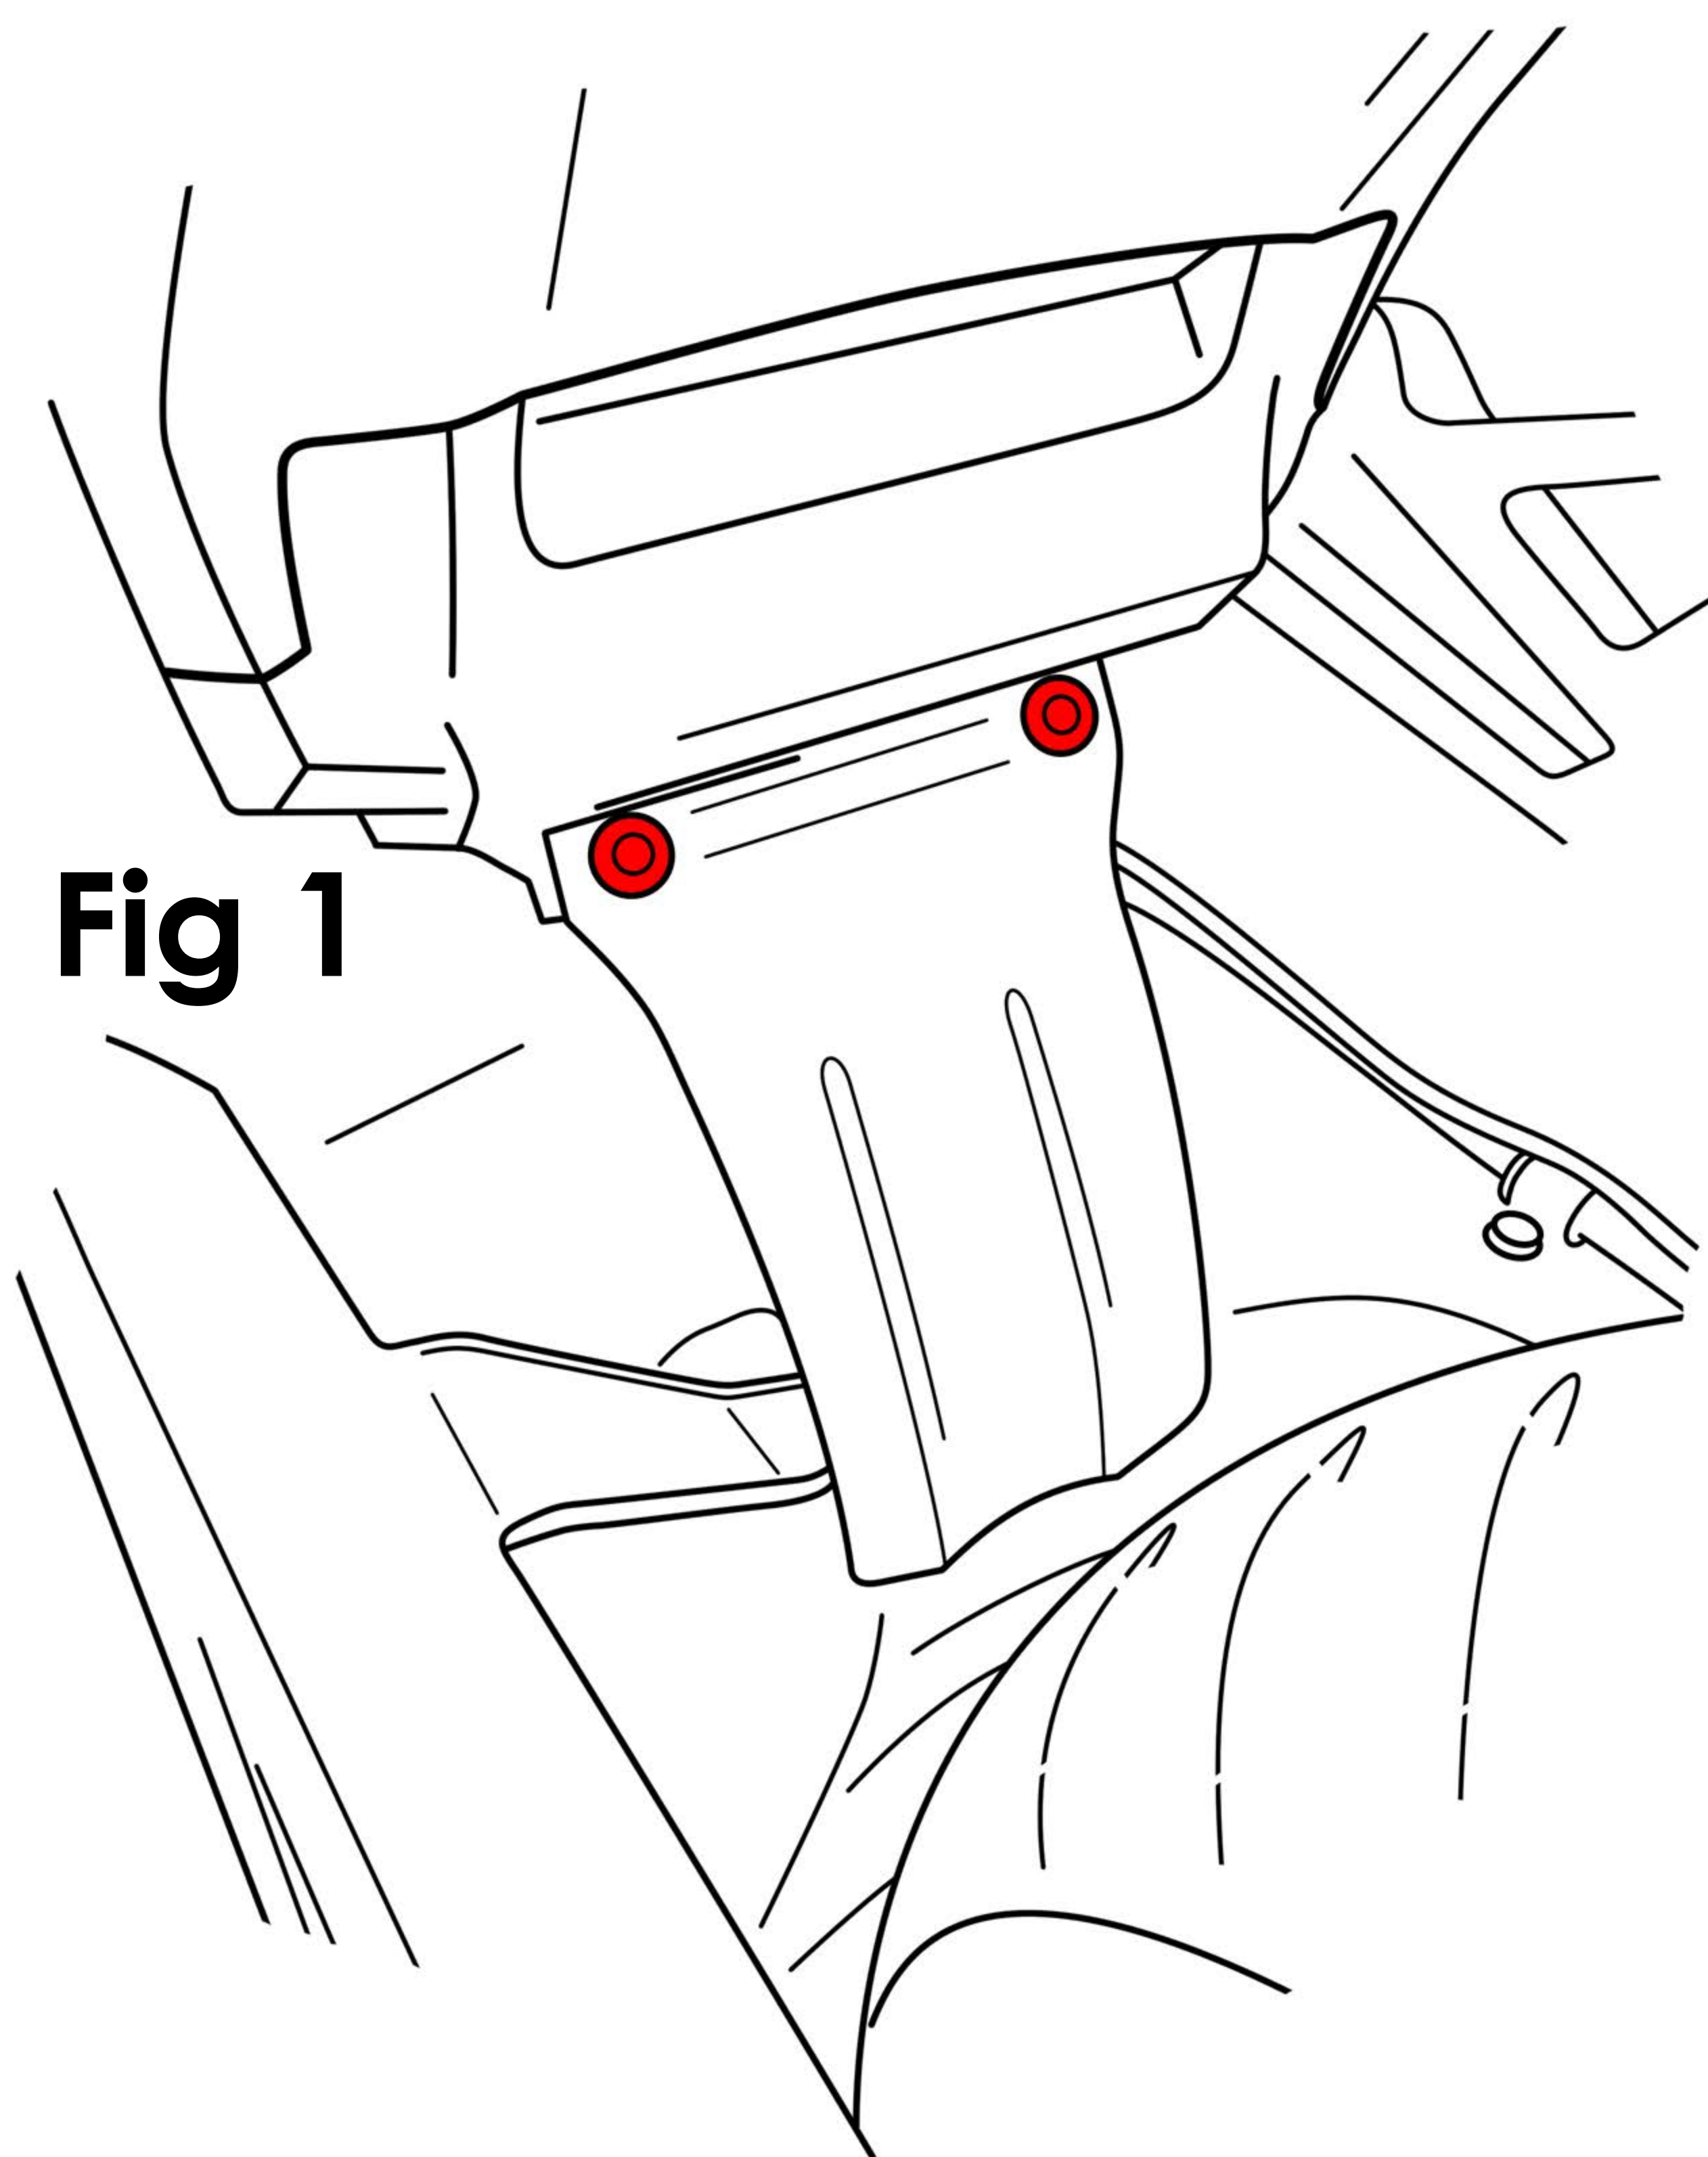


Fig 1

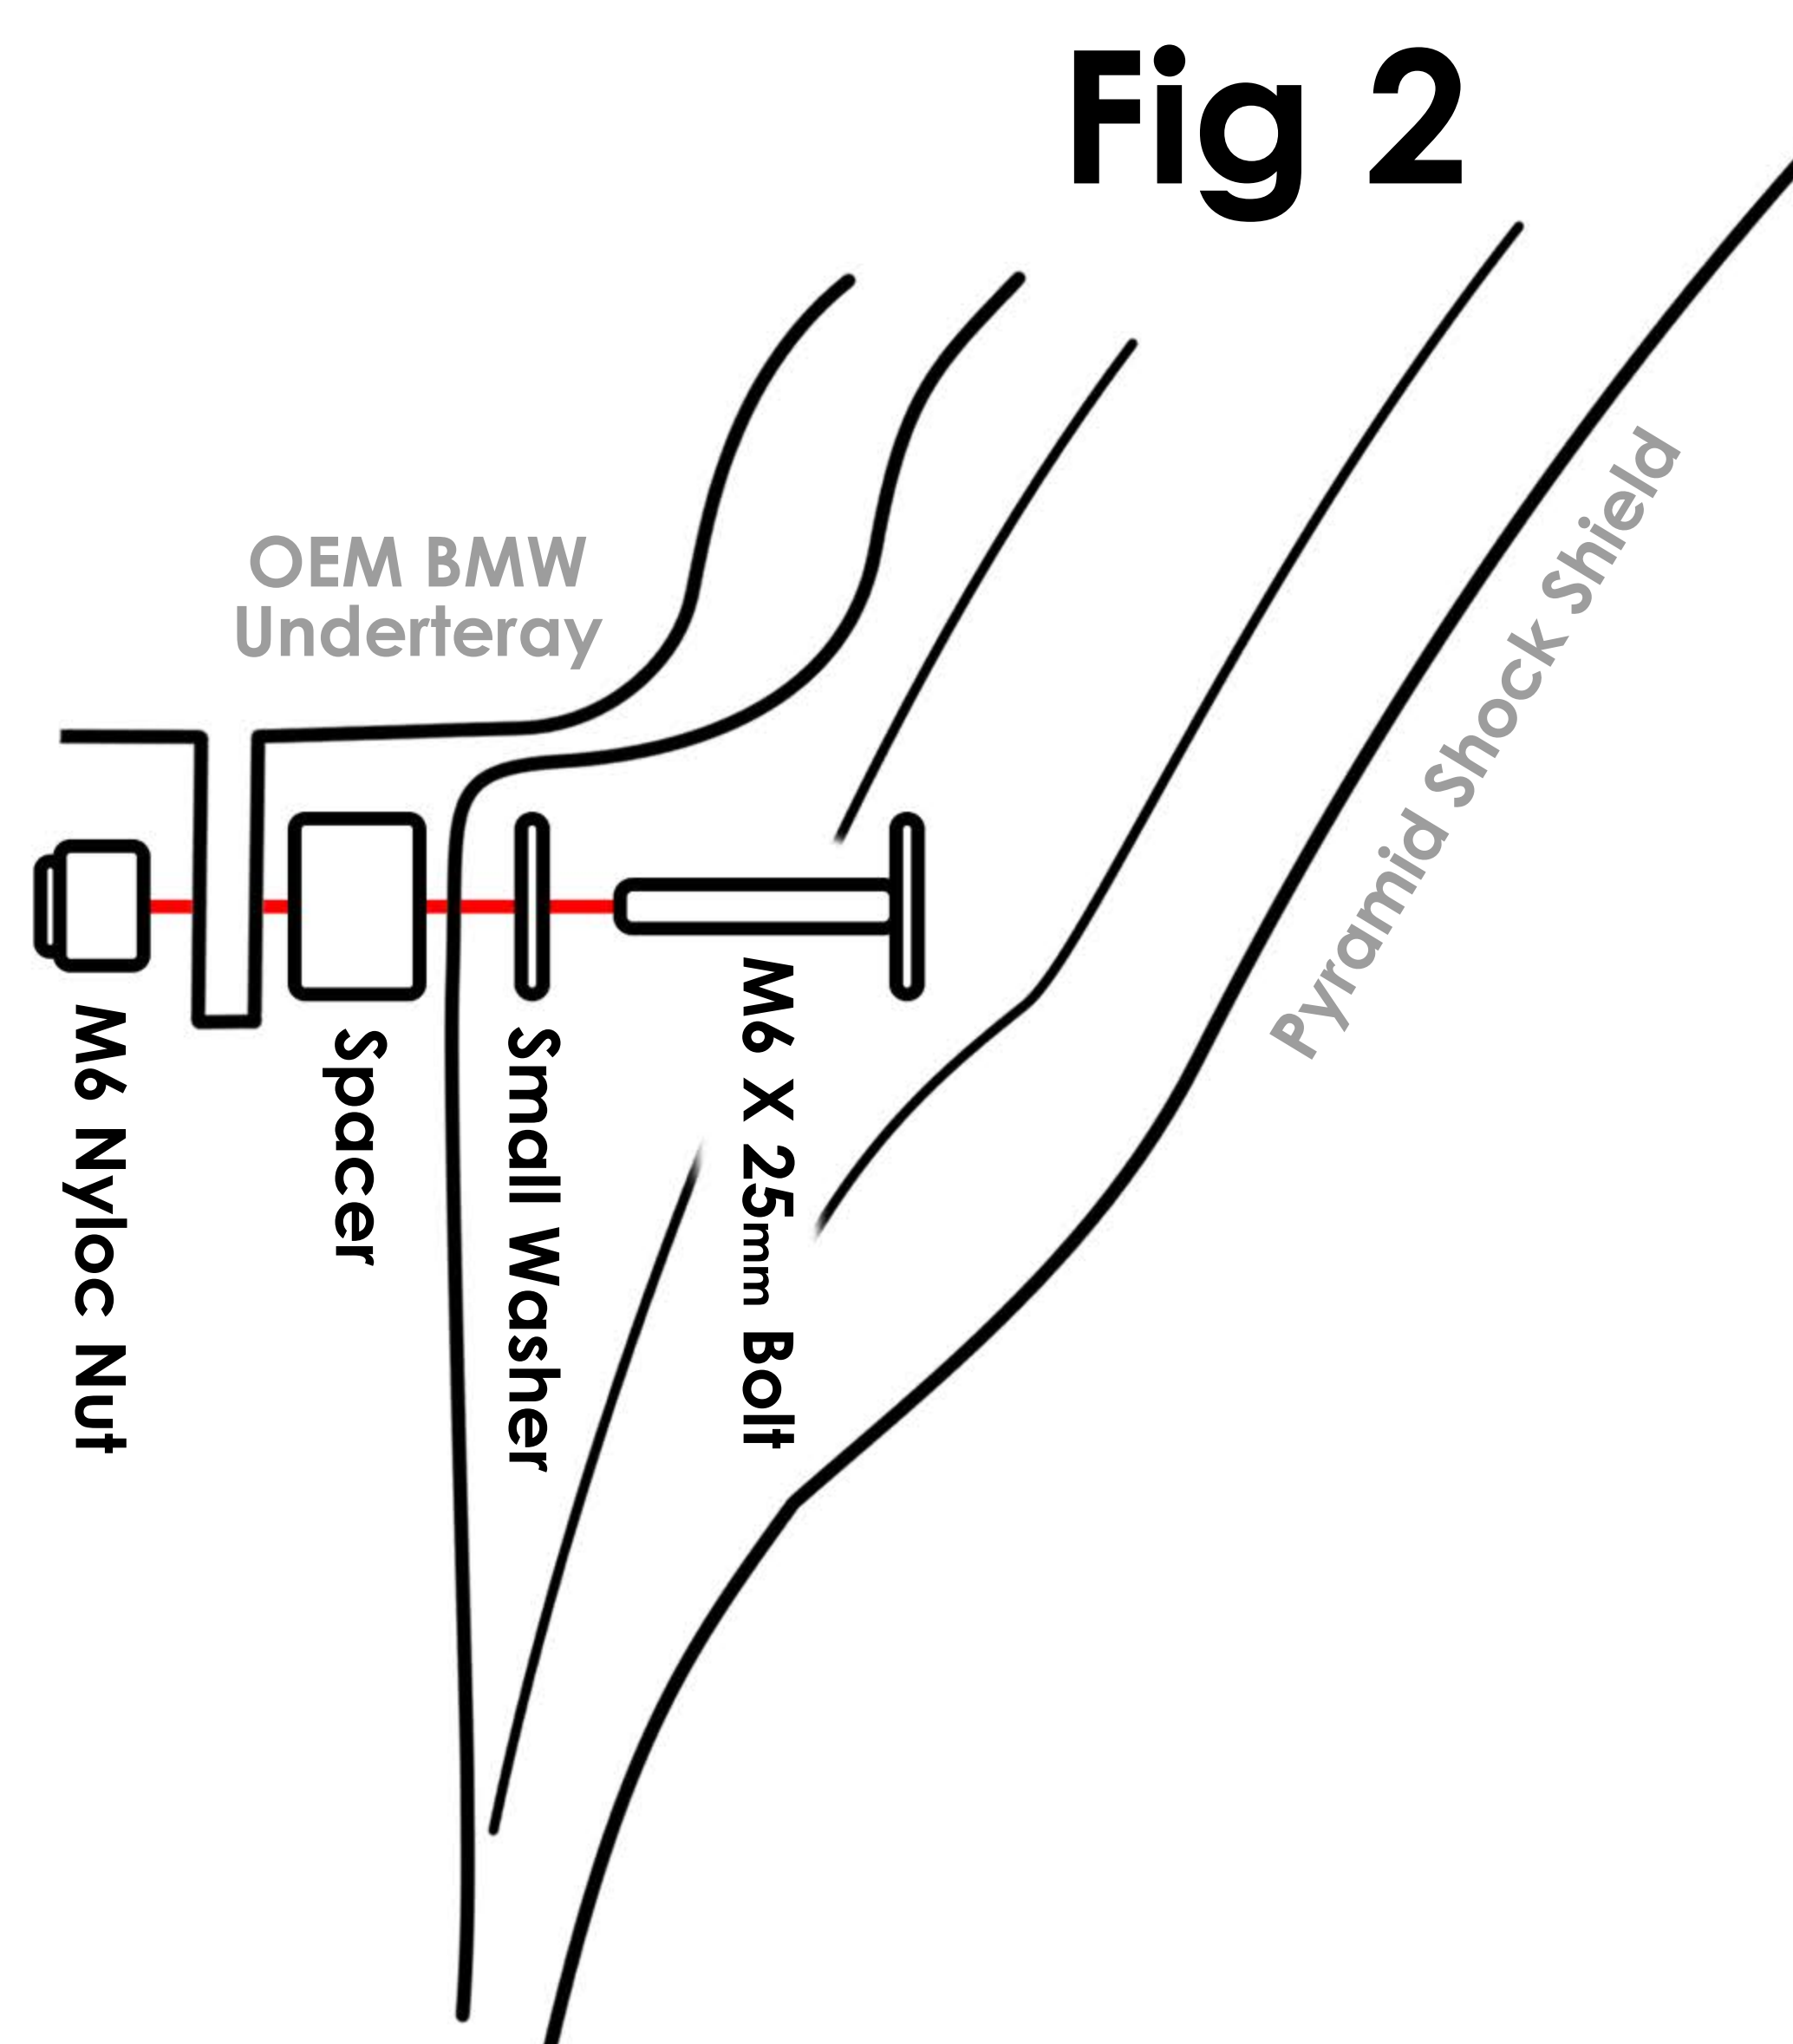


Fig 2



sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

