

22147 Yamaha MT-09 Infill Panels 2024> Fitting Instructions

Kit Includes:

1.	X1	C22147A	Infill Panel 'A' (LHS)
2.	X1	C22147B	Infill Panel 'B' (RHS)
3.	X1	CFK22147A	Mounting Bracket 'A' (LHS)
4.	X2	CFK22147B	Mounting Bracket 'B' (Small Pair)
5.	X1	CFK22147C	Mounting Bracket 'C' (RHS)
6.	X2	CBOLM60007	M6 X 12mm Flanged-Button Bolt
7.	X2	CNUTM60008	M6 Cage Nut
8.	X1	CFOA0002	Foam Strip (cut to 60mm length)
9.	X2	CCAP0002	Bolt Cap

OEM Fittings:

10.	X4	OEM Fixing	OEM M6 Allen Bolt
11.	X2	OEM Fixing	OEM M10 Torx Bolt

The installation process is replicated on both sides. This consists of the relevant panel and fixing bracket, together with an equal share of the supplied fixings.

Please note: LHS denotes the left-hand side from the rider's point of view and likewise RHS denotes the right-hand side.

Assembly Instructions

- Begin by removing the seats from the motorcycle to access the mounting points.
- Remove the two OEM M6 allen bolts at the top of the subframe (See **Fig 1** below).
- Remove the OEM M10 torx bolt from the bottom of the subframe (See **Fig 1** below).


Note: Fig 2 and 3 illustrate how the RHS Pyramid rear infill panel attaches to the motorcycle.

- Trim and attach the foam strip in the locations shown (see **Fig 2**). This foam strip protects the infill panel from the bracket and prevents any knocking during riding.
- Fit M6 cage nuts onto mounting bracket 'B' (see **Fig 2**). **Note:** Both mounting brackets 'B' are identical for the left and right sides of the motorcycle.
- Now fit the infill panel to the motorcycle using the rest of the fittings shown in **Fig 2**.

Note: Follow the same steps for the opposite side of the motorcycle.

- The two bolt caps supplied can be fitted to the visible bolts.

Please Note: We advise that all fixings are checked periodically.

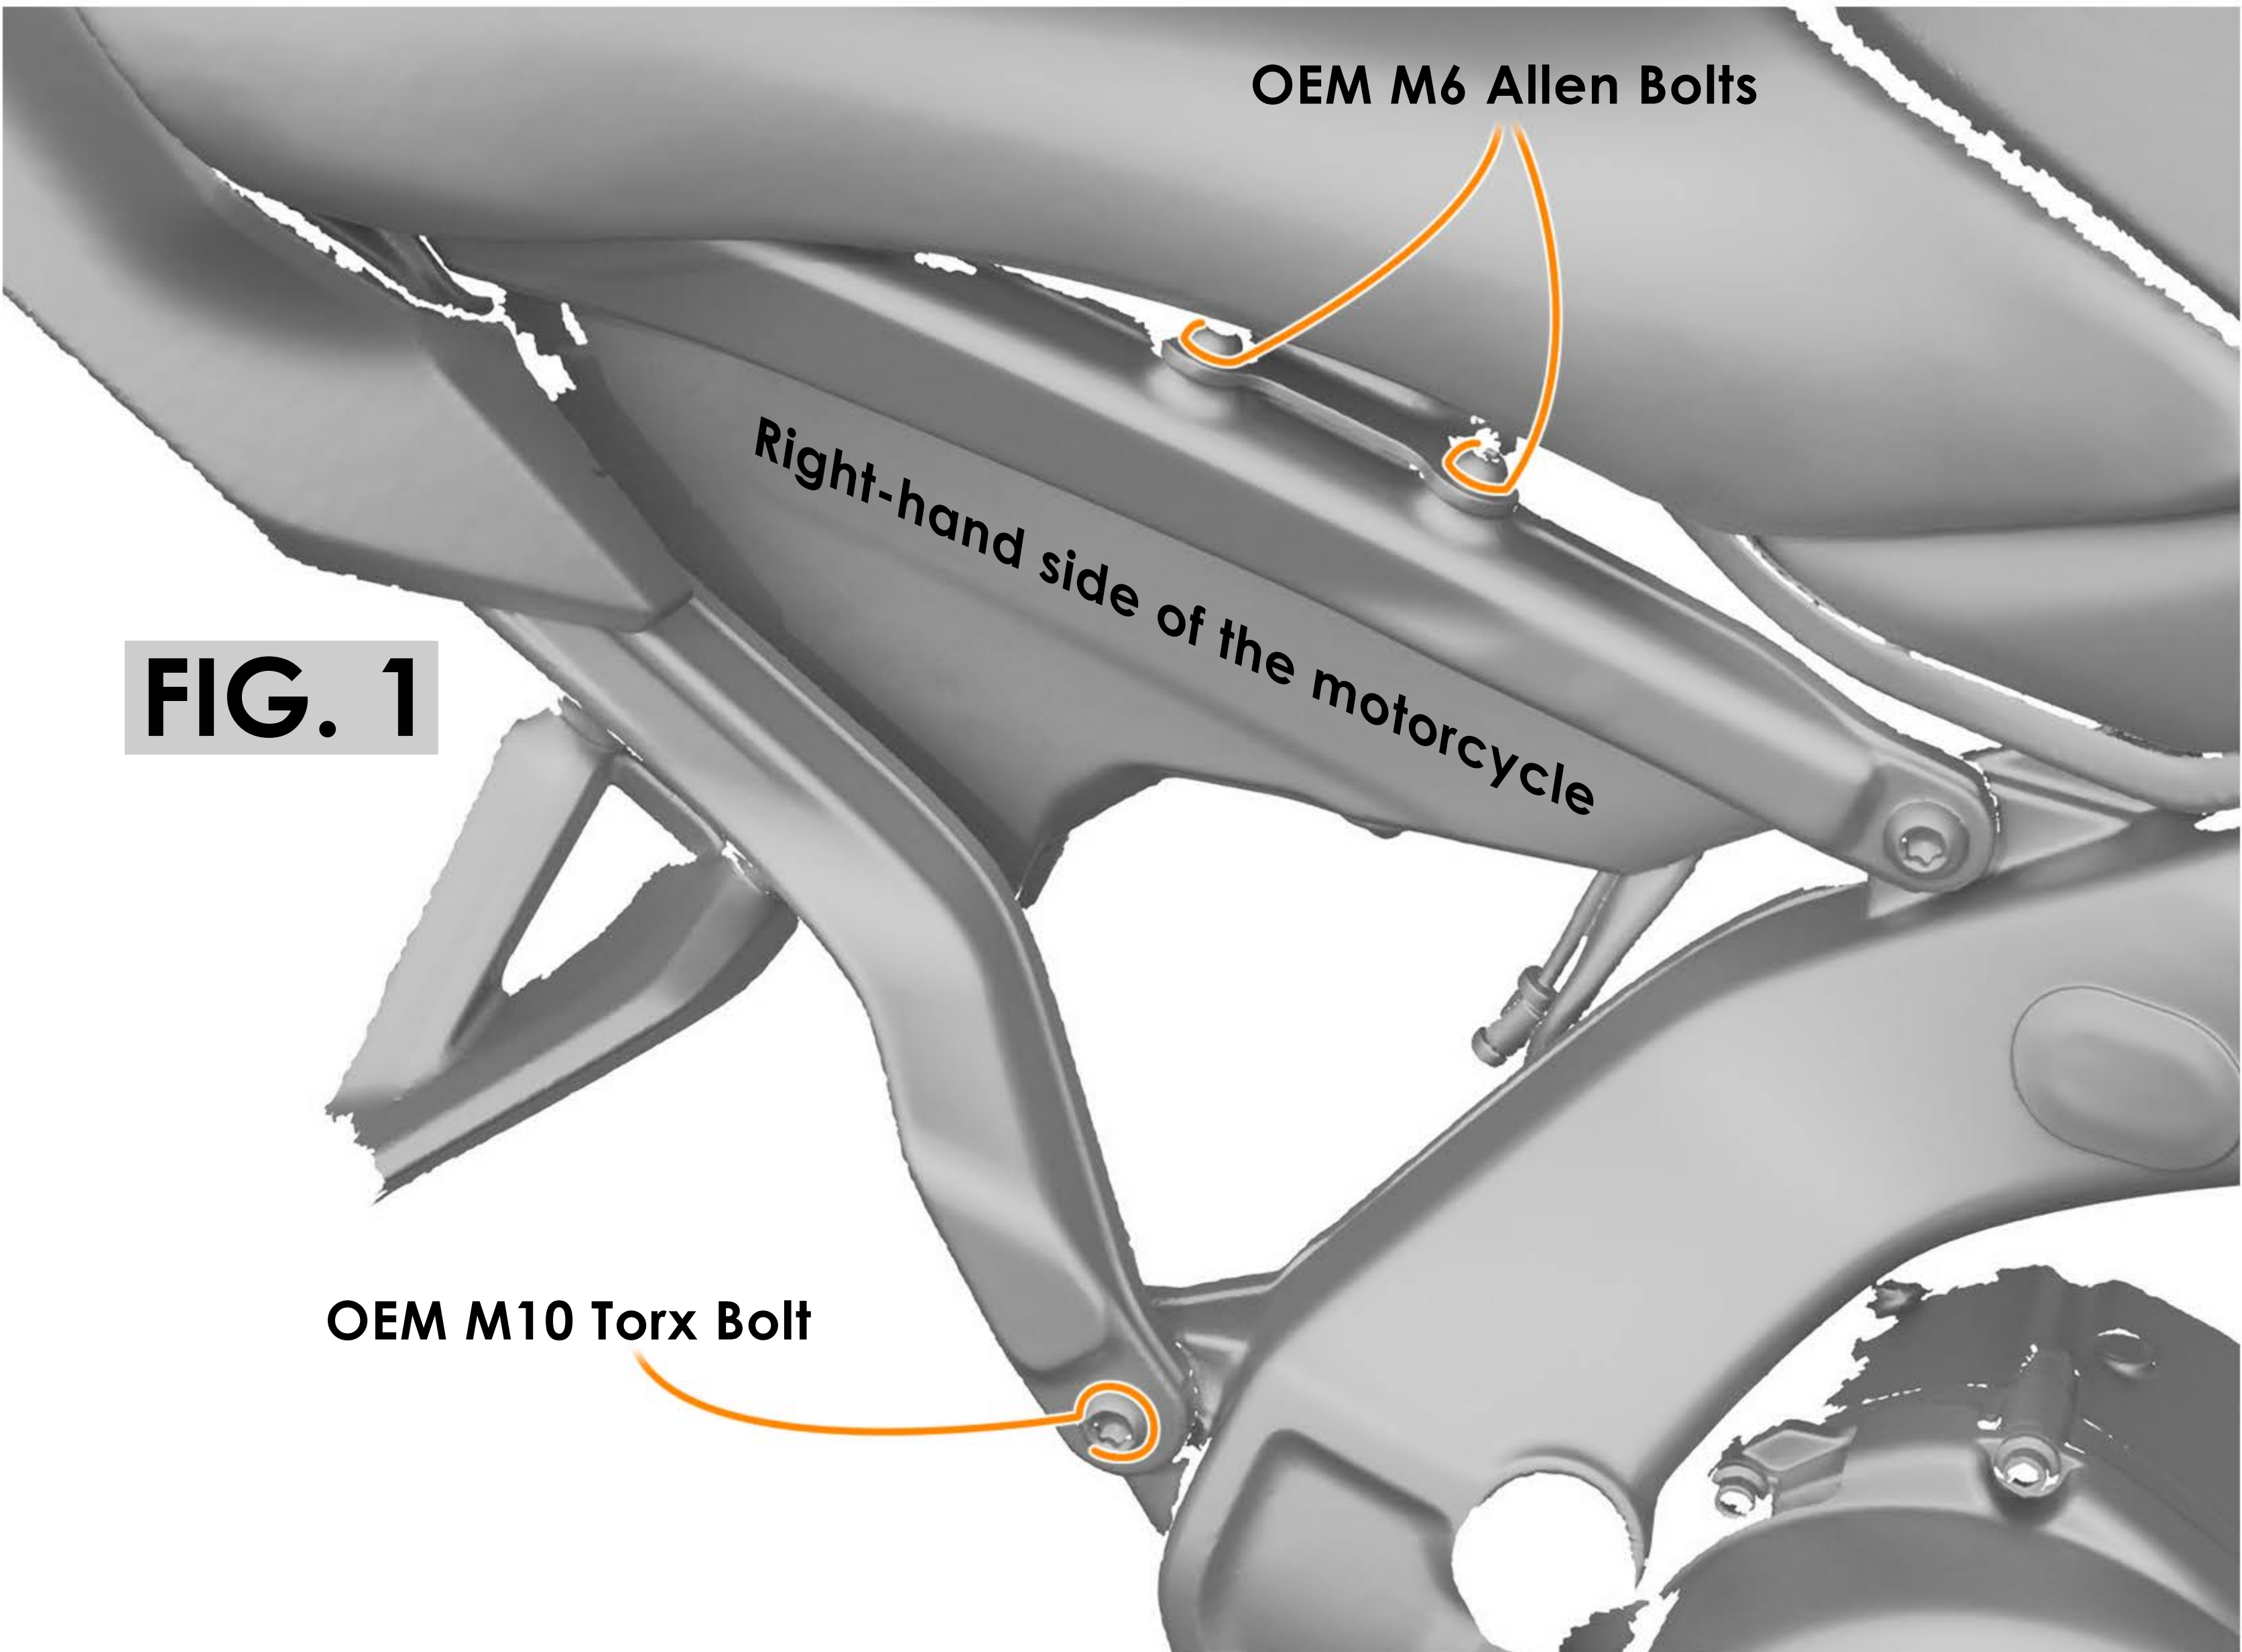


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and
feel free to leave us a review!

22147 Yamaha MT-09 Infill Panels 2024> Fitting Instructions

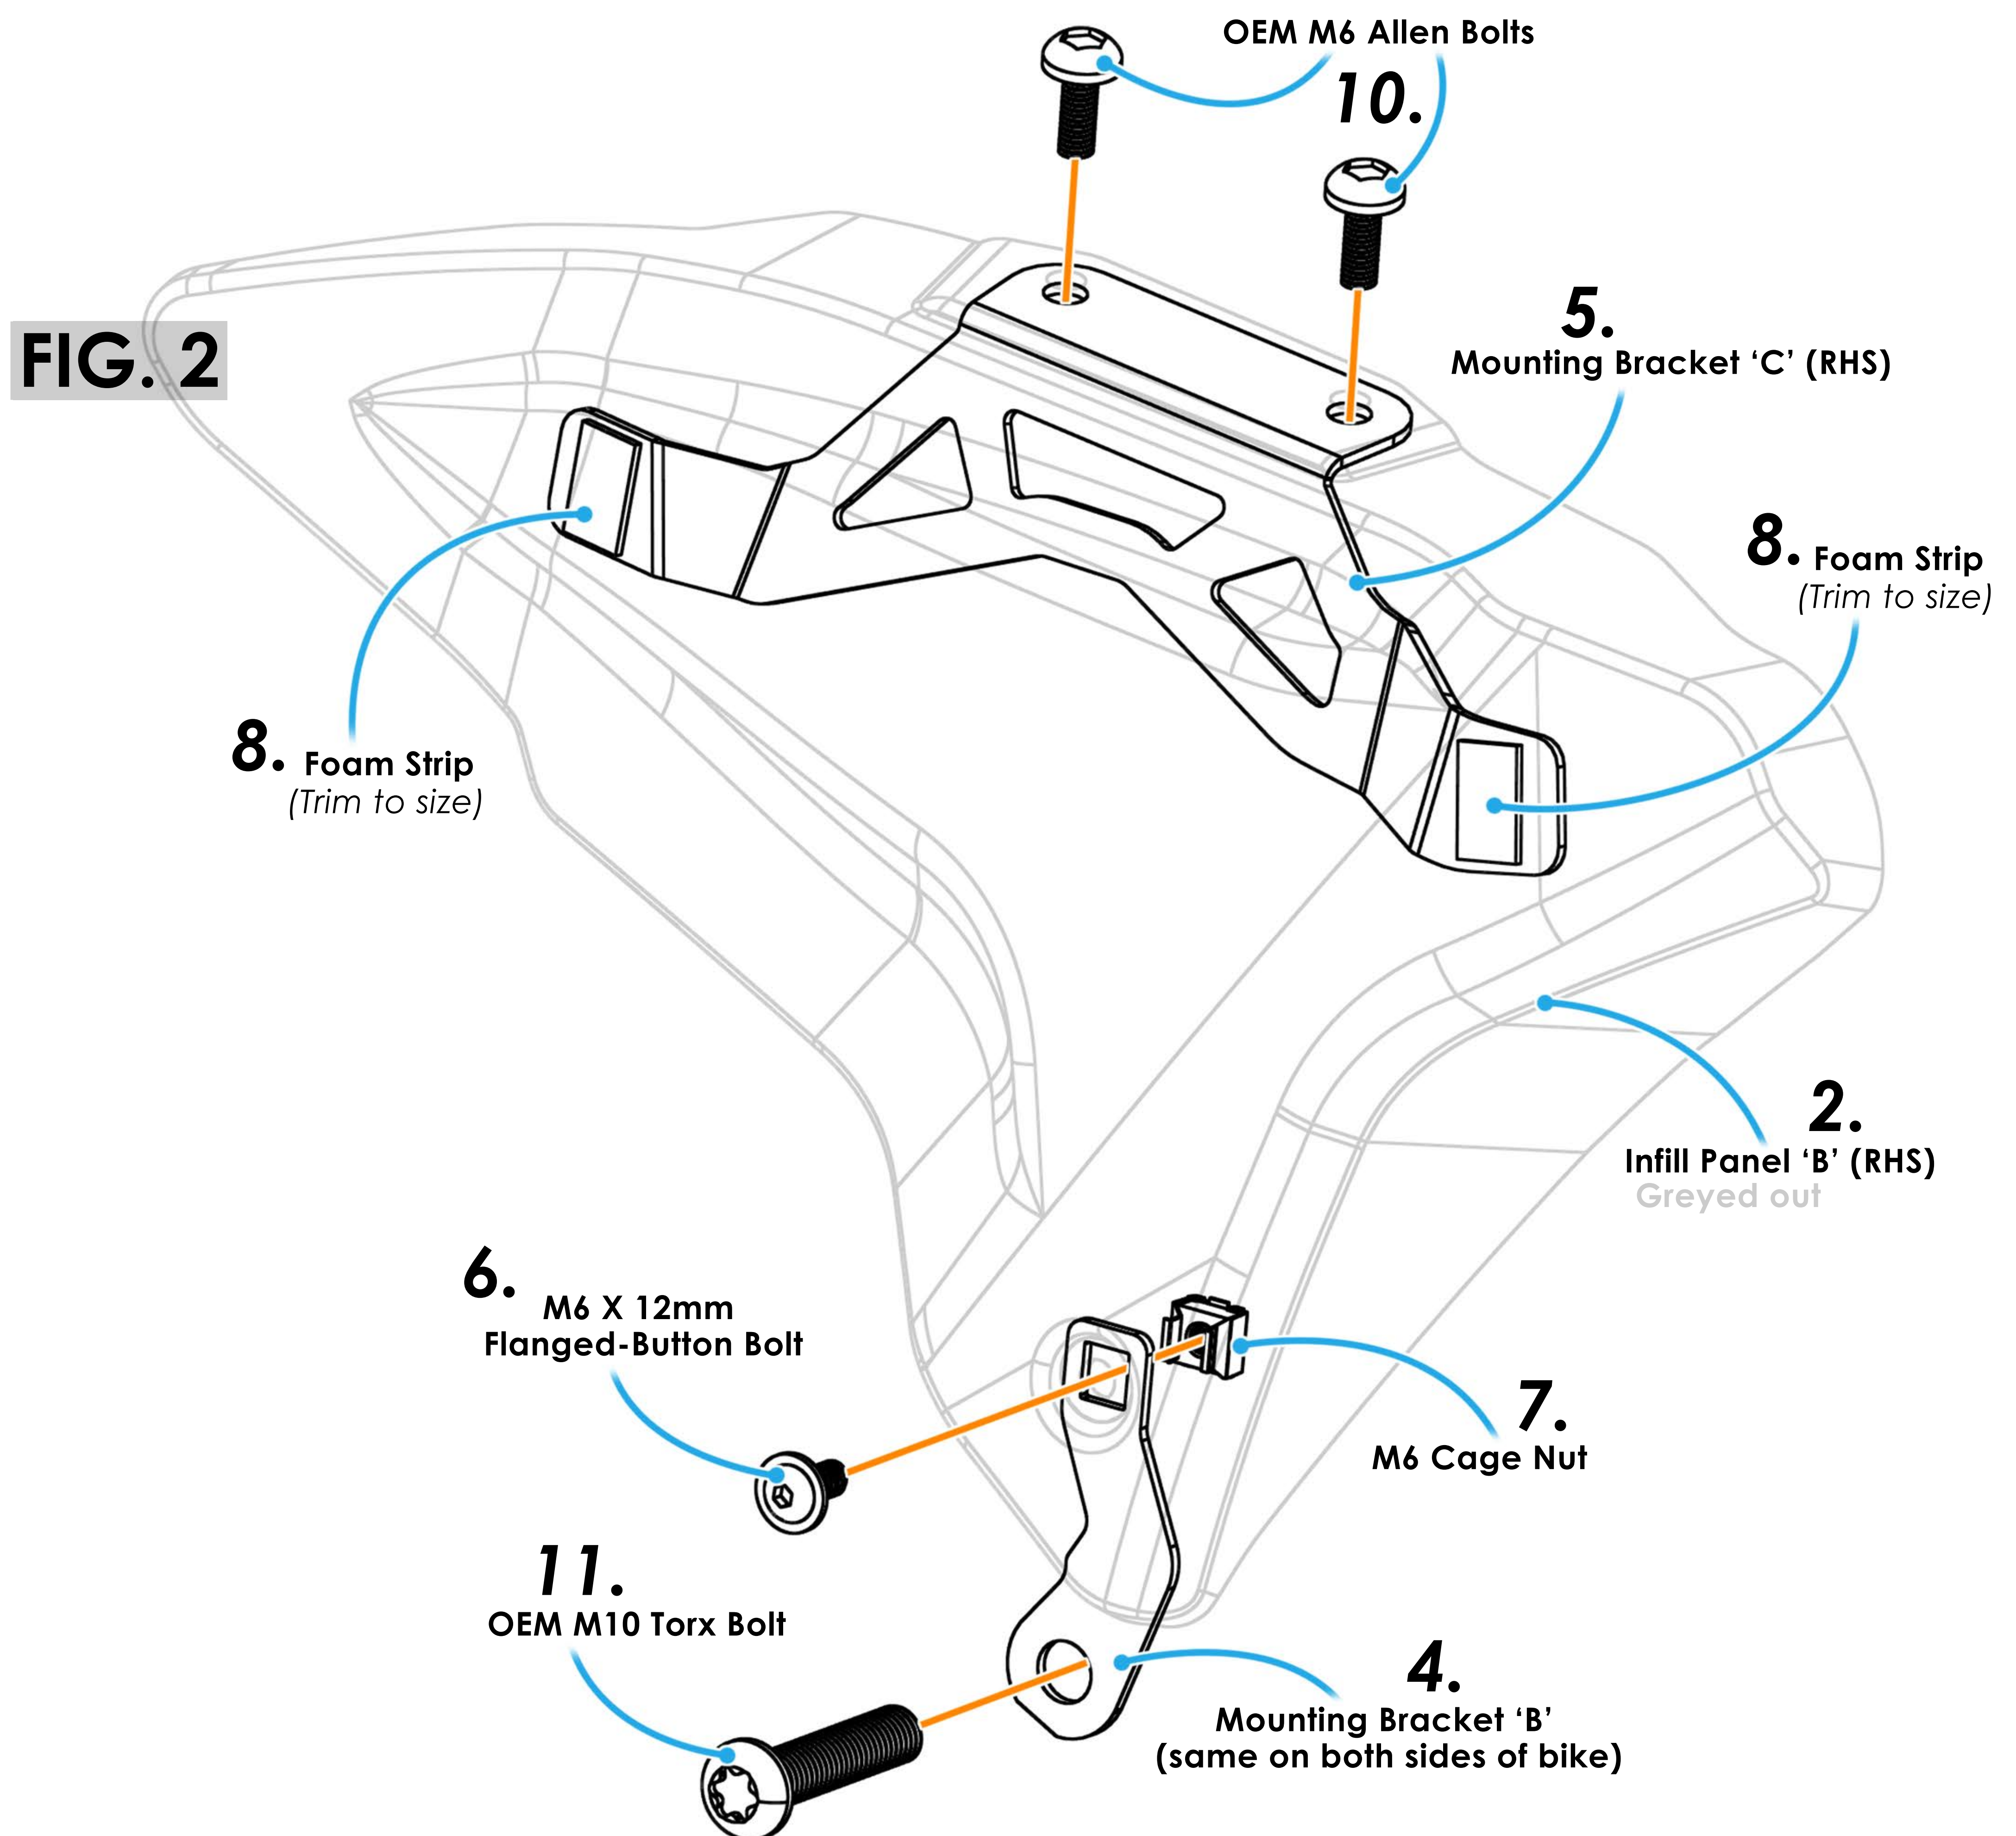

Final fitment

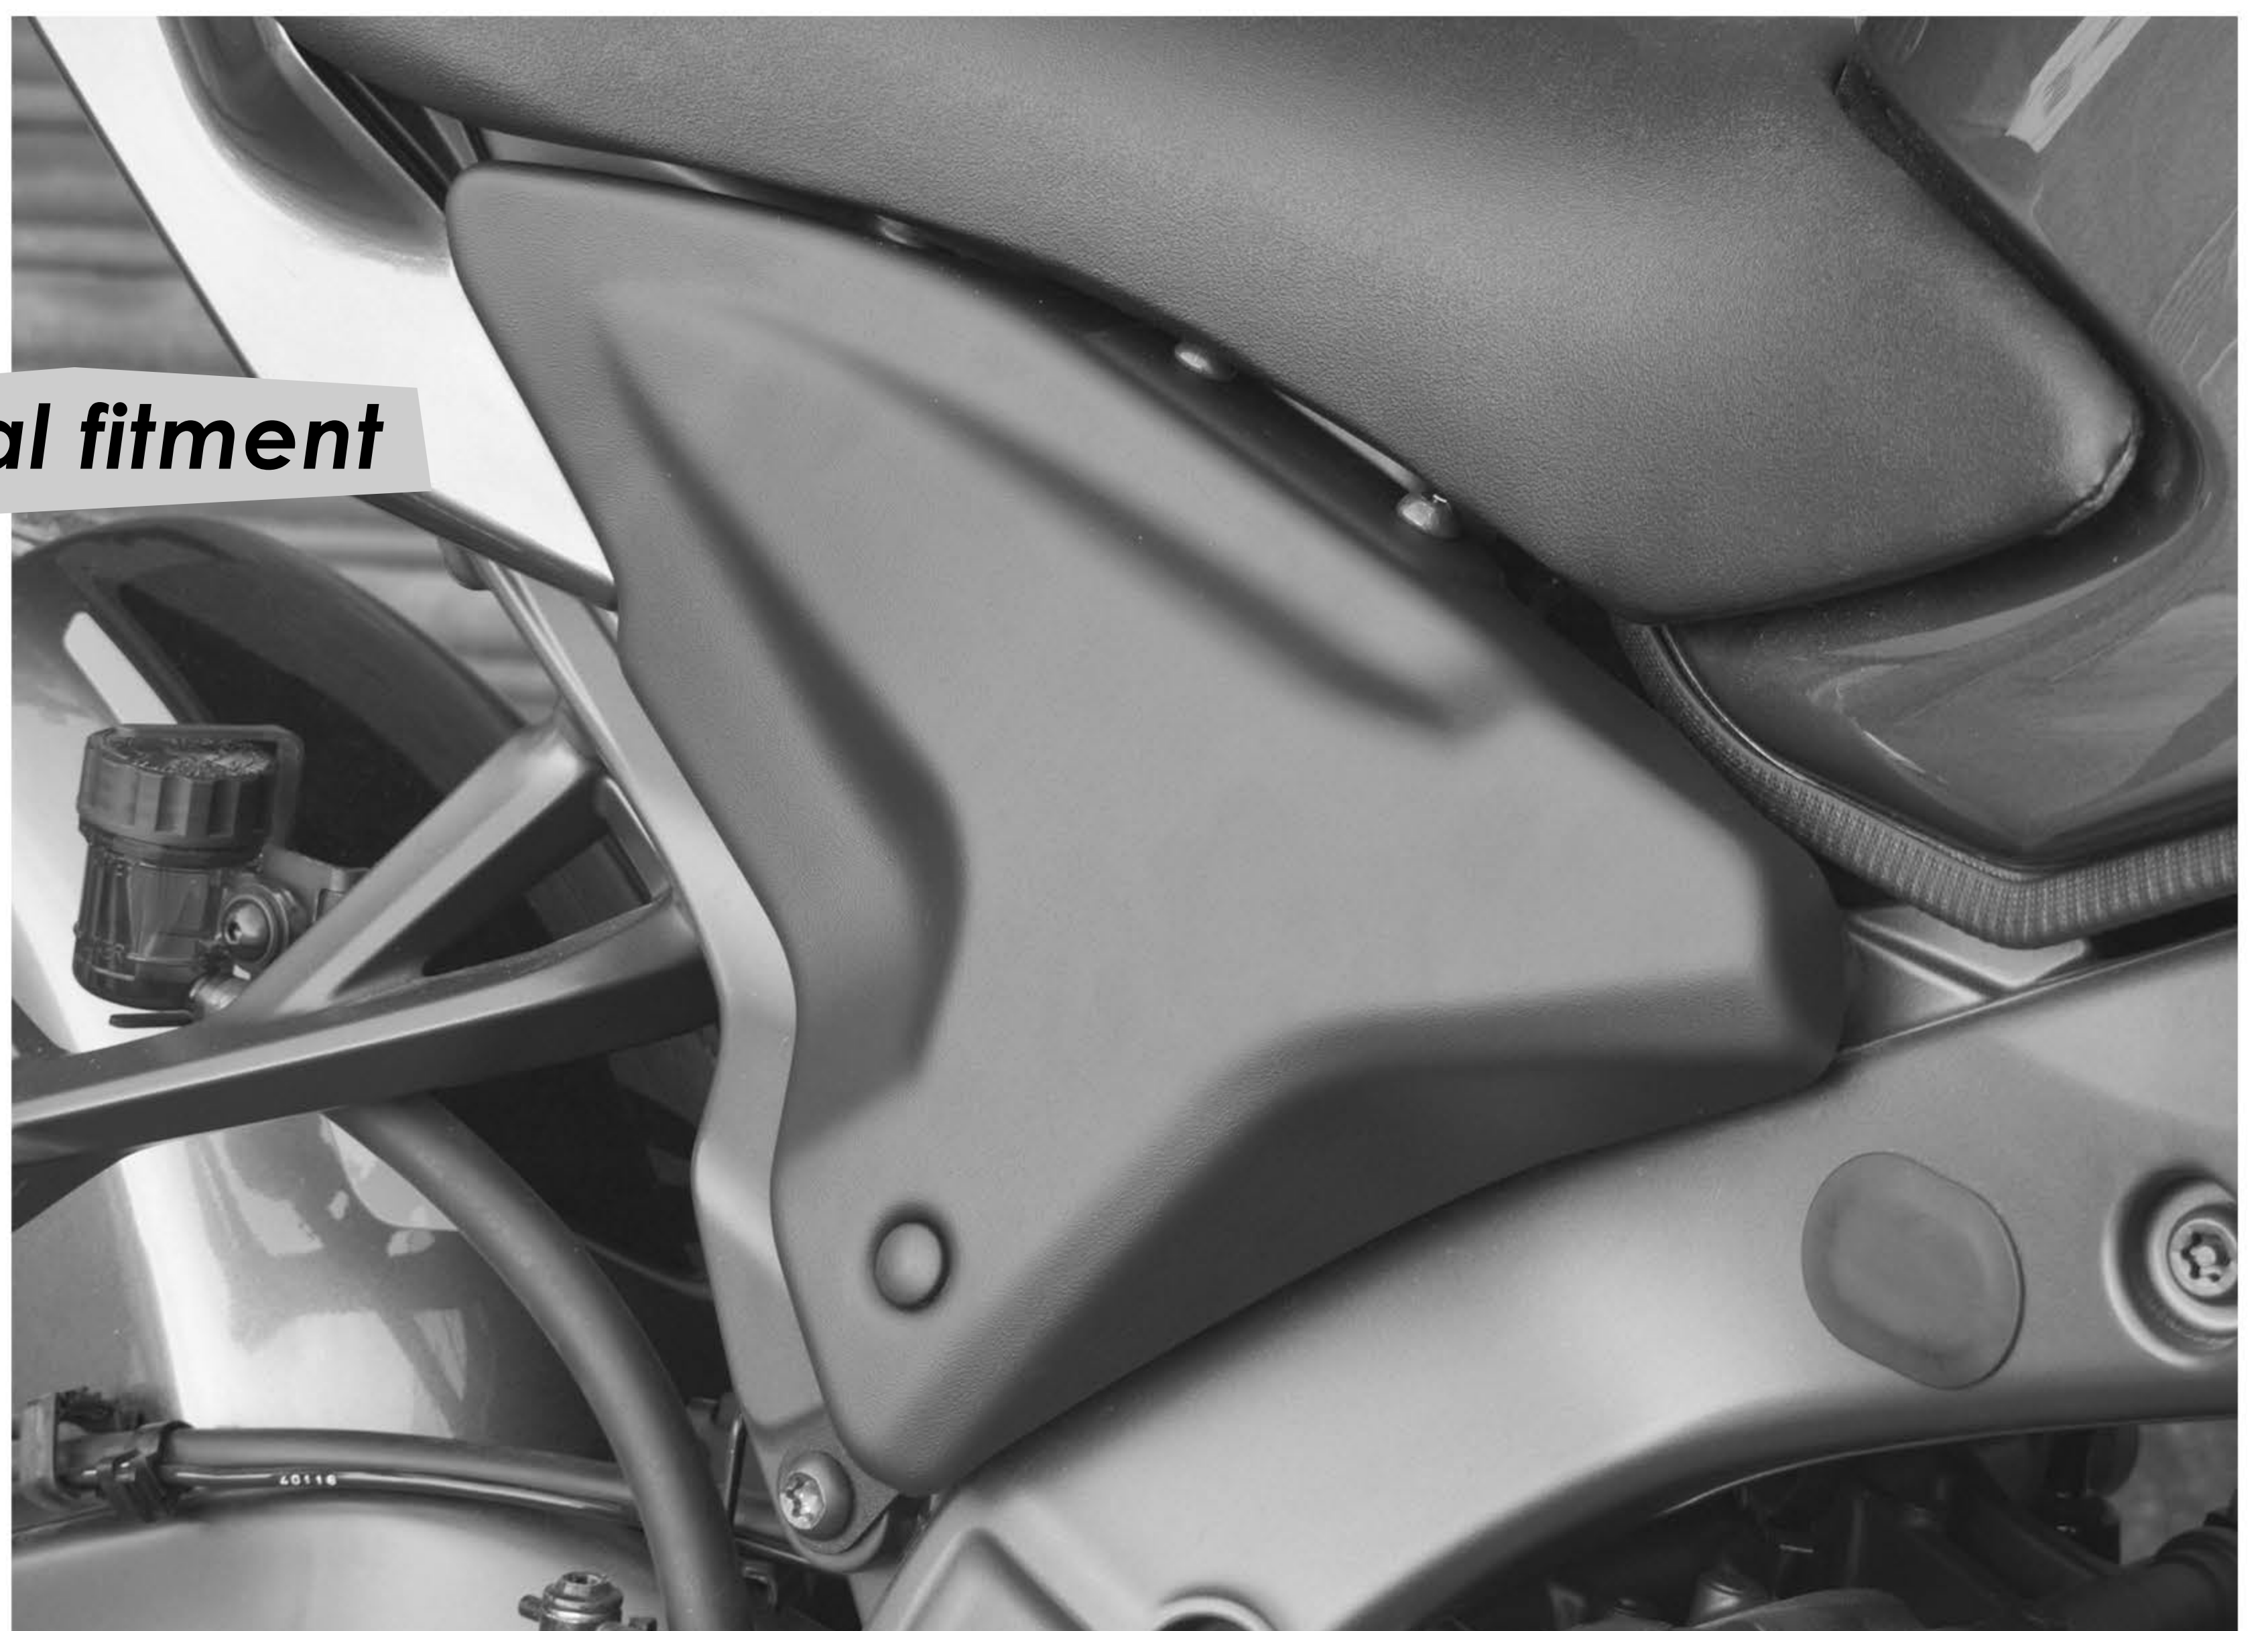

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!