



23000 Z650RS Belly Pan Fitting Instructions

Kit Includes:

1X	C23000	Moulding
4X	CFK23000	Brackets (4 parts)
4X	CBOLM60008	M6 x 16mm Flanged Bolts
4X	CWASM60003	M6 Washer
4X	CPNUTM60001	Aluminium Nut Pre-fitted by Pyramid

Fitting note: attach fixings loosely at first - this aids alignment of the hole centres.

Attach the brackets provided using the OEM fittings as shown in the images below.



Attach the Pyramid belly pan to the brackets using the remaining fixings provided.

Fully tighten all mounting points. Ensure fixings are checked periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

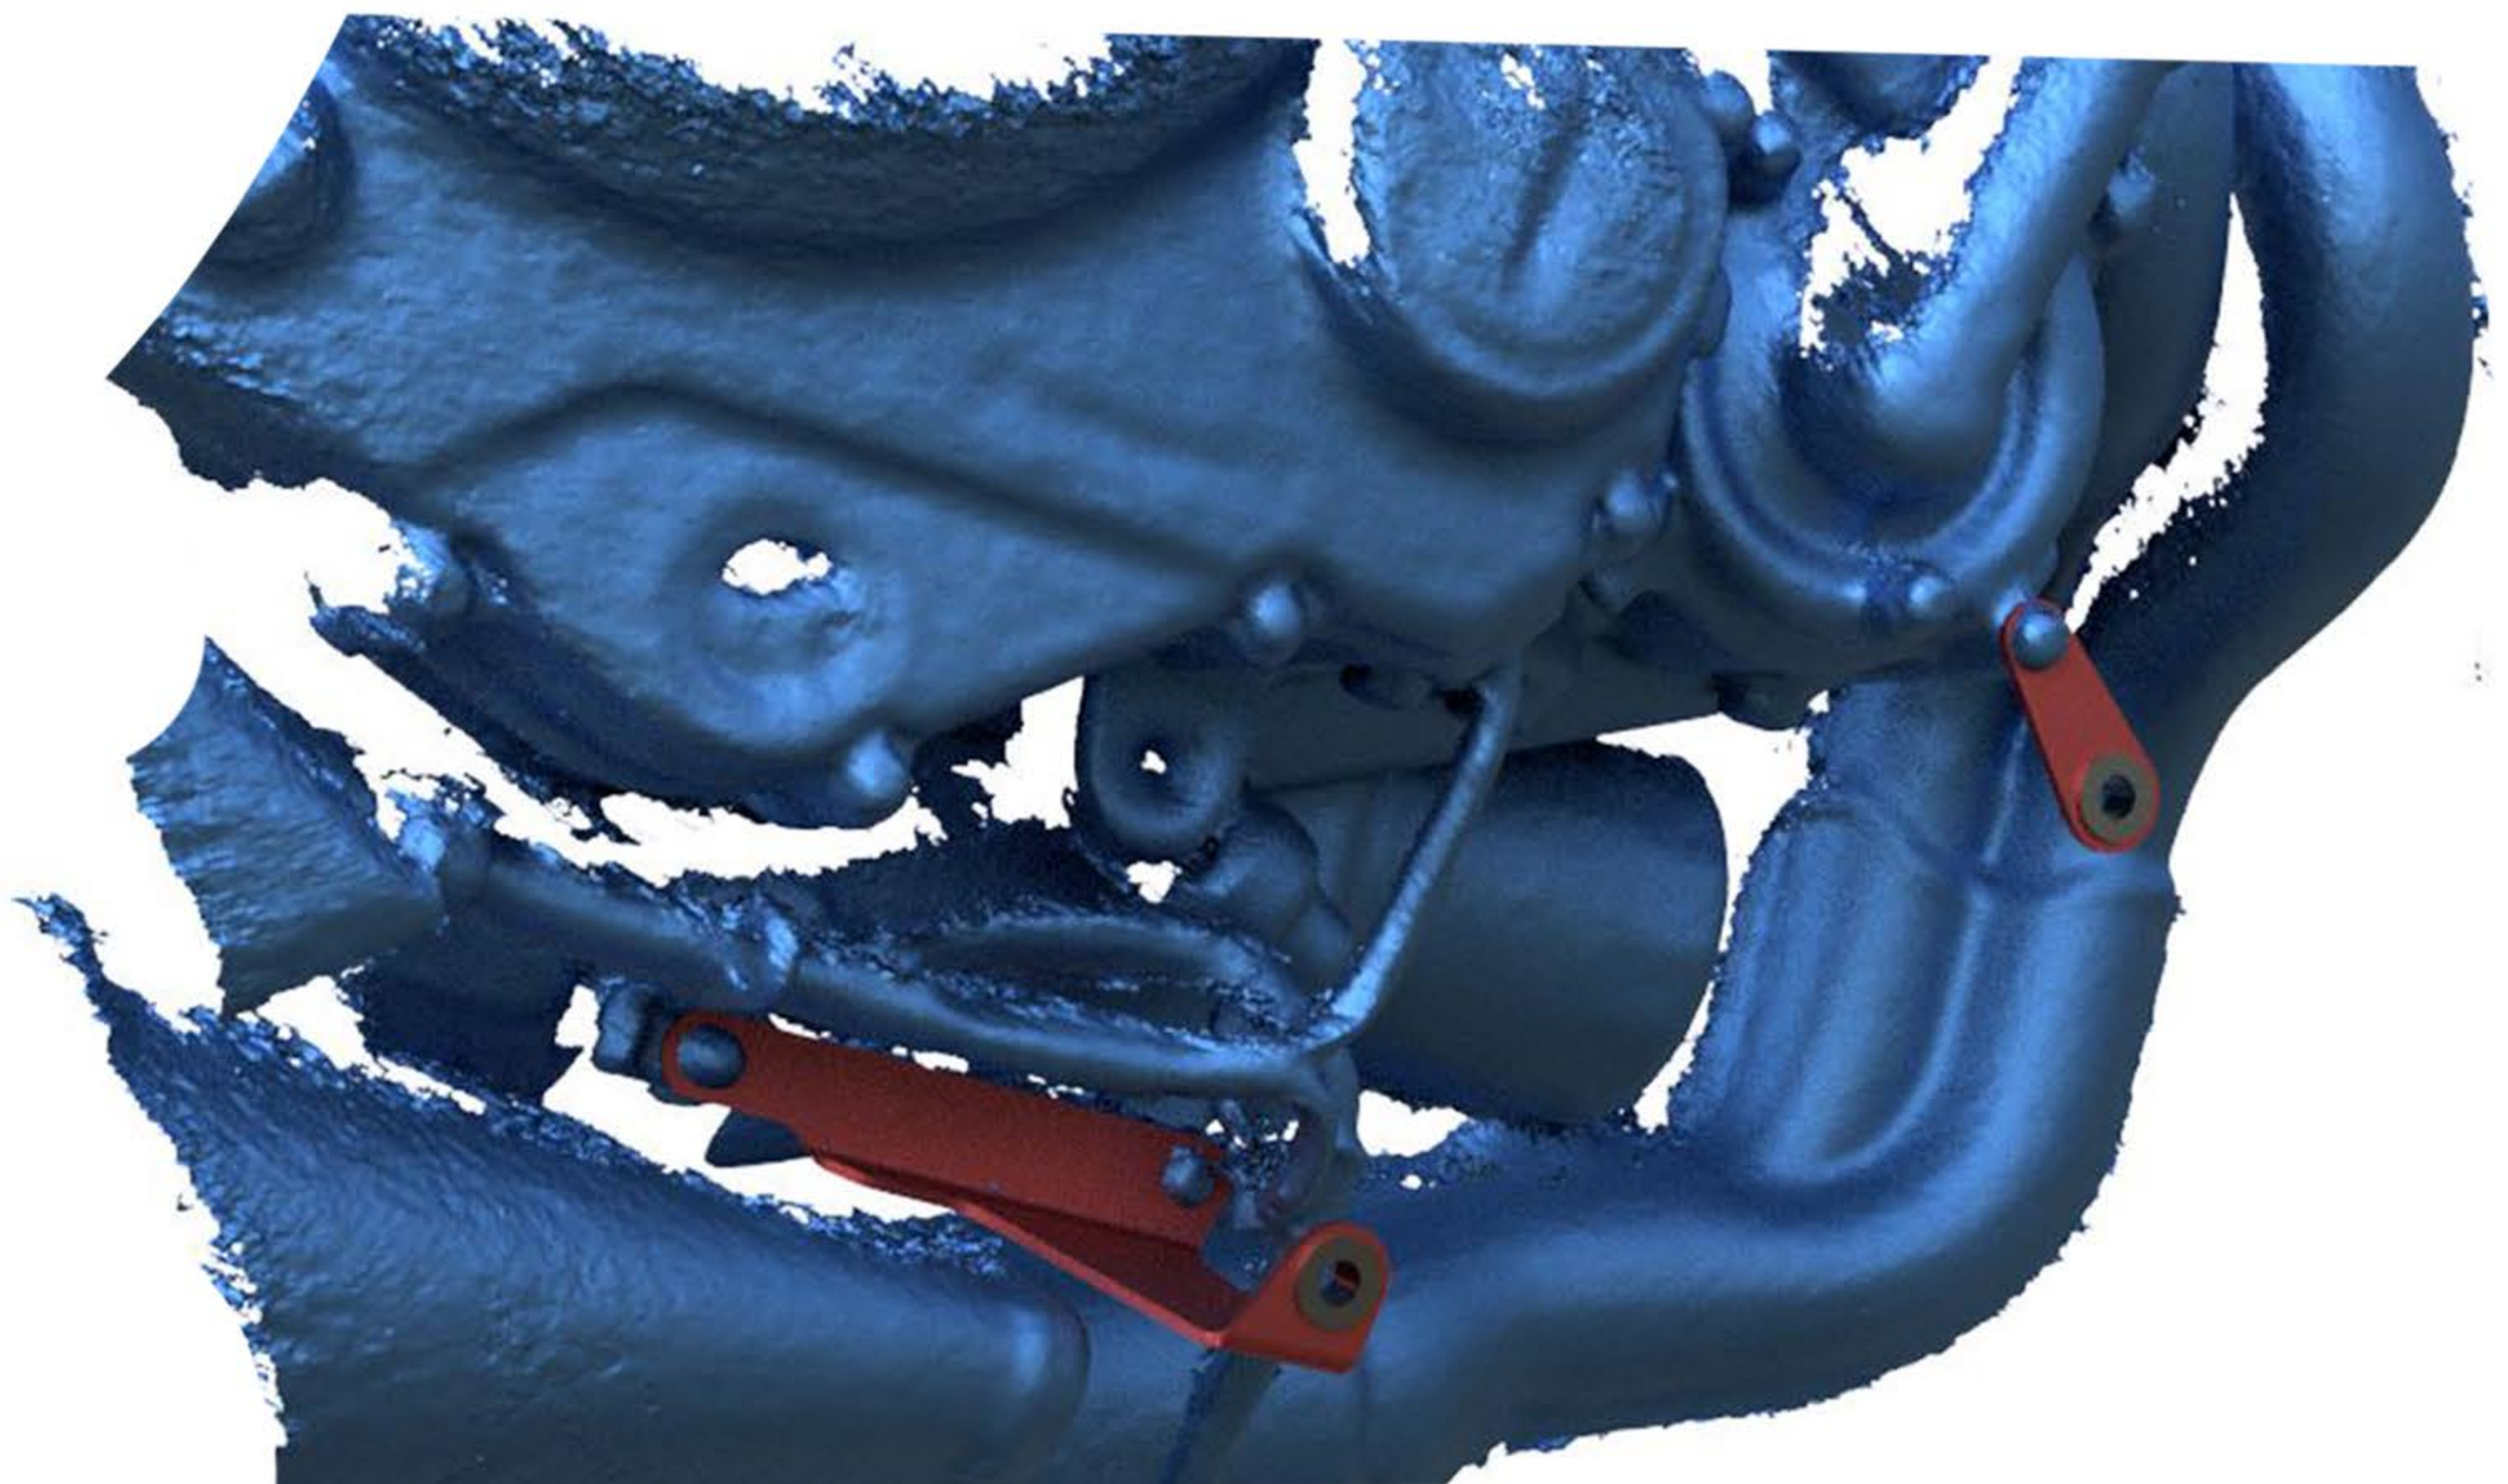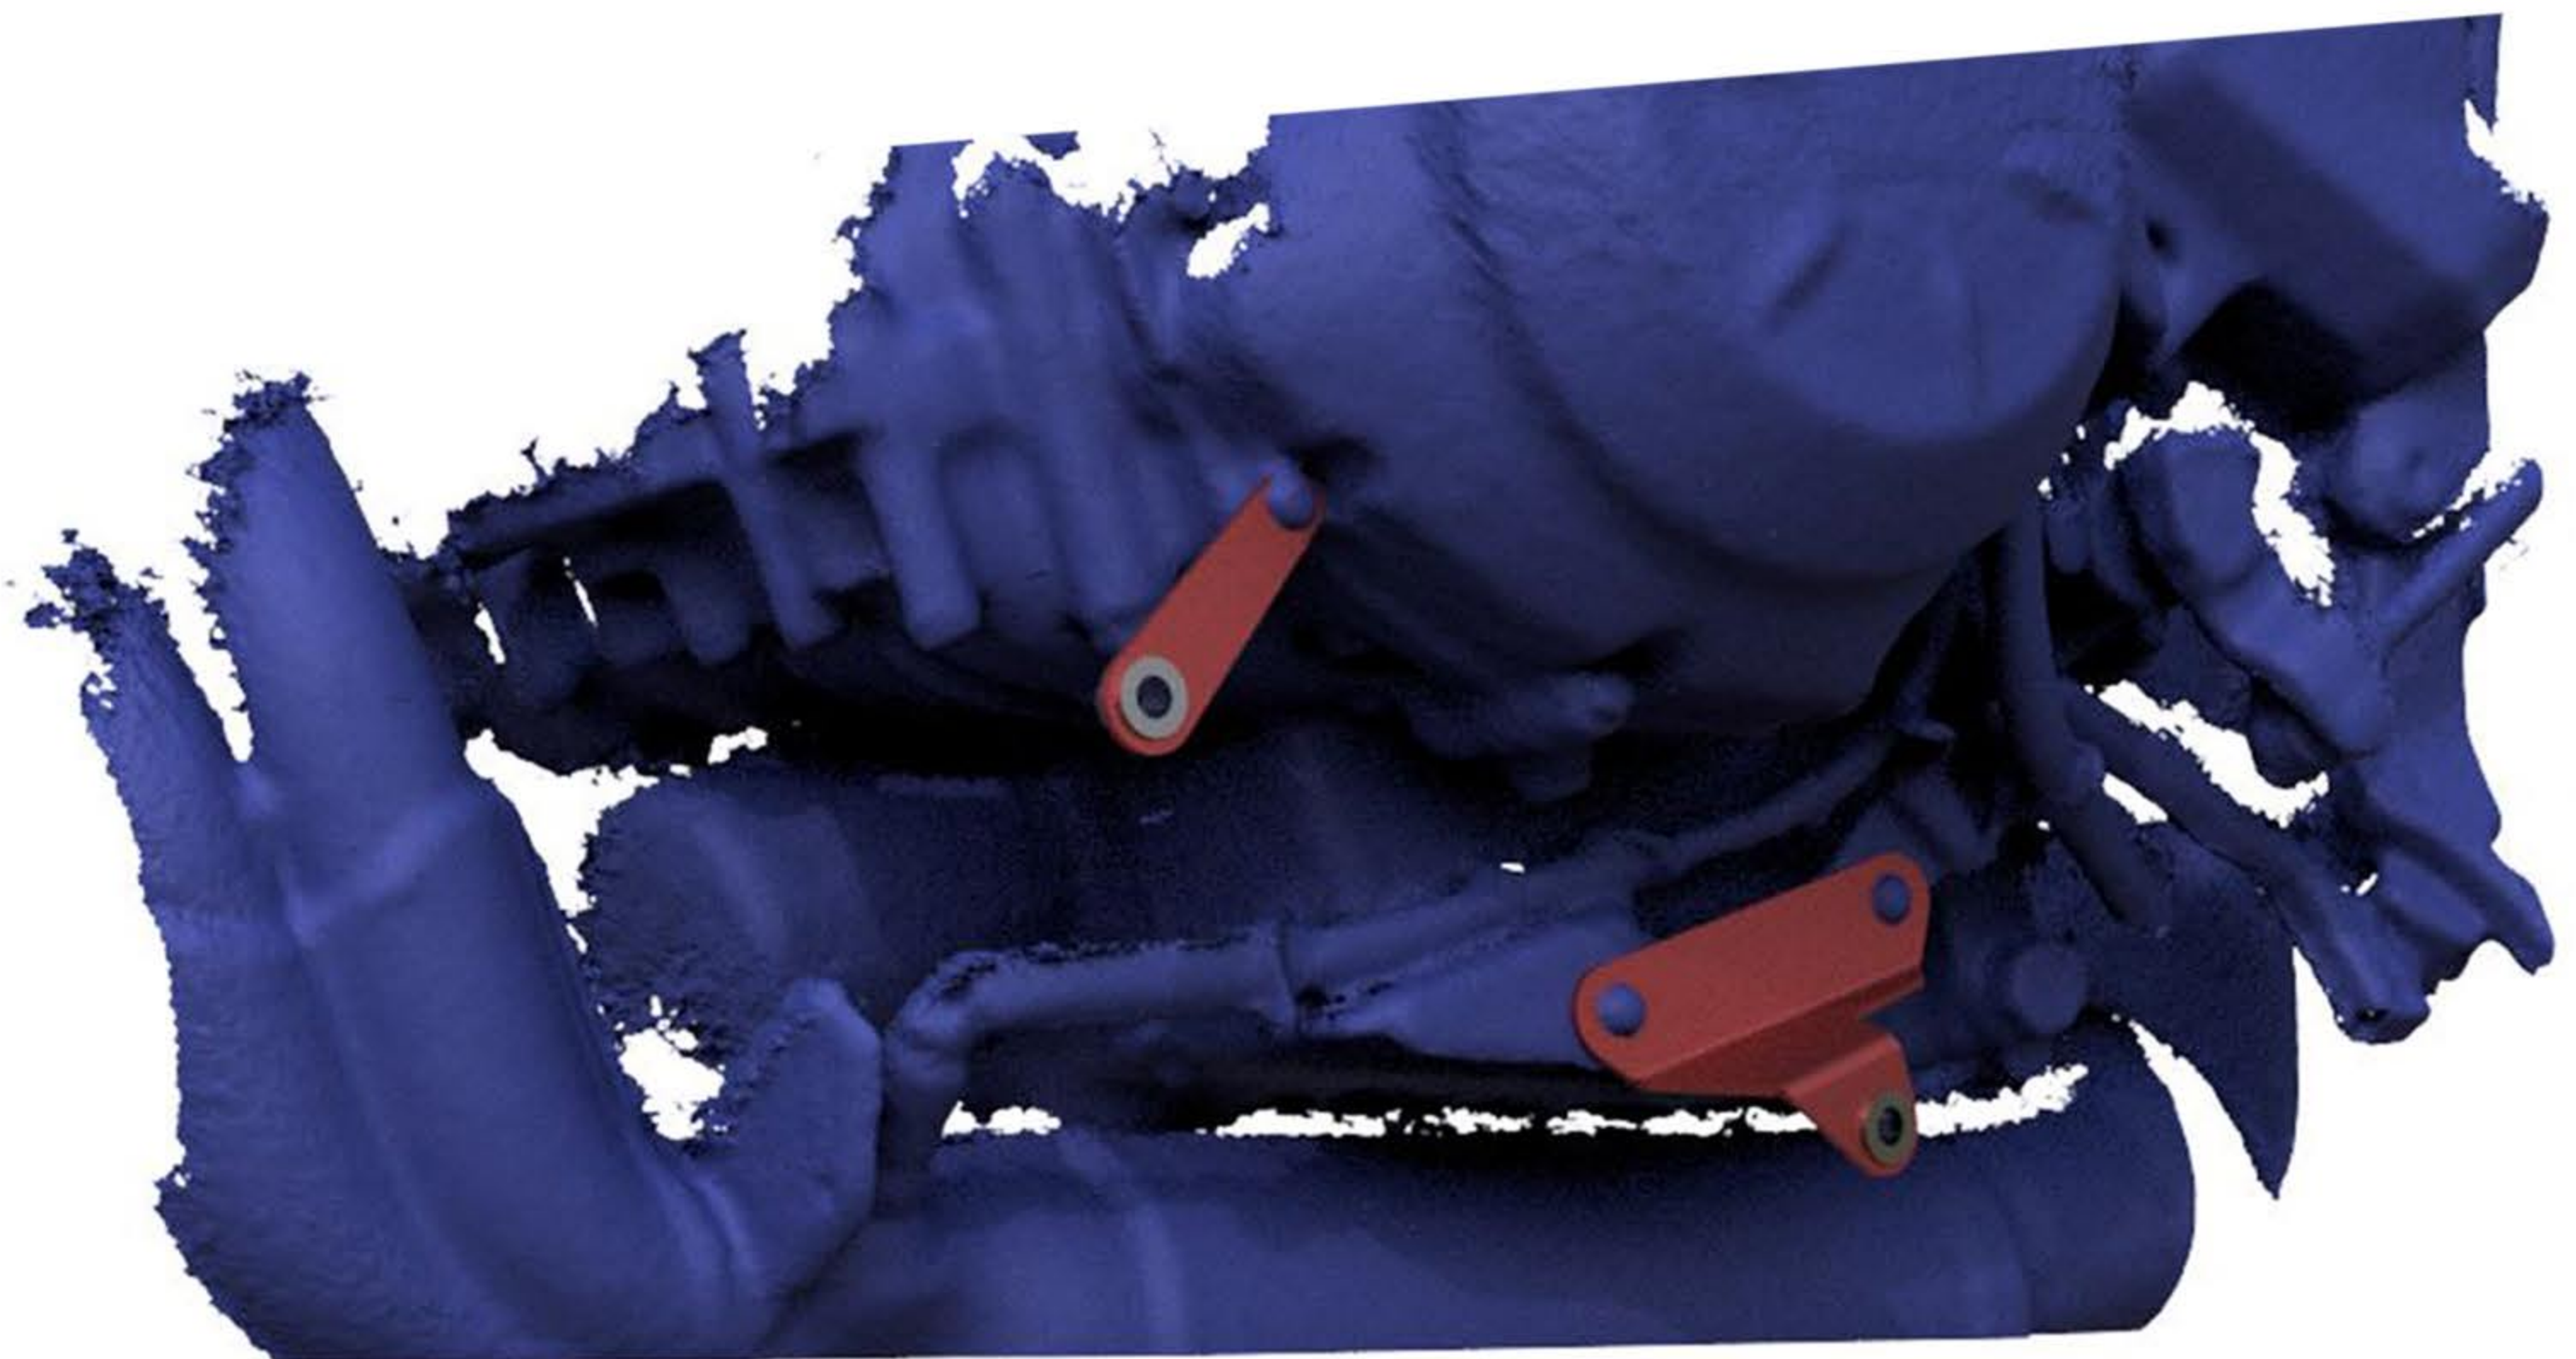

Z650RS