



24915M BMW R1300RS Engine Cover 2025> Fitting Instructions

Kit Includes:

1.	X1	24975M/S	R1300GS Engine Cover
2.	X2	CFOA0001	Foam Strip (40mm)

OEM Parts (From the Motorcycle):

3.	X2	OEM R1300GS	M6 x30mm Torx-Head Bolt
----	----	-------------	-------------------------

Please note: The foam strips (Item 2) are not essential for fitment, but they are recommended to avoid unnecessary damage to the engine casing.


Assembly Instructions

Before commencing the installation, it is advisable to fully clean the engine area to ensure that all mounting areas are free from debris.

- Begin by removing the 2 x M6 OEM bolts (**Item 3**) in the lower centre of the casing. See '**FIG. 1**' for reference. Please note, this image is from an R1300GS and so there will be visual differences.
- Before fitting the Pyramid Engine Cover (**Item 1**), apply the foam strips (**Item 2**) in the areas indicated in '**FIG. 2**'. Once you have removed the 2 x M6 OEM bolts from the engine casing, reinsert and tighten them, together with the engine cover. The torque rating for these bolts is **6Nm**.
- Your Pyramid Engine Cover for the R1300RS has now been fully fitted.

Please Note: We recommend using thread lock on the bolts supplied in this kit. Thread lock is not included. We advise that all fixings are checked periodically.

FIG. 2

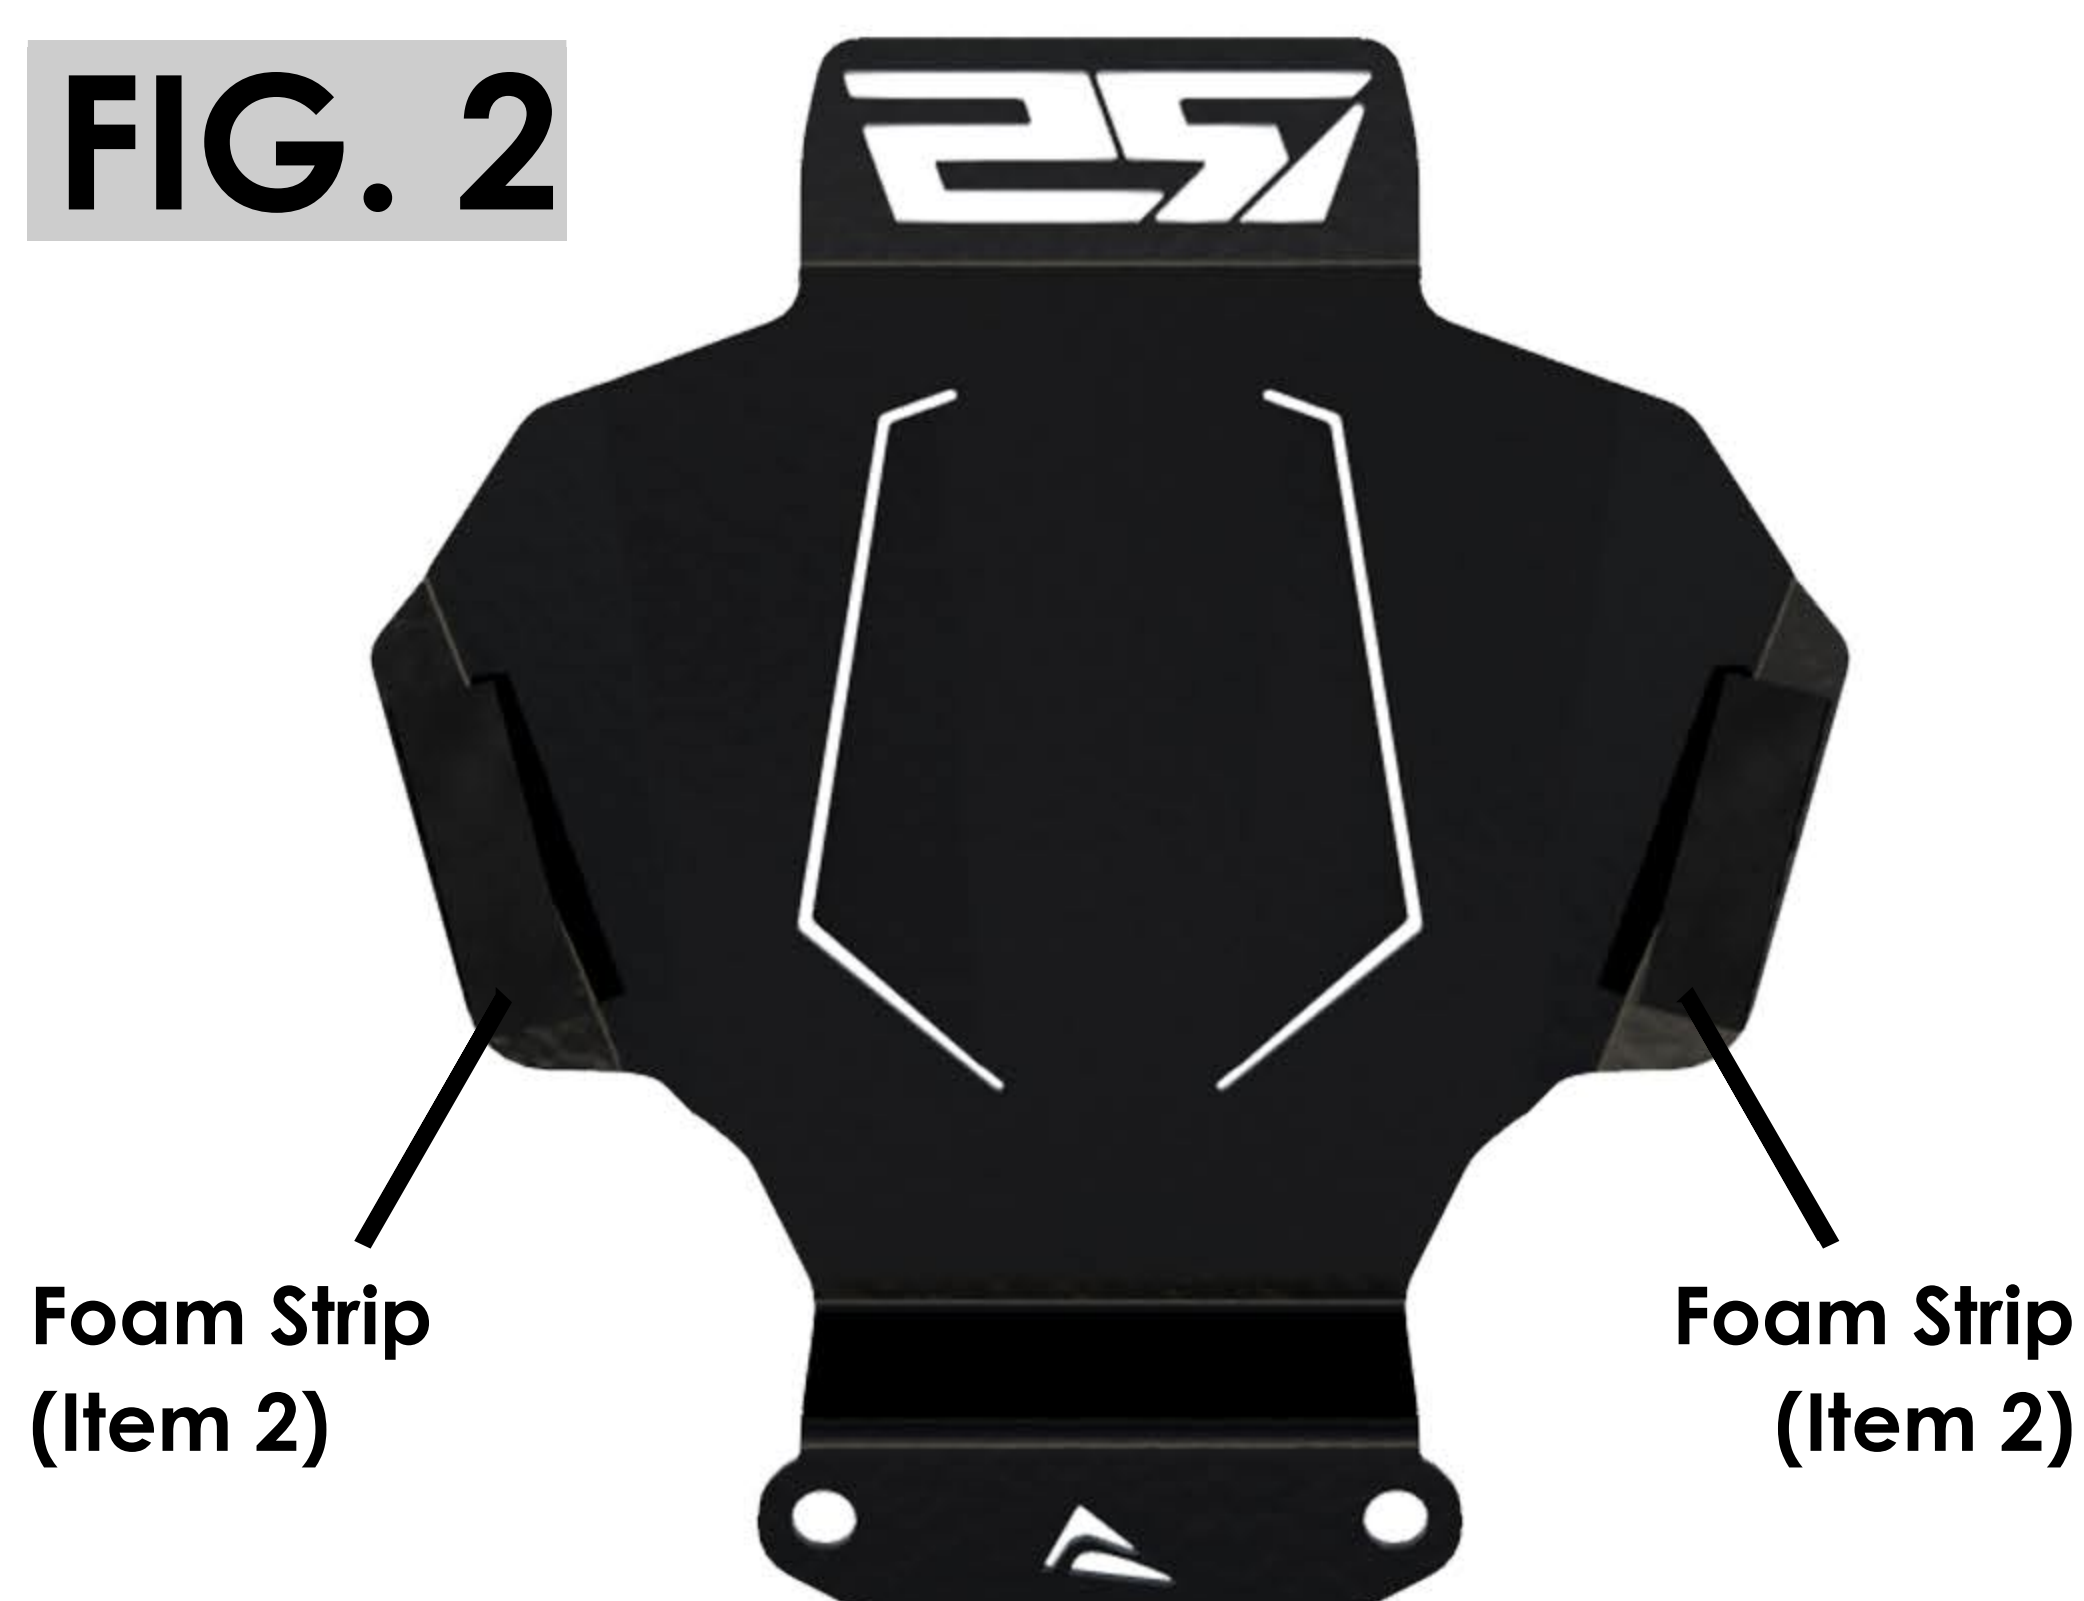

**M6 OEM Bolts
(Item 3)**

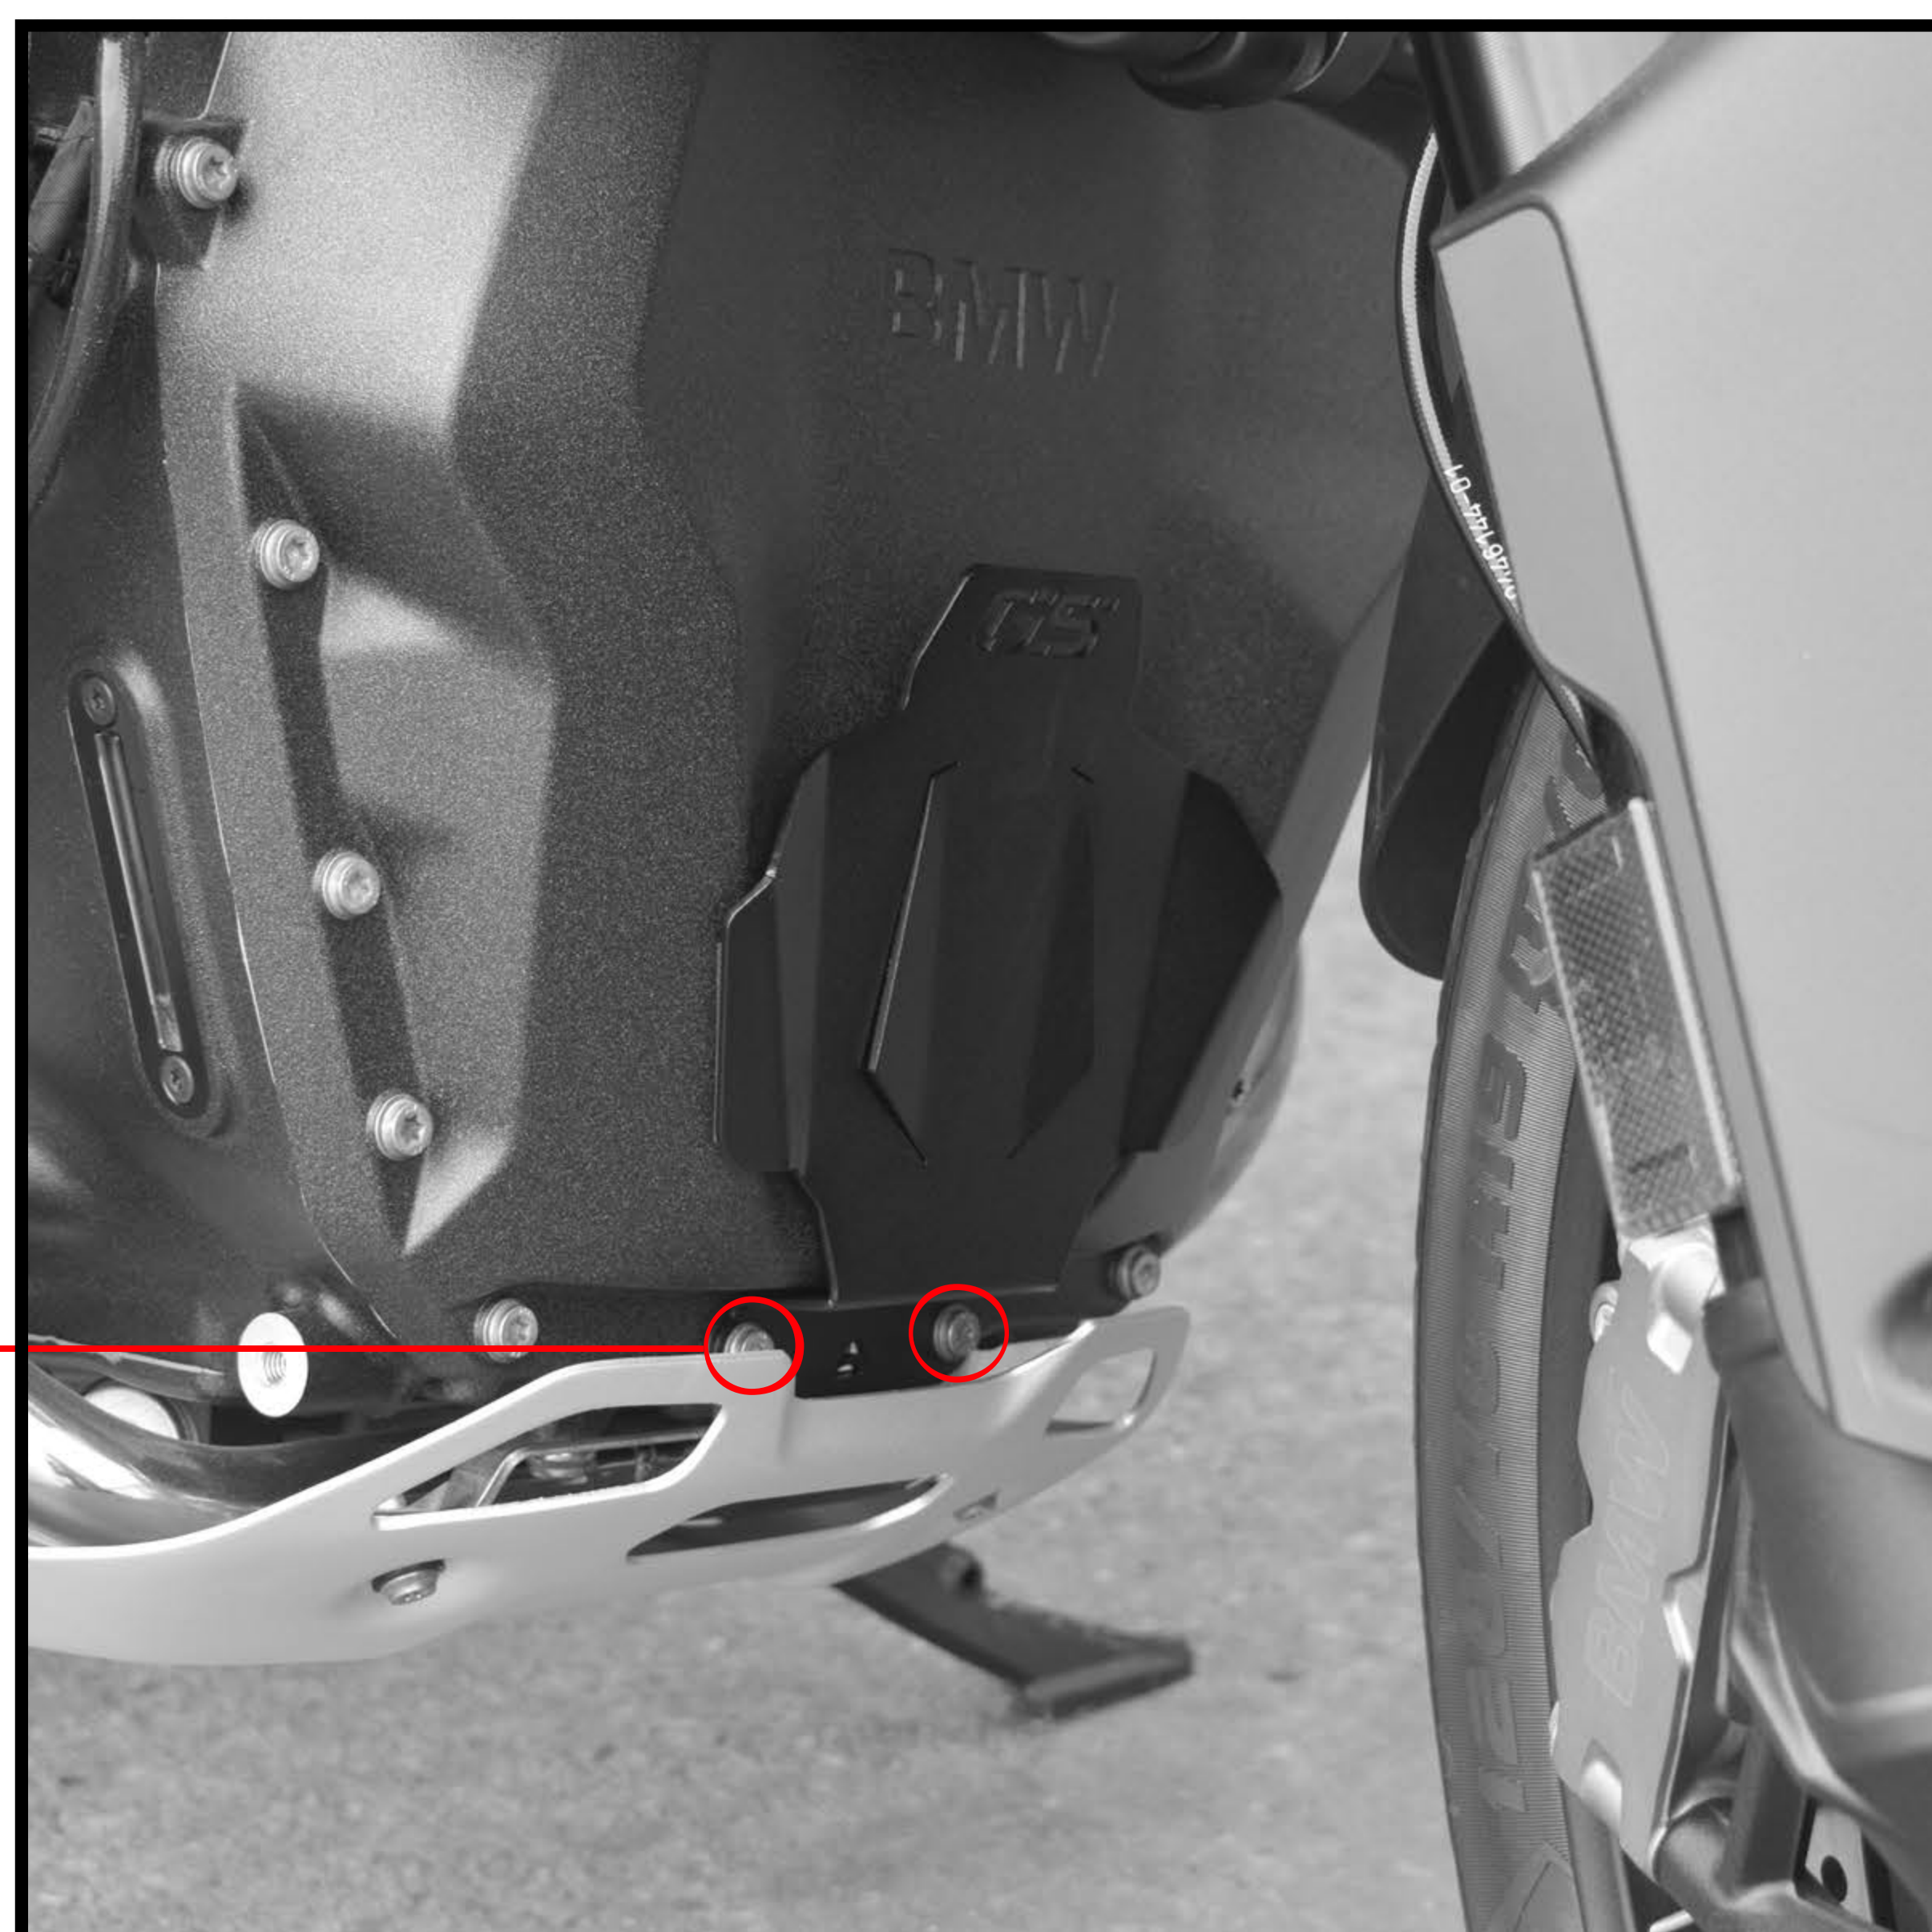


FIG. 1

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!