

31940M Honda CB1000 Hornet Rear Splash Plate 2025> Fitting Instructions

Kit Includes:

1.	X1	31940	Rear Splash Plate
2.	X2	CBOLM50008	M5 x 16mm Flanged Bolt


Assembly Instructions

- Begin by removing the OEM Bolts to gain access to the mounting points. See '**FIG. 1**' for reference.
- Using the M5 Bolts provided (Item 2) loosely fit the Rear Splash Plate (Item 1) to the mounting points referenced in '**FIG. 1**'.
- Once the Splash Plate is in the correct position, fully tighten all fixings.

FIG. 1



FIG. 2

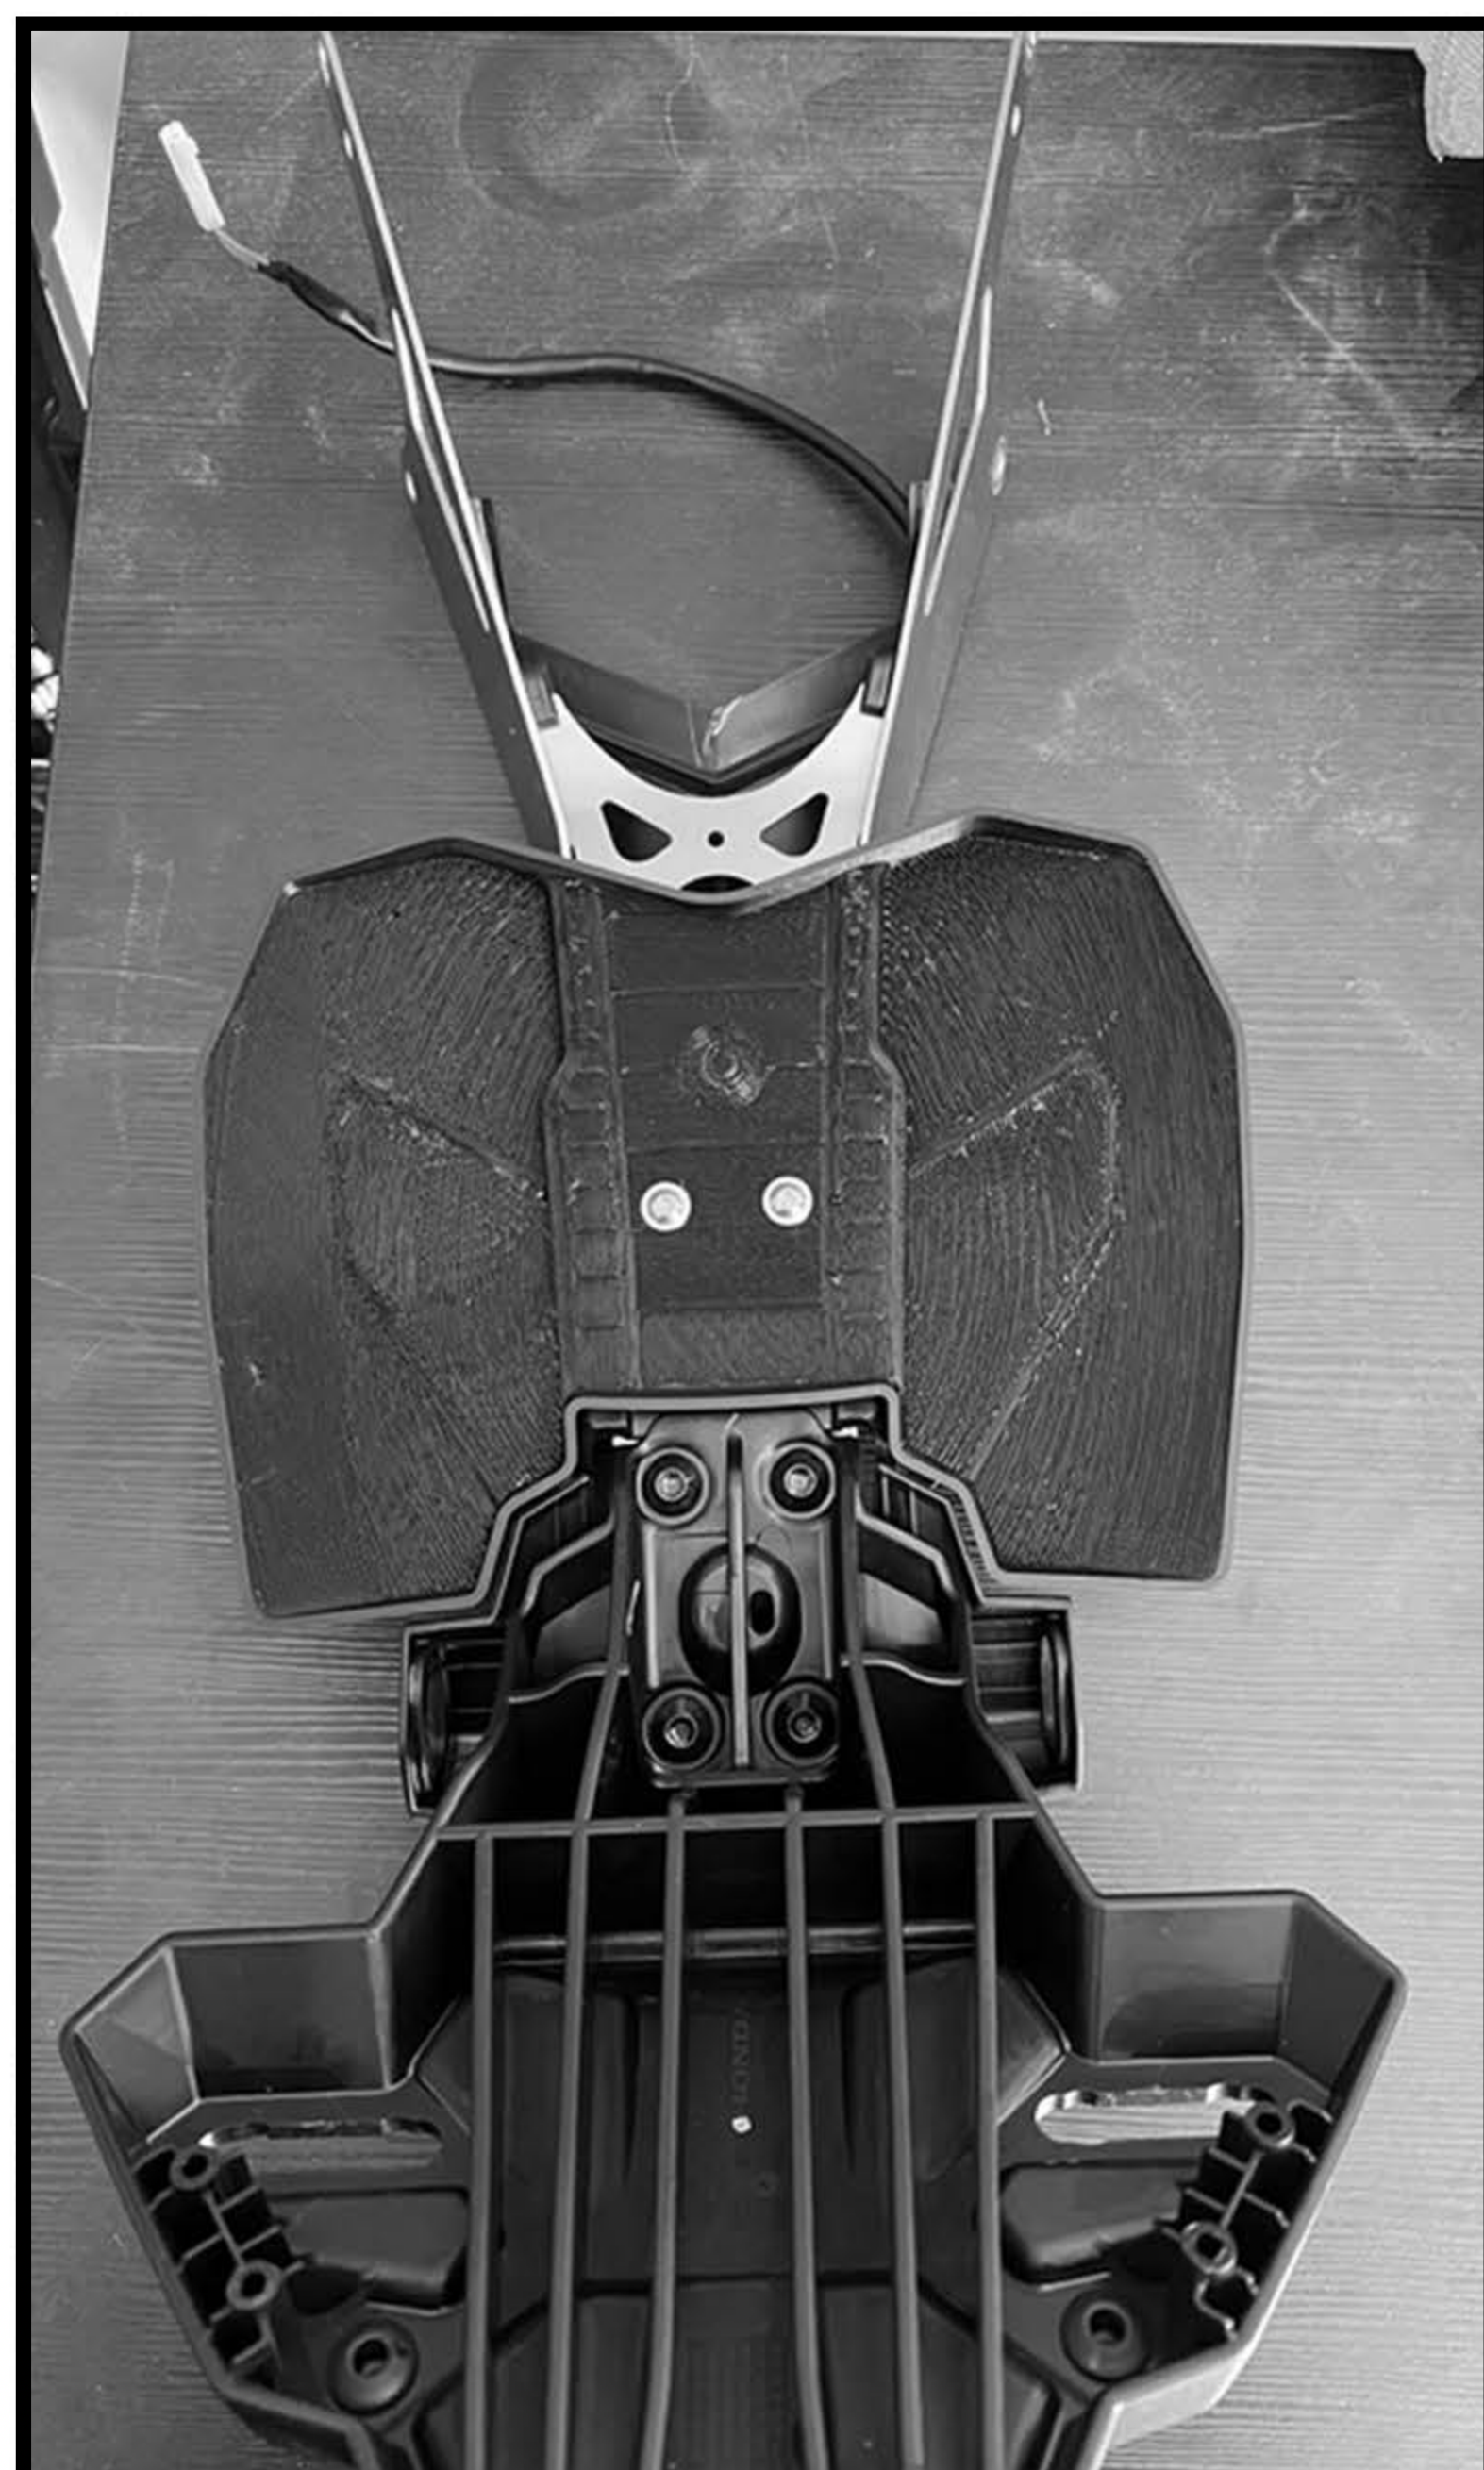

Please Note:
We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!

