


Box: PLOCK 1

BIKE	SUZUKI GSX 1250 & 1250FA BANDIT	PART NO.	ESI - 96
YEAR	2007 - 2015	FIT KITS	OVAL Z039.11296 // ROUND Z039.10296
NOTES	Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	SCEXDBK15 - (Type J)

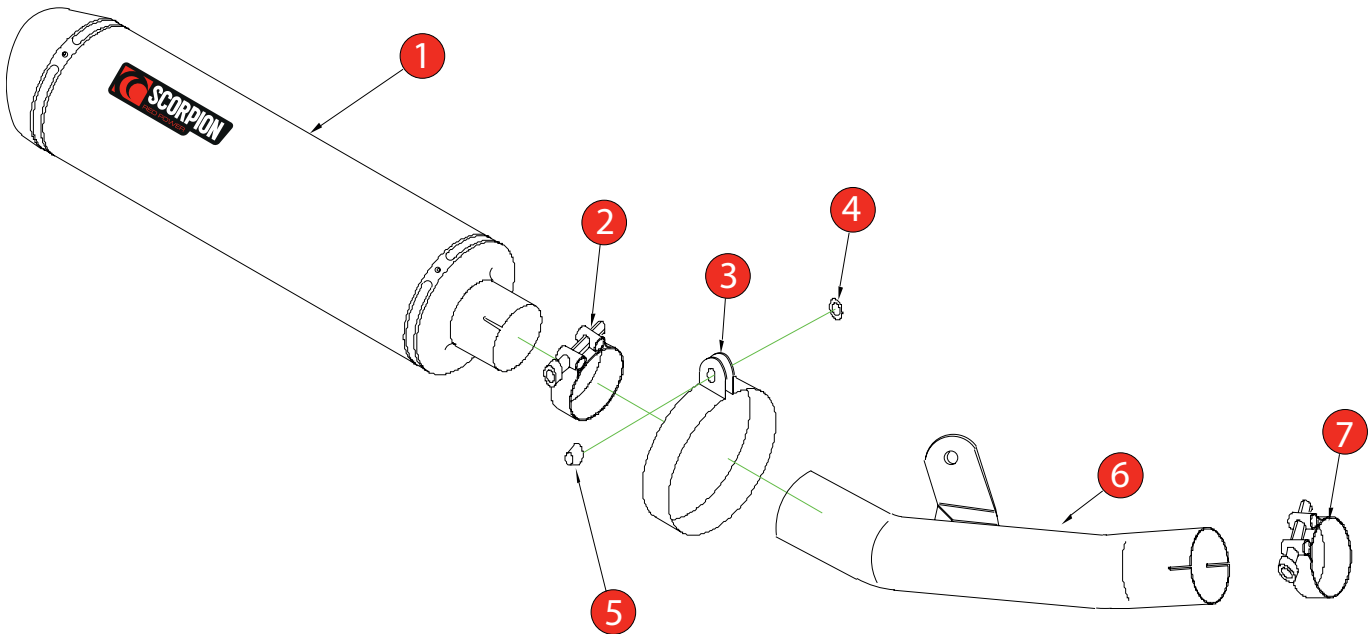

- | | |
|---|------------------------------|
| 1 450mm Silencer ESC 137 | 8 Bump Stop Kit (Z017.10010) |
| 2 51-55mm Band Clamp (Z016.10002) | |
| 3 Composite Silencer Strap (R-Z038.10090)(O-Z038.10088) | |
| 4 M8 x 25mm Washer (Z017.10825) | |
| 5 Alloy Bolt Finisher (Z026.20068) | |
| 6 Connecting Pipe CP 431 | |
| 7 55-59mm Band Clamp (Z016.10004) | |

E-MARK ROUND	SI-96 [e4] 2294
E-MARK OVAL	SI-96 [e4] 2294
ISSUE NO.	11
DATE	19/10/2018
AUTHORISED	J.Harkin
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.