


|              |                                                                       |                  |                       |
|--------------|-----------------------------------------------------------------------|------------------|-----------------------|
| <b>Bike</b>  | Triumph Street Triple 765                                             | <b>Part No.</b>  | TR-1001               |
| <b>Year</b>  | 2017-Current                                                          | <b>Fit Kit</b>   | Z039.10610            |
| <b>Notes</b> | Where not supplied use original fittings<br>Fits to S, R & RS models. | <b>dB Killer</b> | SCEXDBK30 - (Type PP) |


Estimated Fitting Time: 60 Minutes

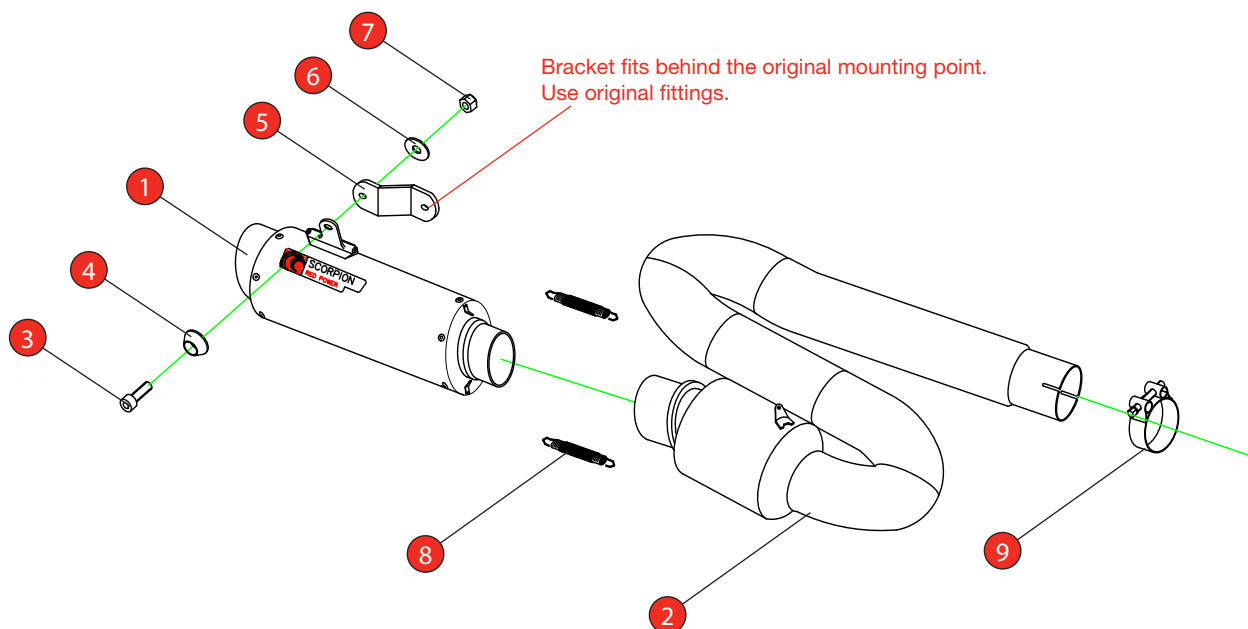

| NO.                         | PART NO.   | DESCRIPTION             | QTY |
|-----------------------------|------------|-------------------------|-----|
| 1                           | SC408      | RP1-GP Silencer         | 1   |
| 2                           | CP954      | Connecting Pipe         | 1   |
| <b>Fit Kit - Z039.10610</b> |            |                         |     |
| 3                           | Z017.10073 | M8 x 25mm Cap Head Bolt | 1   |
| 4                           | Z026.20068 | Alloy Bolt Finisher     | 1   |
| 5                           | Z015.31323 | Mounting Bracket        | 1   |
| 6                           | Z017.10825 | M8 x 25mm Washer        | 1   |
| 7                           | Z017.10062 | M8 Nyloc Nut            | 1   |
| 8                           | Z028.10030 | Rubber Coated Spring    | 2   |
| 9                           | Z016.10008 | 43-47mm Clamp           | 1   |

|            |            |
|------------|------------|
| E-MARK     | e11 00521  |
| DATE       | 22/10/2018 |
| ISSUE      | 01         |
| AUTHORISED | J.Harkin   |

|              |                                                                       |                  |                       |
|--------------|-----------------------------------------------------------------------|------------------|-----------------------|
| <b>Bike</b>  | Triumph Street Triple 765                                             | <b>Part No.</b>  | TR-1001               |
| <b>Year</b>  | 2017-Current                                                          | <b>Fit Kit</b>   | Z039.10610            |
| <b>Notes</b> | Where not supplied use original fittings<br>Fits to S, R & RS models. | <b>dB Killer</b> | SCEXDBK30 - (Type PP) |

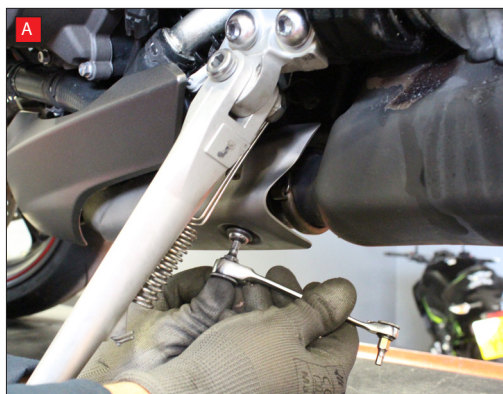


Note: Retain all original parts and fittings. Instructions show a Serket taper silencer, instructions are the same when fitting an RP1-GP.

A) Unscrew heat shield bolt and remove heat shield.

B) Undo original clamp and remove it from the bike.

C) Unscrew the original silencer mounting bolt.

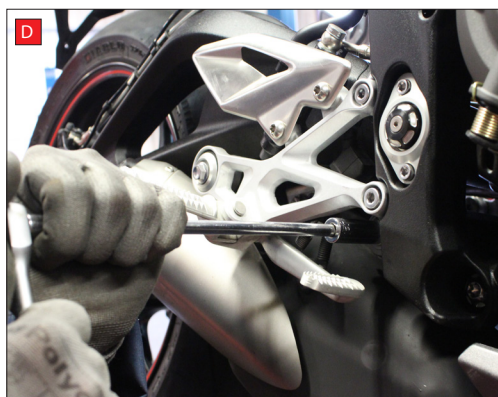

D) Unscrew the second original silencer mounting bolt.

E) Remove the silencer from the bike.

F) Following the diagram above, loosely fit the Scorpion system.

G) Check the clearance between the pipework and the rear tyre, this requires a minimum spacing 45mm.



H) Check the clearance between the pipework and the suspension linkage, this requires a spacing of at least 20mm.




|              |                                                                       |                  |                       |
|--------------|-----------------------------------------------------------------------|------------------|-----------------------|
| <b>Bike</b>  | Triumph Street Triple 765                                             | <b>Part No.</b>  | TR-1001               |
| <b>Year</b>  | 2017-Current                                                          | <b>Fit Kit</b>   | Z039.10610            |
| <b>Notes</b> | Where not supplied use original fittings<br>Fits to S, R & RS models. | <b>dB Killer</b> | SCEXDBK30 - (Type PP) |



I) Looking from the rear of the bike ensure the silencer does not protrude past the foot peg.

J) Check the clearance between the silencer and the swing arm, this requires a minimum spacing of 15mm.

K) Check the clearance of between the silencer and brake lever. Press brake lever down to ensure it does not touch the silencer at any point during use.

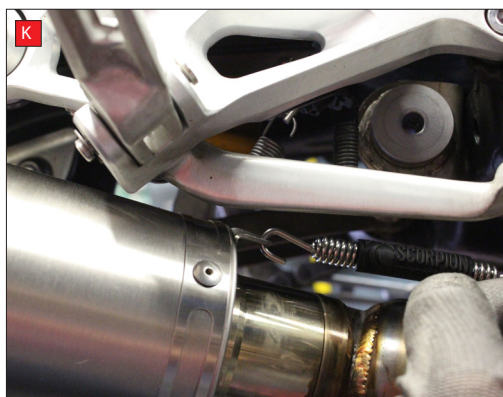

L) Once happy with the alignment of your exhaust, tighten all fittings. Take bike for a short ride. Upon return allow the system to cool and check all fittings are still secure.

|              |                                                                       |                  |                       |
|--------------|-----------------------------------------------------------------------|------------------|-----------------------|
| <b>Bike</b>  | Triumph Street Triple 765                                             | <b>Part No.</b>  | TR-1001               |
| <b>Year</b>  | 2017-Current                                                          | <b>Fit Kit</b>   | Z039.10610            |
| <b>Notes</b> | Where not supplied use original fittings<br>Fits to S, R & RS models. | <b>dB Killer</b> | SCEXDBK30 - (Type PP) |

Estimated Fitting Time: 60 Minutes



Thank you for purchasing your Scorpion Silencer.

Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Für den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.

Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.



STAY CONNECTED TO RED POWER.