


Bike	BMW R 1300 GS	Part No.	RBM-84
Year	2023-Current	Fit Kit	Z039.10764
Notes	Where not supplied use original fittings	dB Killer	N/A

Estimated Fitting Time: 30 Minutes

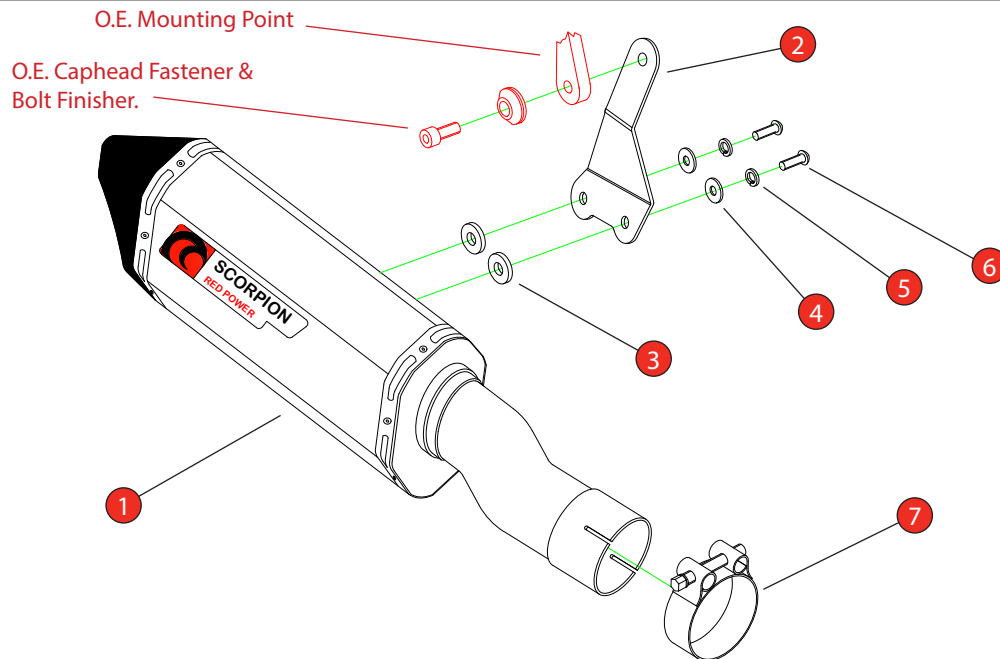

NO.	PART NO.	DESCRIPTION	QTY	CLASSIFICATION	UK Road Legal
1	RSC547	Serket Parallel Silencer with integrated link pipe CP1222	1	EC APPROVED	NO
Fit Kit - Z039.10764				MARKING	BS AU 193a: 1990/T3
2	Z015.31612	Mounting Bracket	1	DATE	16/06/2025
3	Z026.10107	20 x 2.5mm Alloy Spacer	2	ISSUE	00
4	Z017.10831	M8 x 17mm Washer	2	AUTHORISED	G O'Shea
5	Z017.10064	M8 Spring Washer	2		
6	Z017.10110	M8 x 25mm Button Head Screw	2		
7	Z016.10001	59 - 63mm Clamp	1		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


<https://youtu.be/4ExAC2Uv64U>


STAY CONNECTED TO RED POWER.

Bike	BMW R 1300 GS	Part No.	RBM-84
Year	2023-Current	Fit Kits	Z039.10764
Notes	Where not supplied use original fittings	dB Killer	N/A



A) Remove the plastic cover from the exhaust.

B) Loosen the exhaust clamp.

C) Remove the silencer mounting bolt.

D) Carefully remove the silencer.

E) Place the Scorpion silencer face down on a soft, clean surface, then install the mounting bracket as per the diagram on the front page of the fitting instructions. Leave a little loose, you will fully tighten in a later step.

F) Place the supplied clamp over the Scorpion pipe then slide onto the original exhaust, you do not need a gasket.

G) Align the bracket with the mounting point on the bike.

H) Secure in place with the original mounting hardware. Fully tighten.



Bike	BMW R 1300 GS	Part No.	RBM-84
Year	2023-Current	Fit Kits	Z039.10764
Notes	Where not supplied use original fittings	dB Killer	N/A




I) Fully tighten the exhaust clamp.

J) Fully tighten the bracket mounting bolts.

K) Re-fit the plastic cover.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.

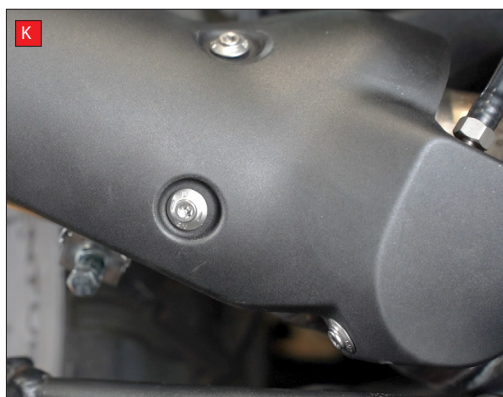

Bike	BMW R 1300 GS	Part No.	RBM-84
Year	2023-Current	Fit Kit	Z039.10764
Notes	Where not supplied use original fittings	dB Killer	N/A

Estimated Fitting Time: 30 Minutes



Thank you for purchasing your Scorpion Silencer.

Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Für den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.

Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.



STAY CONNECTED TO RED POWER.