




Kit Includes:

1.	X1	C31956	Seat Rack
2.	X2	CFK31956A + B	Brackets (pair)
3.	X1	CFOA0002	Foam Strip (80mm length)
4.	X1	CRUB0001	Rubber Strip (50mm length)
5.	X4	CBOLM60008	M6 x 16mm Flanged Button Bolt
6.	X4	CWASM60001	M6 Washer
7.	X4	CNUTM60003	M6 Nyloc Nut
8.	X4	CBOLM60009	M6 x 20mm Flanged Button Bolt
9.	X4	CSPAM60018	Spacer
10.	X4	CNUTM60006	M6 Serrated Nut
11.	X4	CCAP0002	Plastic Bolt Cap

Please view these instructions on
our website listing for clearer images

- Start by removing the pillion seat from the motorcycle.
- Trim and fit the rubber strip to the brackets as shown in **Fig 1**. Trim and fit the foam strip to the bodywork as shown in **Fig 2**.
- Fig 3** shows the right-hand side bracket fully fitted. Take note of the orientation of the M6 fittings. The brackets are slotted to adjust alignment with the seat rack if needed. Once both brackets are in place fully tighten the mounting points.
- Attach the seat rack to the brackets using the remaining fittings as shown in **Fig 4**.
- Ensure all mounting points are fully tightened and check the fixings periodically.

Note: the pillion seat can still be removed with the seat rack in position. When removing the pillion seat turn the key to unlock as normal and then lightly pull upwards at the rear of the pillion seat to allow clearance of the brackets.

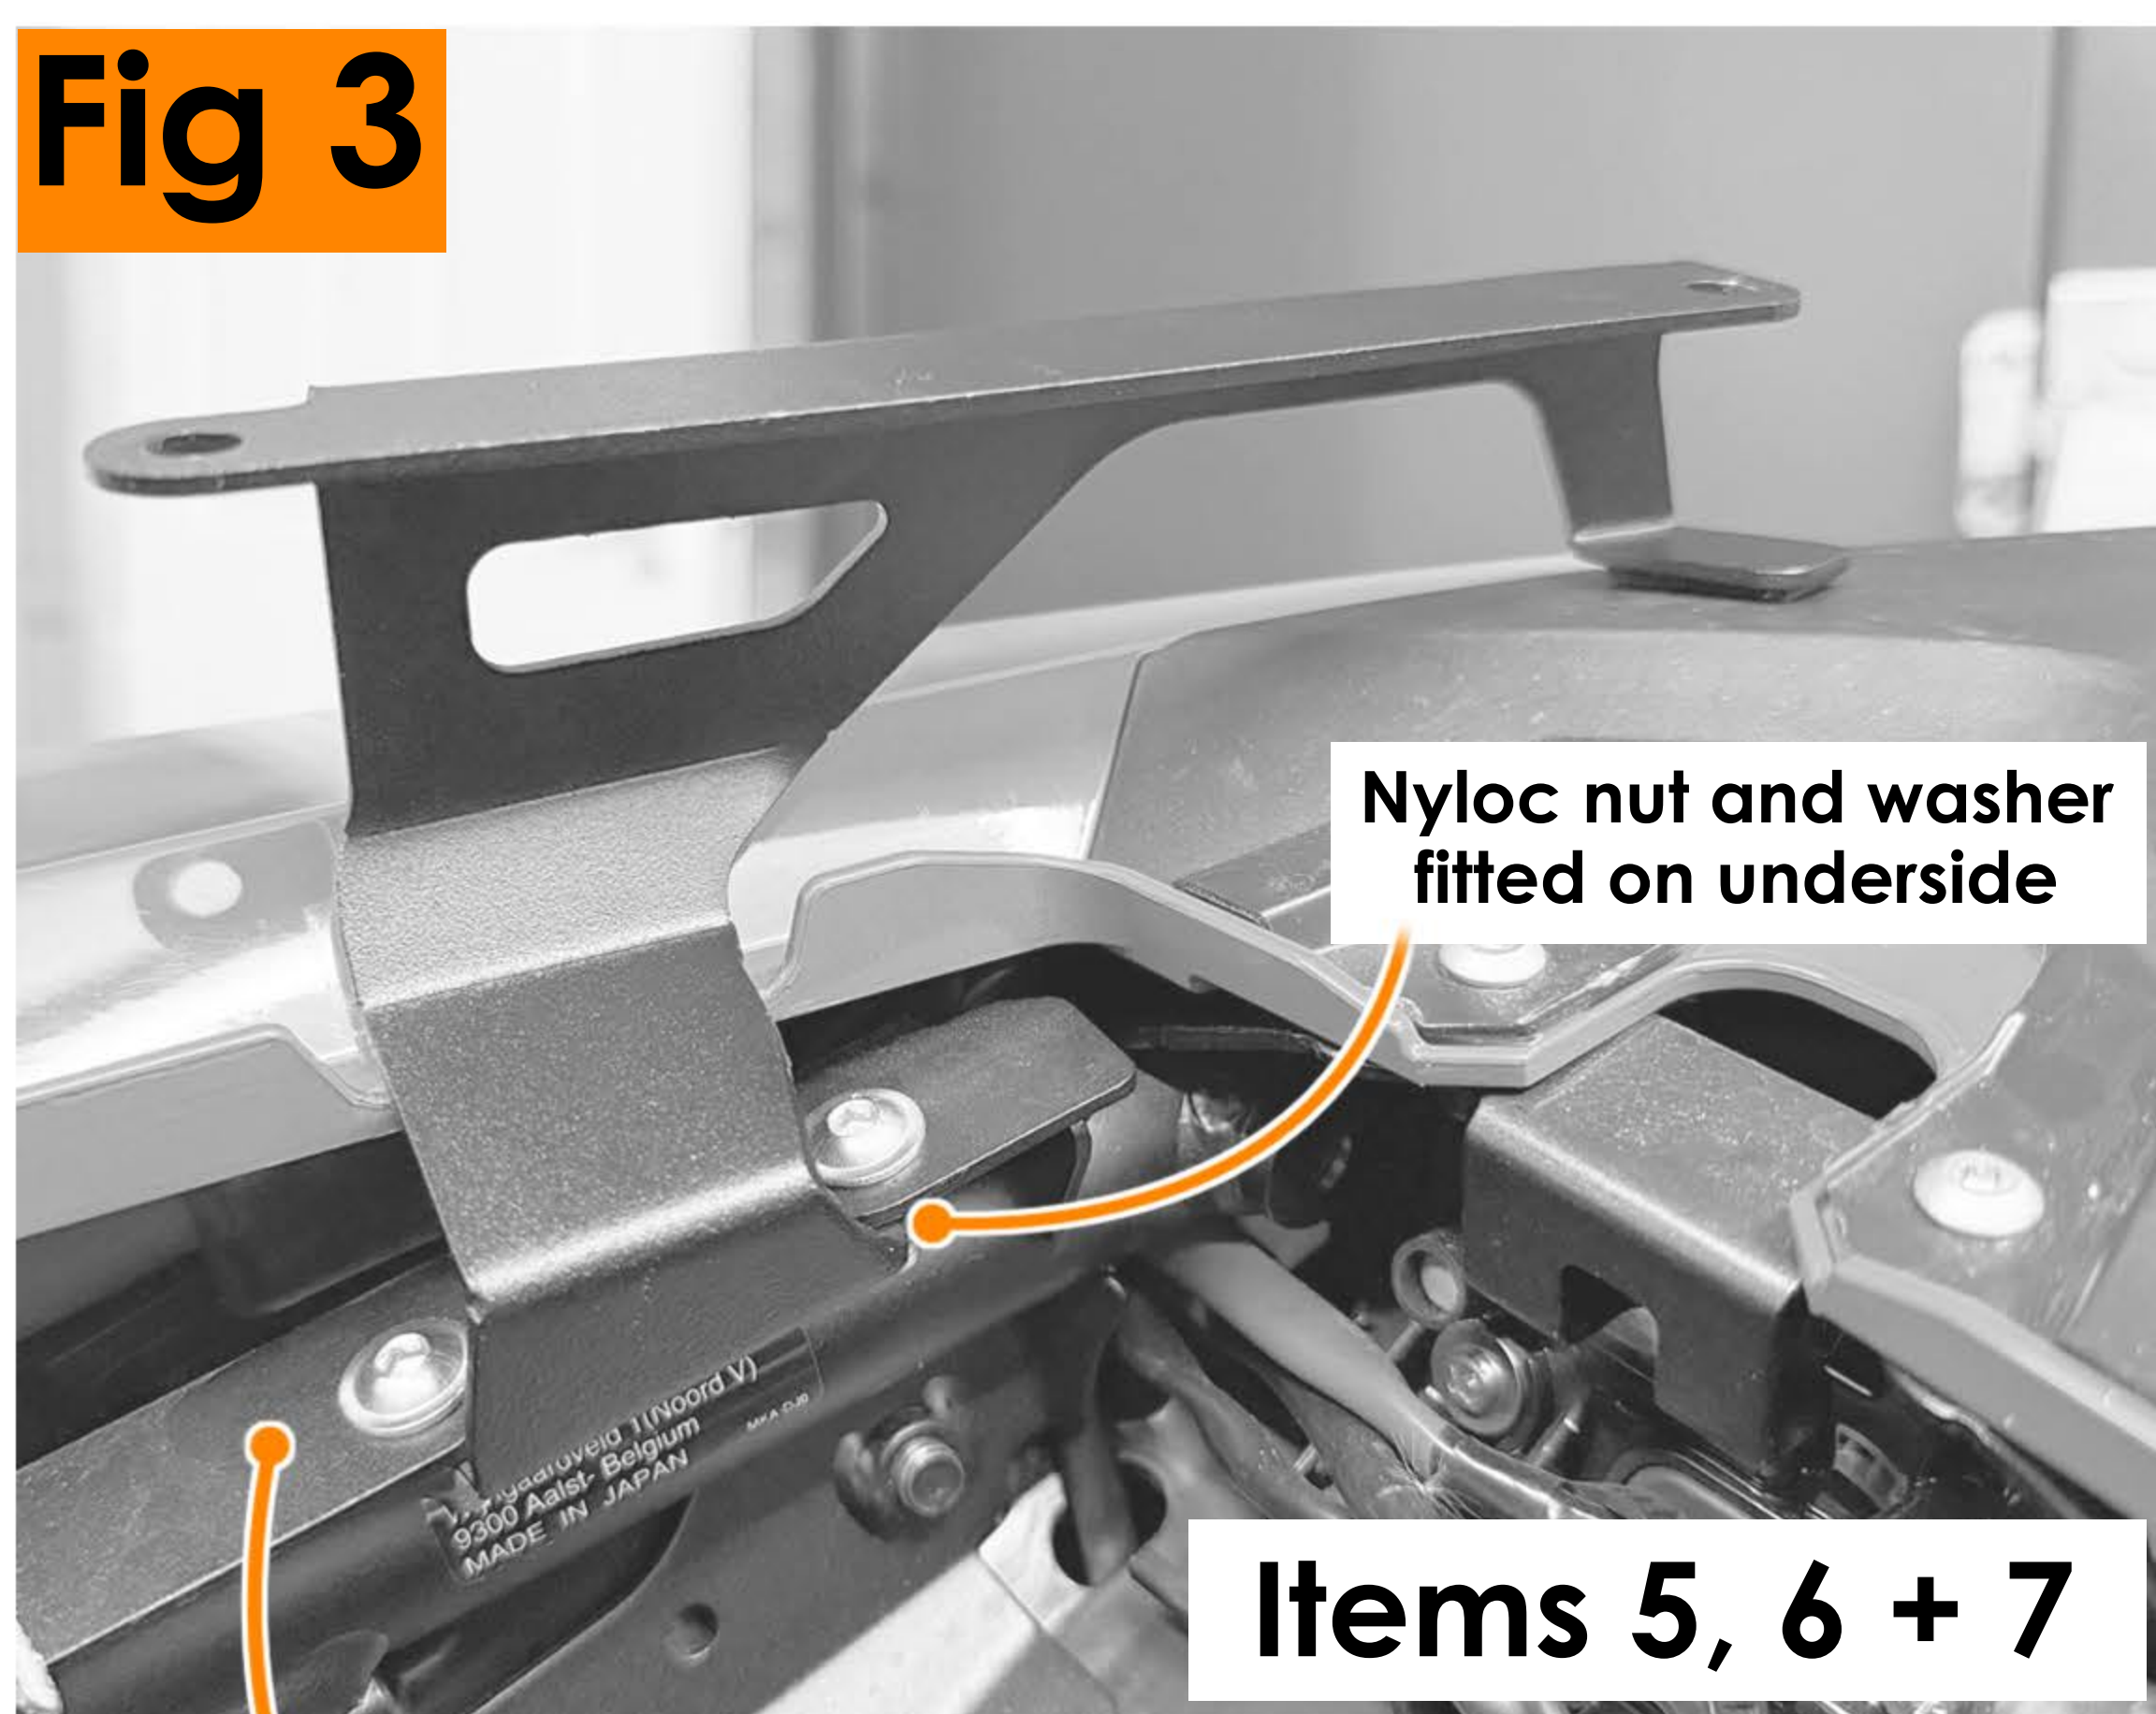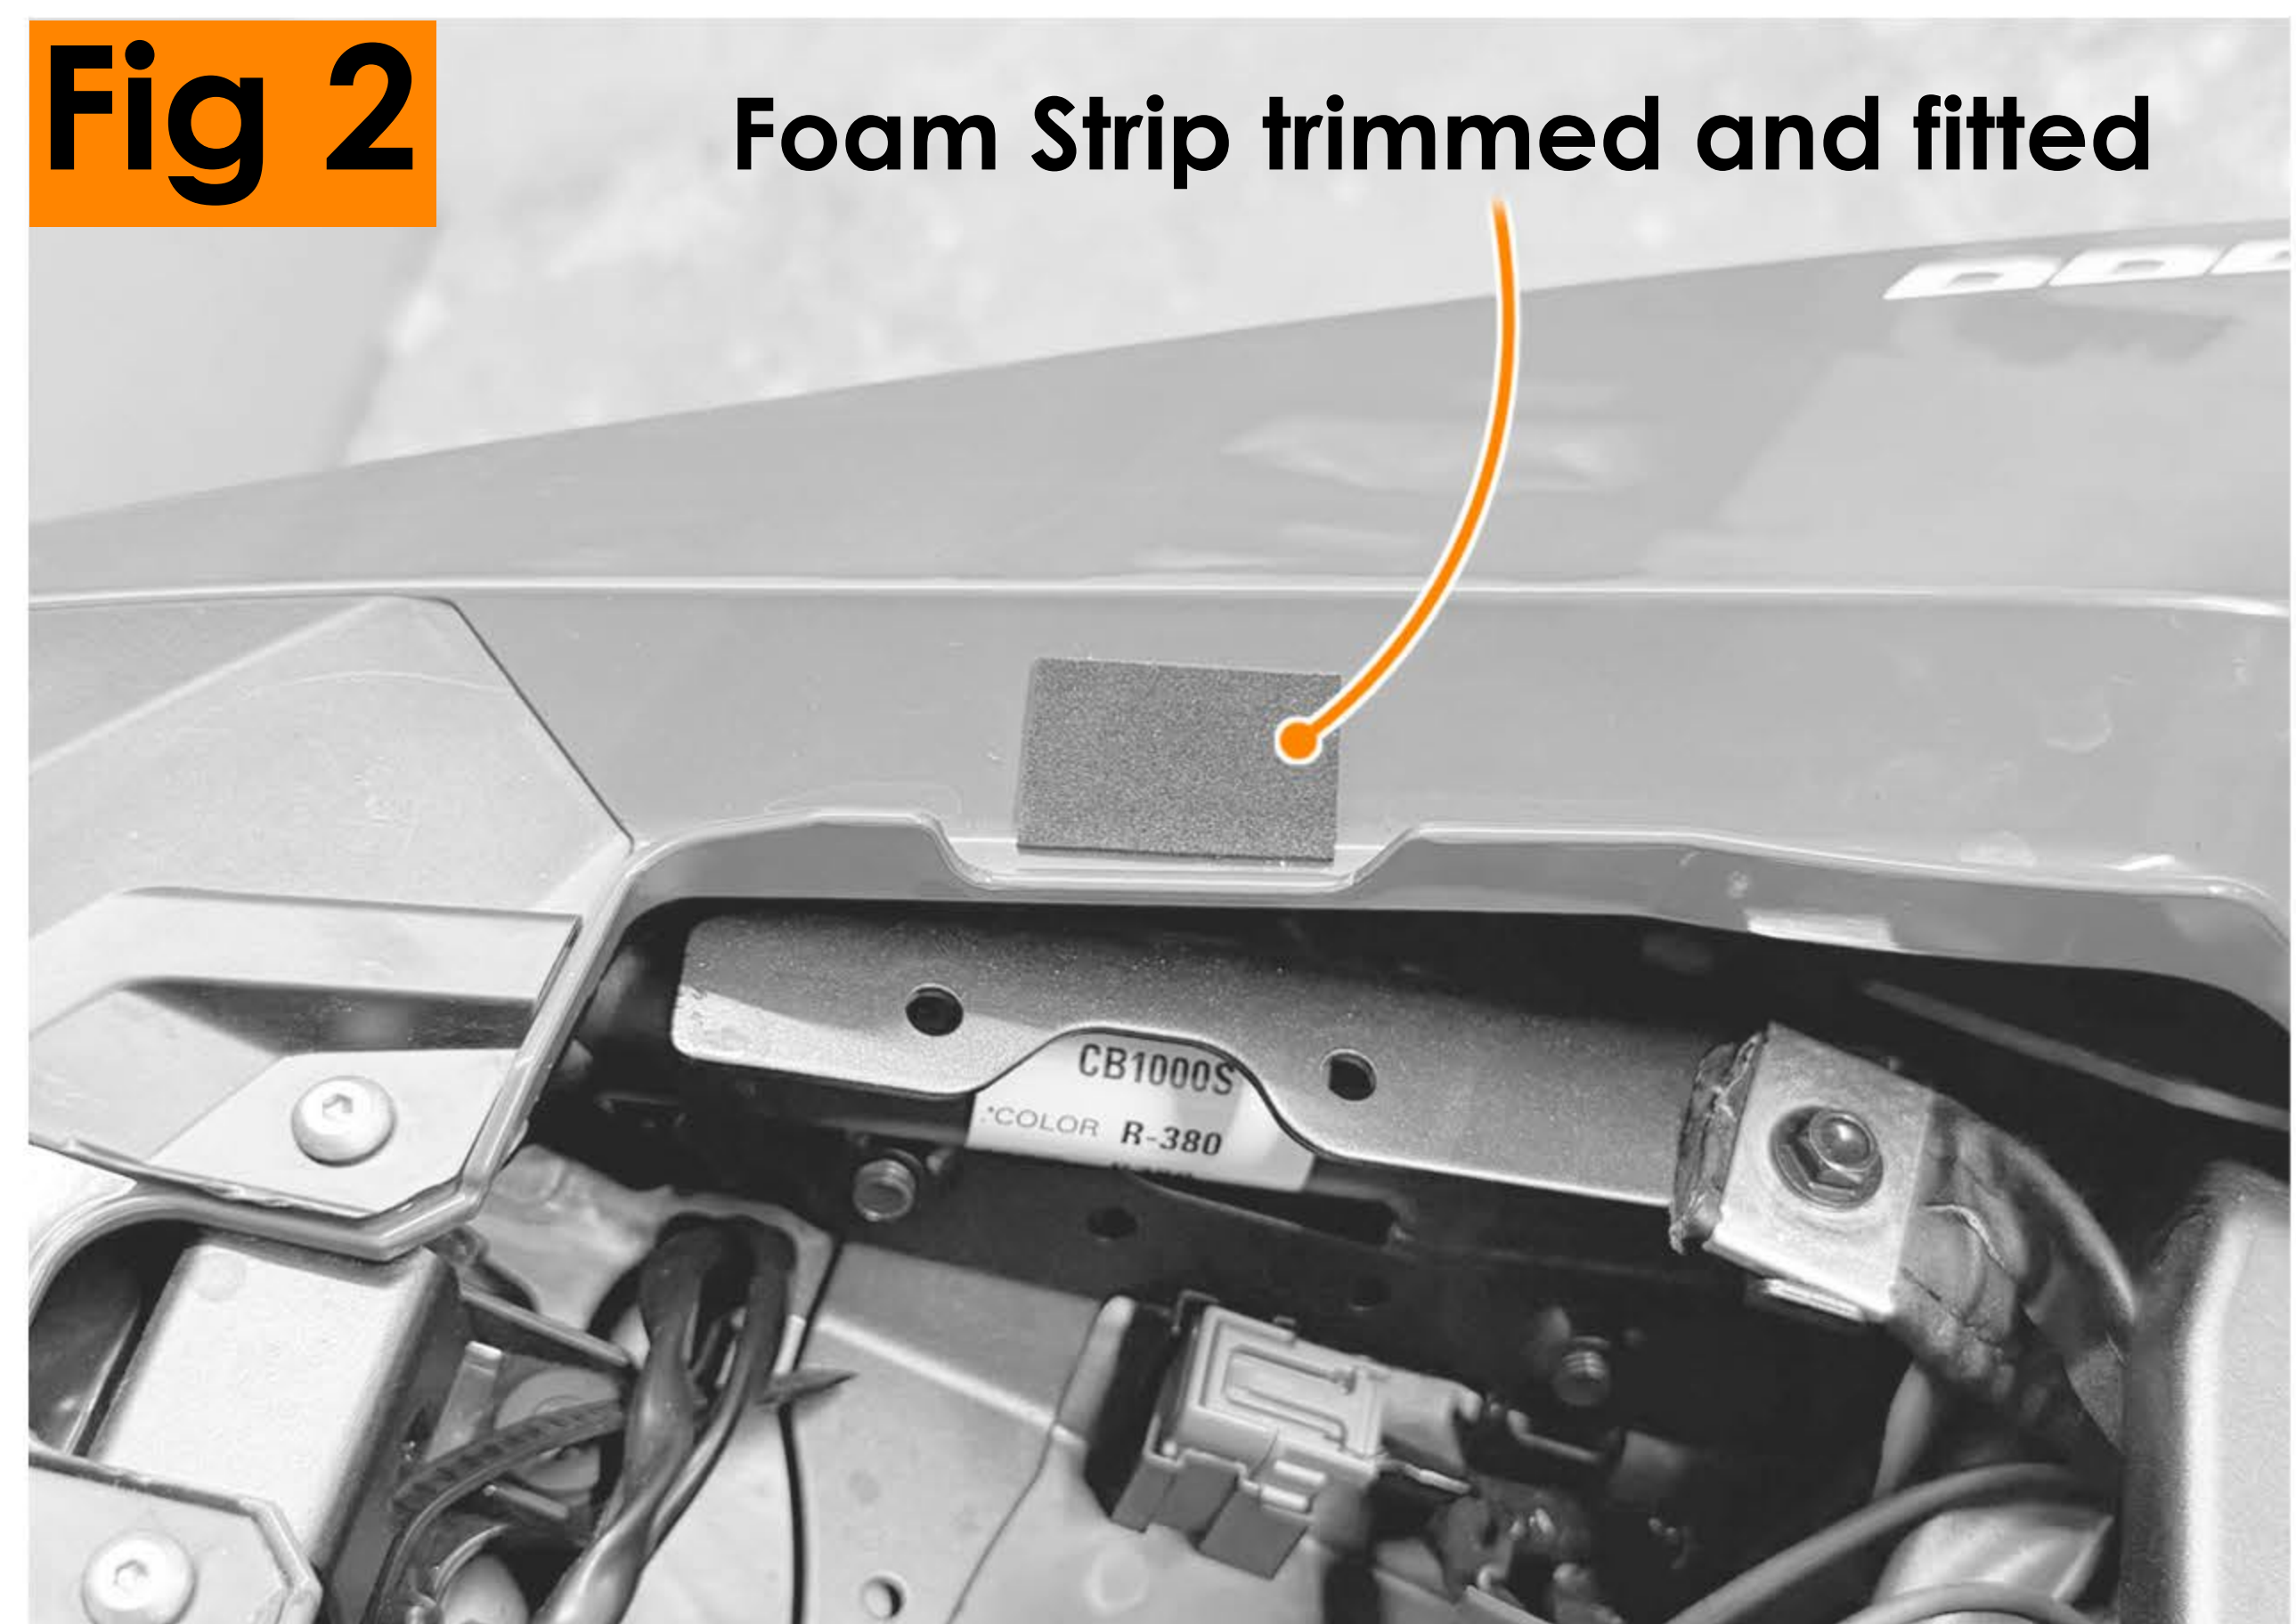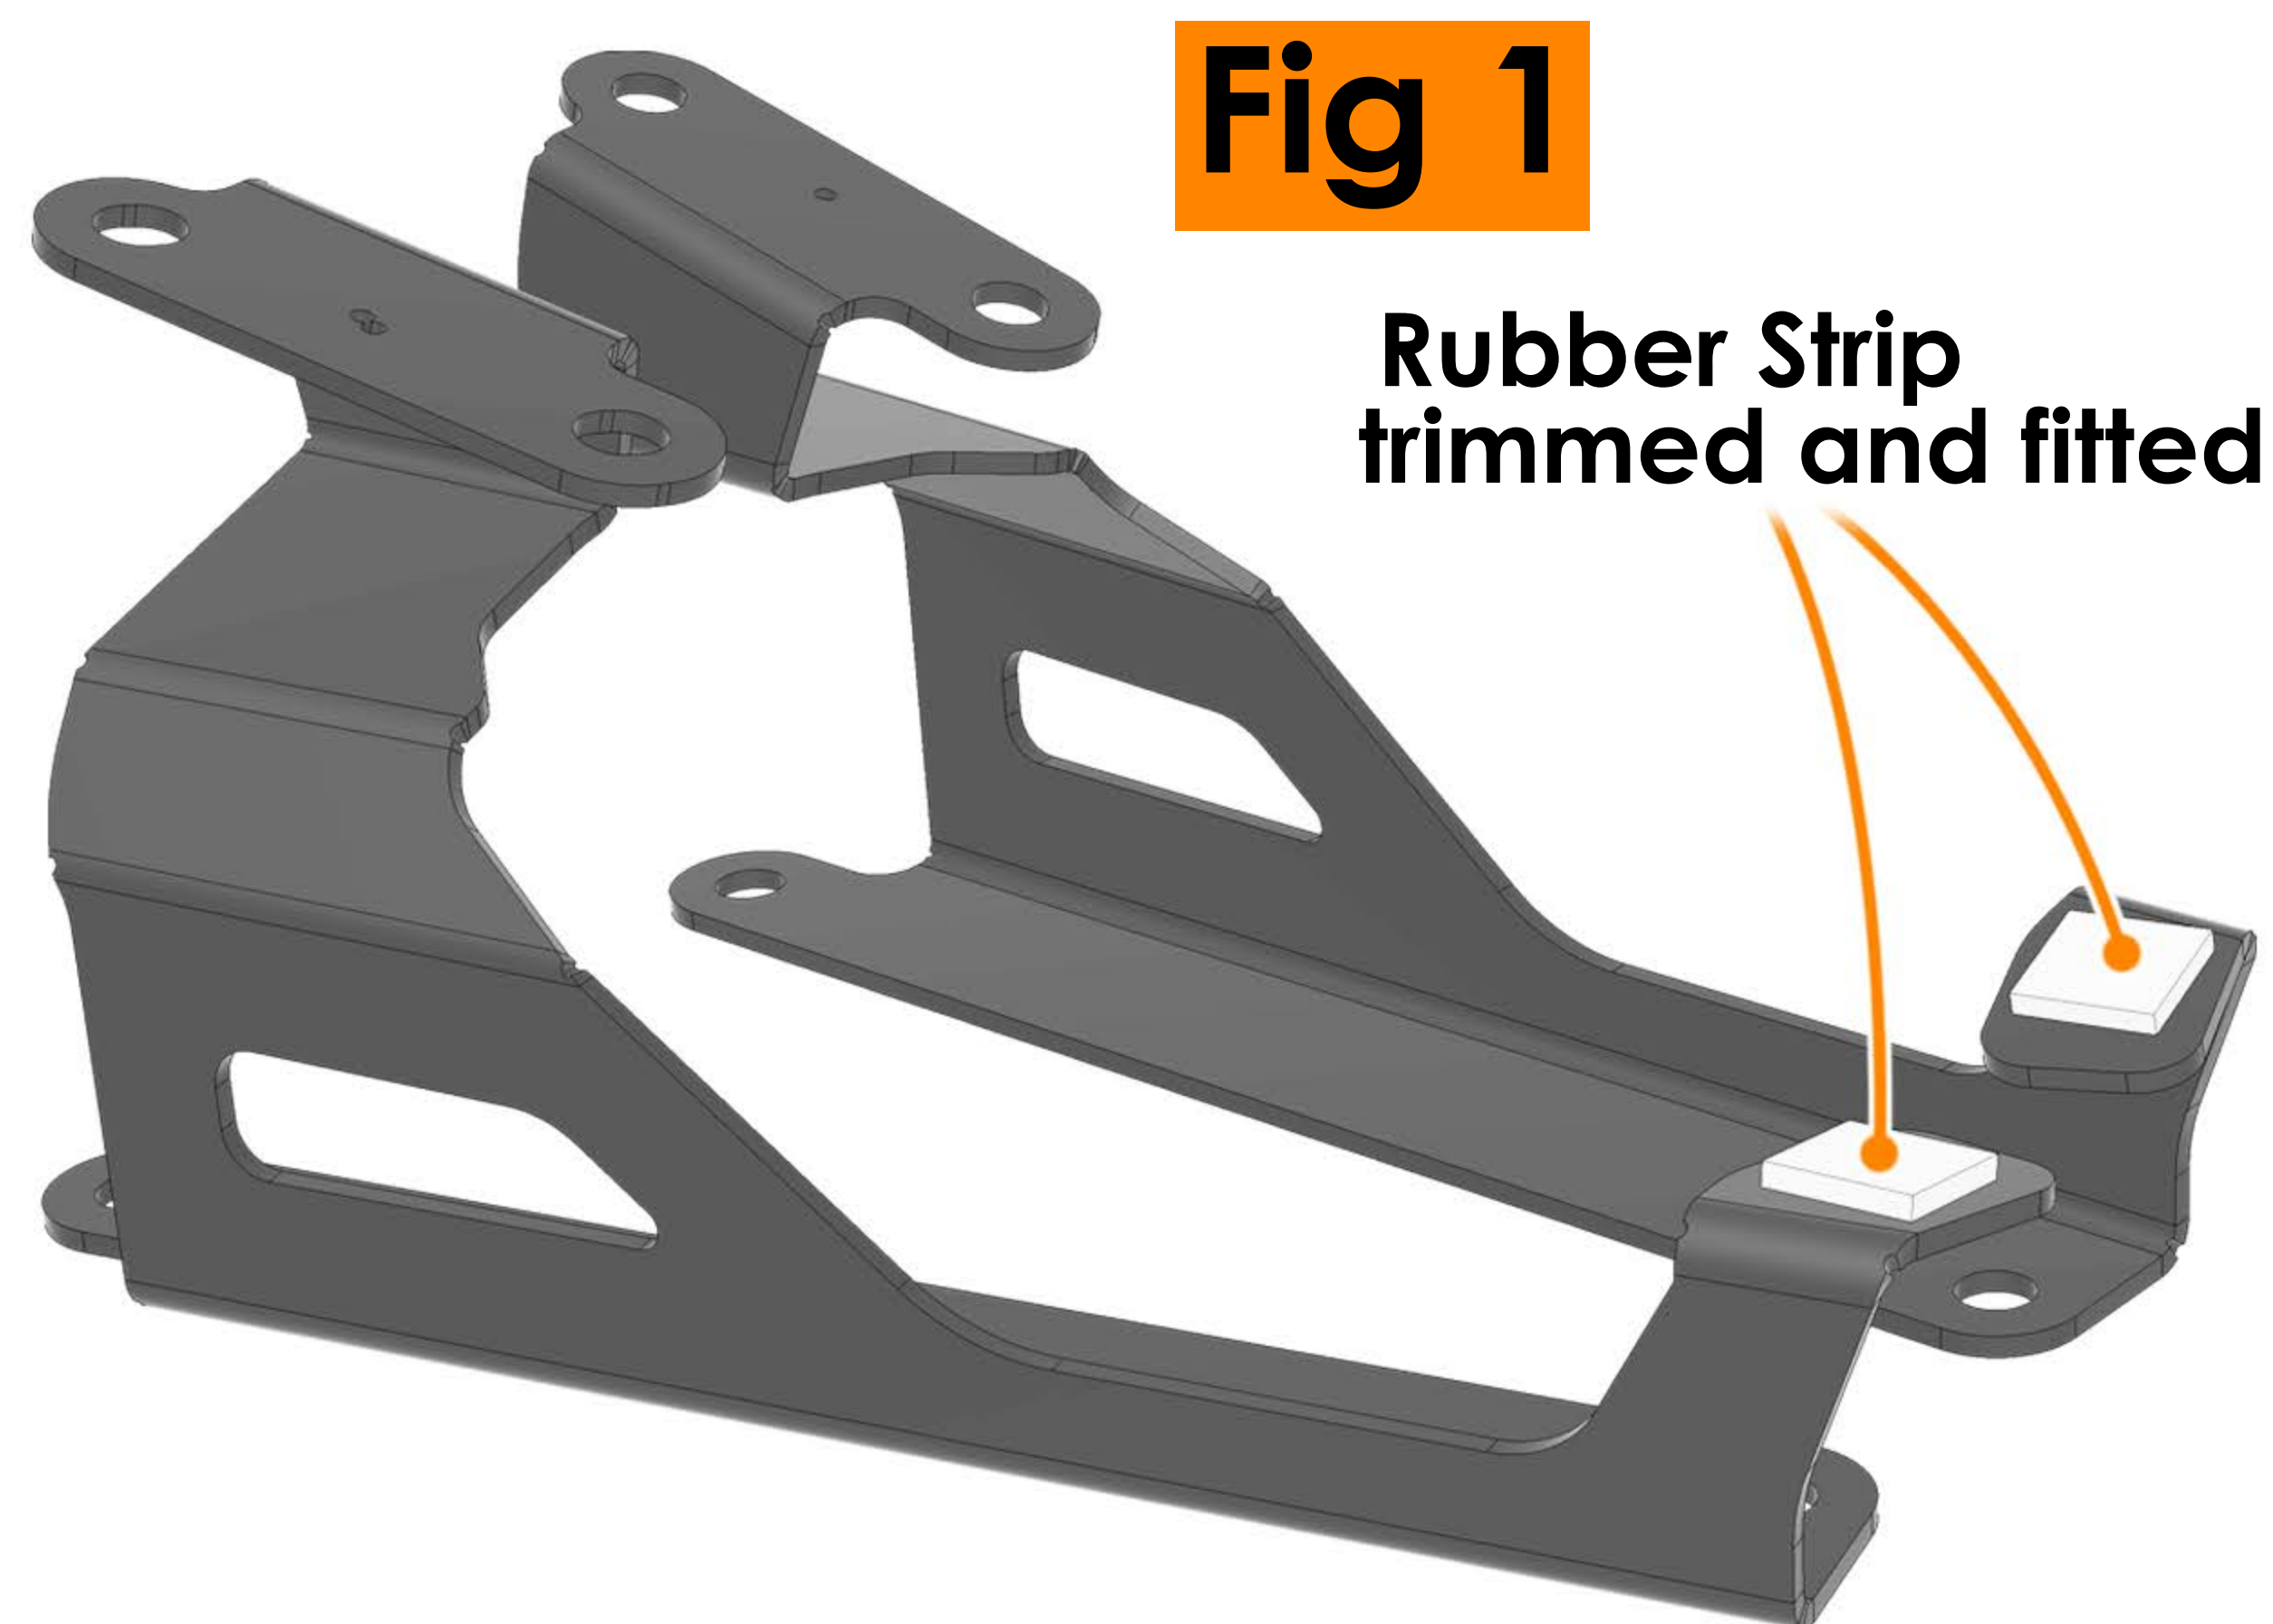

Note: slide the bracket in underneath
this flat metal section on the subframe

