

31690

Honda CB1000 Hornet Frontal Wing

Fitting Instructions

Kit Includes:

1.	X1	C31690	Frontal Wing
2.	X1	CFK31690	Bracket
3.	X1	CTAP0053	Stick-Fit Pads
4.	X1	CWIP002	Alcohol Wipe
5.	X3	CBOLM50023	M5 x 12mm Black Flanged Button Head Bolt
6.	X3	CNUTM50007	M5 Black Serrated Flanged Nut
7.	X2	CBOLM50008	M5 x 16mm Silver Flanged Button Head Bolt
8.	X2	CWASM60001	Washer



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by attaching the bracket to the frontal wing using the fittings shown in **Fig 1**.
- Place the stick-fit pads onto the frontal wing, as shown in **Fig 1**. The stick-fit pads will adhere to the underside of the headlight cowling.
- Clean the underside of the headlight cowling using the alcohol wipe provided. Allow time for it to dry.
- Remove the OEM bolts indicated in **Fig 2**. Check the fitment of the frontal wing. Once satisfied with the positioning, remove the backing paper from the stick-fit pads and attach the frontal wing assembly using the remaining fittings, as shown in **Fig 3**. Apply pressure to the underside of the assembly to improve adhesion.
- Fully tighten all fittings. Be sure to check all fixings periodically.

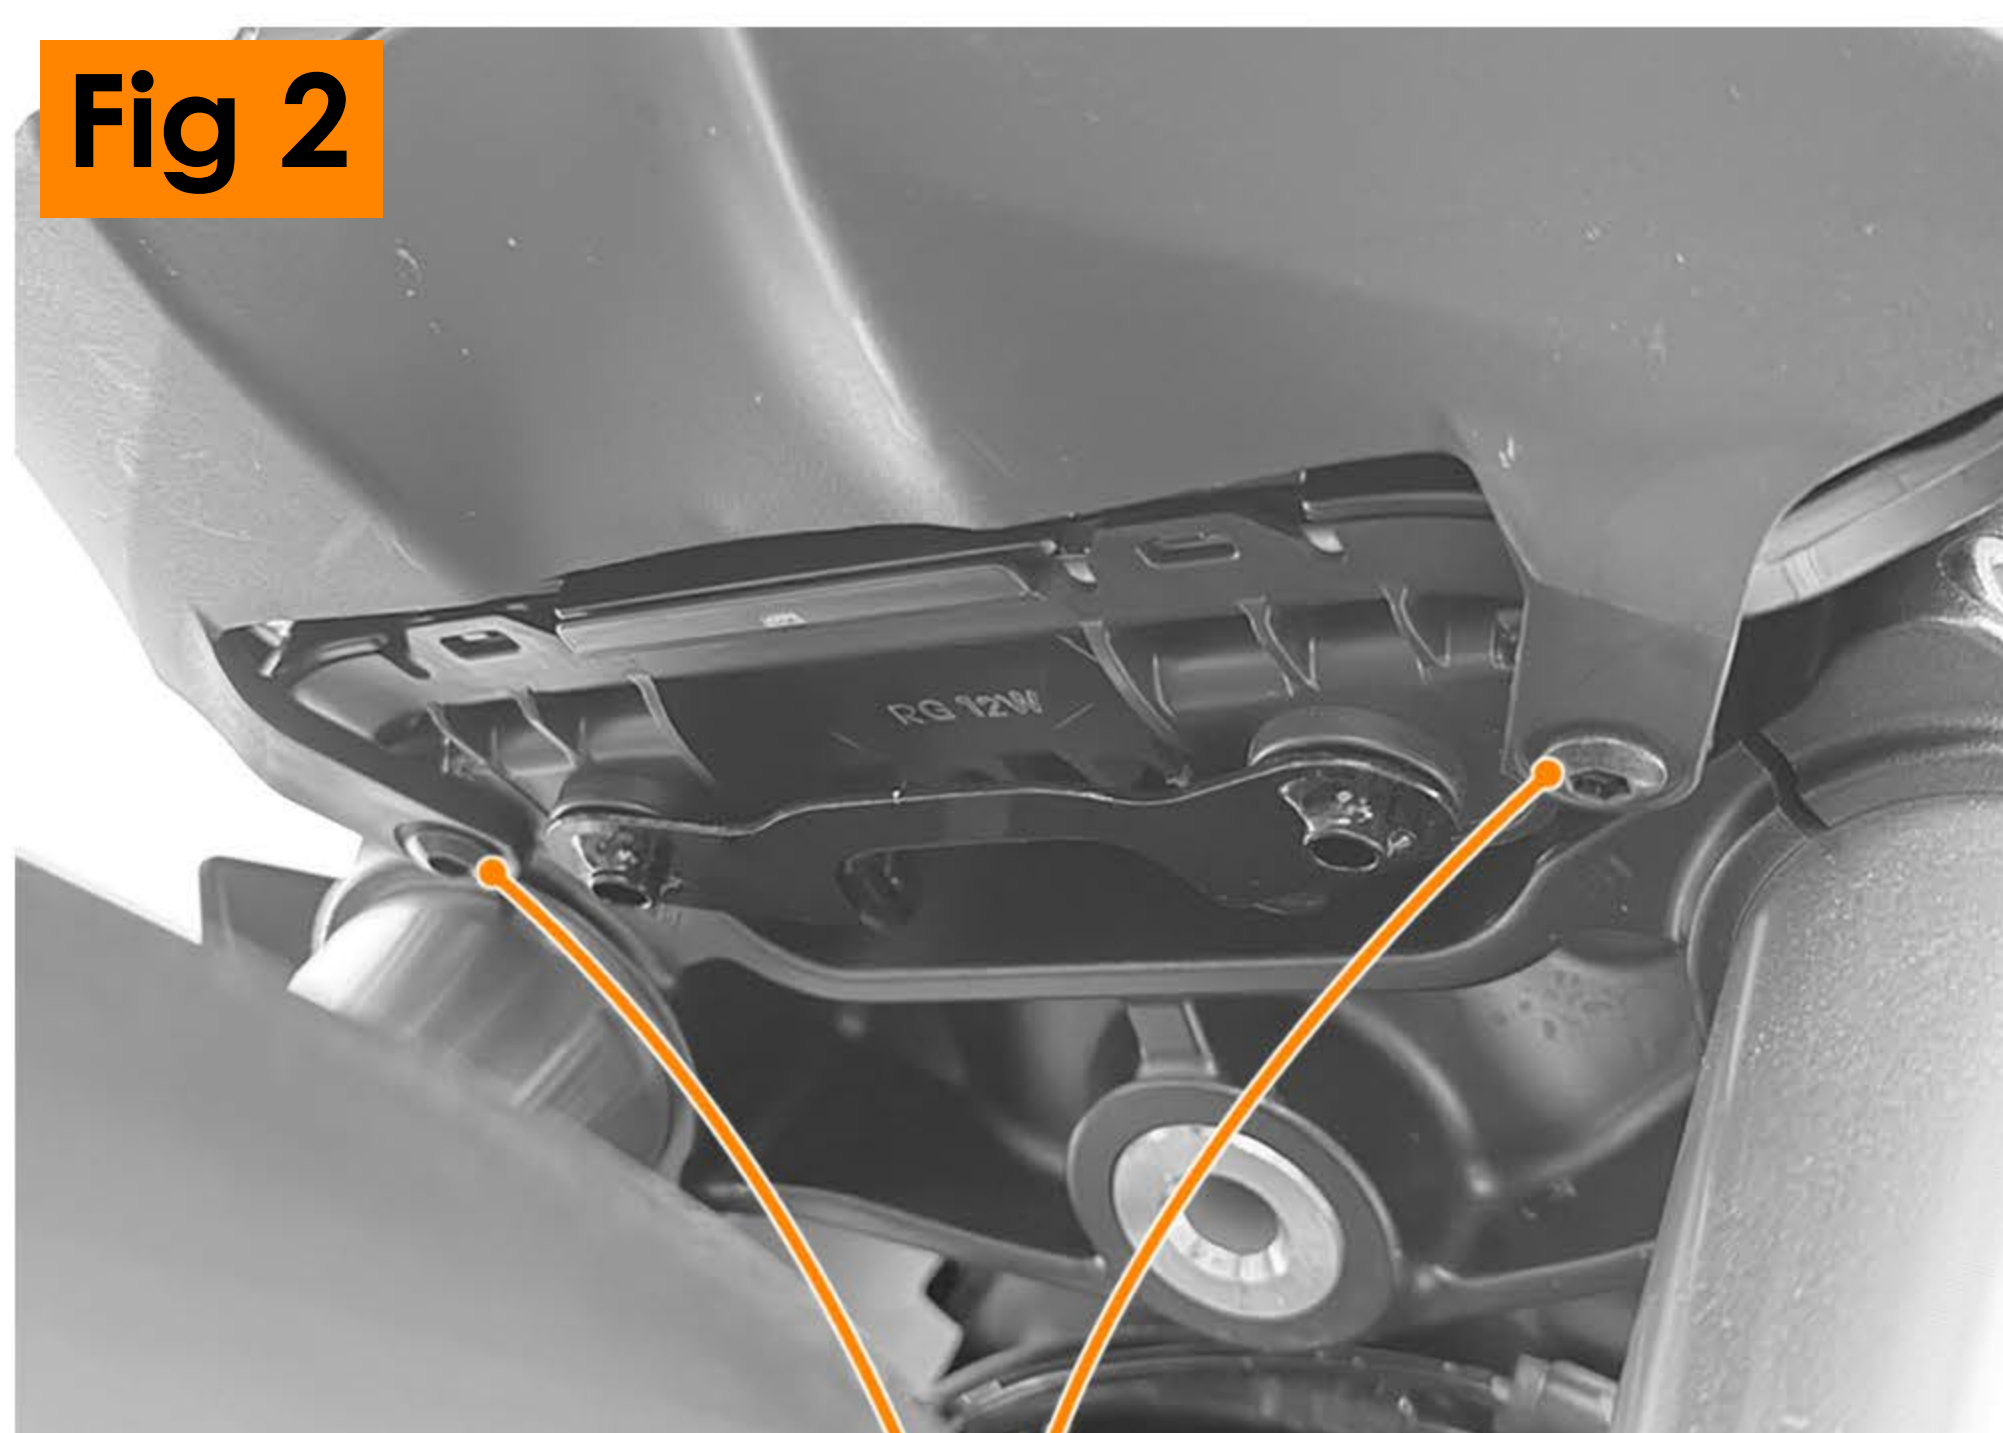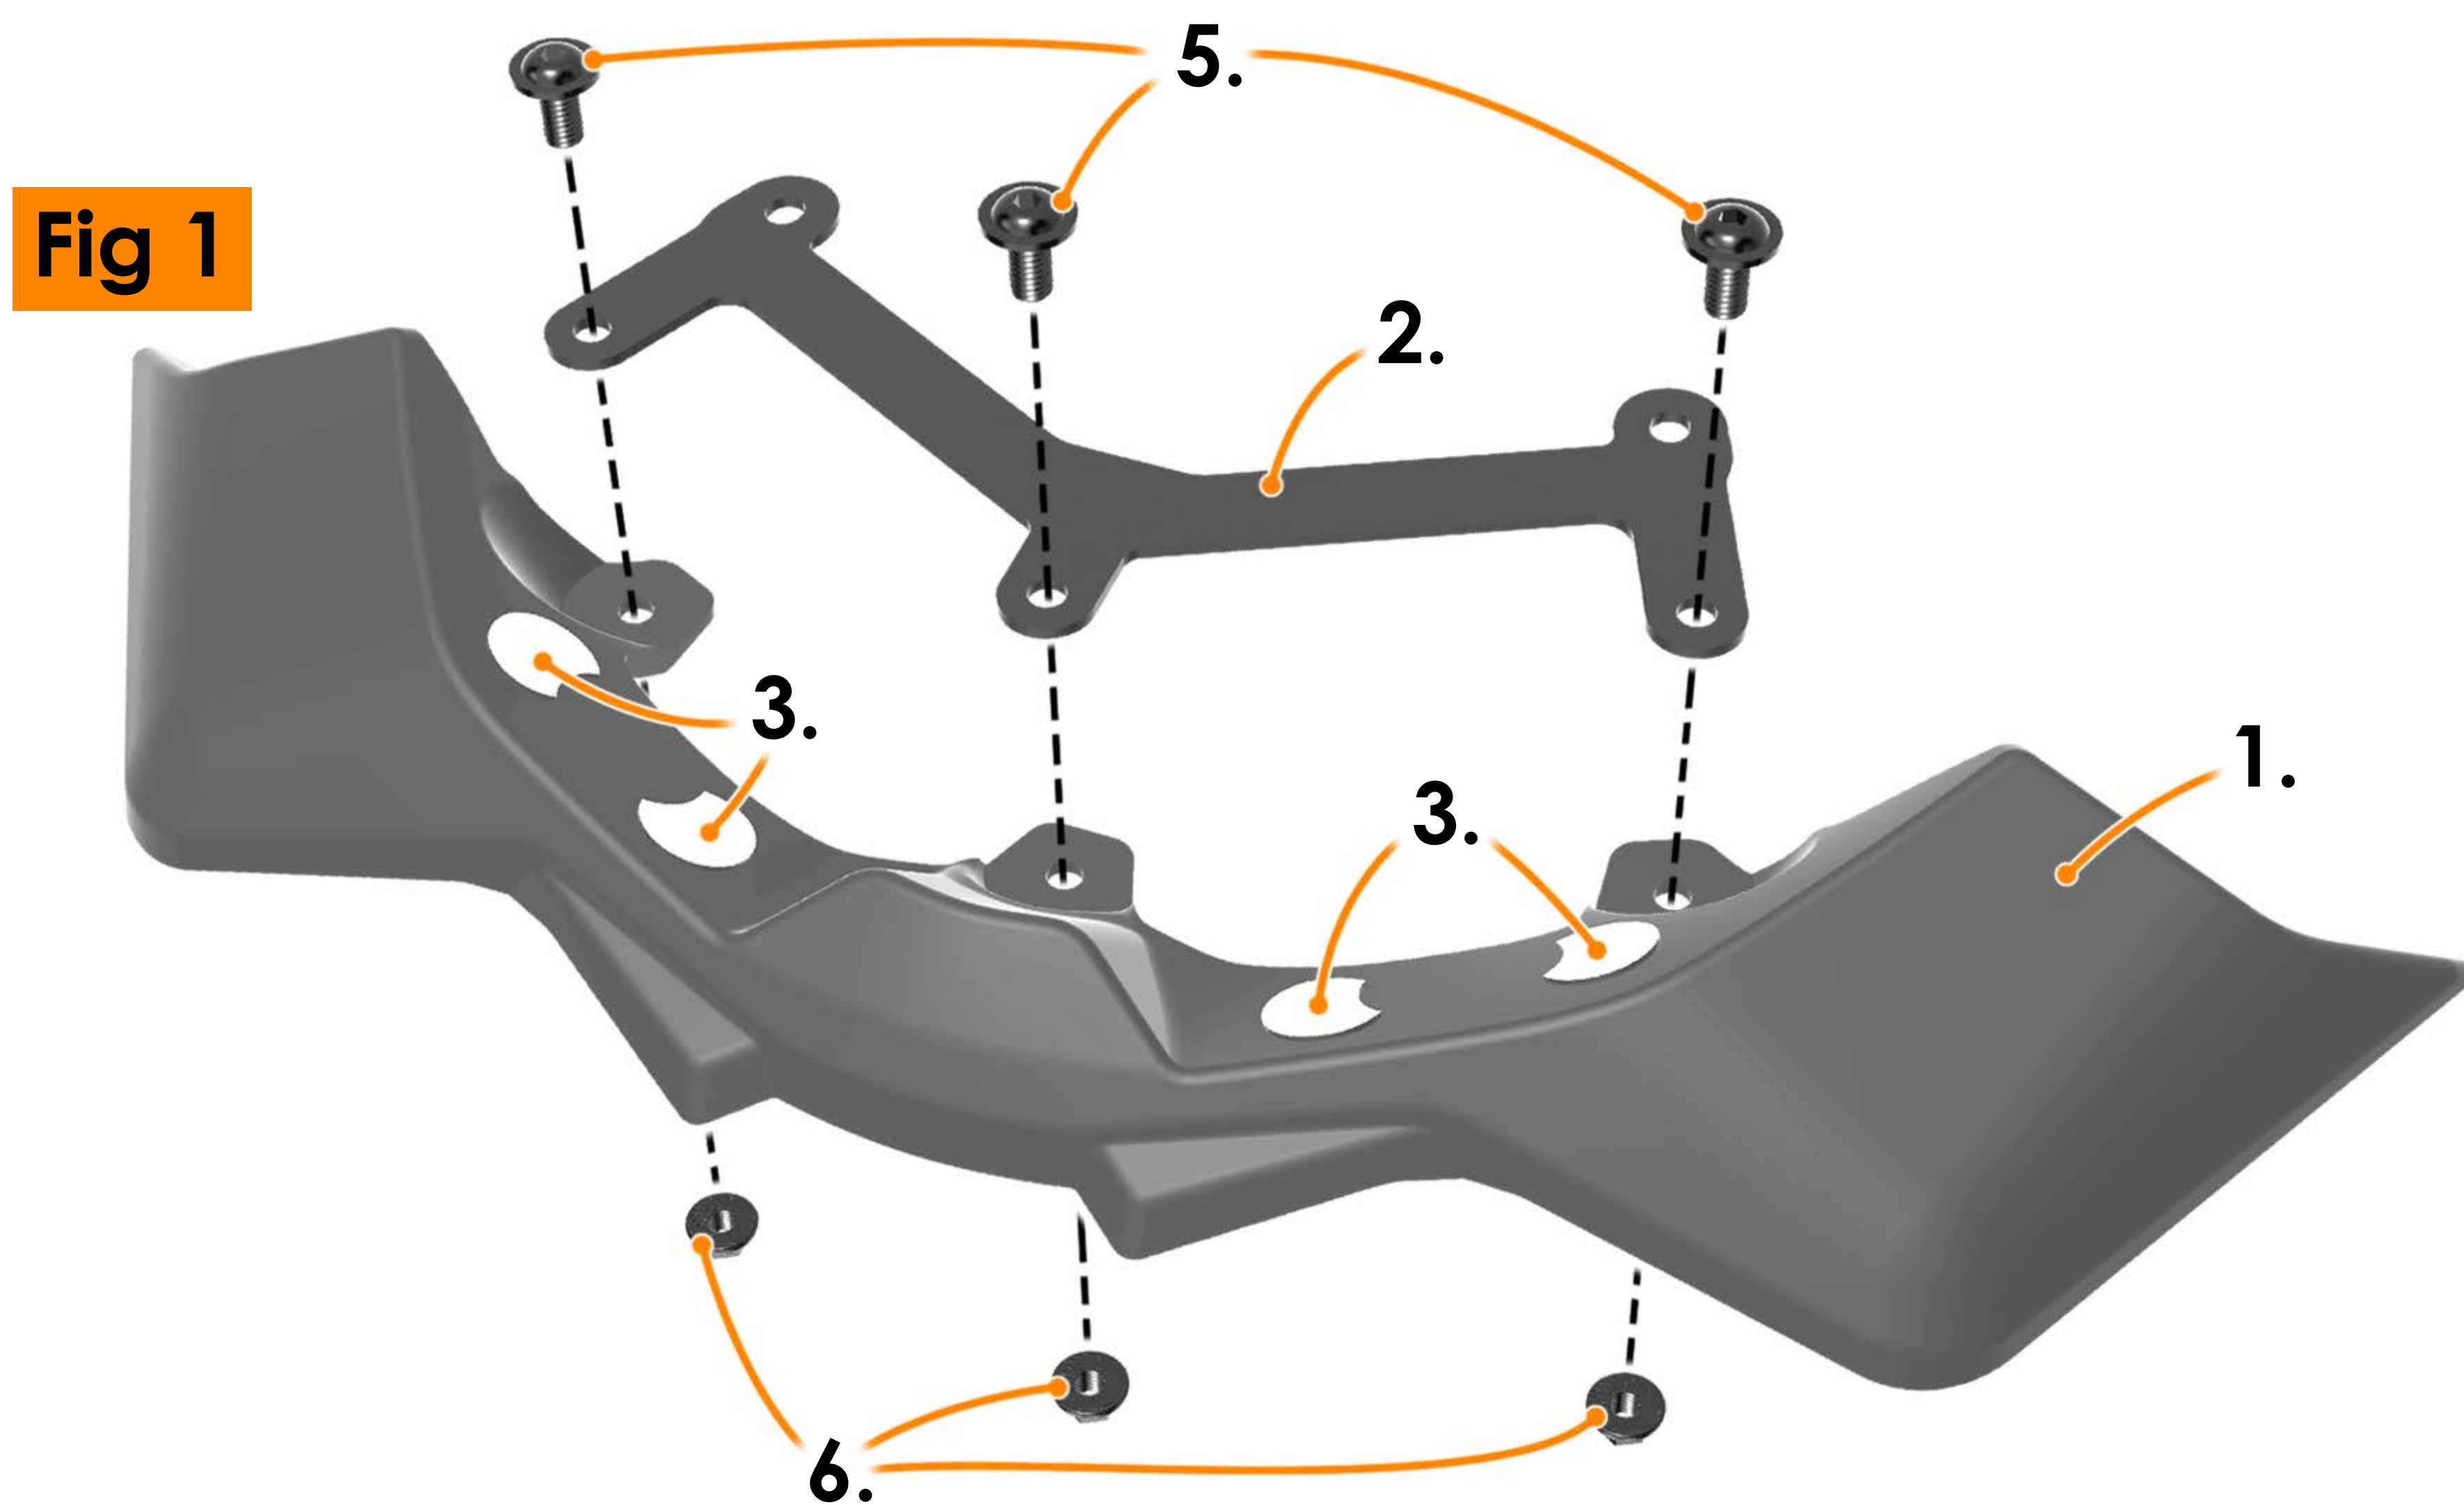

Remove OEM bolts

