



NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

HONDA CBR600RR

FRONT TURN SIGNALS 2013-PRESENT

- 1 Remove (2) T25 torx bolts on each side of the side fairing. (Picture 1)
- 2 Remove (2) pop clips on either side of the bike. (Picture 2)
- 3 Remove (2) T25 torx bolts on each side of the front fairing. (Picture 3)
- 4 Unplug OEM connector, and spin nut off with a 10mm wrench to remove stock turn signals. Keep the rubber grommet as it will be reused. (Picture 4)
- 5 Take NRC blinkers, and remove the lower bracket so you can mount this onto the bike first using the supplied M6x30 bolts and star nuts. (Picture 5)

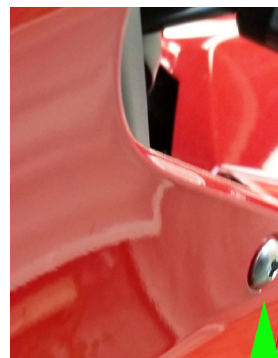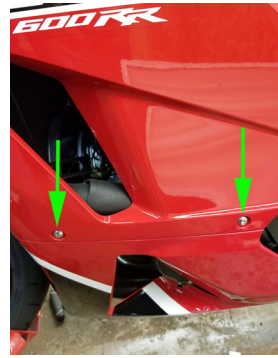

NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

FRONT TURN SIGNALS 2013-PRESENT

- 6 Take top plate and lens and screw onto lower bracket. (Picture 6)
- 7 Plug connectors in and test.
- 8 Reinstall fairing bolts previously removed.

If removing stock mirrors to install block off plates:

- 9 Remove stock bolts and take off stock mirrors. (Picture 7)
- 10 Mount new block off plates using the stock bolts.

