

## **526240M** Triumph Speed/Scrambler X 400 Radiator Guard 2023> Fitting Instructions

### Kit Includes:

|    |    |            |                                               |
|----|----|------------|-----------------------------------------------|
| 1. | X1 | C526240    | Radiator Guard                                |
| 2. | X2 | CBOLM50013 | M5 x 20 Button Head Bolt                      |
| 3. | X2 | CWASM50002 | M5 Washer                                     |
| 4. | X2 | CSPAM60001 | M6 Spacer                                     |
| 5. | X2 | CCAP0003   | M5 Bolt Cap                                   |
| 6. | X4 | CFOA0001   | Foam Strip (40mm length) (pre-cut by Pyramid) |

### Assembly Instructions

- Begin by fitting the Foam Strips (Item 6) to the Radiator Guard (Item 1). Please see '**FIG. 2**' for reference.
- Remove the OEM Radiator Guard (if applicable).
- Using the fittings provided (Items 2, 3 and 4), proceed to loosely attach the Radiator Guard as shown in '**FIG. 2**'.
- Once the Radiator Guard is in position, proceed to fully tighten all fixings.
- Finally, attach the M5 Bolt Caps (Item 5) to the M5 Bolts.

### Please Note:

We advise that all fixings are checked periodically.

Any questions?  
sales@pyramidmoto.co.uk  
+44 (0)1427 677990  
www.pyramidmoto.co.uk




Follow us on social media and feel free to leave us a review!

**FIG. 1**



**FIG. 2**

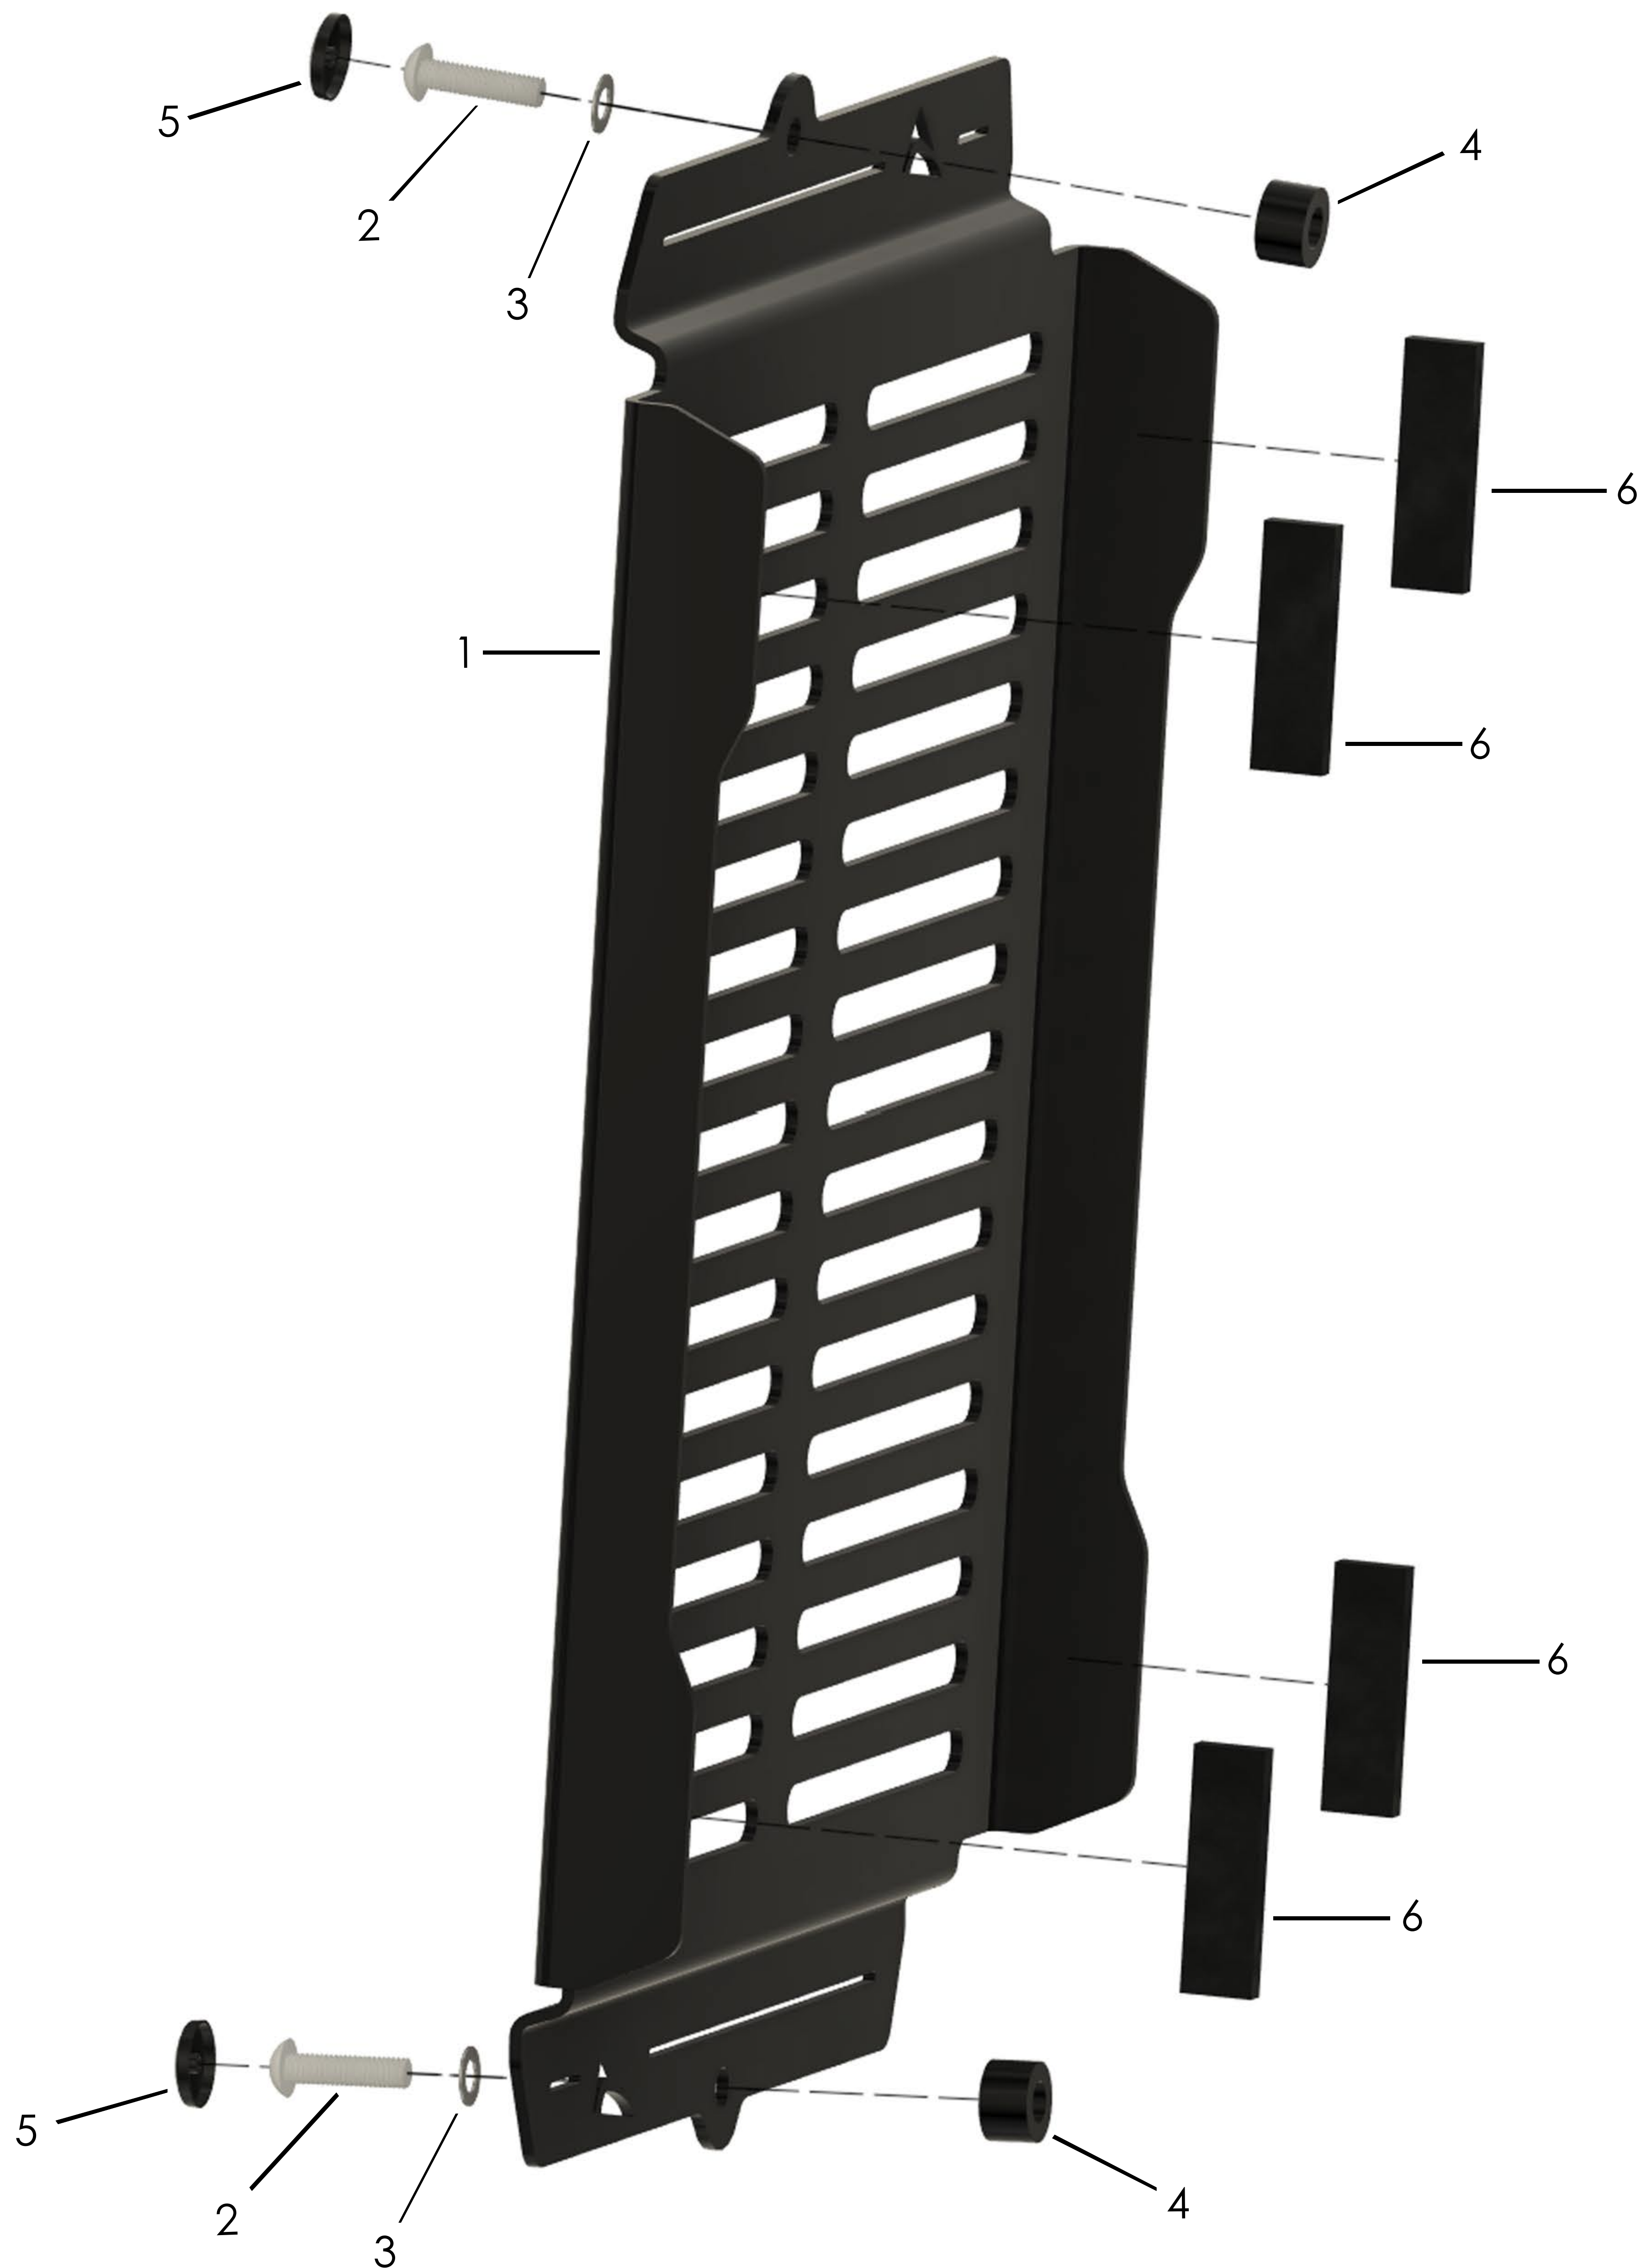

Any questions?  
sales@pyramidmoto.co.uk  
+44 (0)1427 677990  
www.pyramidmoto.co.uk



Follow us on social media and  
feel free to leave us a review!