



076850M Triumph Tiger 800 Sport 2025> Hugger **Fitting Instructions**

Kit Includes:

1.	X1	C076850M	Hugger Blade
2.	X1	CFK076850A	Mounting Bracket 'A' (LHS)
3.	X1	CFK076850B	Mounting Bracket 'B' (RHS)
4.	X4	CBOLM60007	M6 x 12mm Button-Head Bolt
5.	X4	CWASM60001	M6 Flat Washer
6.	X4	CNUTM60003	M6 Nyloc Nut
7.	X3	CBOLM50008	M5 x 16mm Button-Head Bolt
8.	X3	CSPAM60009	M6 Spacer (4mm Depth)
9.	X4	CCAPM60002	M6 Bolt Cap Cover
10.	X1	CCAPM50003	M5 Bolt Cap Cover
11.	X2	CFOA0002	1.5mm Foam (190mm Length)
12.	X2	CTAP0053	Adhesive Sticker Sheet
13.	X2	CWIP002	Alcohol Cleaning Wipe

All components and their orientation are shown in 'FIG. YZ'.

Assembly Instructions

Please do not fully tighten any fixings until all mountings have been secured, unless otherwise stated.

- Begin by thoroughly cleaning the rear swingarm area by removing dirt and grease.
- Locate the bolt on the RHS of the OEM hugger blade and remove it. **Keep the OEM rear mudguard in position.**
- Remove the plastic end caps from both sides of the swingarm (**FIG. 1**). Place the 2 x mounting brackets (**Items 2 & 3**), along with 2 x spacers (**Item 8**) and 2 x M5 bolts (**Item 7**), on their respective sides. Mounting bracket 'A' will have a **singular hole** marker and mounting bracket 'B' will have a **double hole** marker. Please see '**FIG. 1**' for reference.
- Prepare the Pyramid Hugger (**Item 1**) by cleaning the marked areas with 1 x cleaning wipe (**Item 13**). Use '**FIG. 3**' for reference. Place the 2 x foam strips (**Item 11**) and the adhesive stickers (**Item 12**) in the orientation illustrated in '**FIG. 2**'. Please note, not all adhesive stickers need to be applied.
- Once prepared, use the remaining cleaning wipe on the chainguard and hugger blade surface. Now remove the plastic sticker covers.
- Place 1 x M6 spacer into the recessed mounting point of the OEM hugger. Using 1 x M5 bolt, locate the Pyramid Hugger to this mounting point and secure loosely. Using 4 x M6 bolts, washers and nuts (**Items 4, 5 & 6**), loosely secure the the mounting brackets to the hugger.
- Adjust the position of the hugger to engage the adhesion if necessary and then firmly press down in the adhesive areas. You may now **tighten all fixings**.
- Finish the installation by placing 4 x M6 bolt caps (**Item 9**) on all M6 bolts and 1 x M5 bolt cap (**Item 10**) on the hugger blade M5 bolt.
- The installation of your Pyramid Hugger is now complete.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!


Please Note:

We advise that all fixings are checked periodically.


076850M Triumph Tiger 800 Sport 2025> Hugger Fitting Instructions

The images shown below will assist with the identification of the components included in the fitting kit, together with their application.

FIG. 1

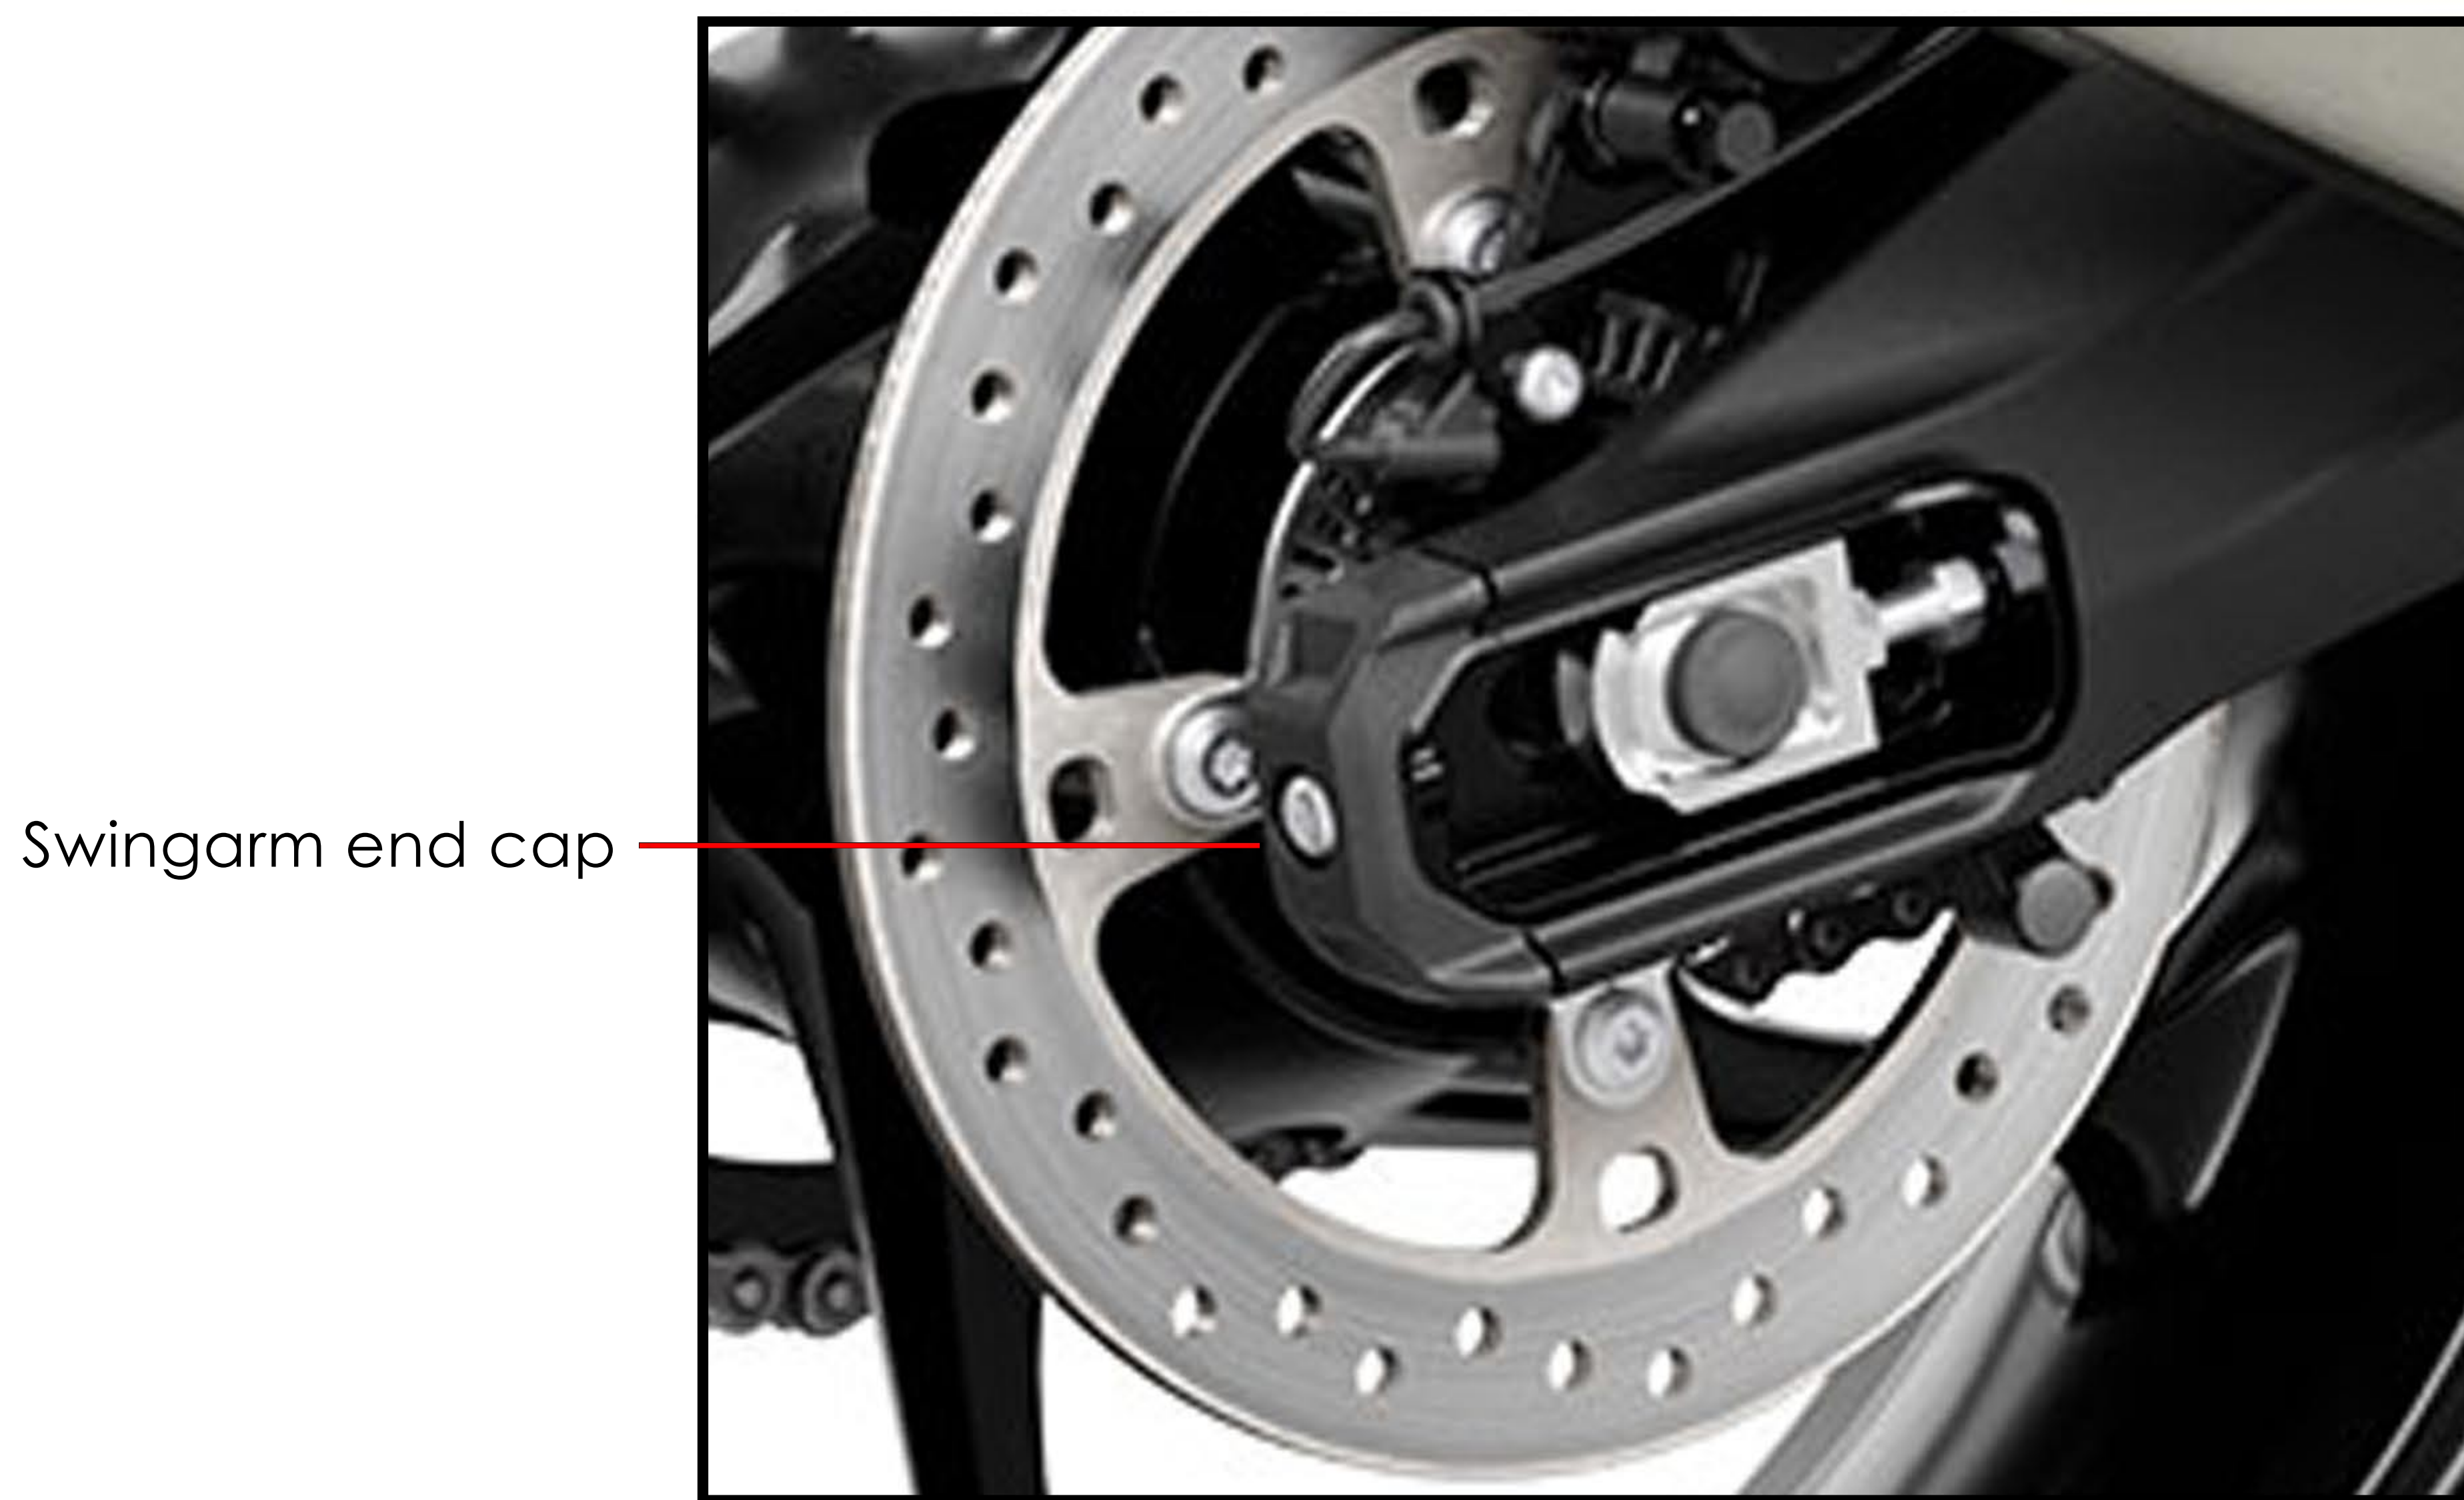


'**FIG. 1**' indicated end caps for located on the end of the swingarm that need to be temporarily removed in order to fit both mounting brackets (**Items 2 & 3**). The M6 spacer (**Item 8**) sits in the recessed mounting face of the end cap when the mounting bracket is fitted.

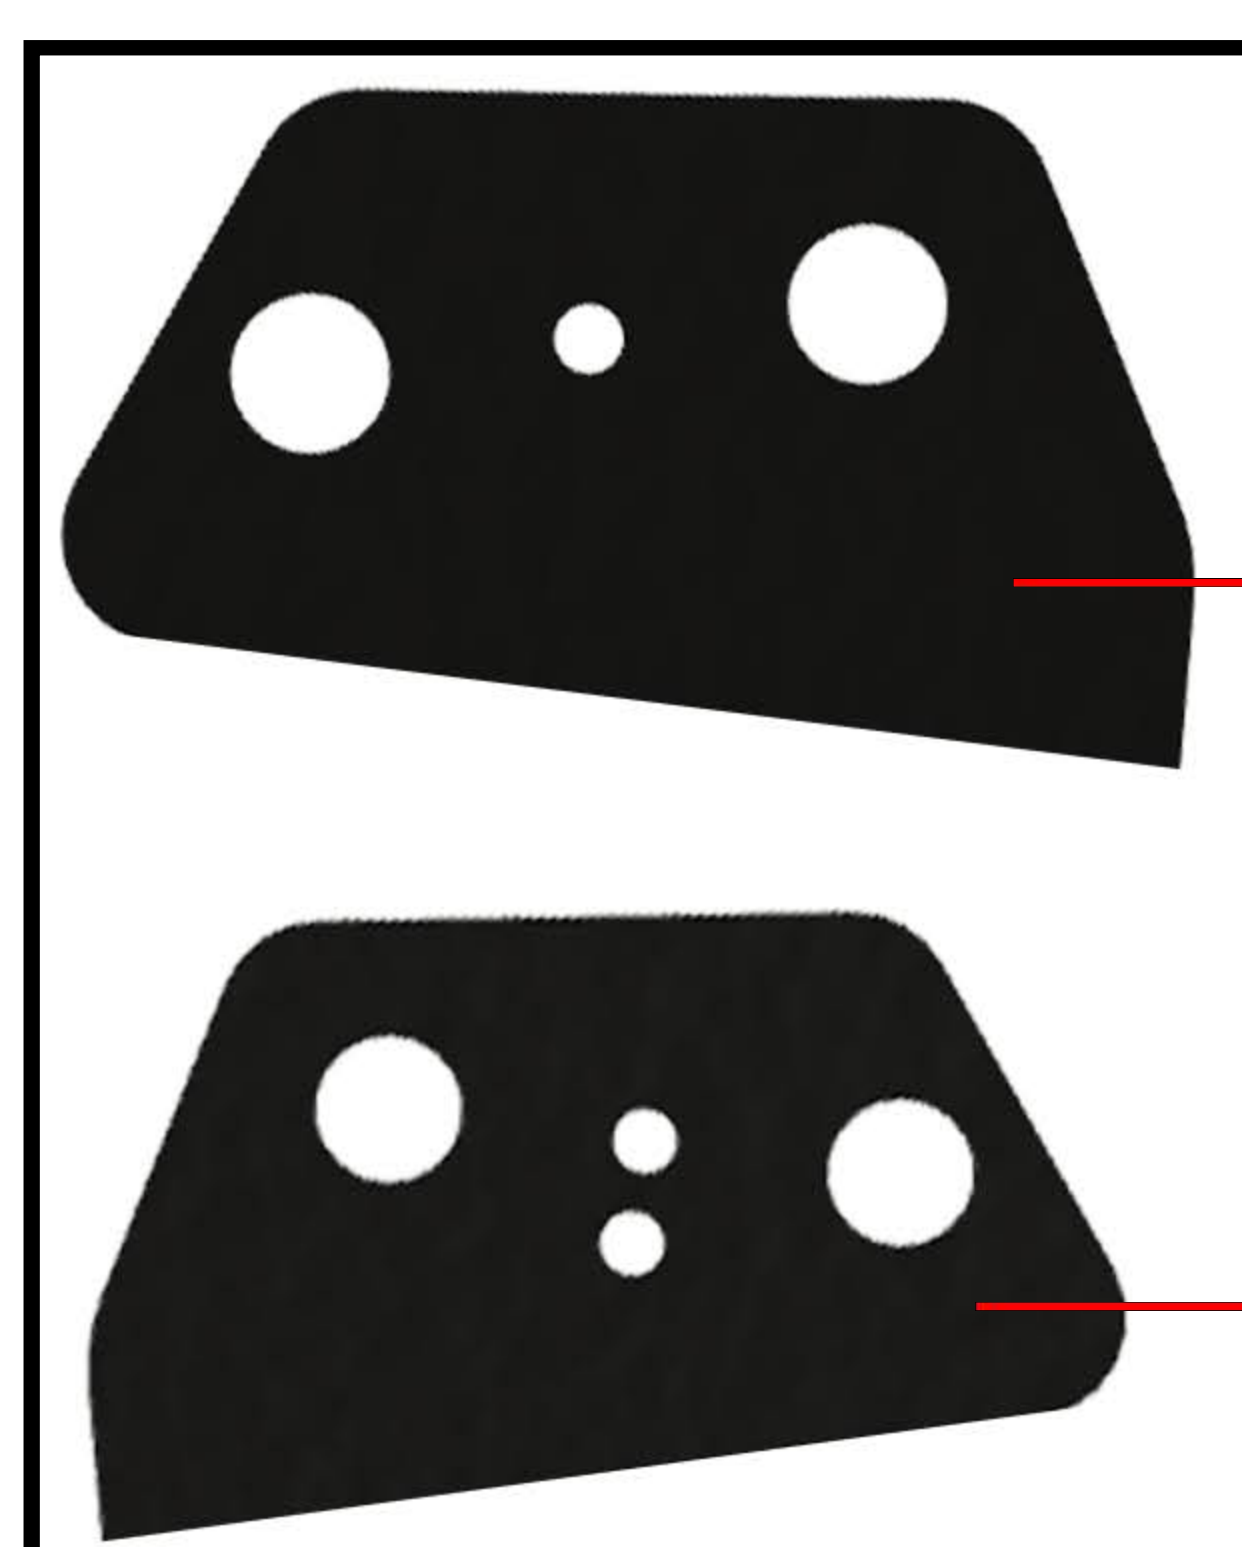

LHS Bracket

RHS Bracket

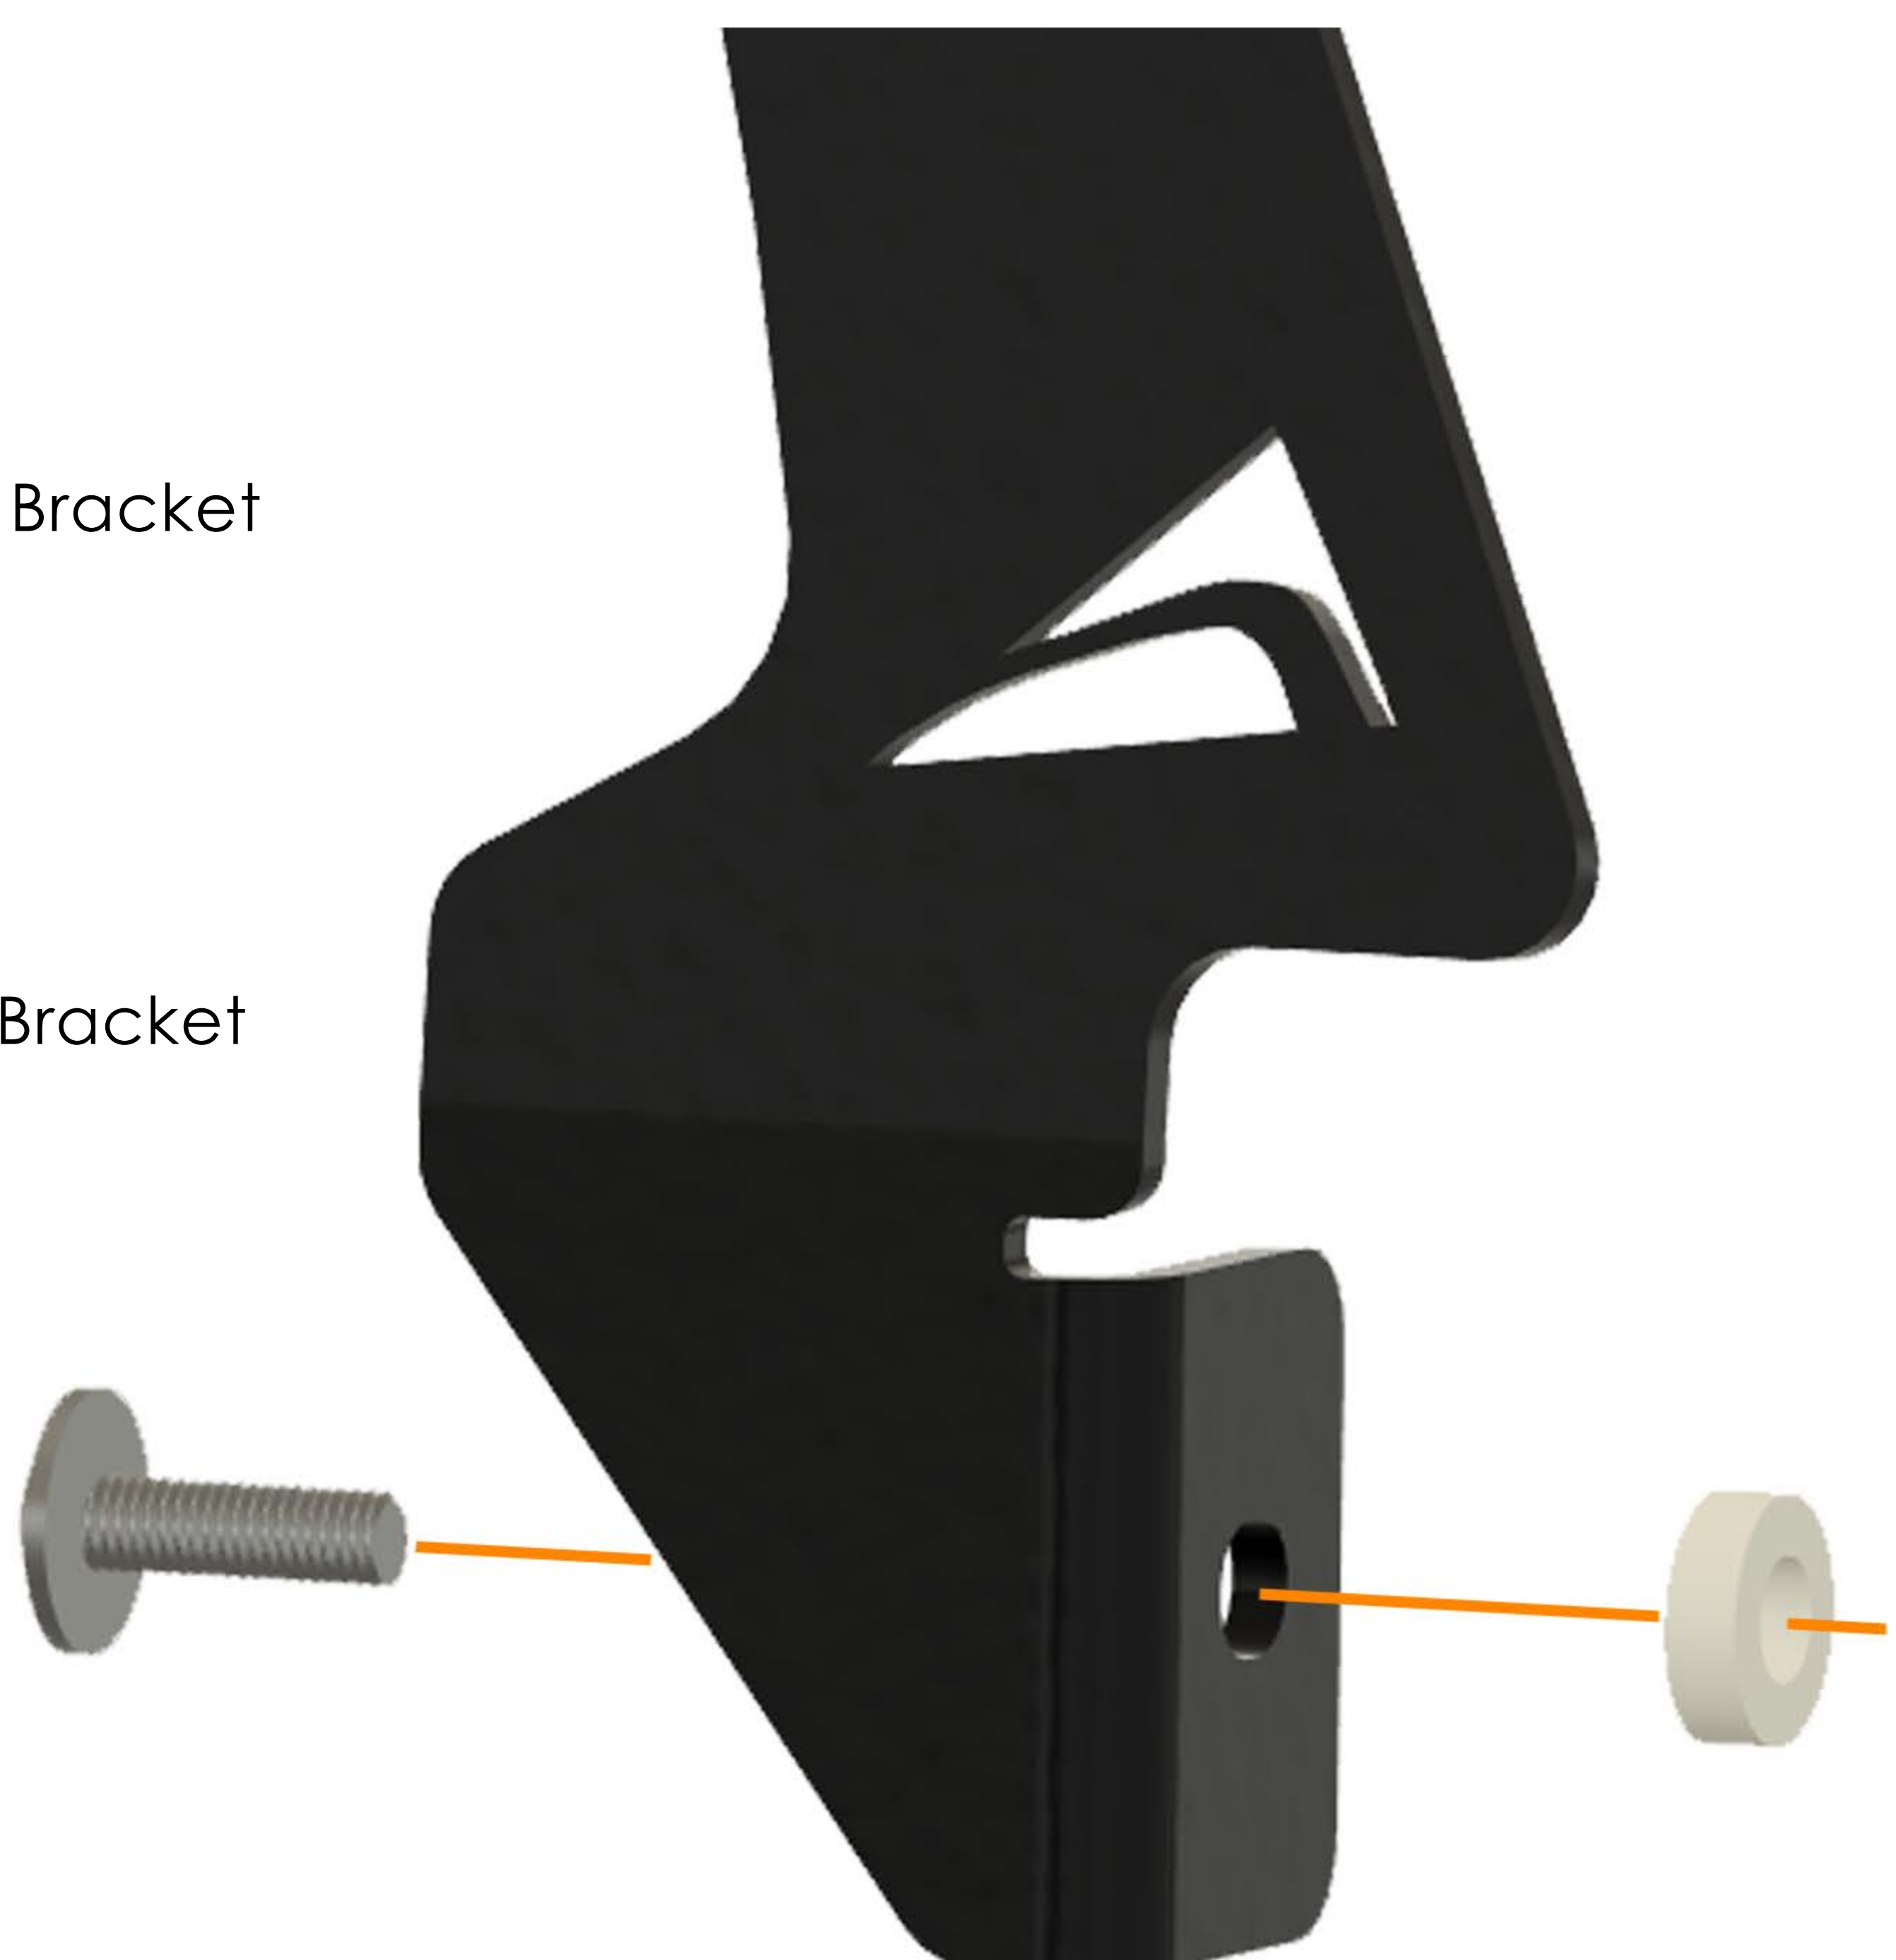


Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!

076850M Triumph Tiger 800 Sport 2025> Hugger **Fitting Instructions**

The images shown below will assist with the identification of the components included in the fitting kit, together with their application.

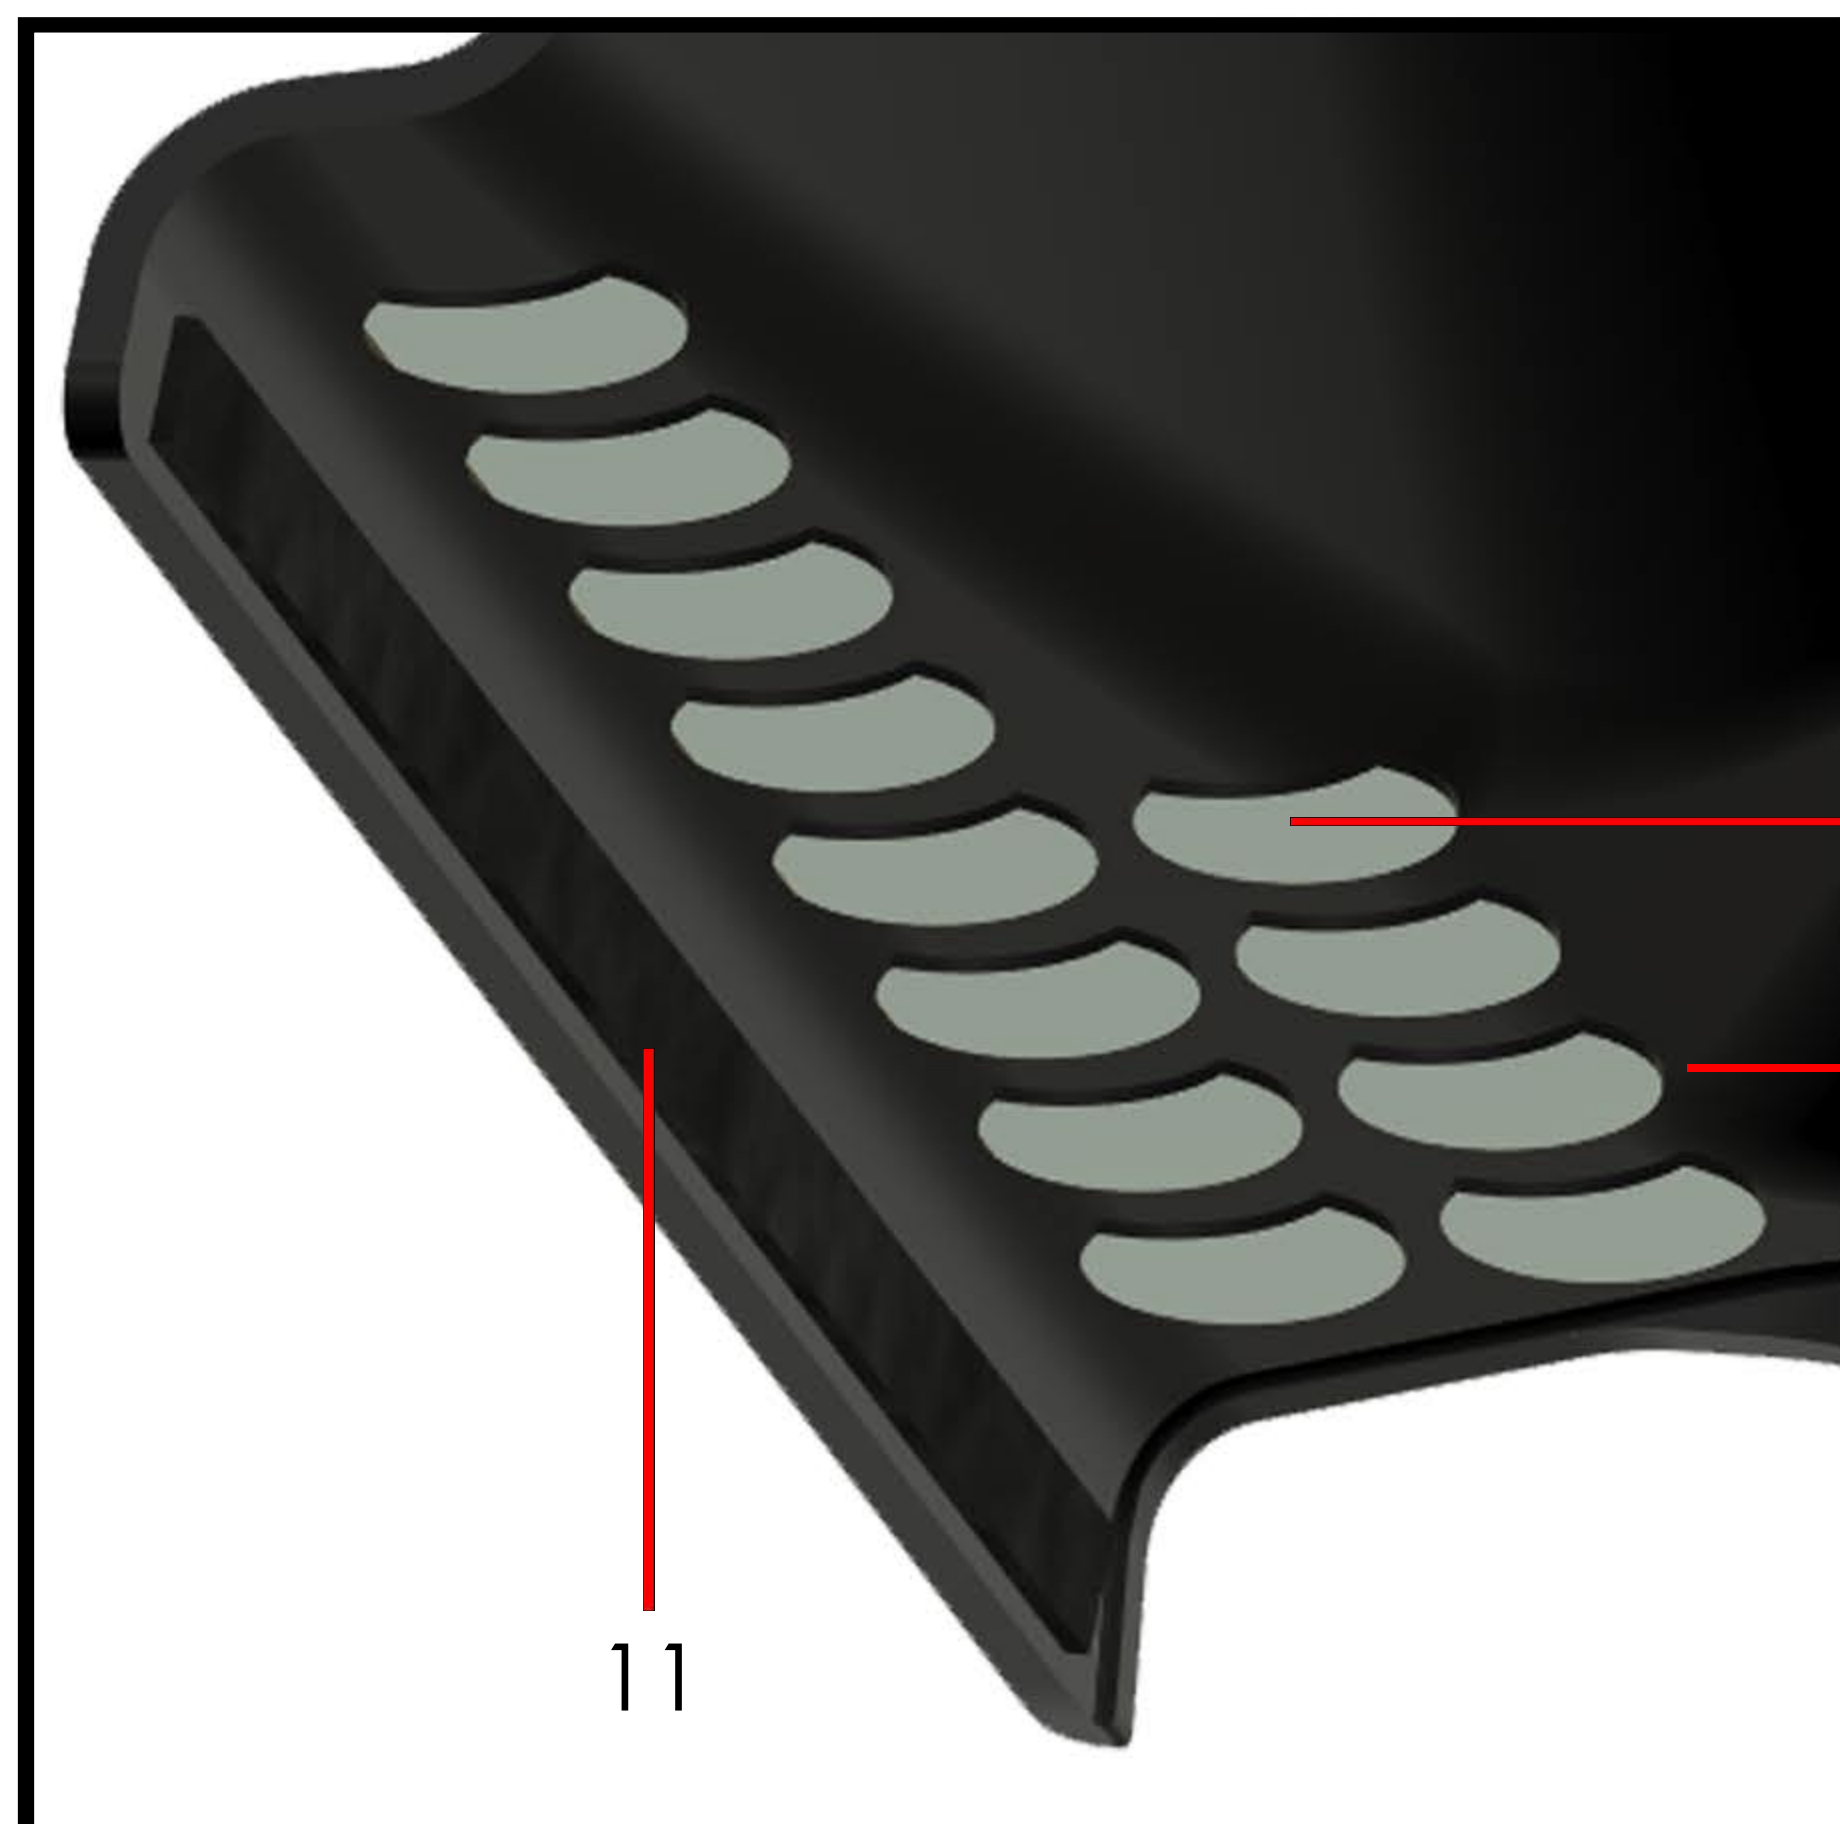

'FIG. 2' illustrates the positioning of the adhesive stickers (**Item 12**) along the chainguard mounting surface. The foam strip pictured will need to be trimmed to size.

Adhesive sticker backs

12


11

FIG. 3

FIG. 2

Adhesive sticker set which mounts to the matching surface of the OEM rear mudguard.

Adhesive sticker set which mounts to the chainguard surface. The pattern and quantity shown are for illustrative purposes only. Please ensure the stickers have small gaps between one another.

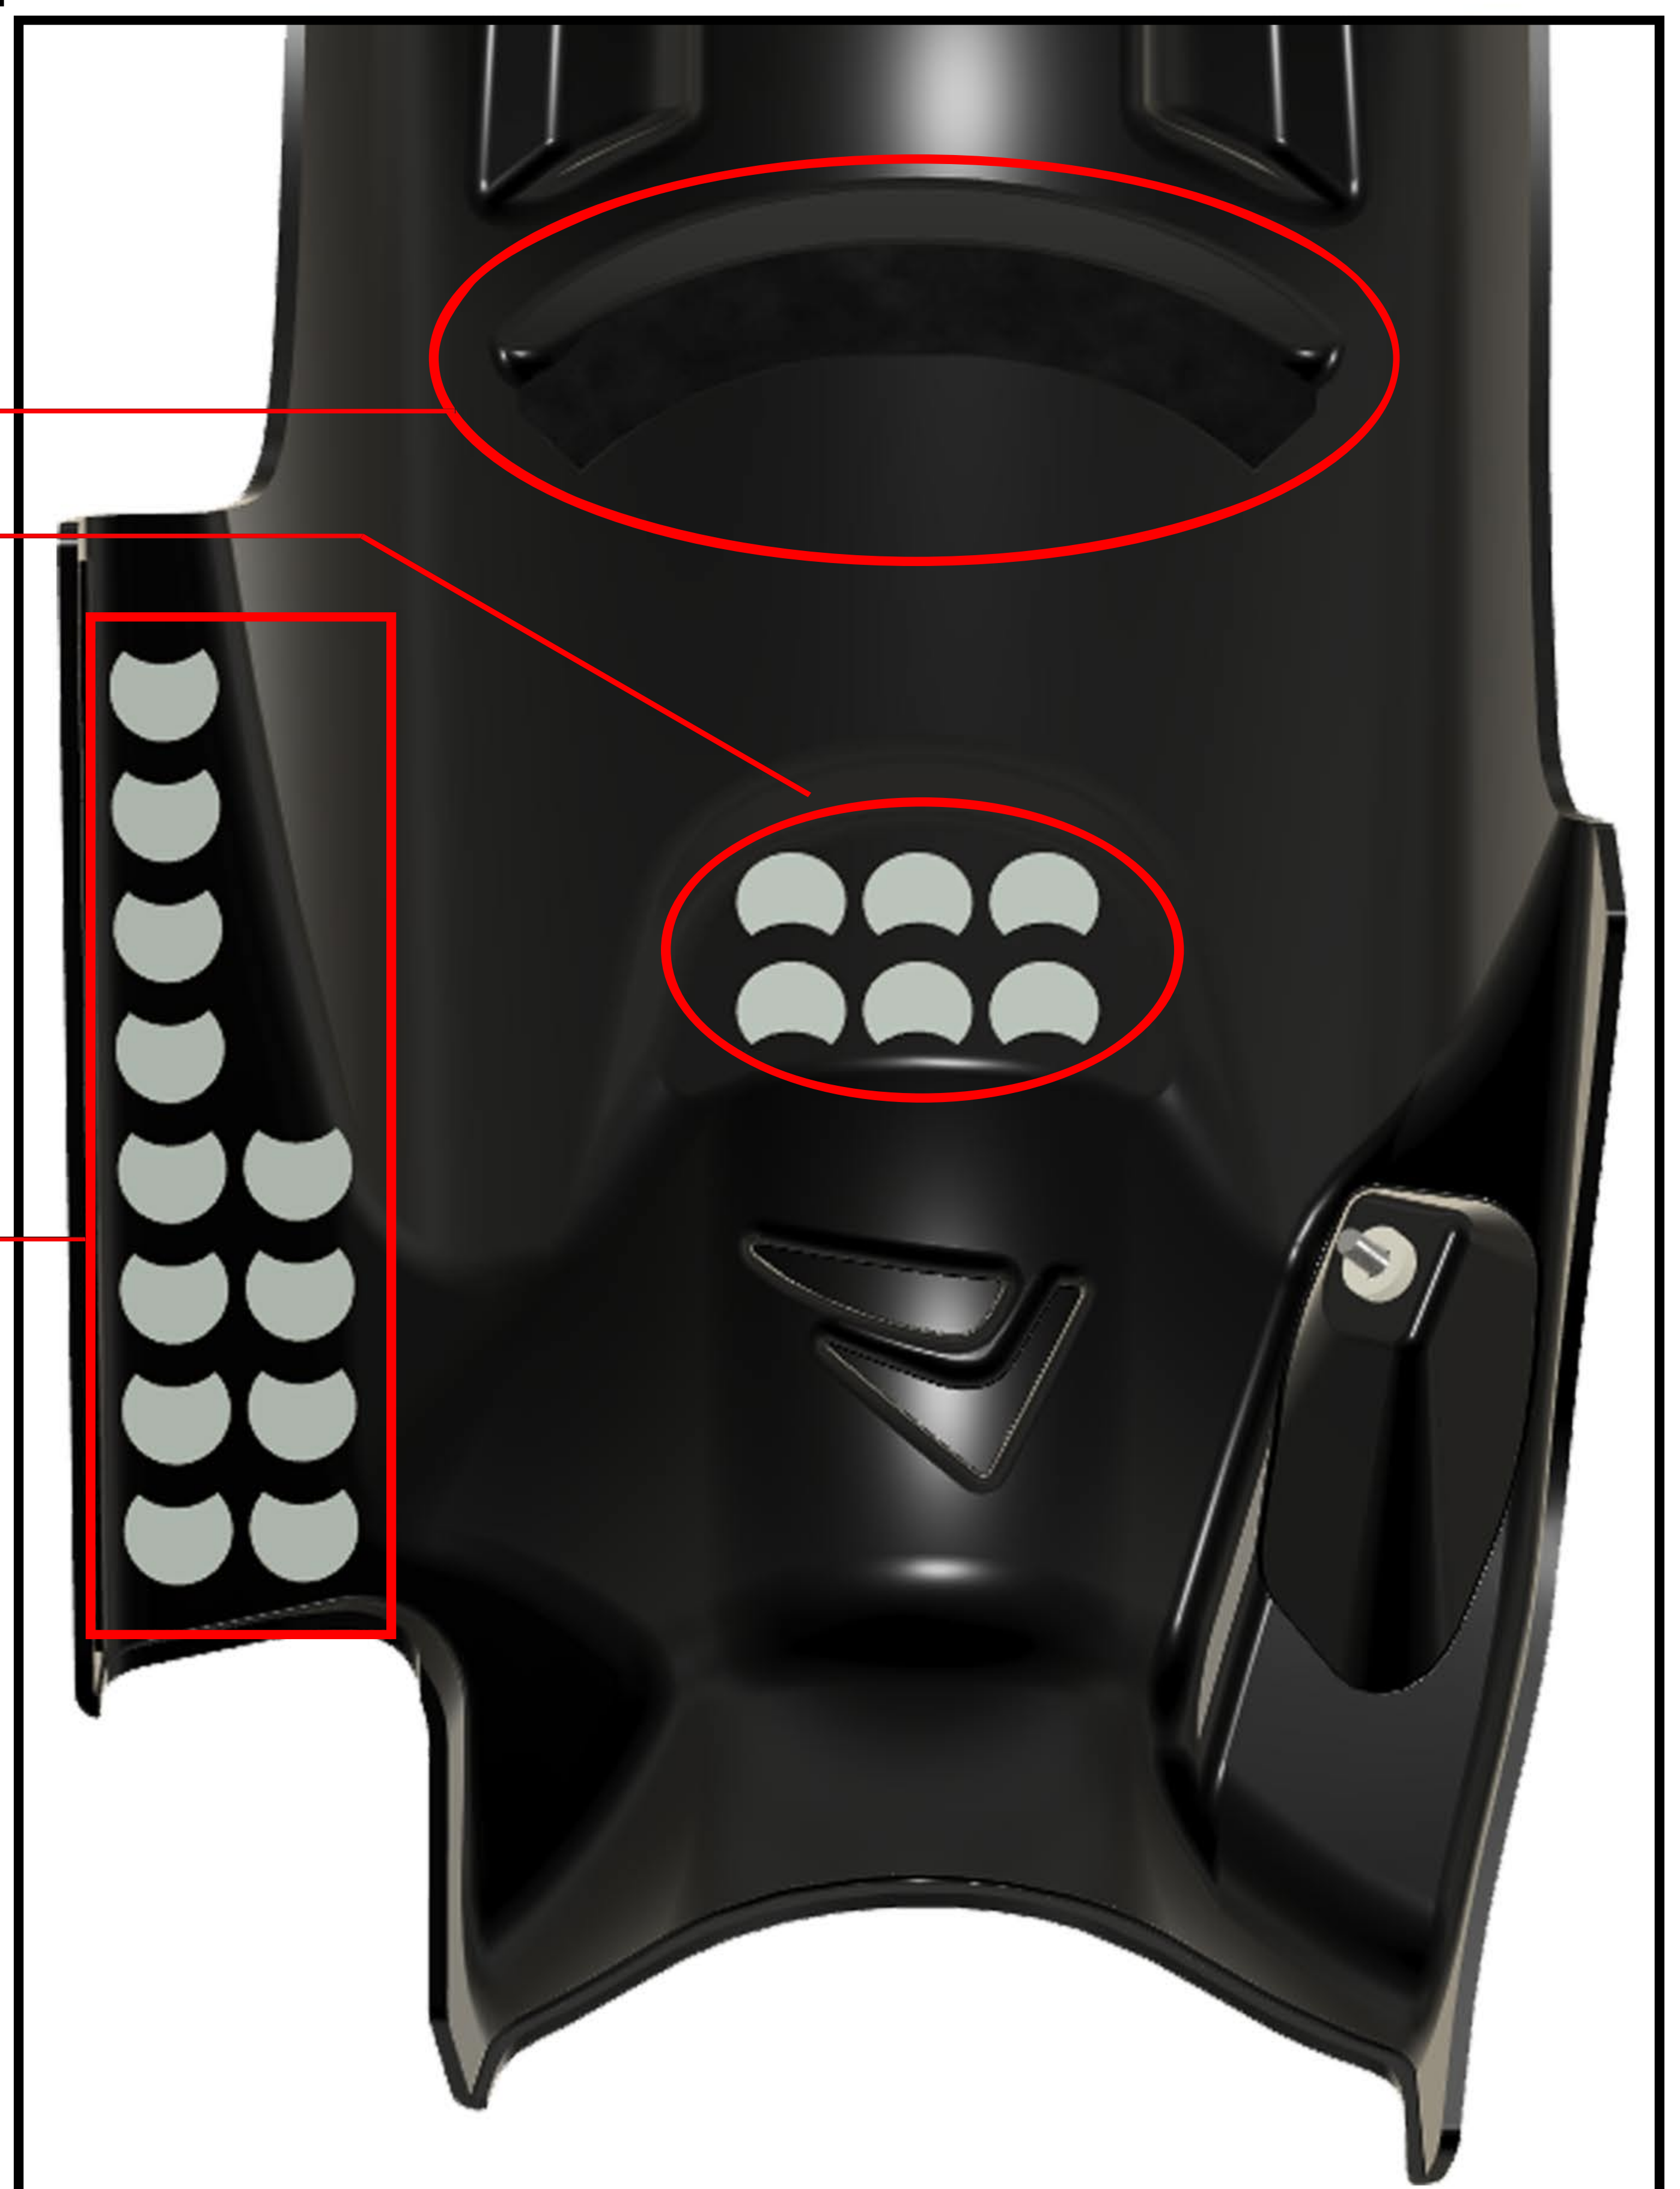

'FIG. 3' indicated the positions for the adhesive stickers and foam strip which are located on the underside of the hugger. The foam strip (**Item 12**) needs to be placed on the side closest to the Pyramid logo.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

FIG. 4



Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
 feel free to leave us a review!

076850M Triumph Tiger 800 Sport 2025> Hugger Fitting Instructions

Removing The Hugger:

Begin by removing the bolts shown in 'FIG. 1 and 2'. **Please Note:** When removing the bolt in 'FIG. 2', carefully remove the spacer and leave it in a safe place to reinstall later.


Holding onto the Chainguard, carefully pull the hugger away from the Motorcycle to release it from the grommets. Once free, carefully lift the hugger up to release it from the plastic clips. See 'FIG. 3 and 4' for reference.

Reinstalling The Hugger:

Begin by aligning and refitting the OEM hugger to the grommets referenced in 'FIG. 3'. To ensure the hugger is secured at that end, make sure the plastic is resting on the metal brackets.

Using a long tool such as a flat head screwdriver, push the clips back into the OEM hugger. See 'FIG. 4' for reference.

Refit the spacer and bolts removed in 'FIG. 1 and 2' and fully tighten the fixings.

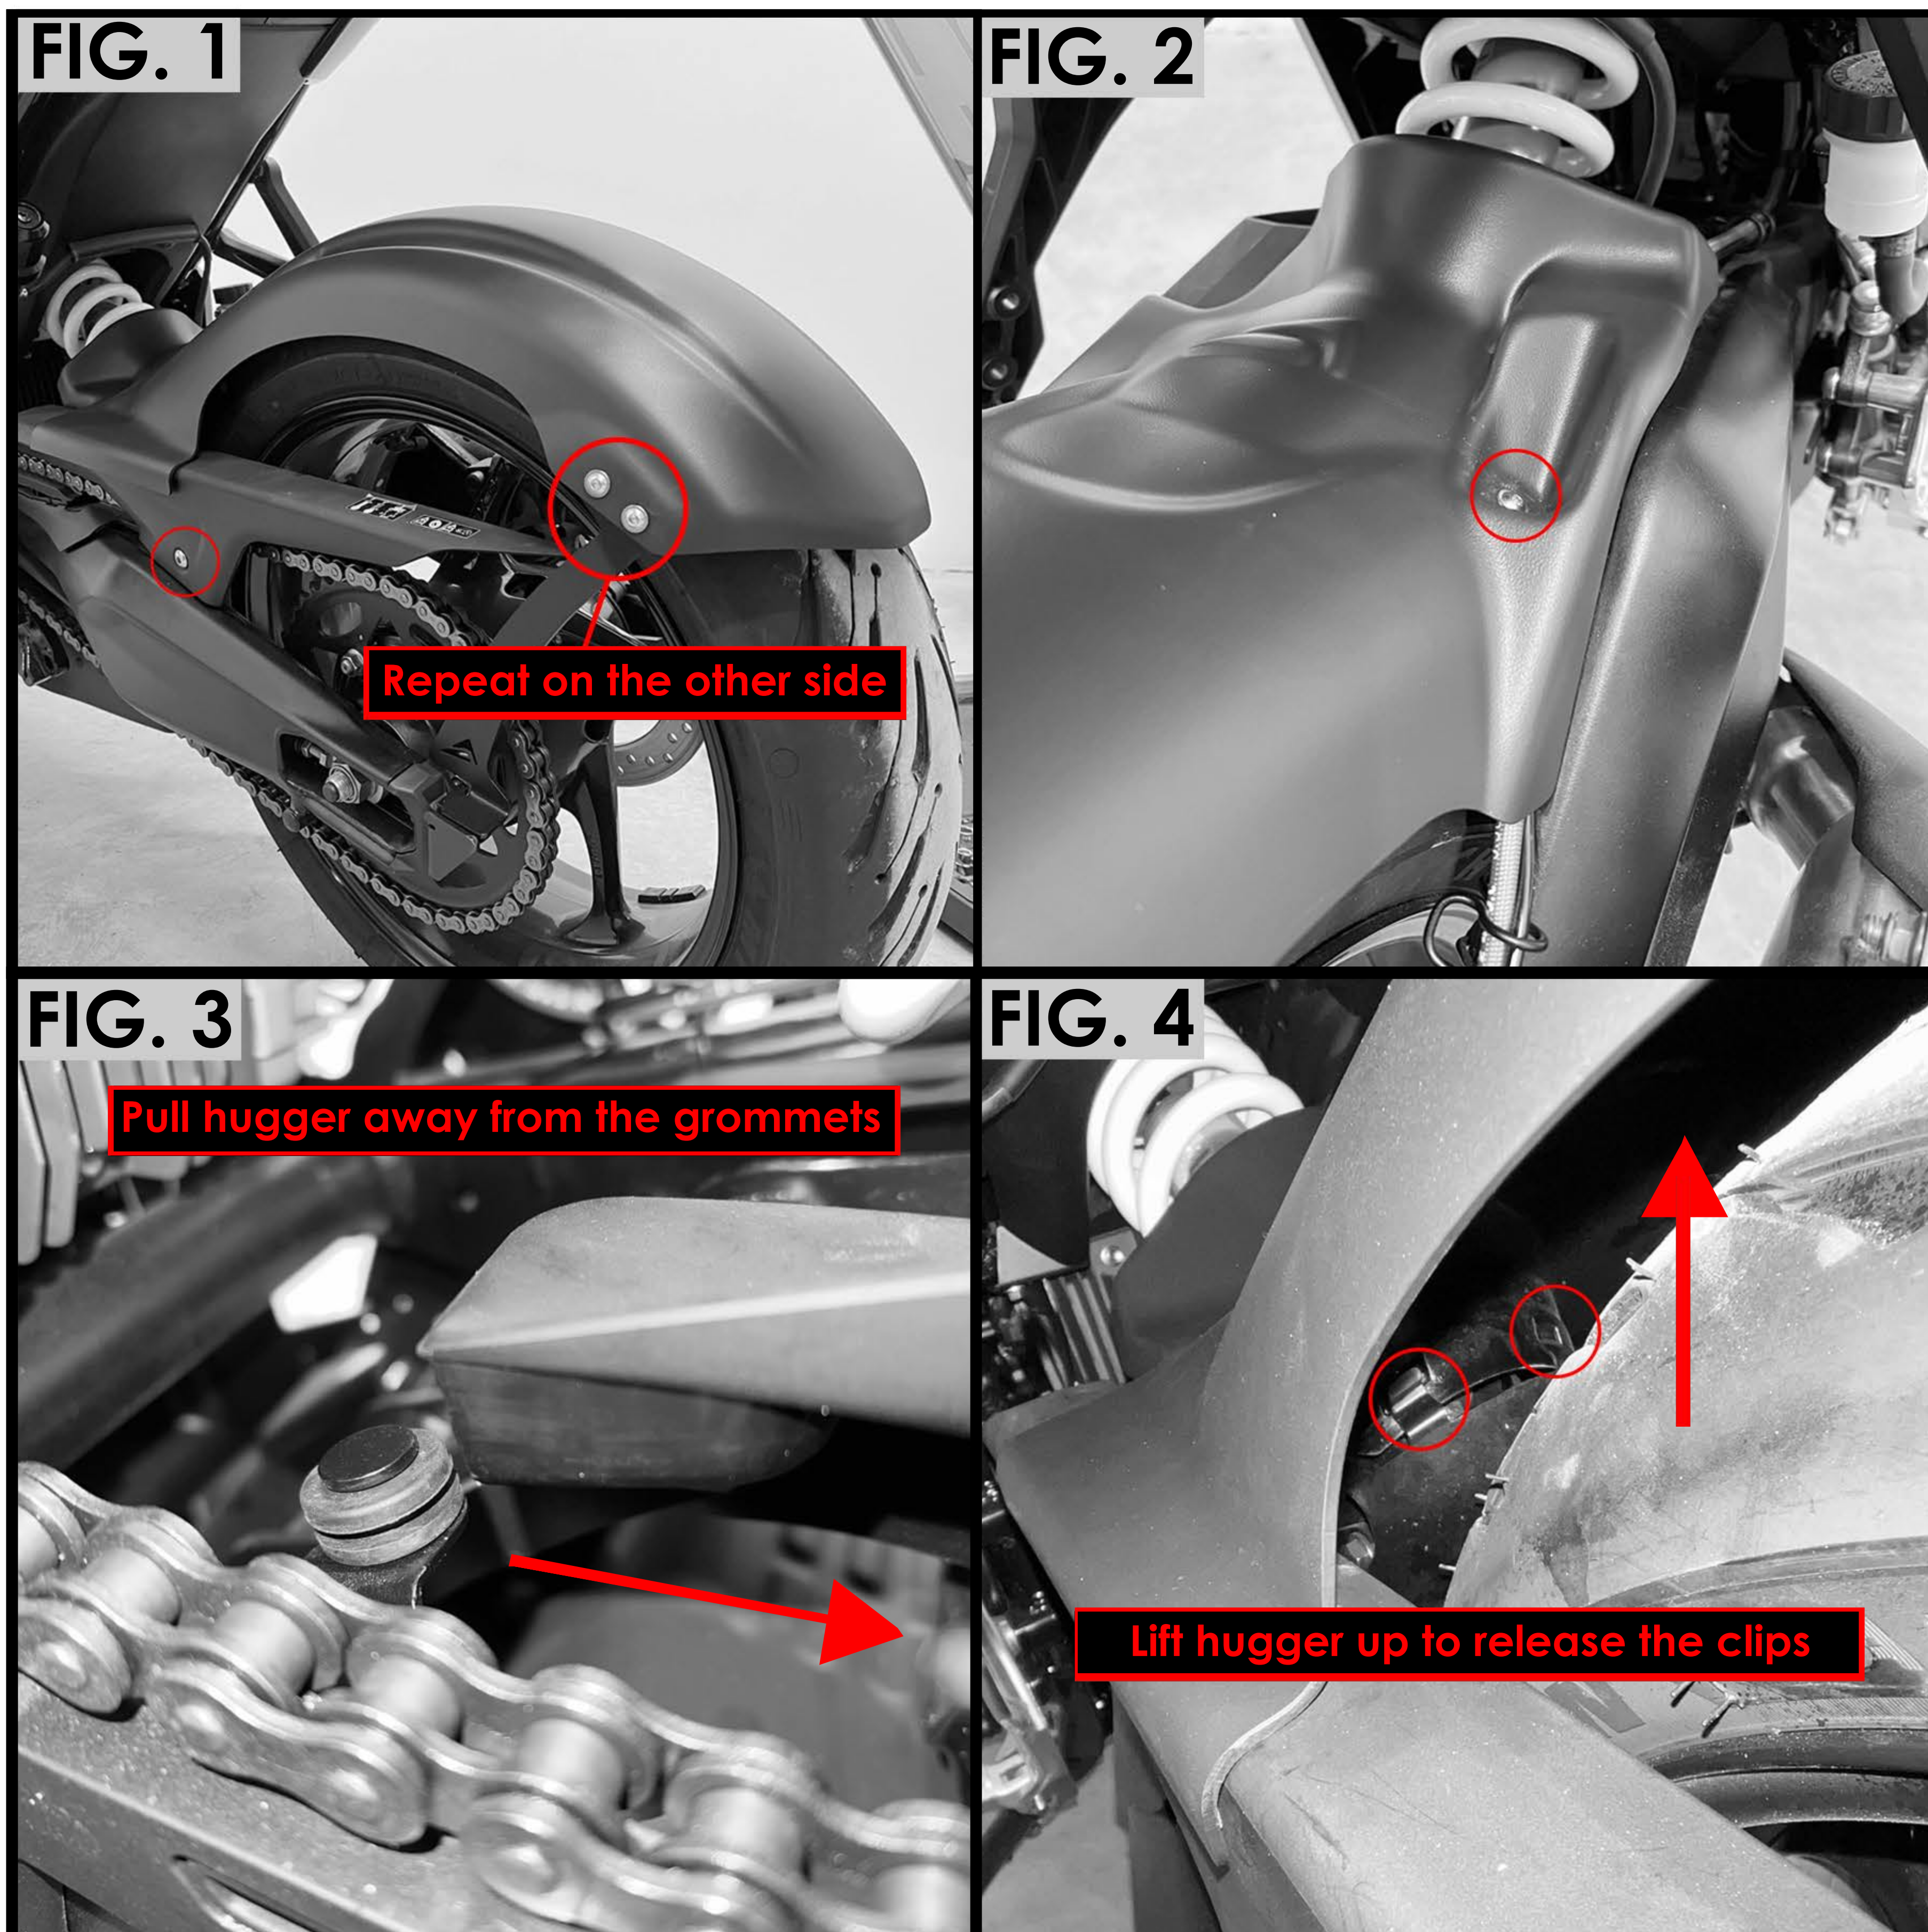

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!