



25500 Ducati Streetfighter V4/S/SP Fly Screen Fitting Instructions

Kit Includes:

1X	C22160	Fly Screen
1X	CFK25500	Brackets A & B
5X	CBOLM50008	M5 X 16mm Stainless Bolt
5X	CNUTM50001	M5 Rubber Anchor Nut
5X	CWASM50001	M5 Washer
1X	C08002A	Rubber Trim (approx 60mm)
2X	CBRA0550	Italian Flag Decal

- The Pyramid fly screen is simple to fit. Attach the fly screen to bracket **A** using the M5 fixings supplied (CNUTM50001, CBOLM50008 & CWASM50001). See images below for general guidance. **Note: tighten the Rubber Anchor Nuts until the rubber is compressed and holding the parts together.**
- Unclip the OEM clock cover and remove the two OEM bolts inside. Attach bracket **B** to the back of the clock using the two OEM bolts.
- Now fit bracket **A** to bracket **B** using the remaining M5 fixings supplied.

Check fixings periodically.

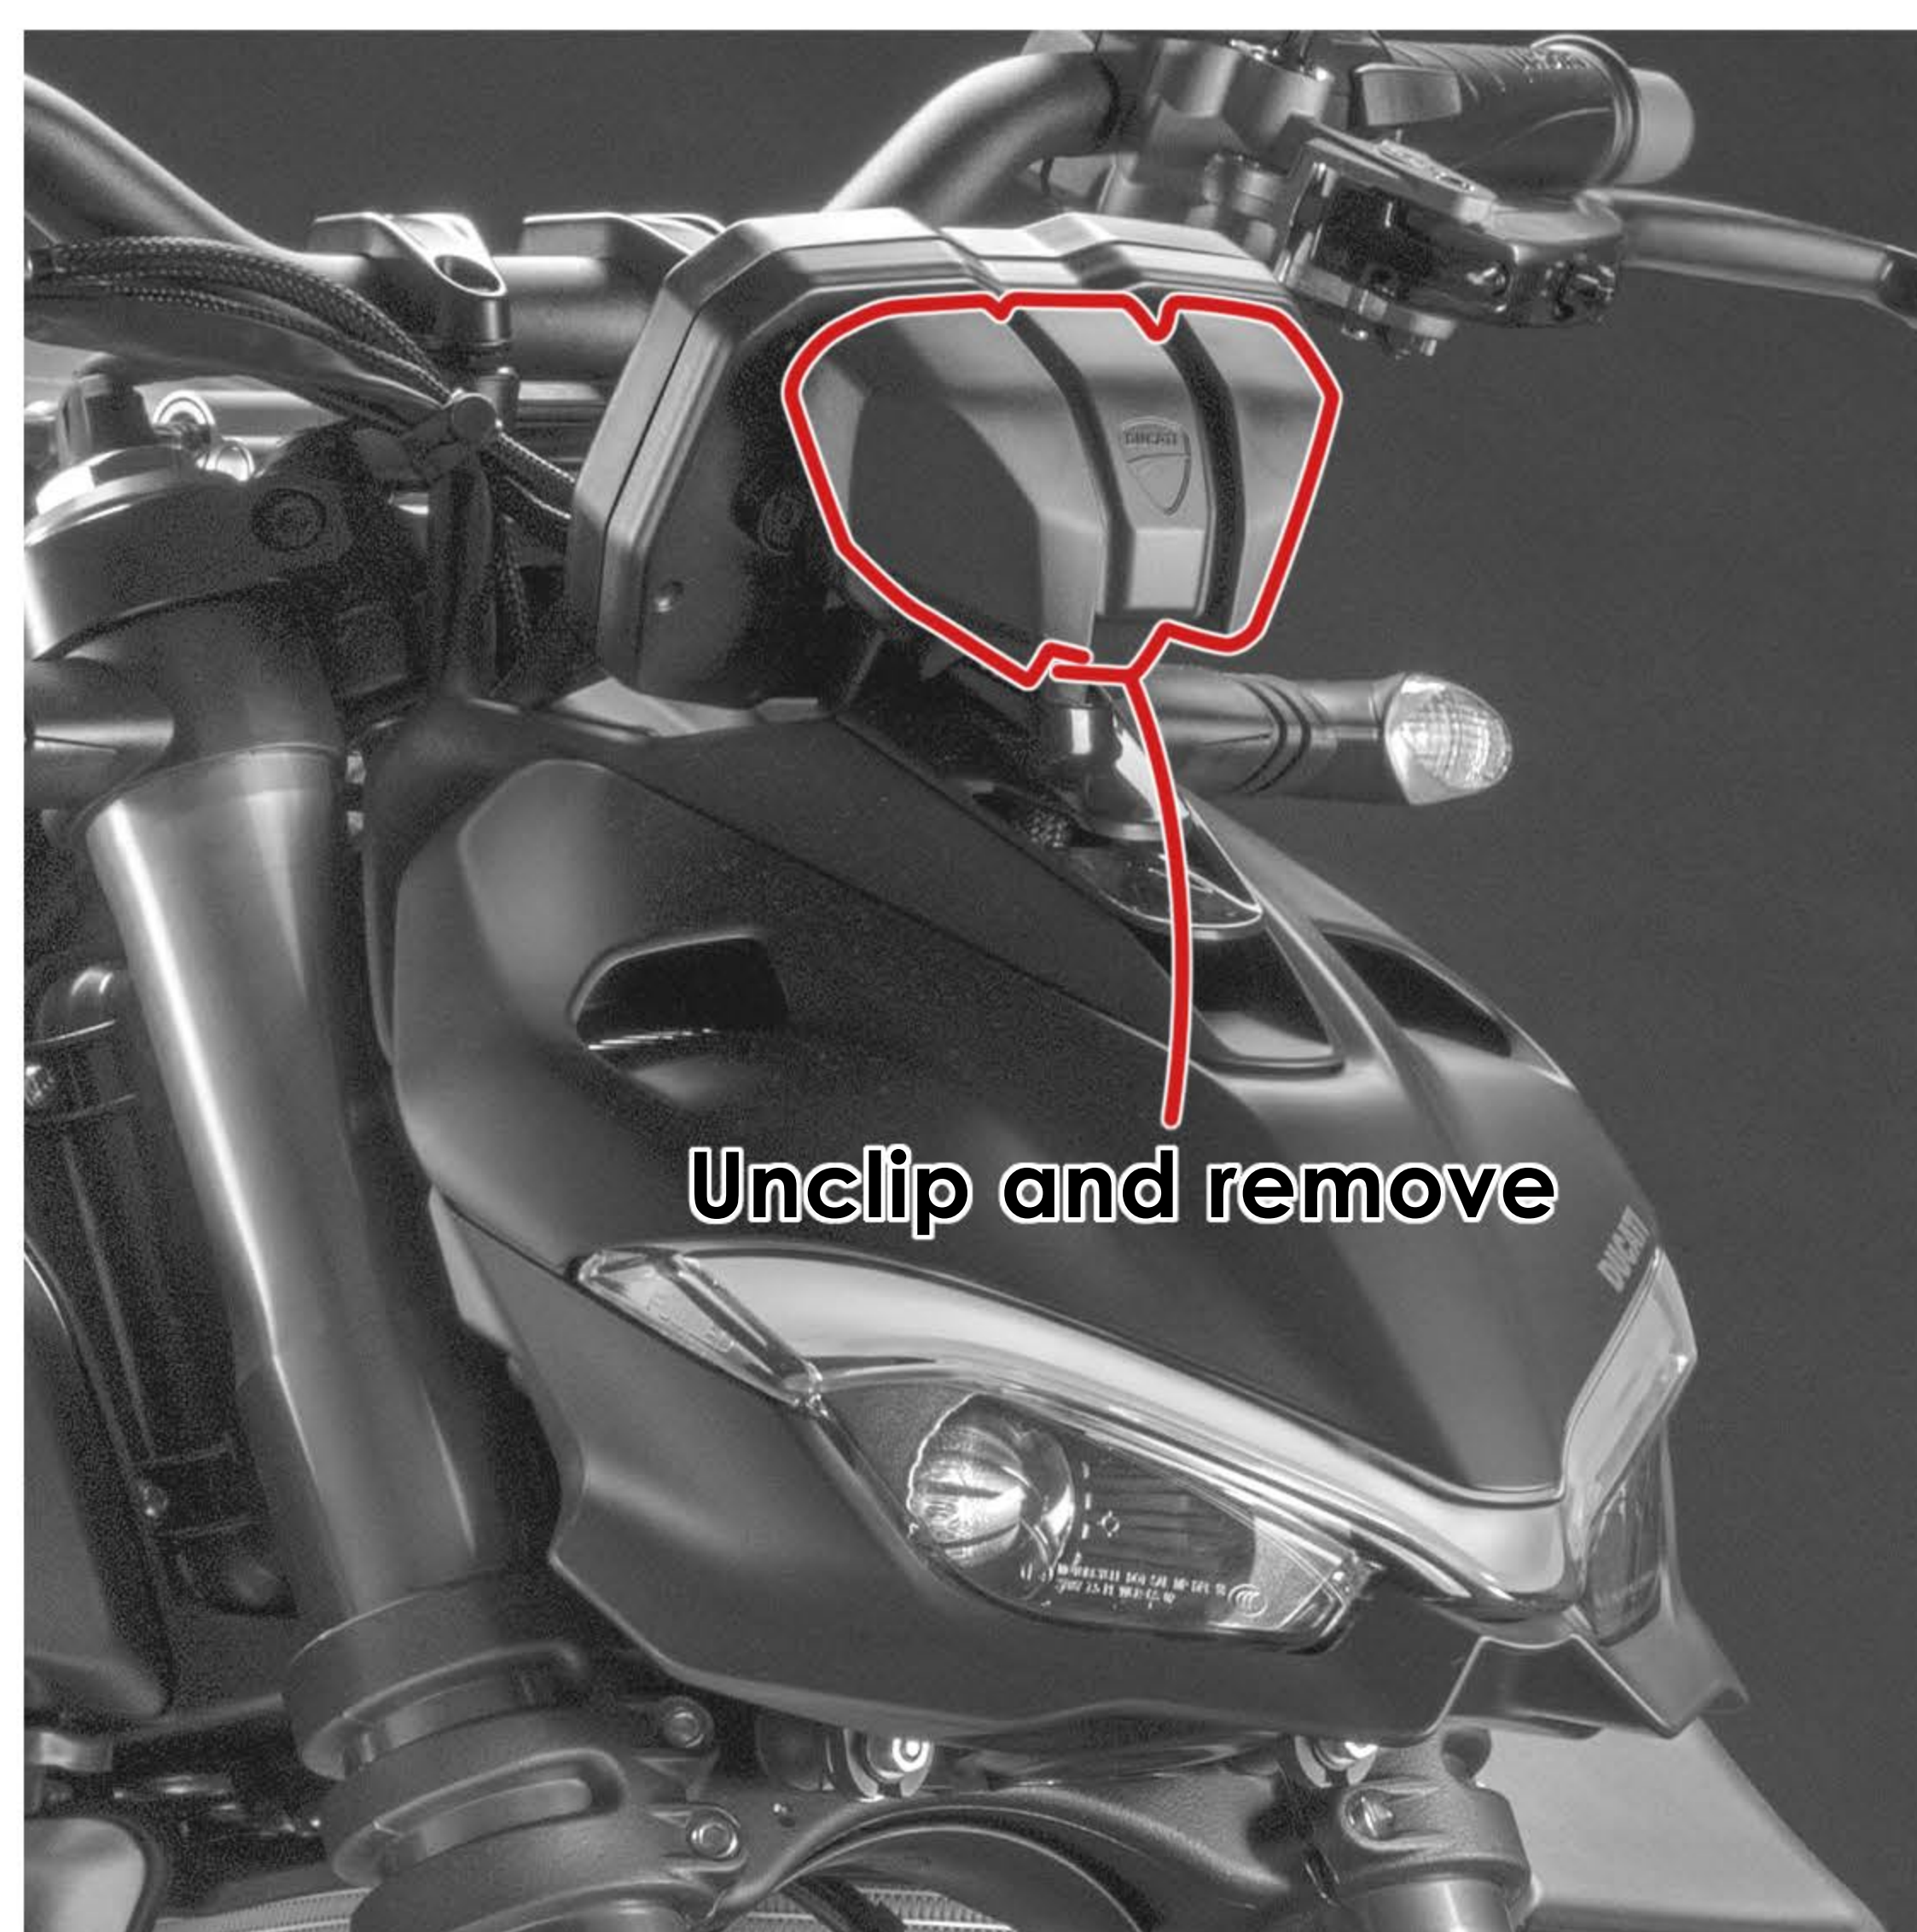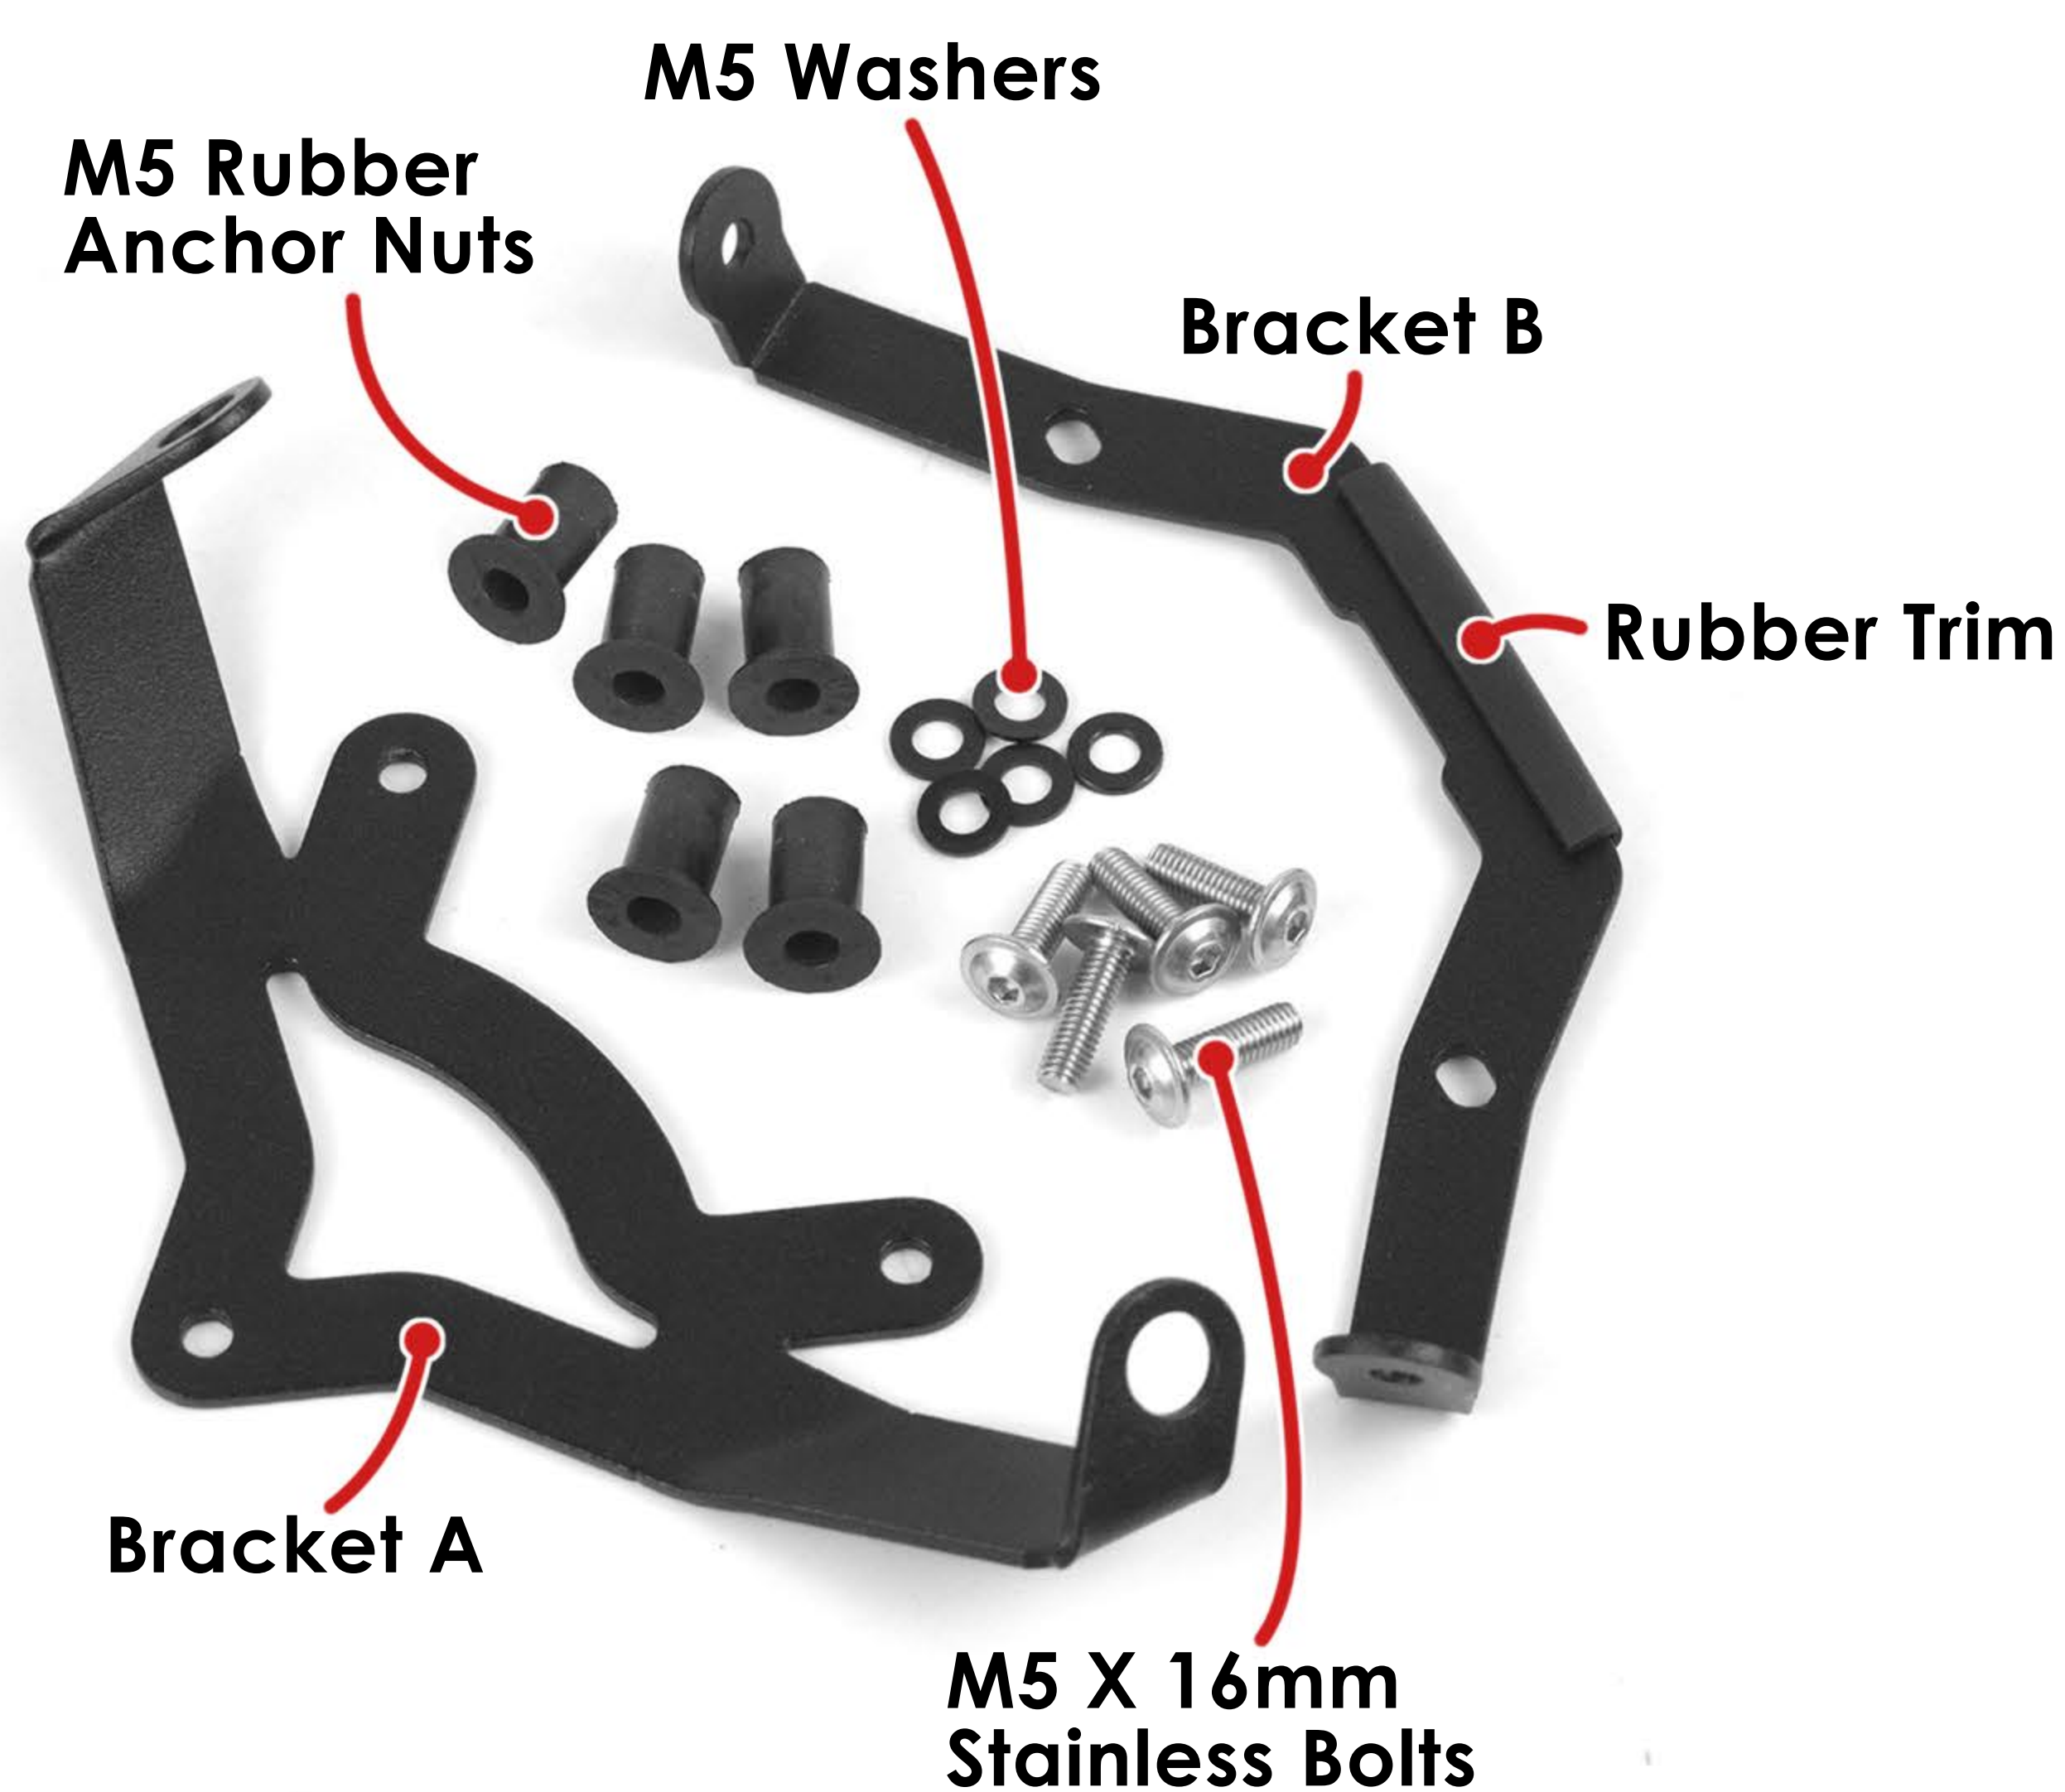

Note: tighten the Rubber Anchor Nuts until the rubber is compressed and holding the parts together.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

