



Ducati Supersport
Crash Protection

Installation Instructions




Product No: PRN013743

Kit Contents

- | | |
|--|---|
| (A) 1 x RH Arm | (J) 2 x Bobbin Heads |
| (B) 1 x RH Front Frame Spacer (25mm) | (K) 2 x Bobbin Spacers |
| (C) 1 x RH Rear Frame Spacer (59mm) | (L) 2 x M12 Washers |
| (D) 1 x LH Arm | (M) 3 x M5 x 16 Black Button Head |
| (E) 1 x LH Front Frame Spacer (60mm) | (N) 3 x M12 - 130 x 1.25 Cap Head Bolts |
| (F) 1 x LH Rear Frame Spacer (52mm) | (O) 3 x Top Hat Washer |
| (G) 1 x M12 - 95 x 1.25 Cap Head Bolt | (P) 3 x Grommets |
| (H) 2 x M12 - 100 x 1.25 Cap Head Bolt | |
| (I) 2 x Impact Absorbing Washers | |




Frame spacer identification and placement is critical to the installation process

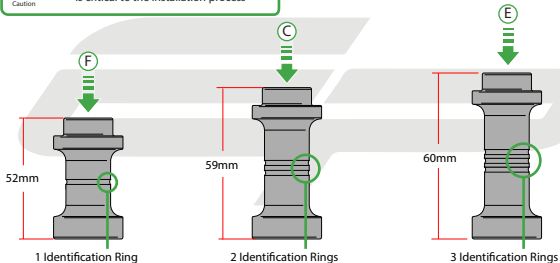

Installation Instructions



Left Hand Side

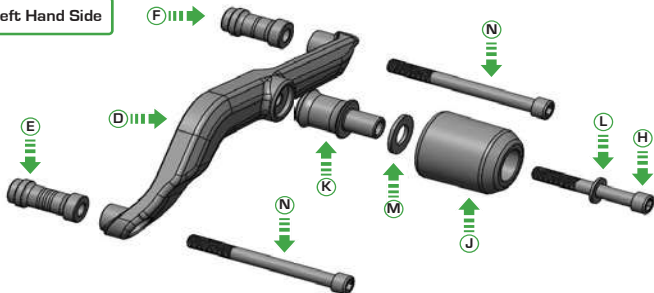


EVOTECH[®]
P E R F O R M A N C E


Installation Instructions




Right Hand Side

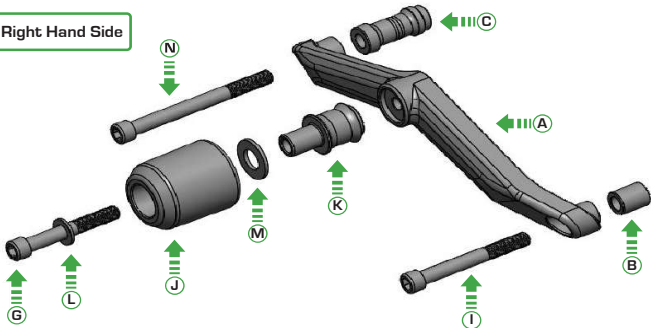


EVOTECH[®]
P E R F O R M A N C E

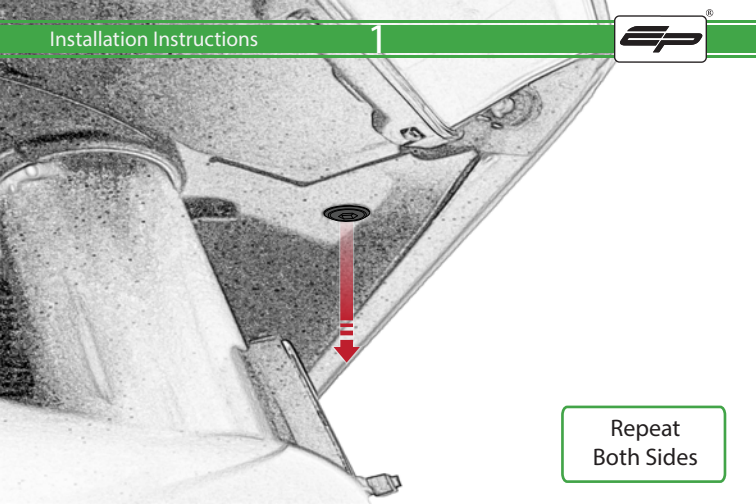


Repeat
Both Sides

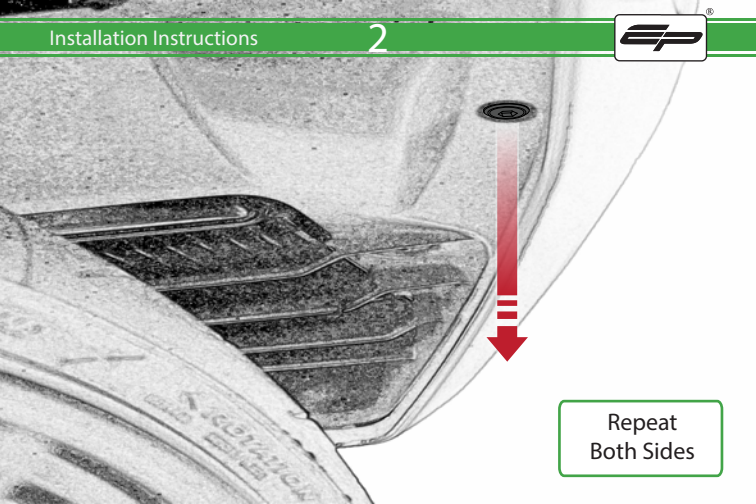


Repeat
Both Sides

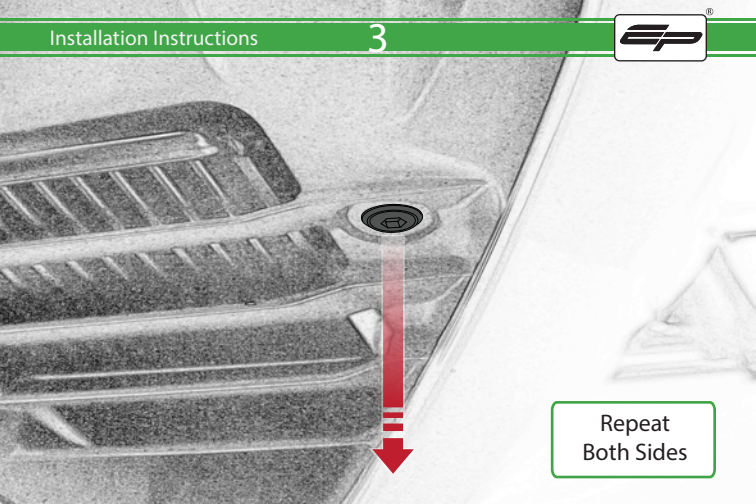


Repeat
Both Sides

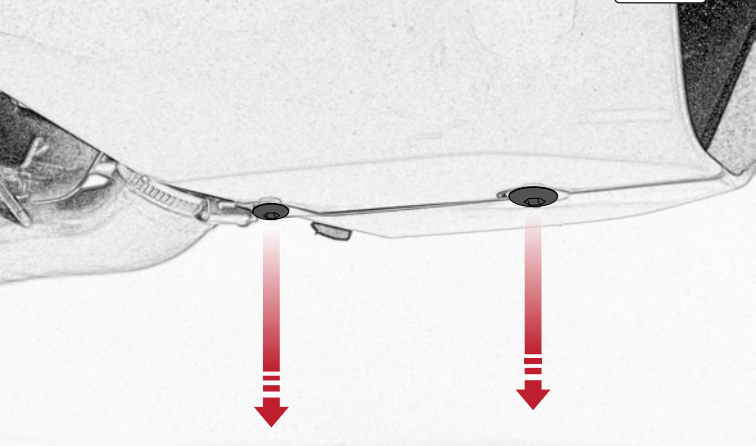


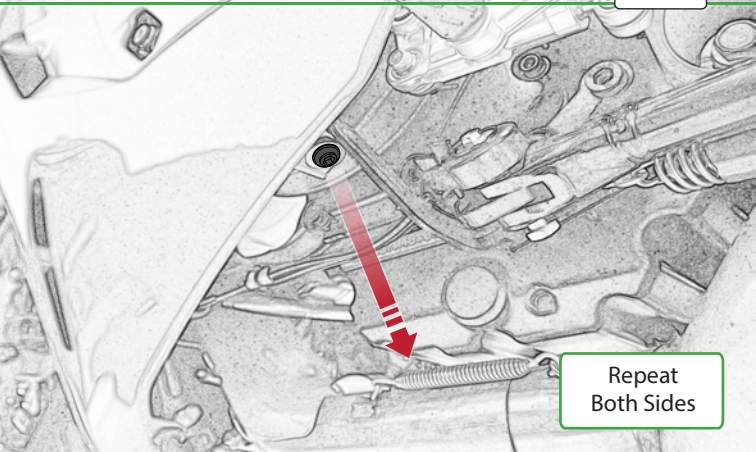


Repeat
Both Sides

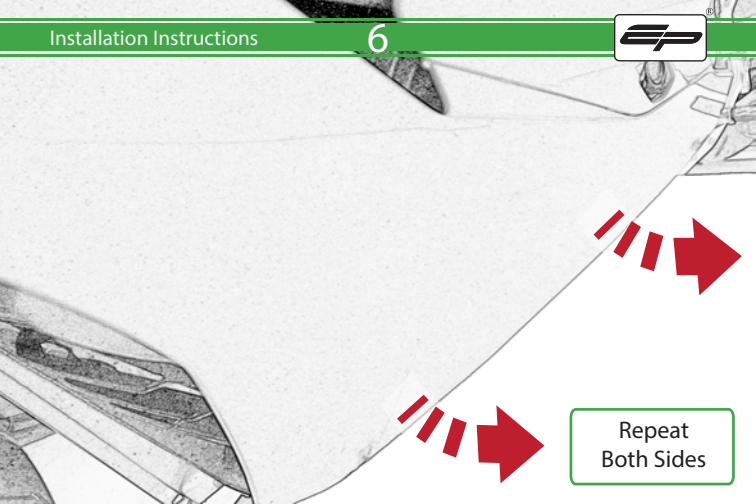


Repeat
Both Sides

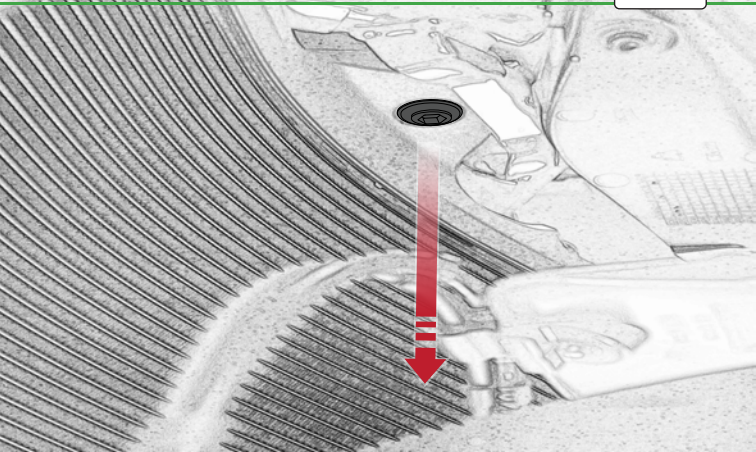

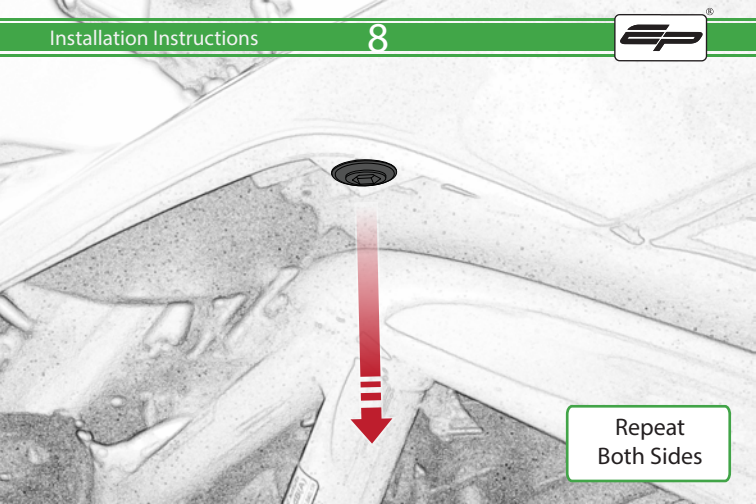

Repeat
Both Sides

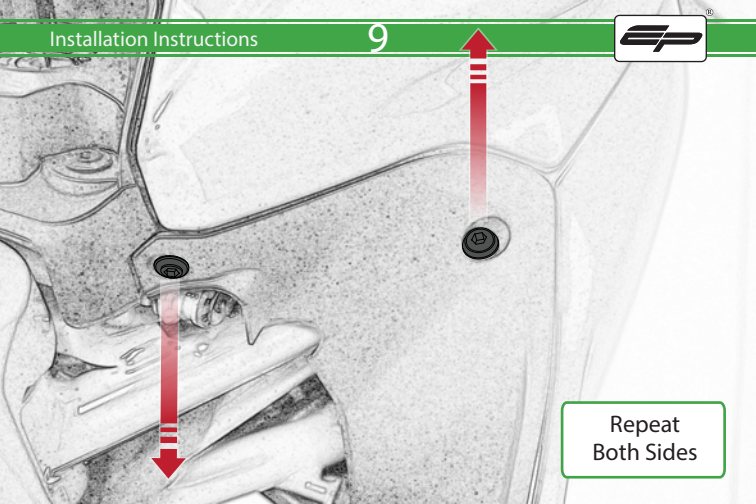

Repeat
Both Sides



Repeat
Both Sides




Repeat
Both Sides







Repeat
Both Sides

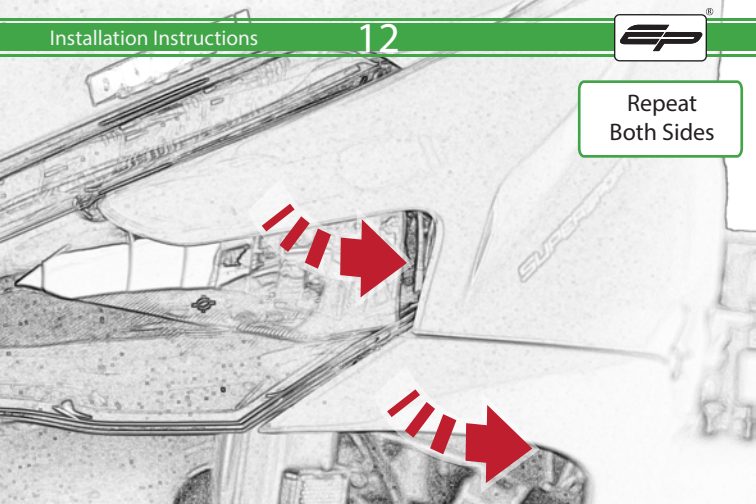

Repeat
Both Sides

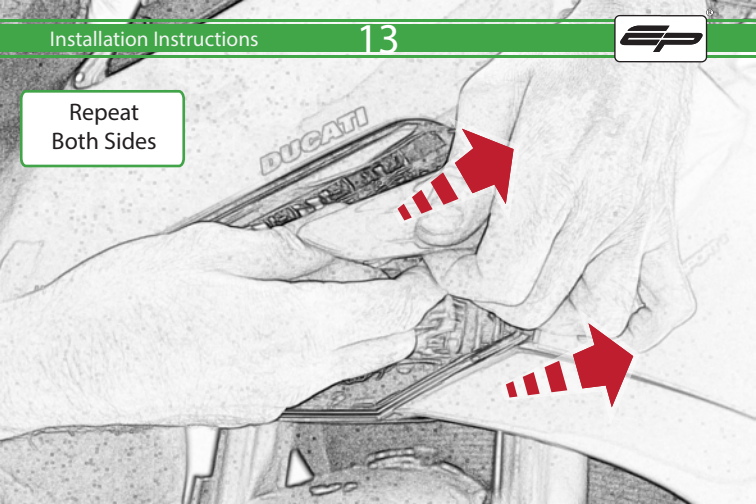


Repeat
Both Sides

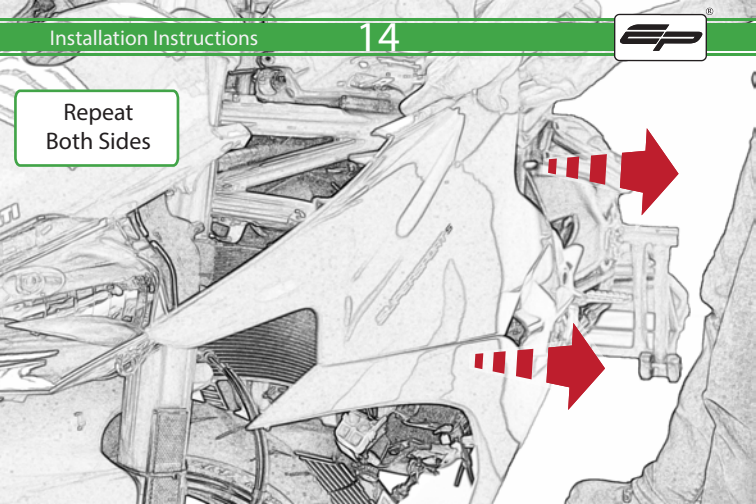






Repeat
Both Sides

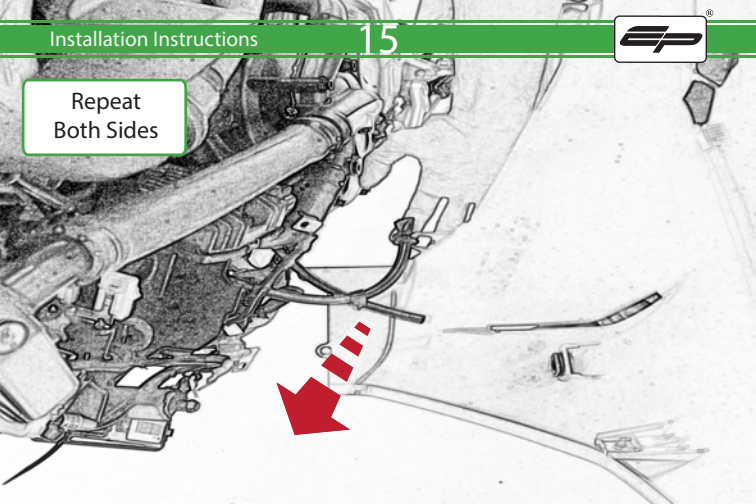





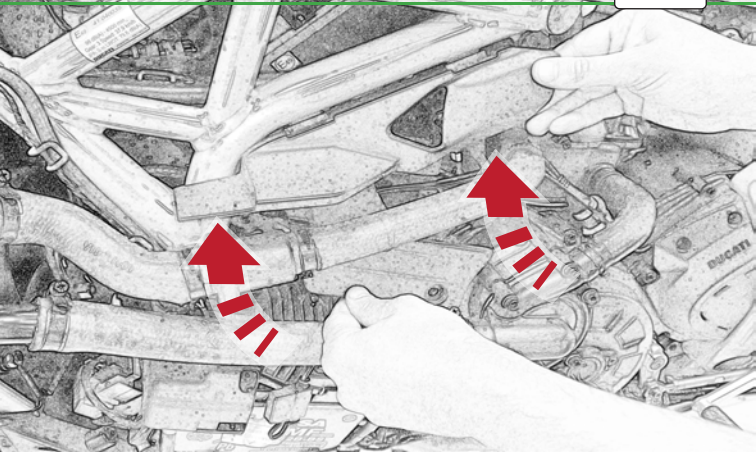


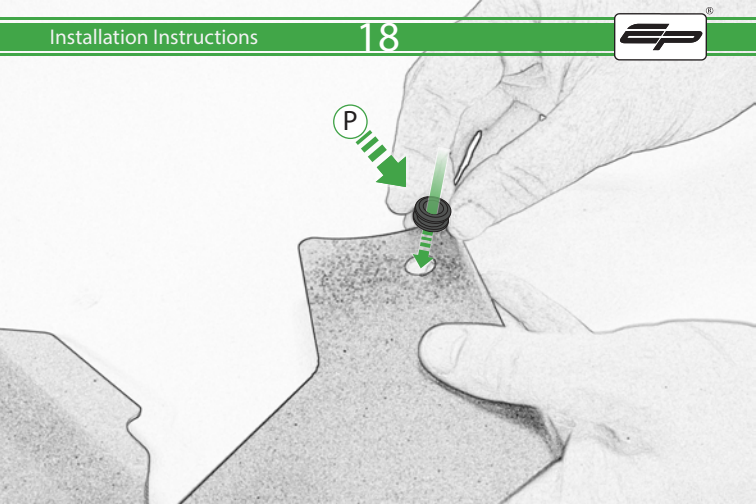


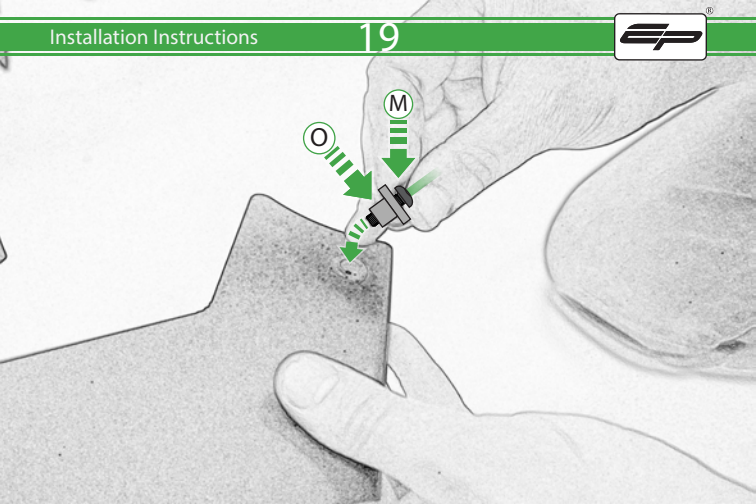


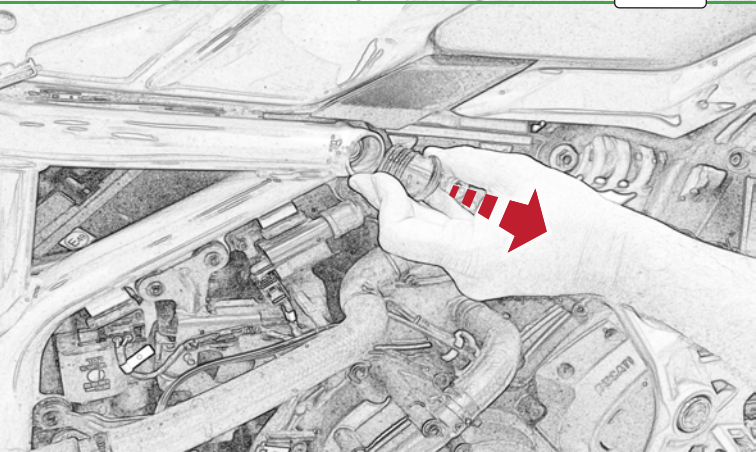


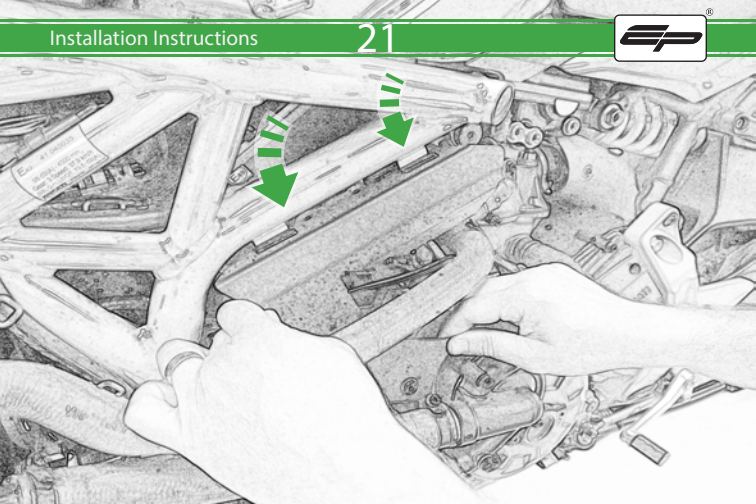


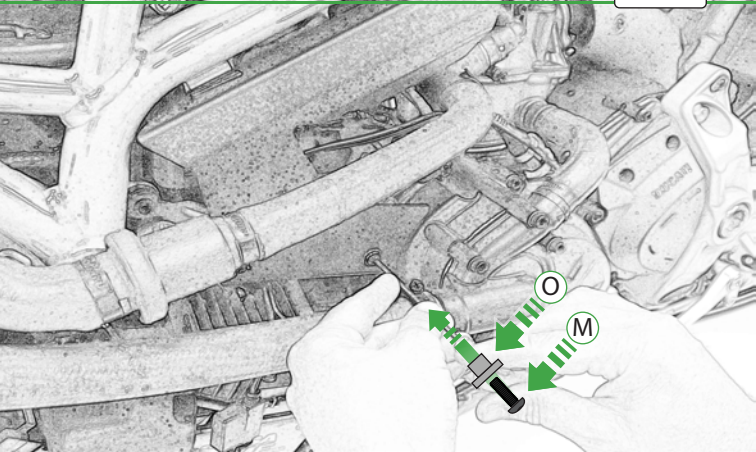

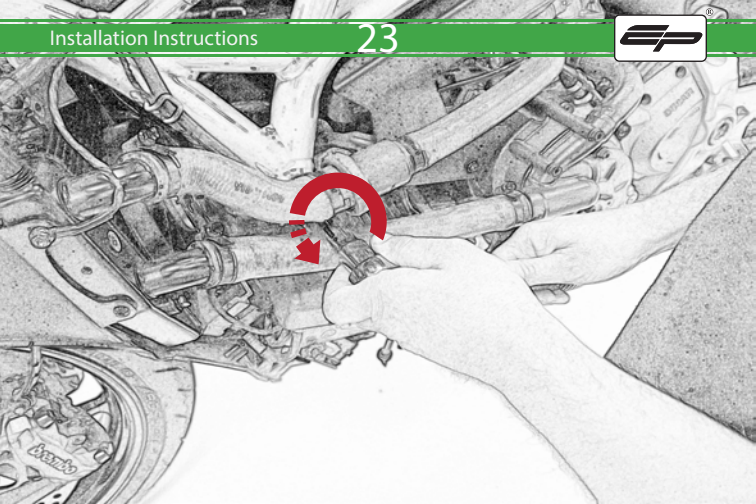


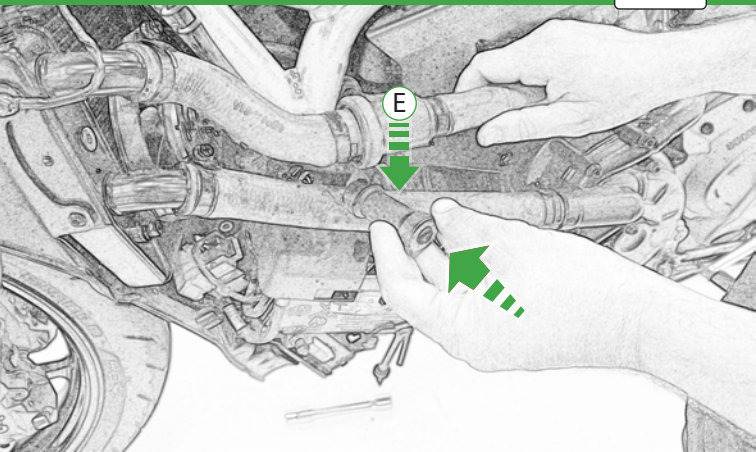


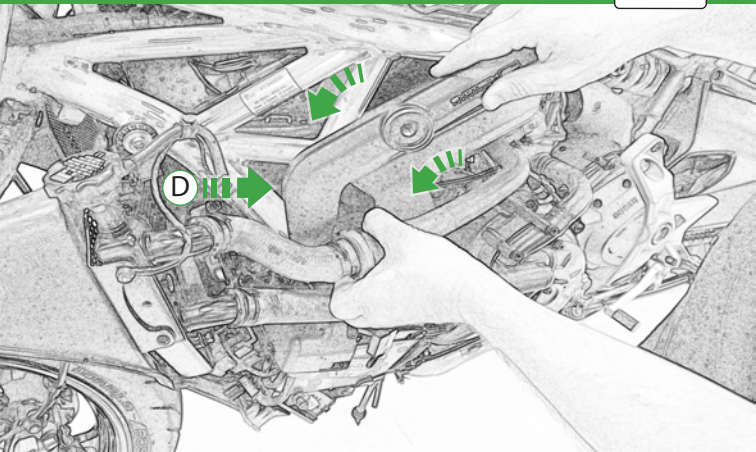


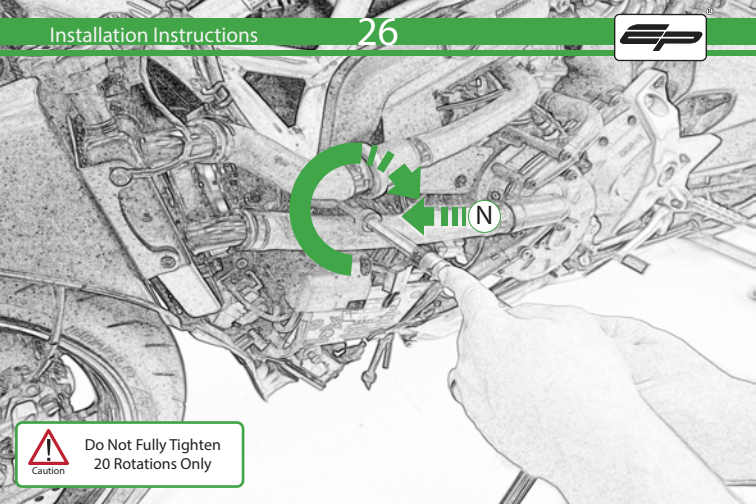



Do Not Fully Tighten
20 Rotations Only

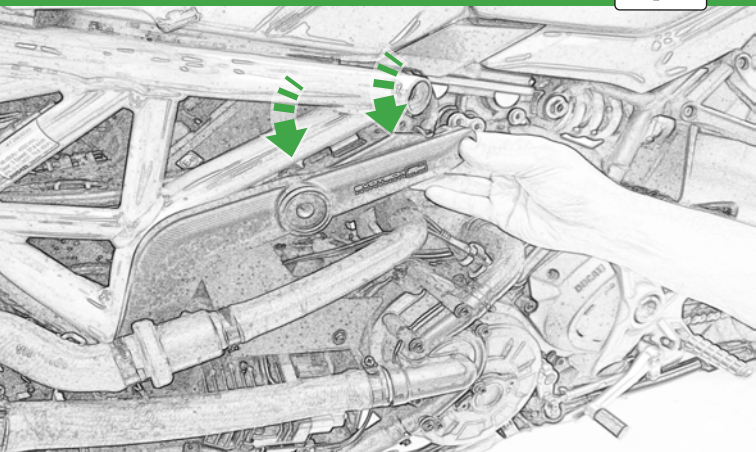


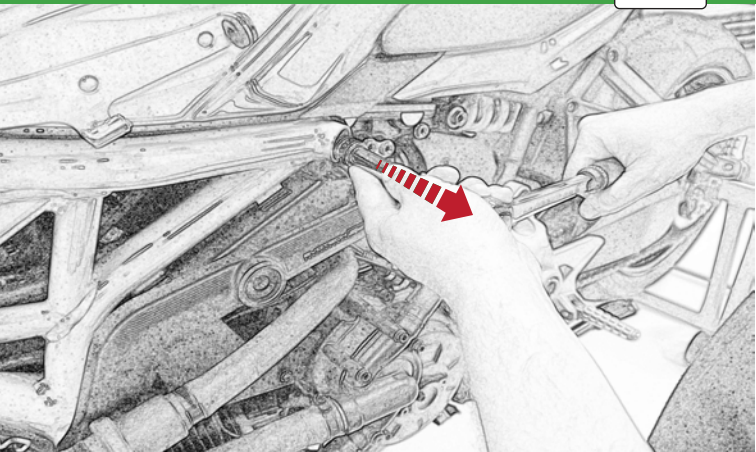

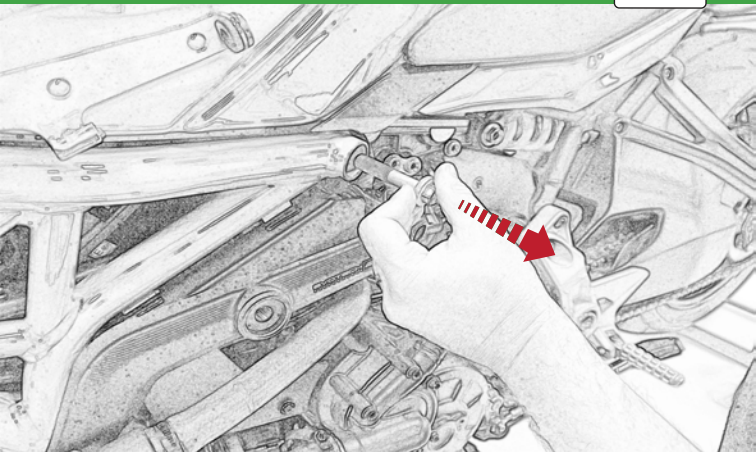

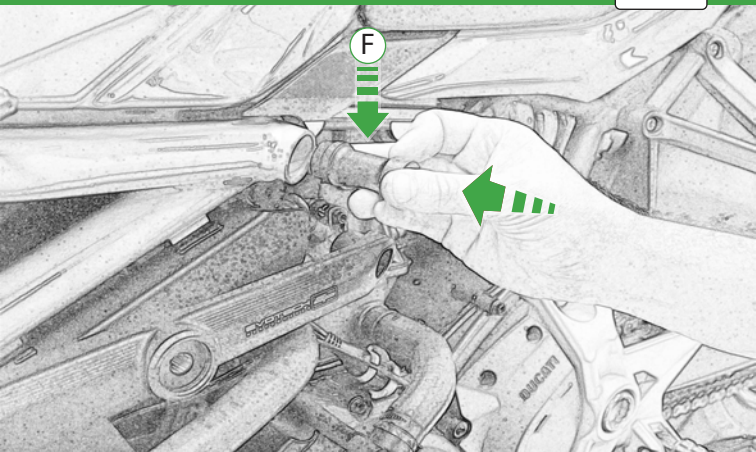


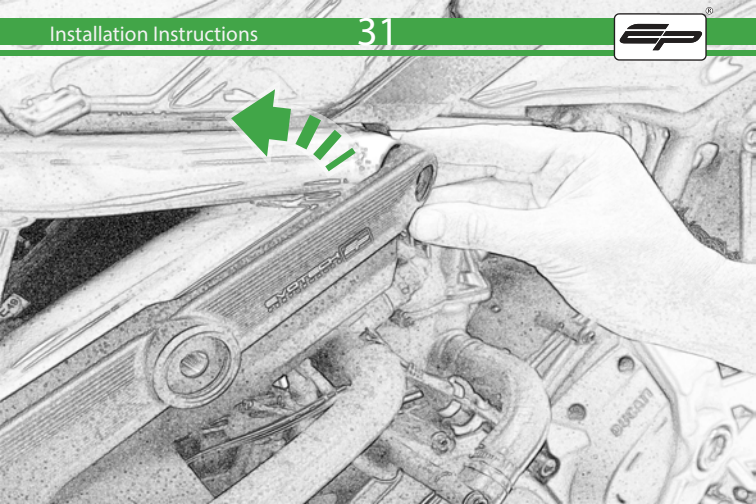

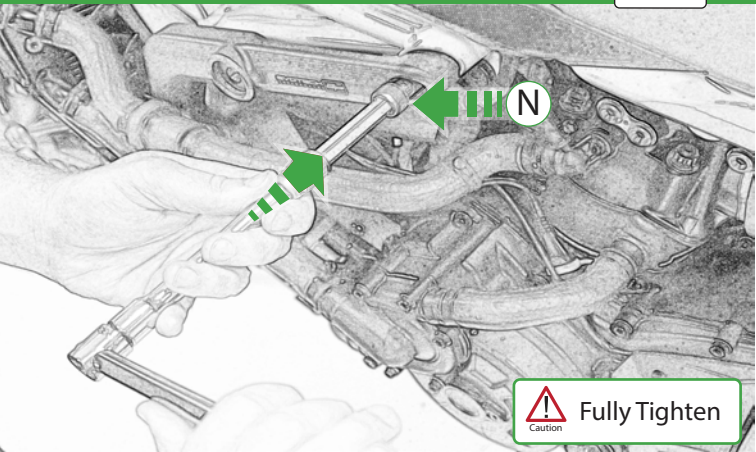


Caution

Fully Tighten

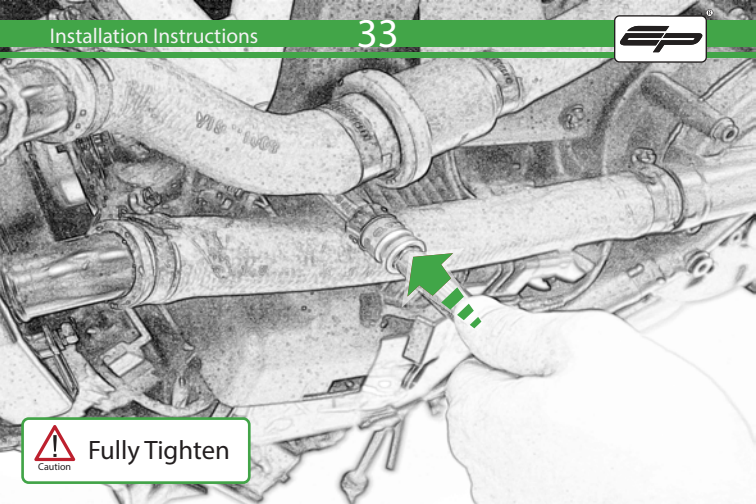



Fully Tighten

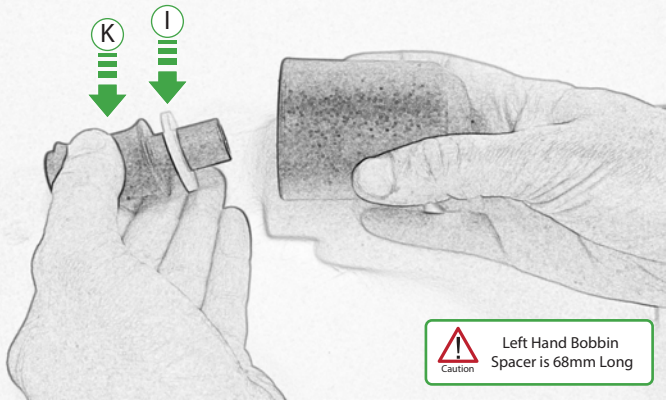



Left Hand Bobbin
Spacer is 68mm Long




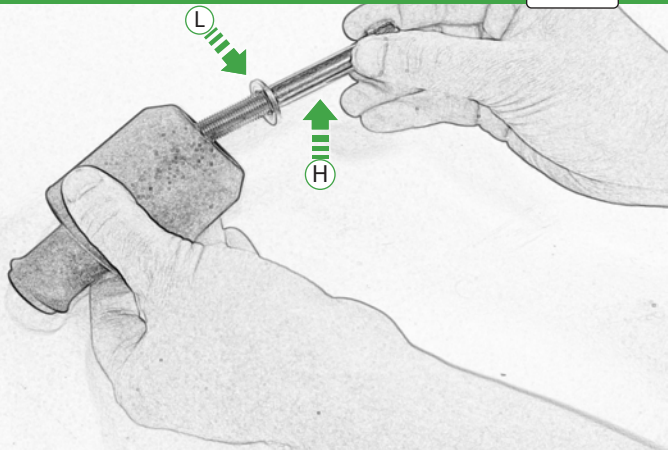


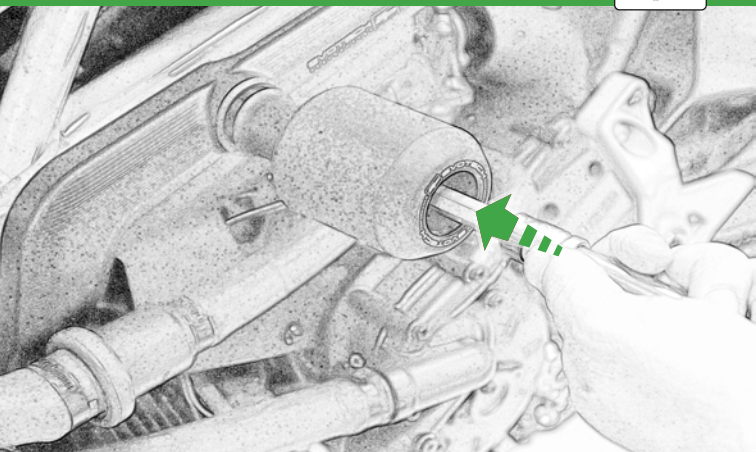


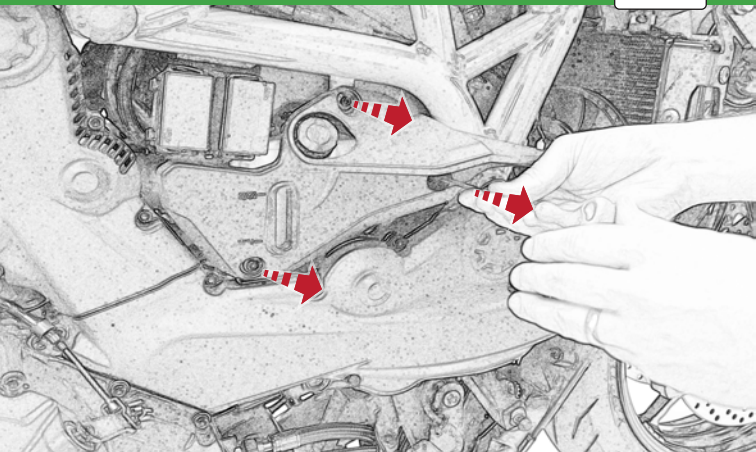


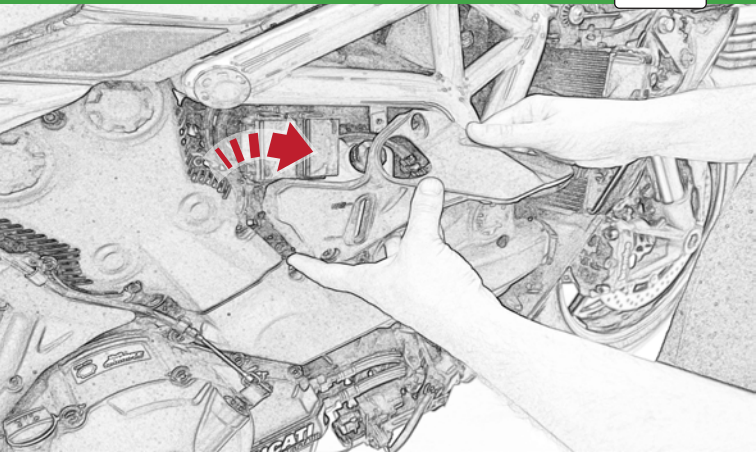


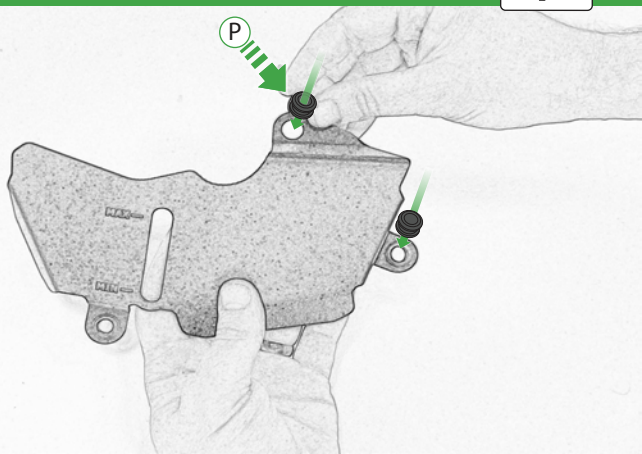

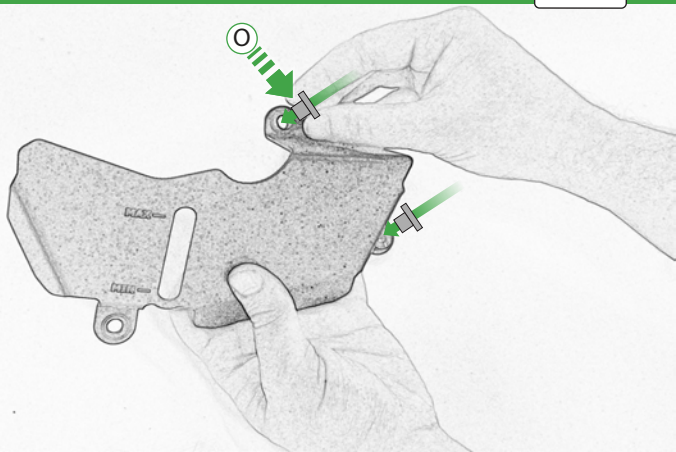


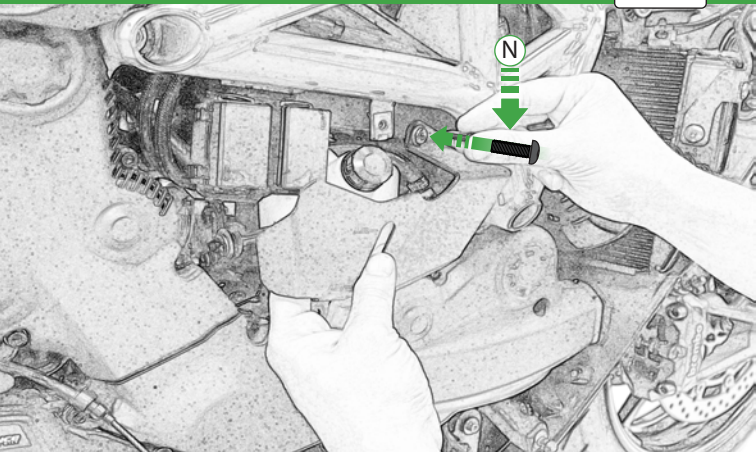


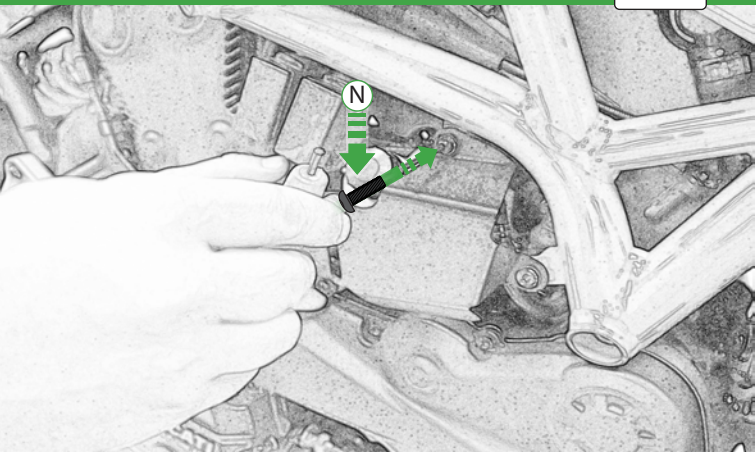


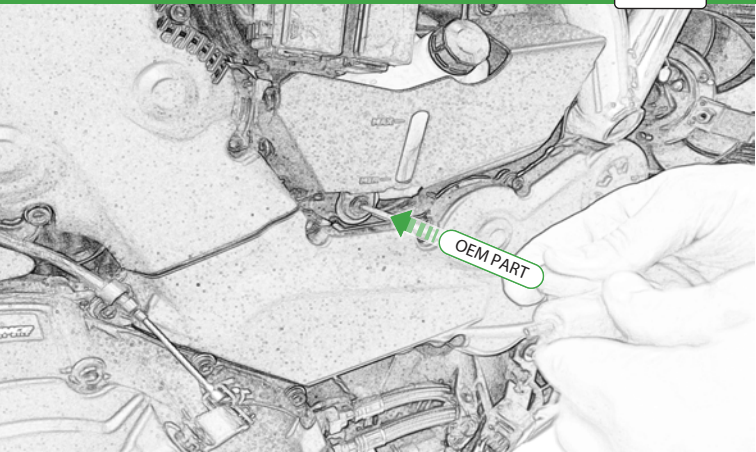




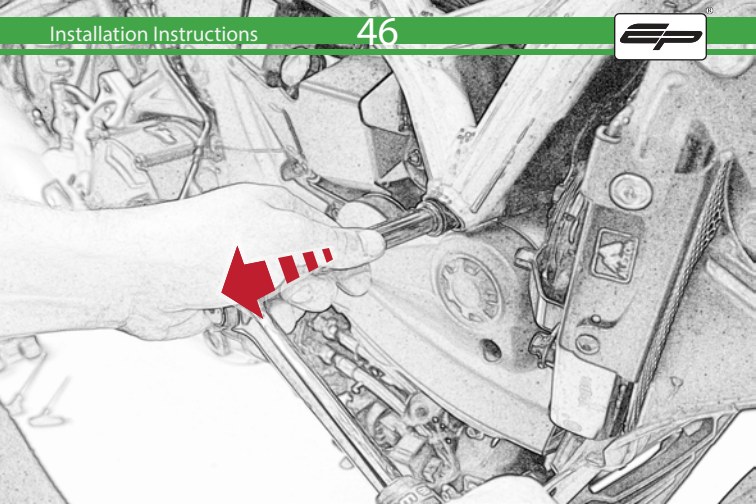

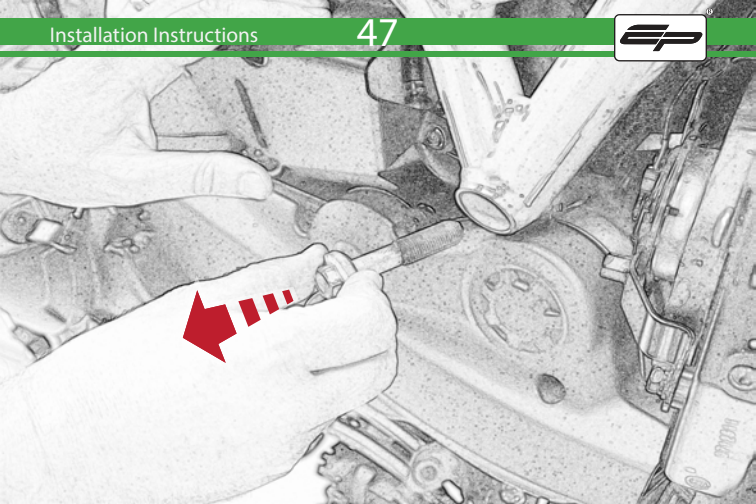


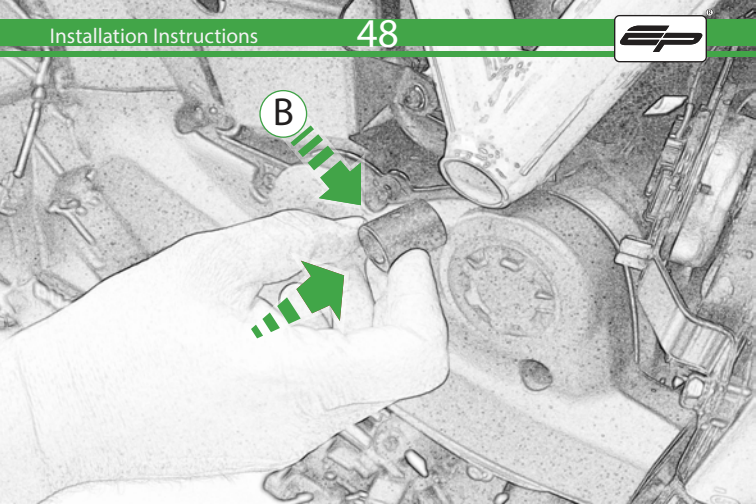


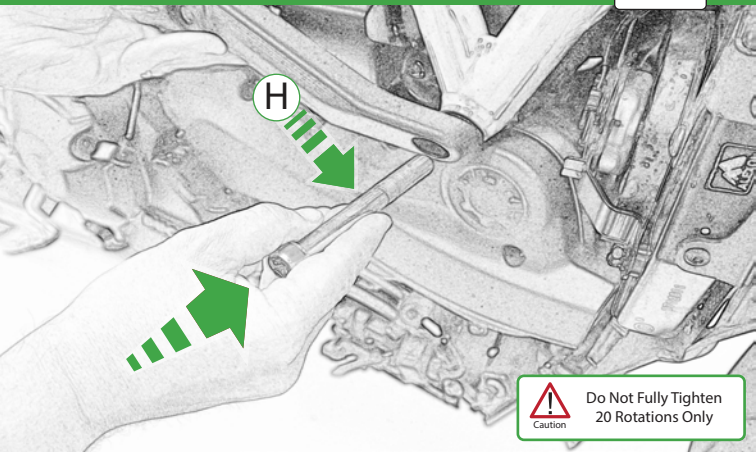
**H**

Caution


Do Not Fully Tighten
20 Rotations Only

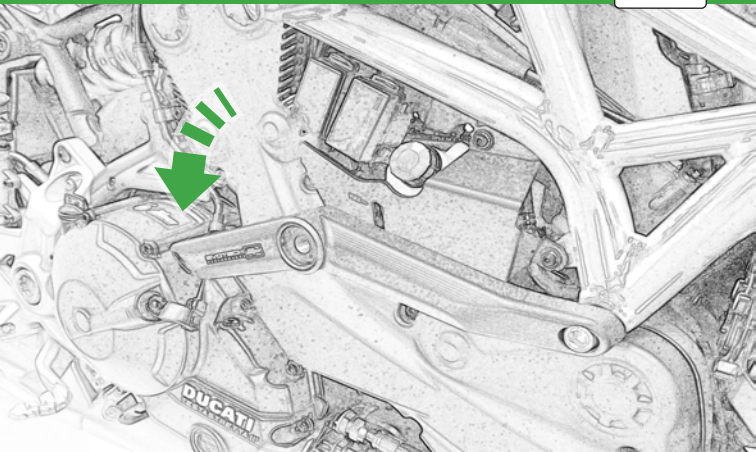

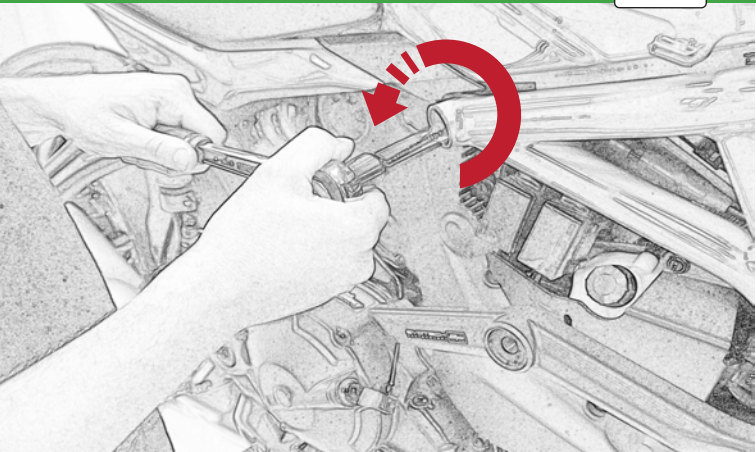

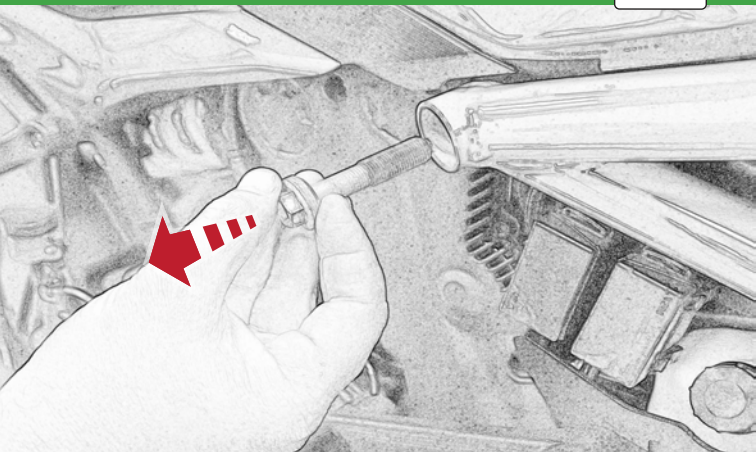




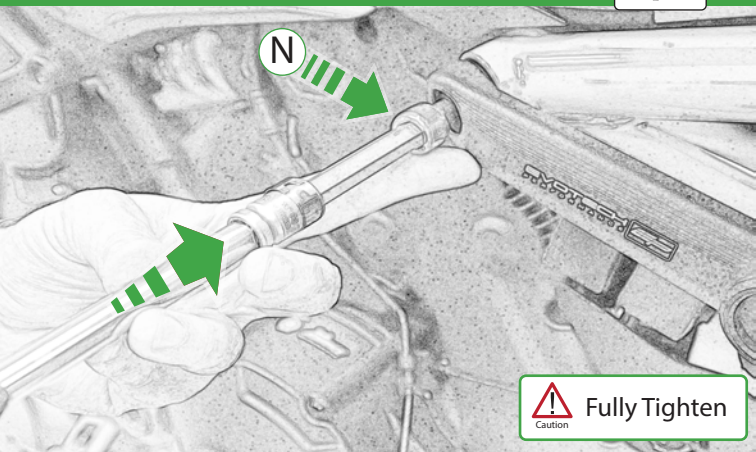


Caution

Fully Tighten

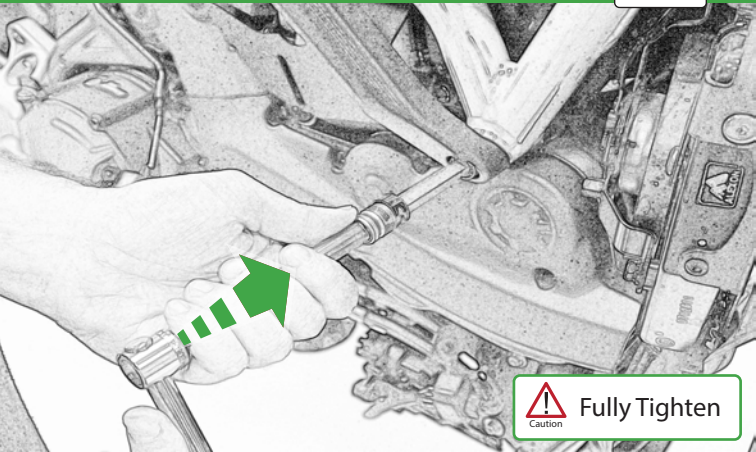



Fully Tighten

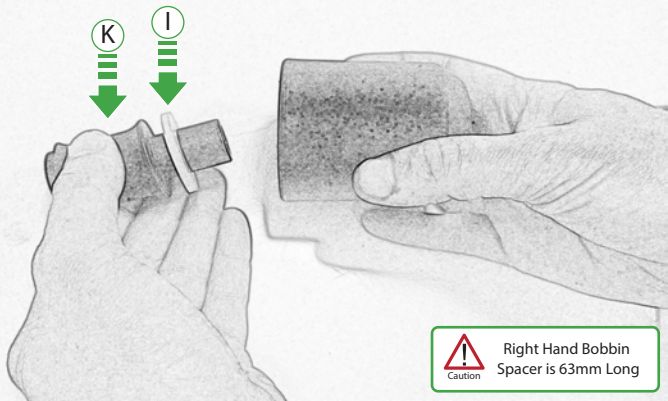

Right Hand Bobbin
Spacer is 63mm Long



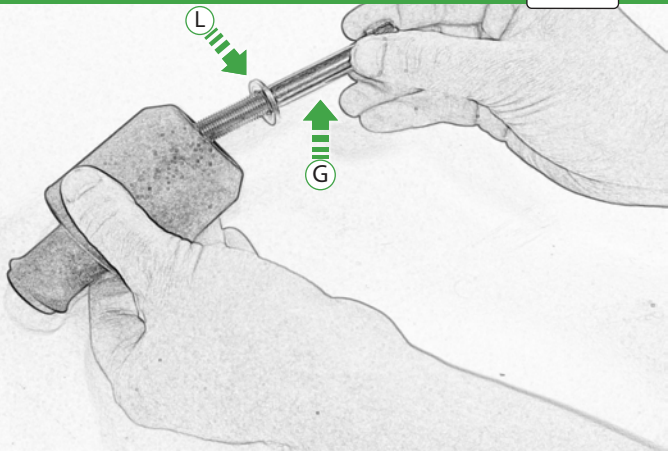

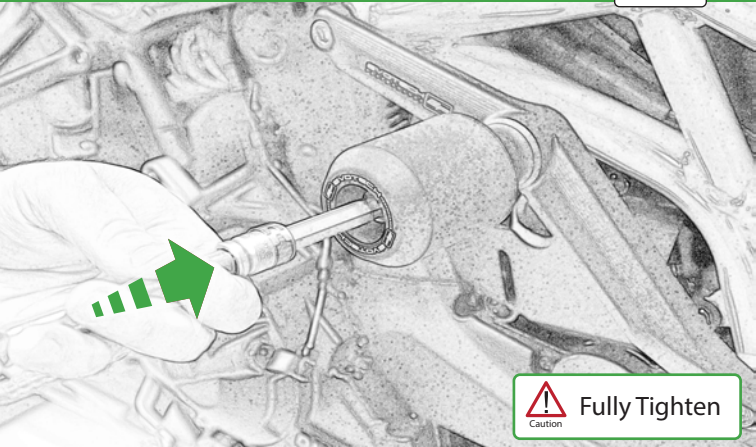

Caution

Fully Tighten



Reverse Stages

15 - 1



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com