

078100M Moto Guzzi Stelvio 2023> / V100 Mandello 2022> Fitting Instructions

Kit Includes:

1.	X1	C078100M	Hugger Blade
2.	X1	CFK078100A	Mounting Bracket 'A'
3.	X1	CFK078100B	Mounting Bracket 'B'
4.	X1	CBOLM50005	M5 x 12mm Button-Head Bolt
5.	X2	CBOLM50009	M5 x 20mm Flanged Button-Head Bolt
6.	X1	CBOLM60035	M6 x 16mm Flanged Button-Head Bolt
7.	X2	CBOLM60036	M6 x 20mm Flanged Button-Head Bolt
8.	X1	CWASM50002	M5 Stainless Steel Washer
9.	X3	CWASM60001	M6 Stainless Steel Washer
10.	X3	CNUTM60003	M6 Nyloc Nut
11.	X1	CSPAM60003	M6 x 4mm Spacer
12.	X5	CGROM60001	Rubber Grommet
13.	X2	CSPAM50006	M5 x 8mm Spacer
14.	X3	CSPAM60004	M6 x 8mm Spacer
15.	X2	CCAP0003	M5 Bolt Cap

Please note: For those installing for the V100 Mandello and have the Ohlins suspension, ensure no cables are compressed between the Hugger blade and the Ohlins cannister.

Assembly Instructions

Please Note: We recommend applying thread lock to the bolts that mount into the swinging arm of the motorcycle.

- Begin by fitting all rubber grommets (**Item 12**) into the large diameter holes. Using '**FIG. 2**' & '**FIG. 3**' for reference, insert the M5 & M6 x 8mm spacers (**Items 13 & 14**) into their relevant grommets.
- Loosely fasten bracket 'A' (**Item 2**) to the Pyramid Hugger blade (**Item 1**). Use 2 x M6 nuts, bolt and washer (**Items 9, 6, 8** respectively). Please use '**FIG. 2**' for reference.
- Unclip the brake hose line and remove the OEM hugger from the motorcycle. Locate the Pyramid Hugger and the bracket in position, **loosely threading** the M5 x 12mm bolt (**Item 4**) and M5 washer (**Item 8**), followed by 1 x M5 x 20mm bolt (**Item 5**) to locate the secondary mounting of the bracket. Viewing this mounting from the LHS of the motorcycle can make locating the bolt correctly easier.
- Fit bracket 'B' (**Item 3**) to the Hugger using 1 x M6 nut, bolt and washer (**Items 10, 6, 9** respectively). Please only **loosely fix** bracket 'B' to the Hugger blade. Use 1 x M5 x 20mm bolt (**Item 5**) and the M6 x 4mm spacer (**Item 11**) in the orientation shown to fix the Hugger to the motorcycle. Place the spacer between the Hugger and the bracket.
- Fully tighten all fixings, starting with the bolts that thread into the swingarm of the motorcycle and ending with the M6 fixings for the Hugger to bracket connections.
- Place both M5 bolt caps (**Item 15**) over the M5 bolts illustrated in '**FIG. 3**'.
- **Refit the brake hose line** by clipping the anchor points into the holes marked in '**FIG. 3**'.
- The installation of your Pyramid Hugger is now complete.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Please Note:
**We advise that all fixings
are checked periodically.**

FIG. 1



078100M Moto Guzzi Stelvio 2023> / V100 Mandello 2022> Fitting Instructions

The images shown below will assist with the identification of the components included in the fitting kit, together with their application.

FIG. 2


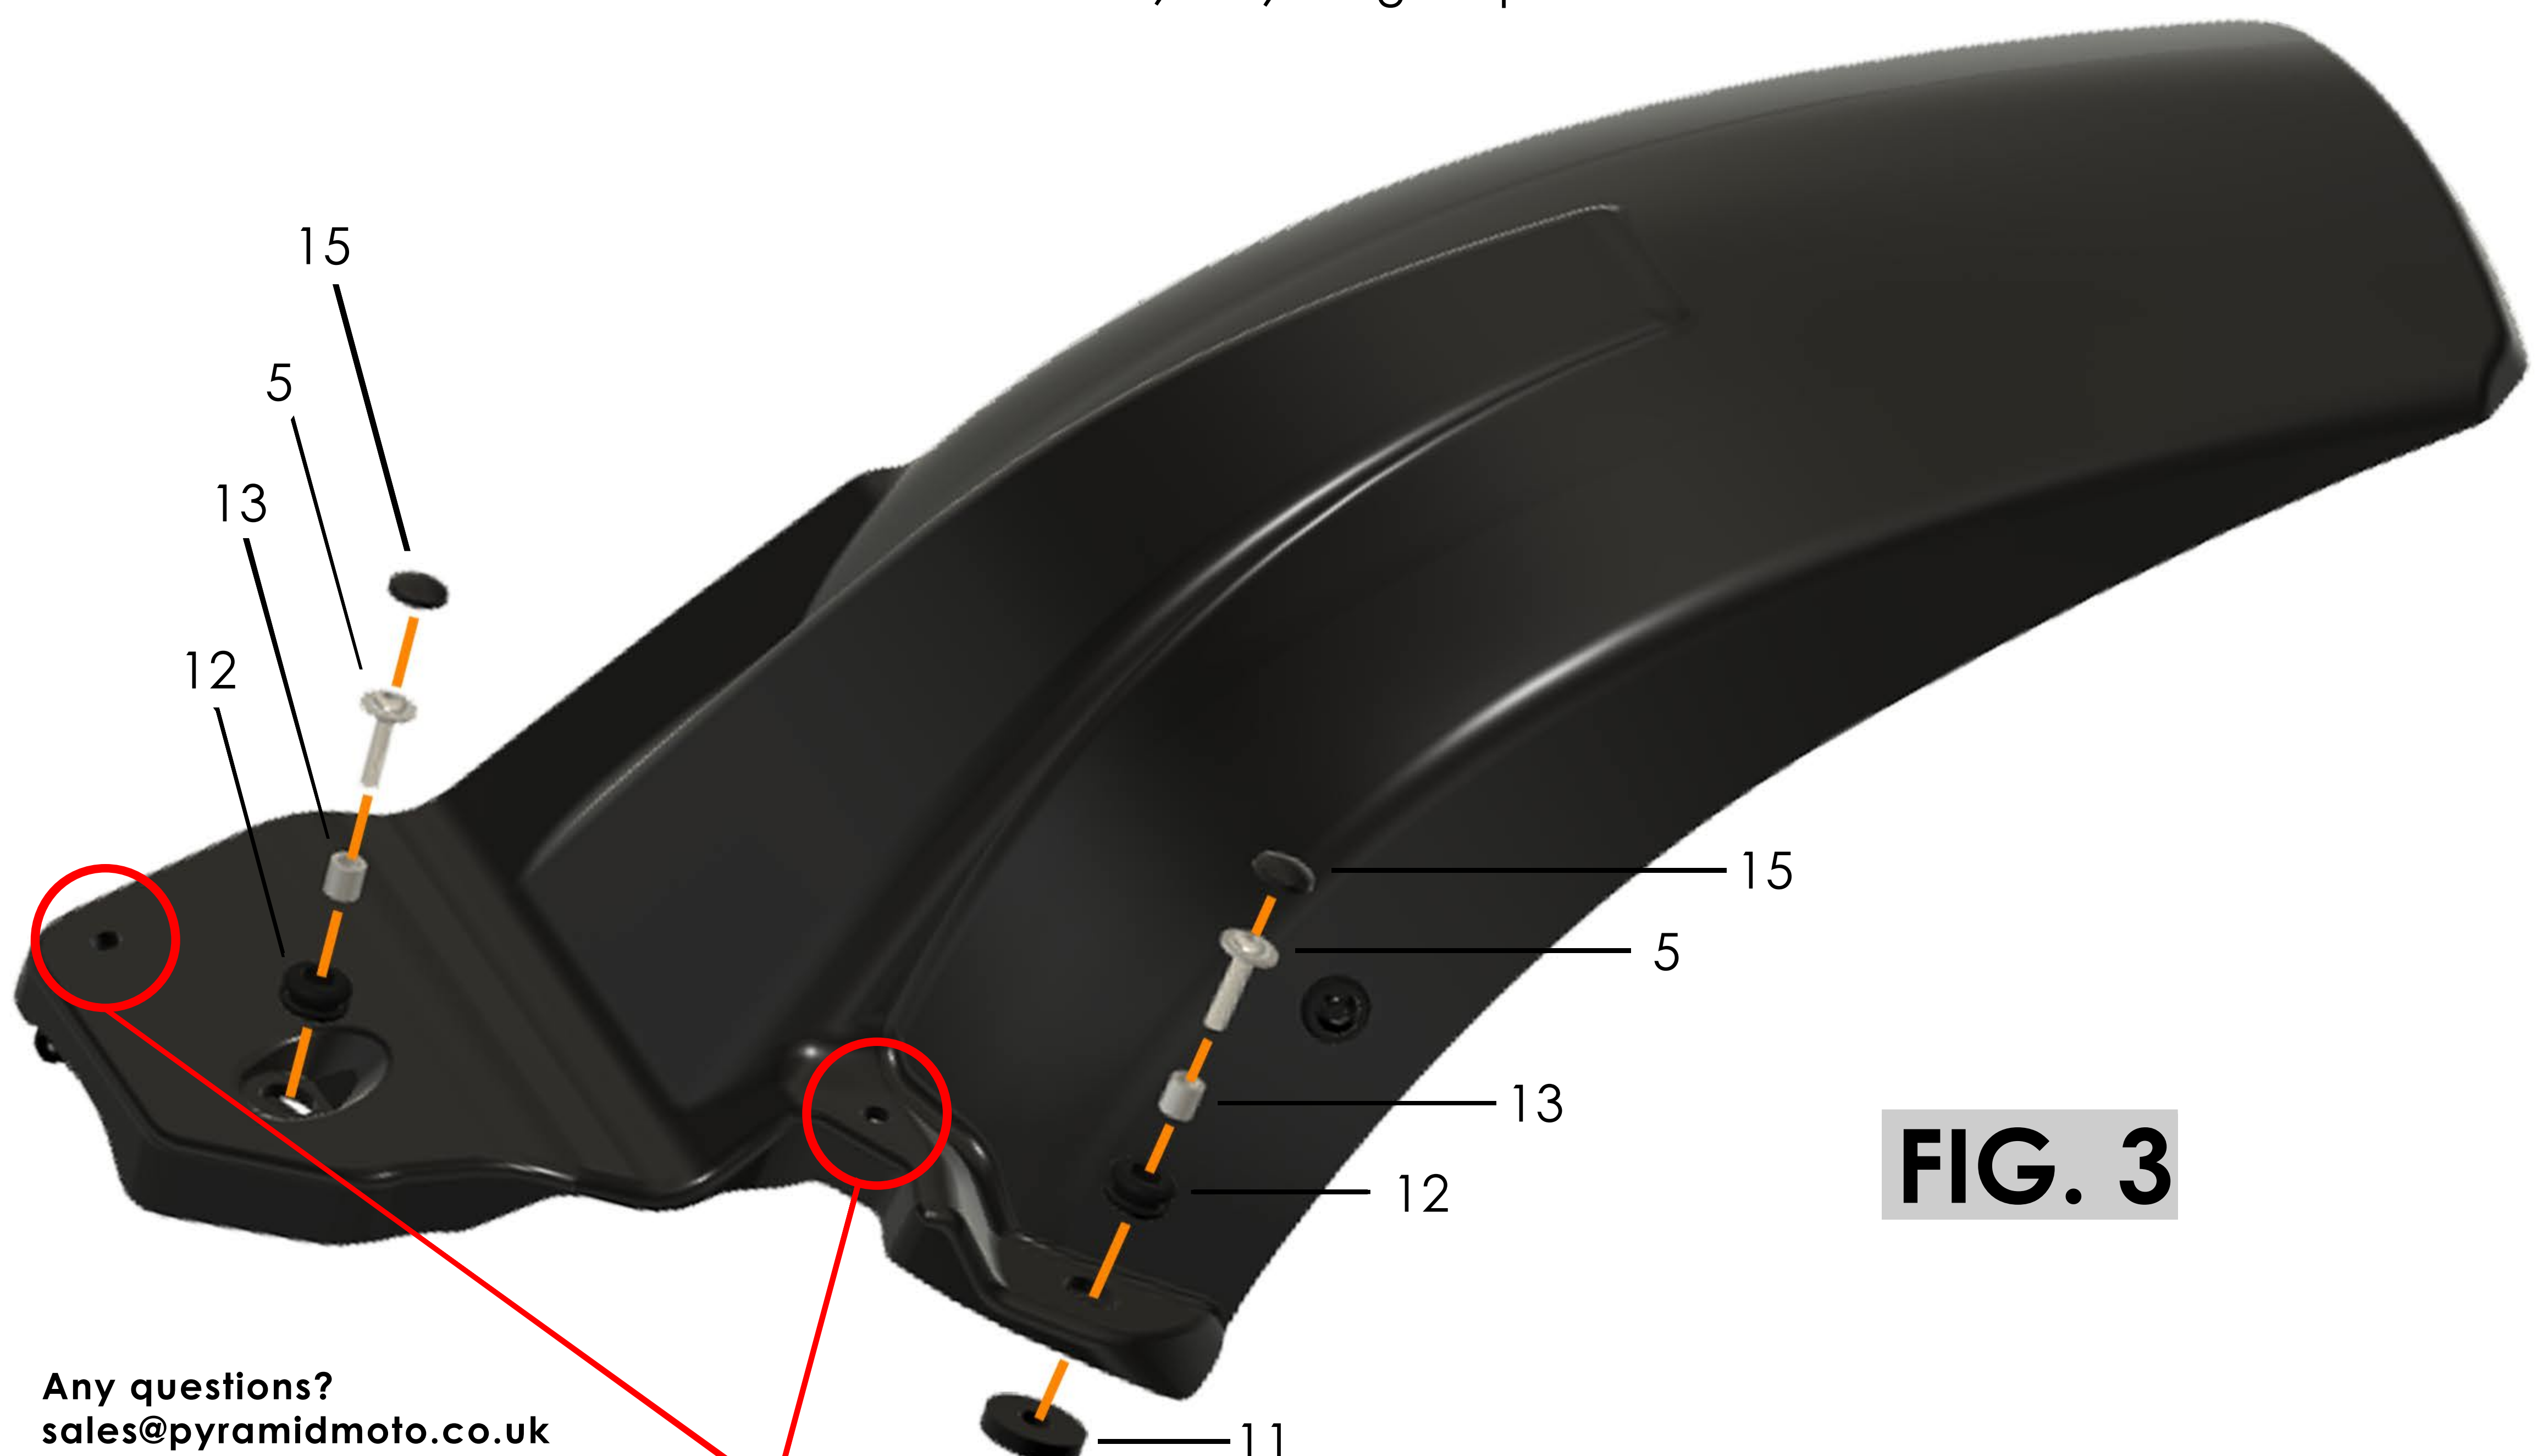


FIG. 3

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

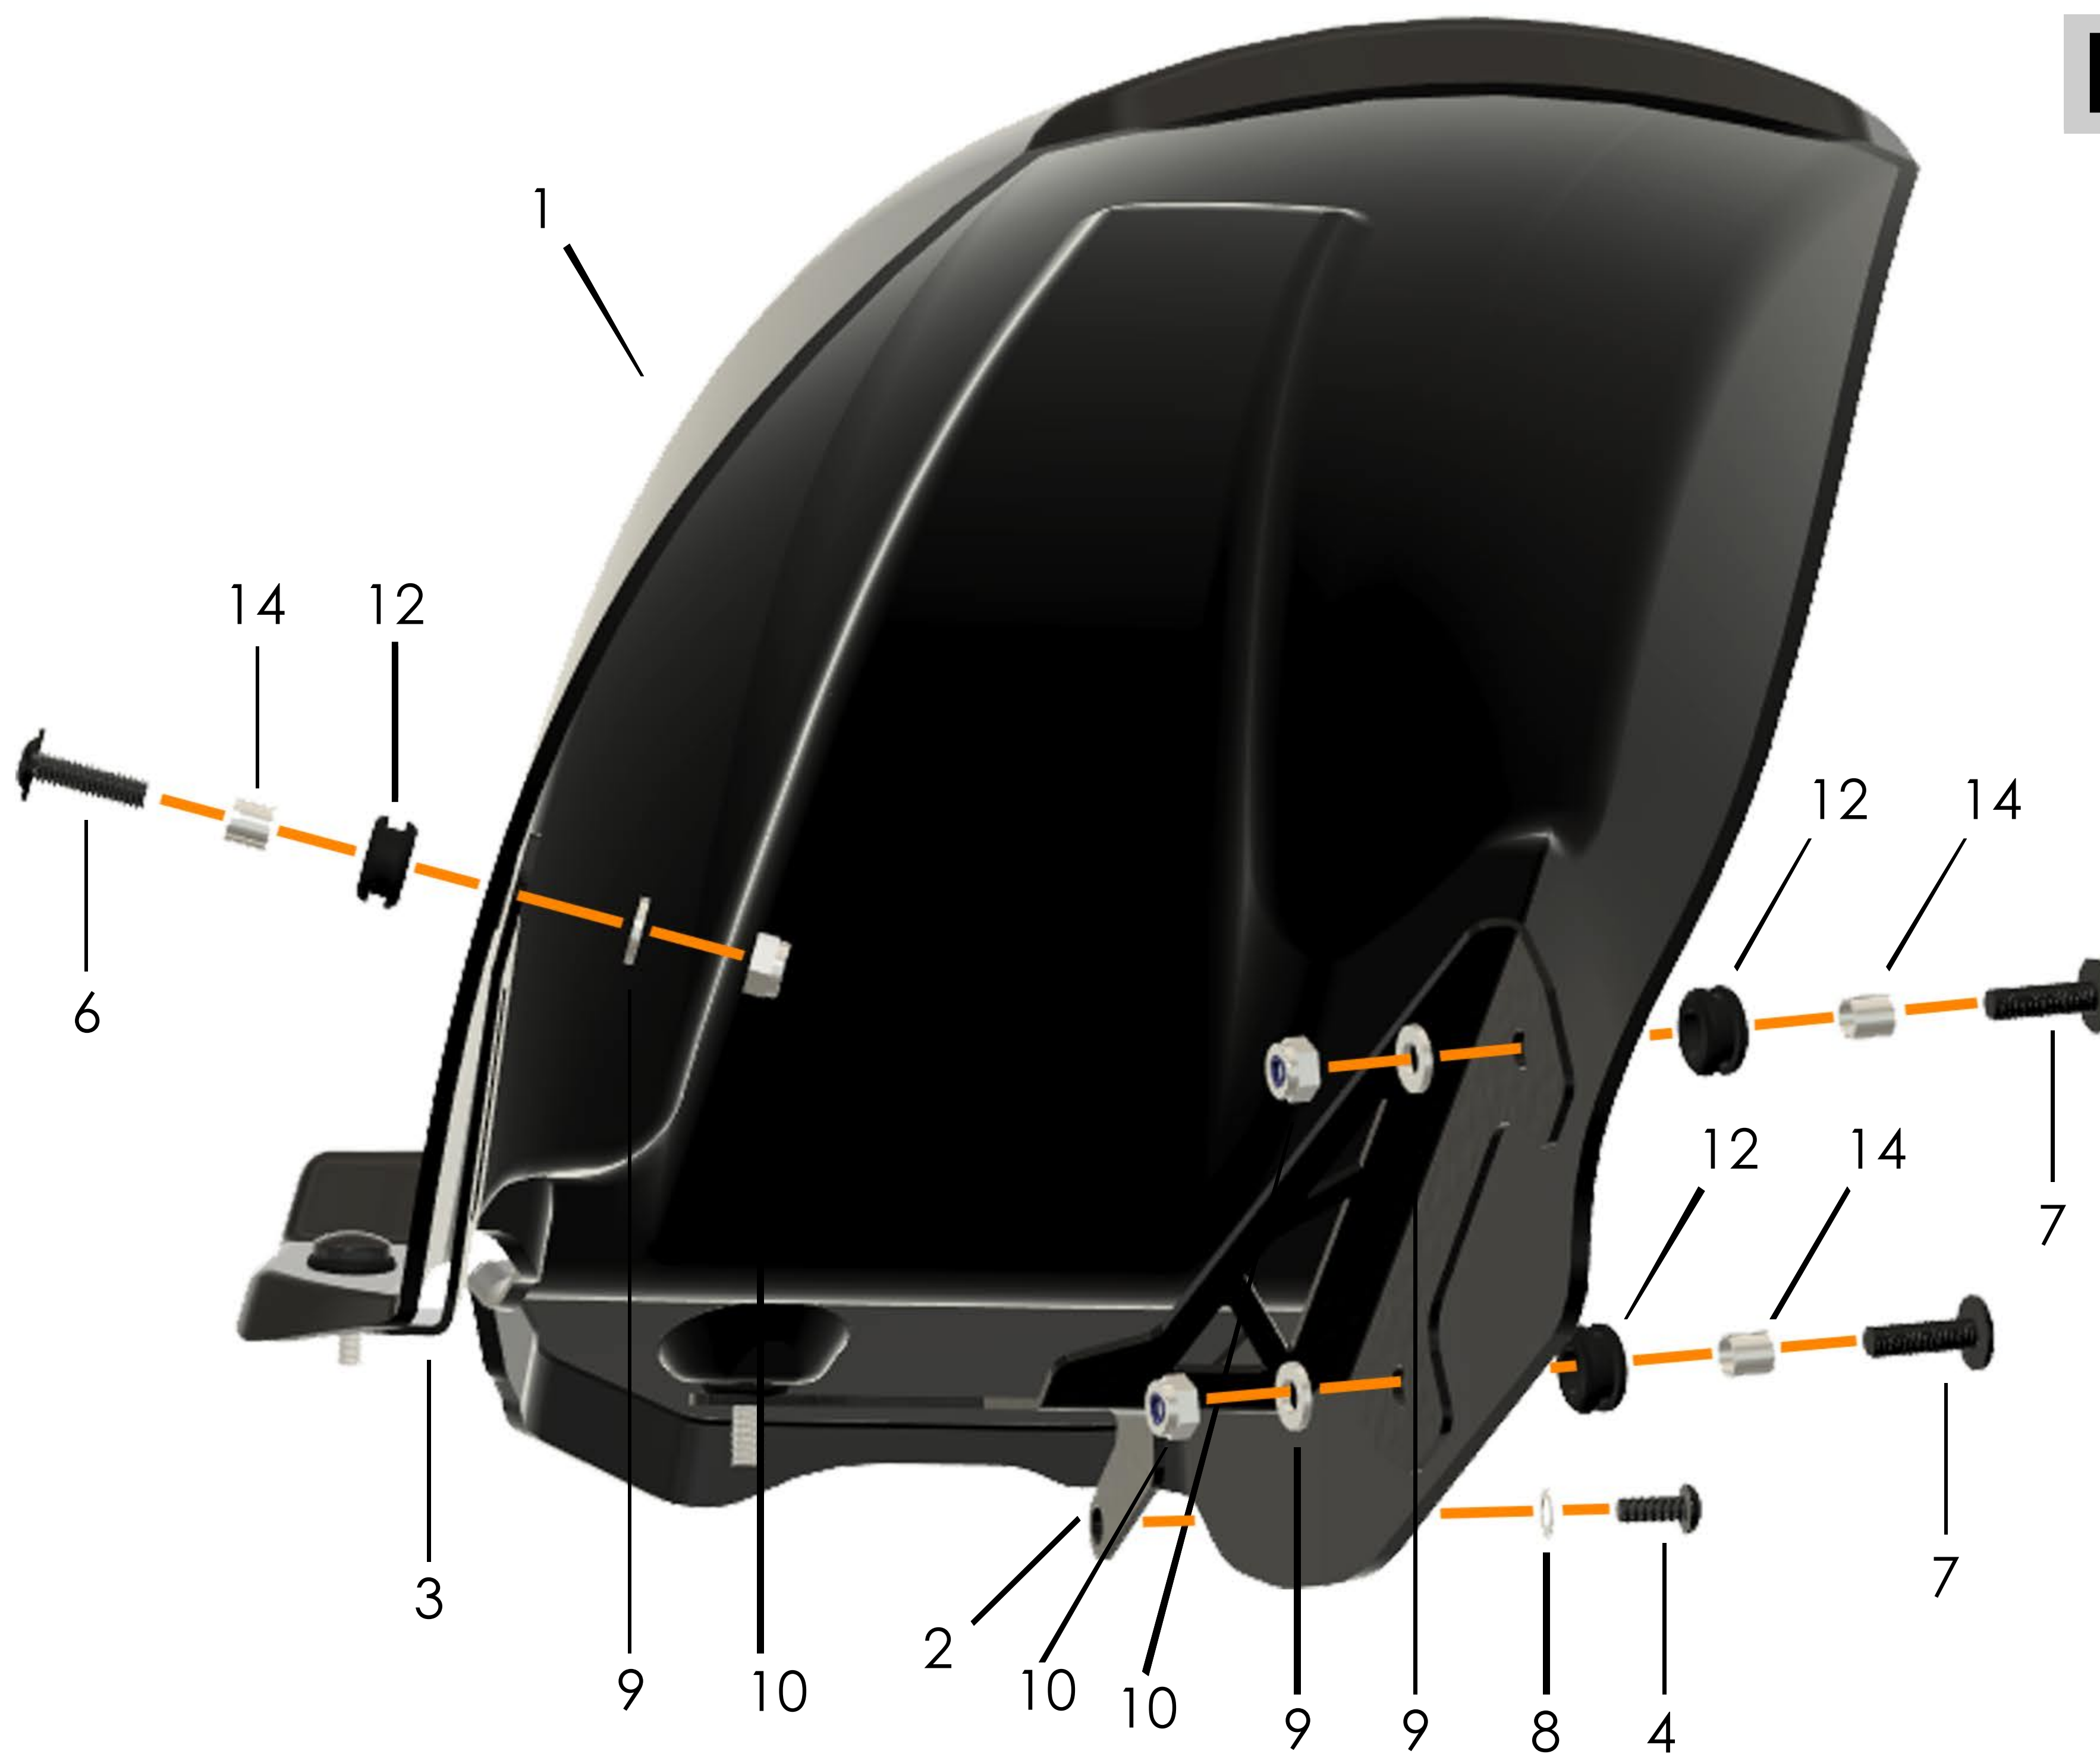

Follow us on social media and
feel free to leave us a review!

Holes to anchor brake hose clips