

16130 Triumph Speed 400 Seat Cowl Fitting Instructions




Kit Includes:

1X	C16130	Moulding	
2X	CALU0004	Aluminium Tab Large (Perforated)	Pre-fitted by Pyramid
1X	CALU0003	Aluminium Tab Small (Perforated)	Pre-fitted by Pyramid

Note: Do not overbend the tabs and avoid repetitive bending as it may cause filament issues.

- Start by removing the seat.
- Slide the seat cowl on from the rear of the seat (see Fig 1).
- Once the seat cowl is in place, apply pressure to the aluminium tabs to secure the seat cowl in position.
- Refit the seat on the motorcycle.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

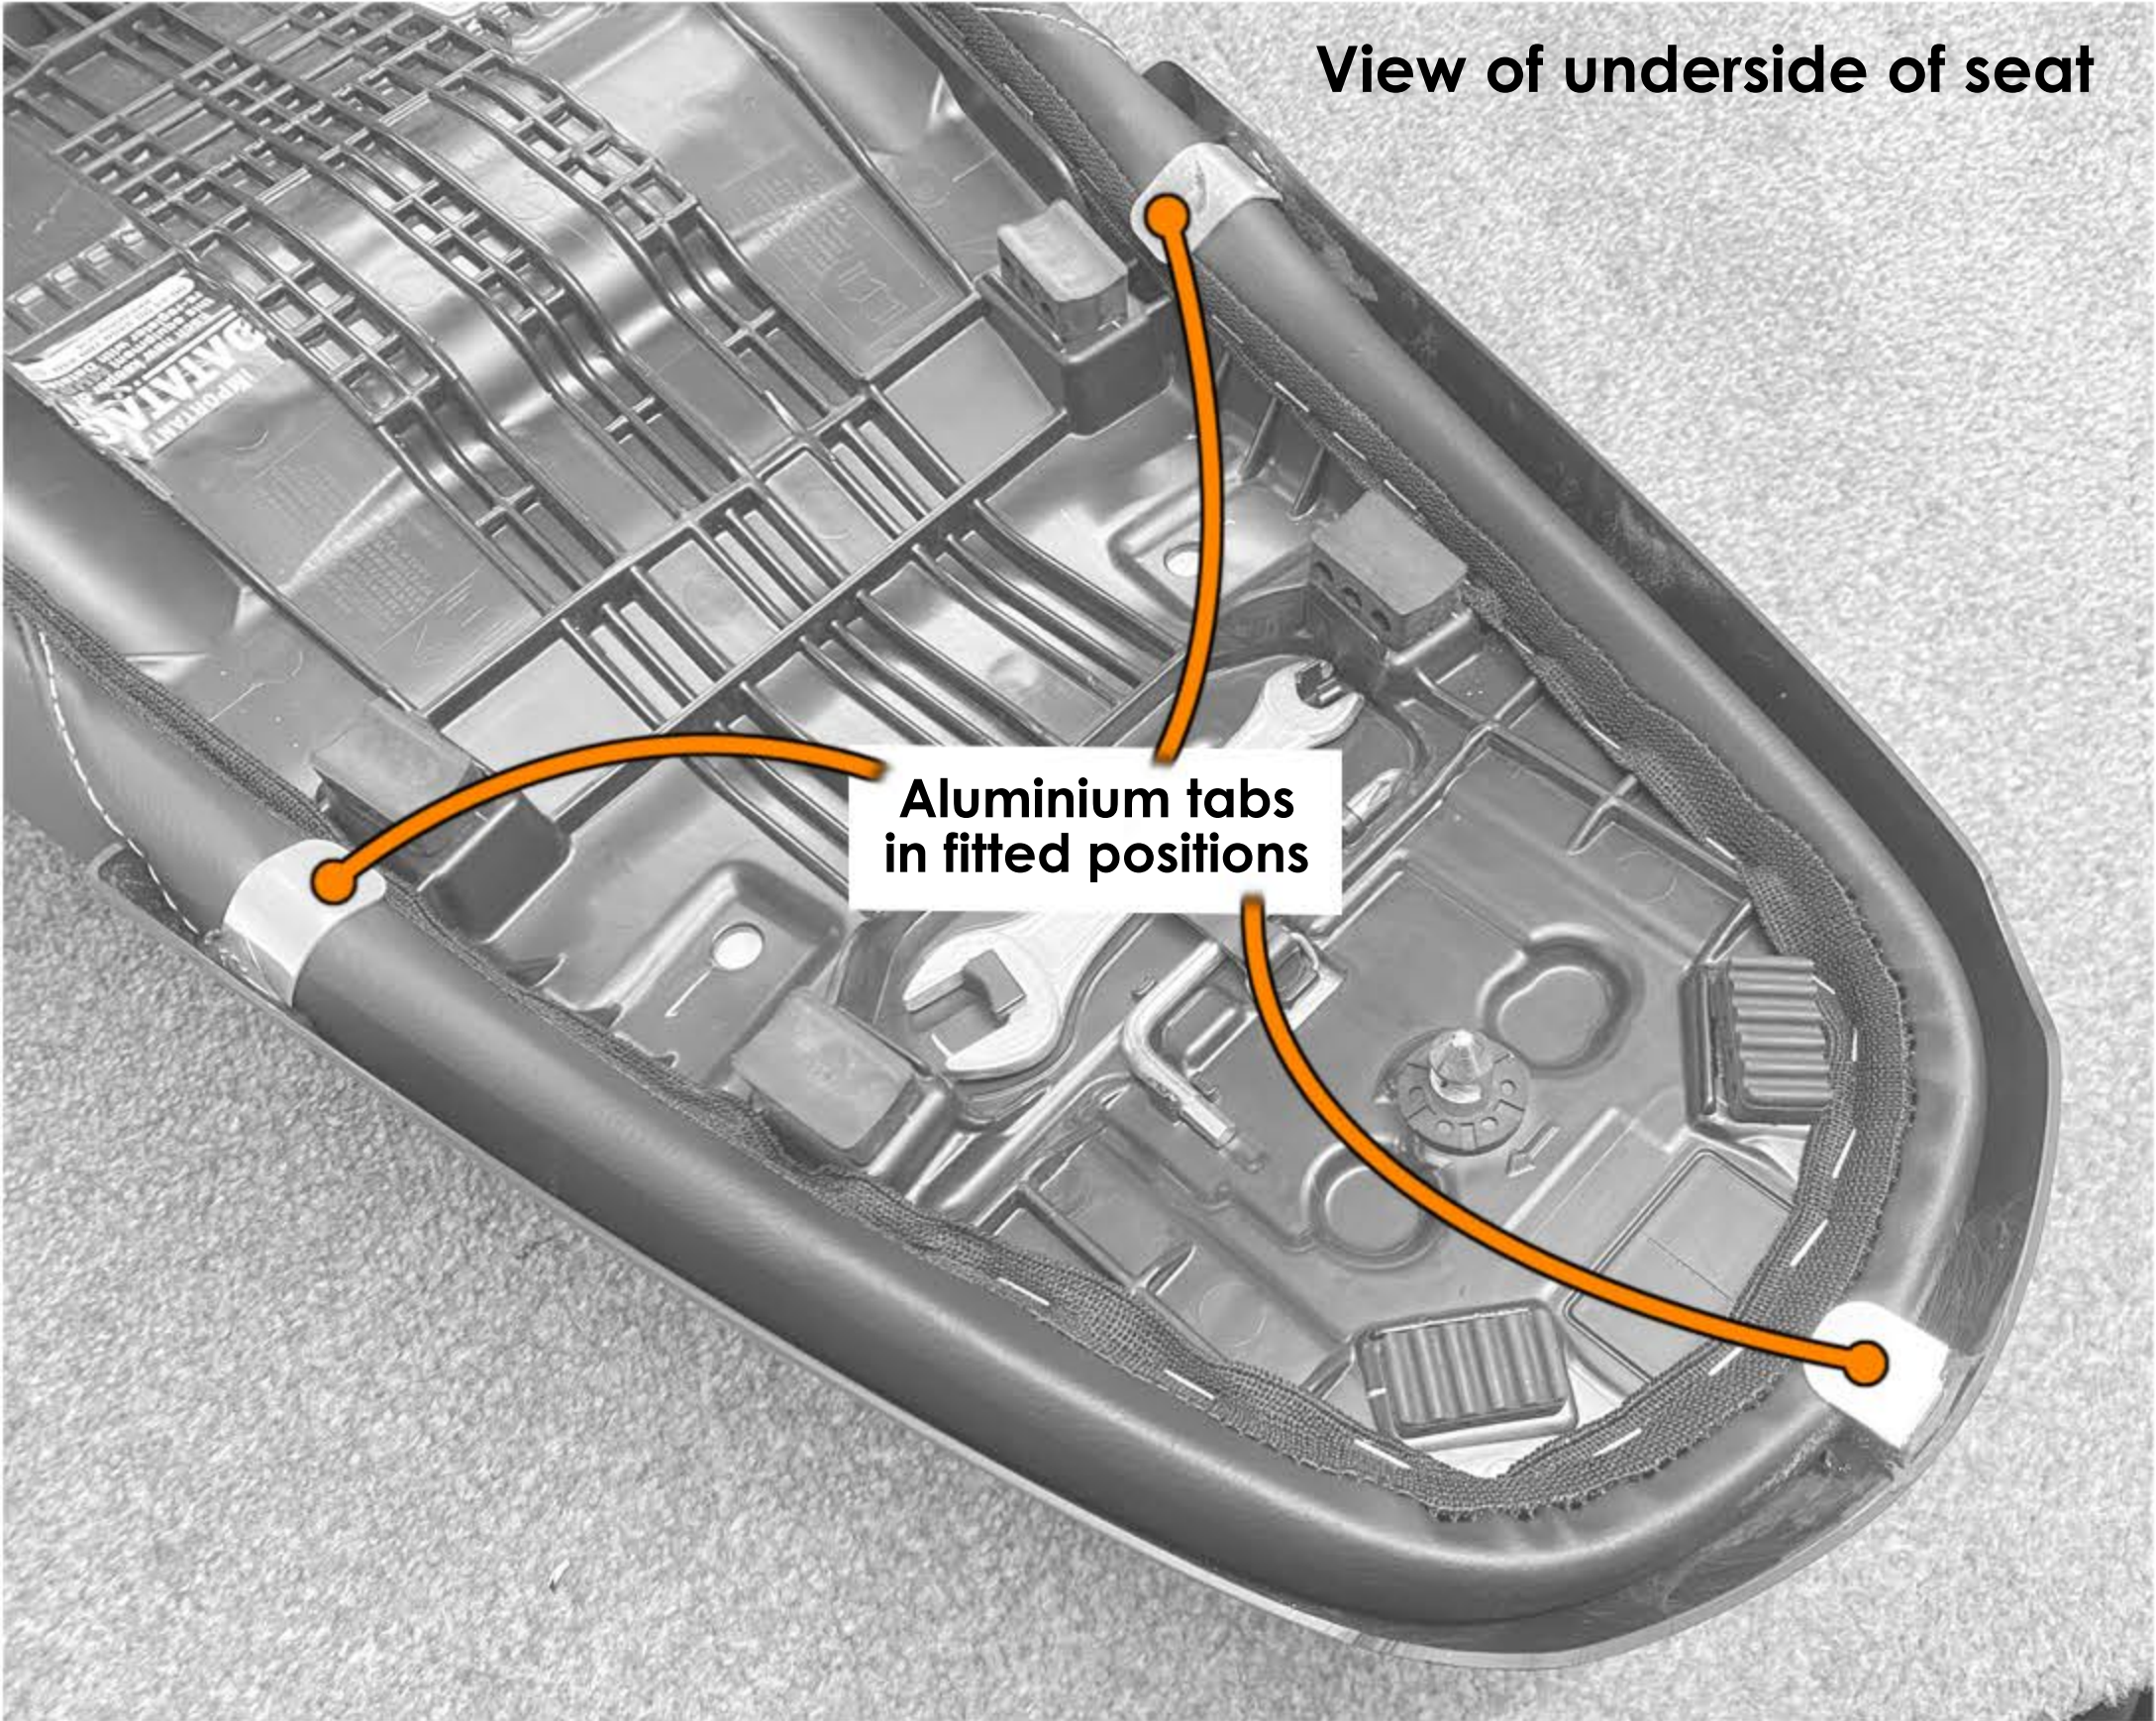

16130 Triumph Speed 400 Seat Cowl Fitting Instructions



Kit Includes:

1X	C16130	Moulding	
2X	CALU0004	Aluminium Tab Large (Perforated)	Pre-fitted by Pyramid
1X	CALU0003	Aluminium Tab Small (Perforated)	Pre-fitted by Pyramid

Note: Do not overbend the tabs and avoid repetitive bending as it may cause filament issues.

- Start by removing the seat.
- Slide the seat cowl on from the rear of the seat (see Fig 1).
- Once the seat cowl is in place, apply pressure to the aluminium tabs to secure the seat cowl in position.
- Refit the seat on the motorcycle.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

