



36071 **Triumph Sport 800 Fairing Emblems** **Fitting Instructions**

Kit Includes:

1.	X1	C36071A+B	Fairing Emblems
2.	X4	CTAP0053	Stick-Fit Pads (4 pads)



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by cleaning the fitment area on the motorcycle (soap and water is adequate).
- Trim and attach the supplied stick-fit pads to the fairing emblems as shown in **Fig 1**.
- Check alignment and familiarise yourself with the final position on the bike before removing the backing paper.
- Remove the backing from the stick-fit pads and attach the fairing emblems. Apply firm pressure to ensure secure adhesion.

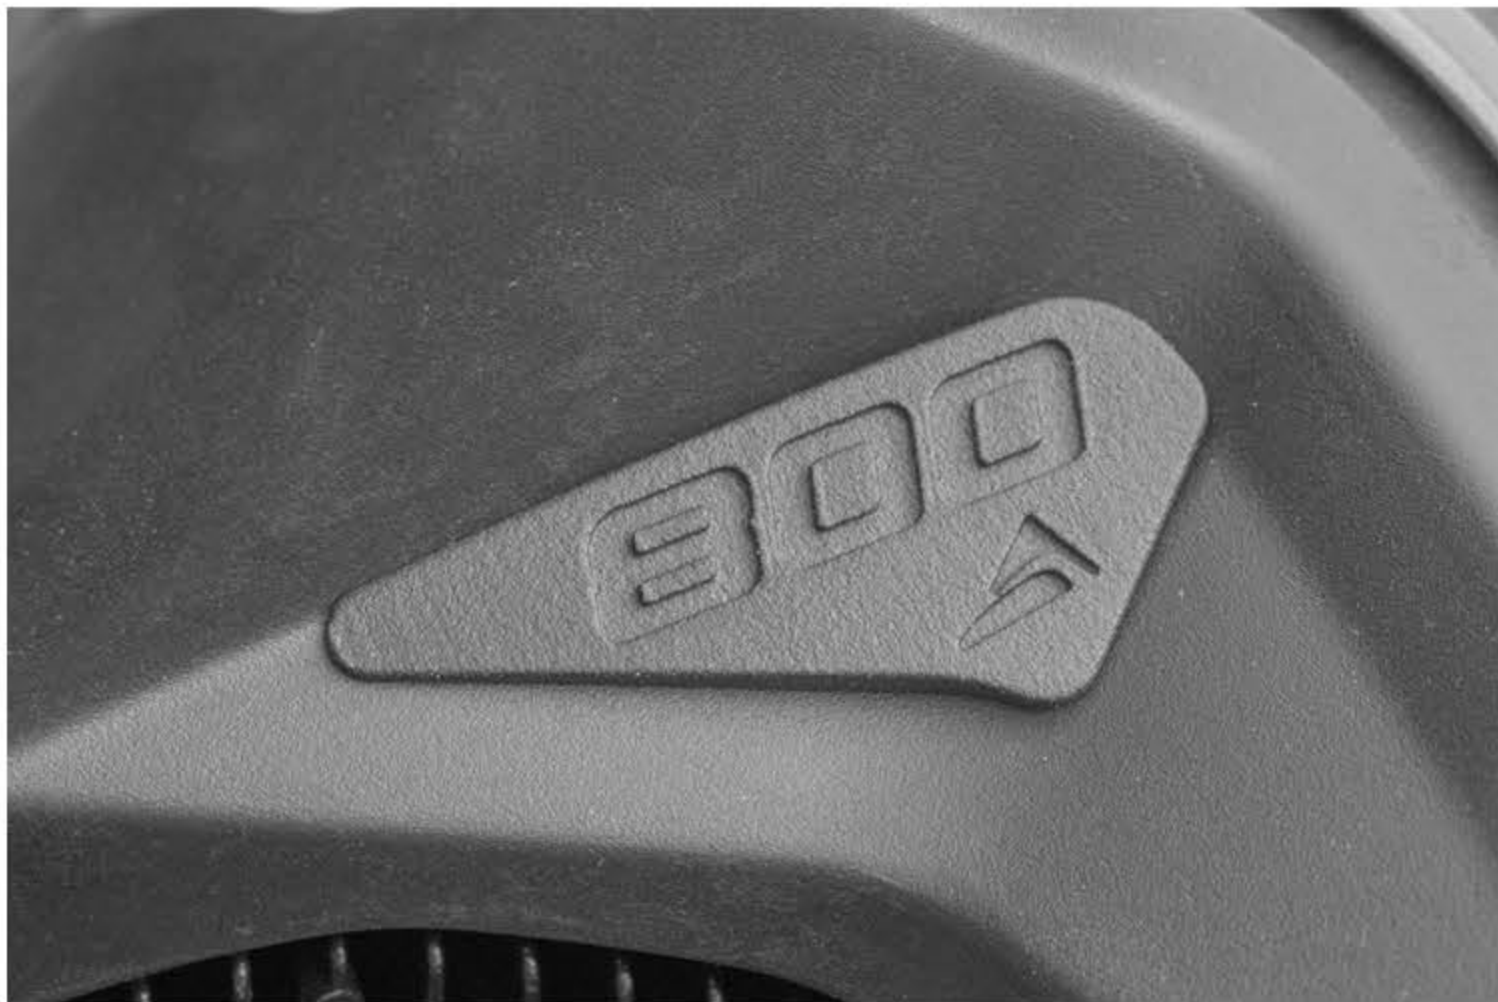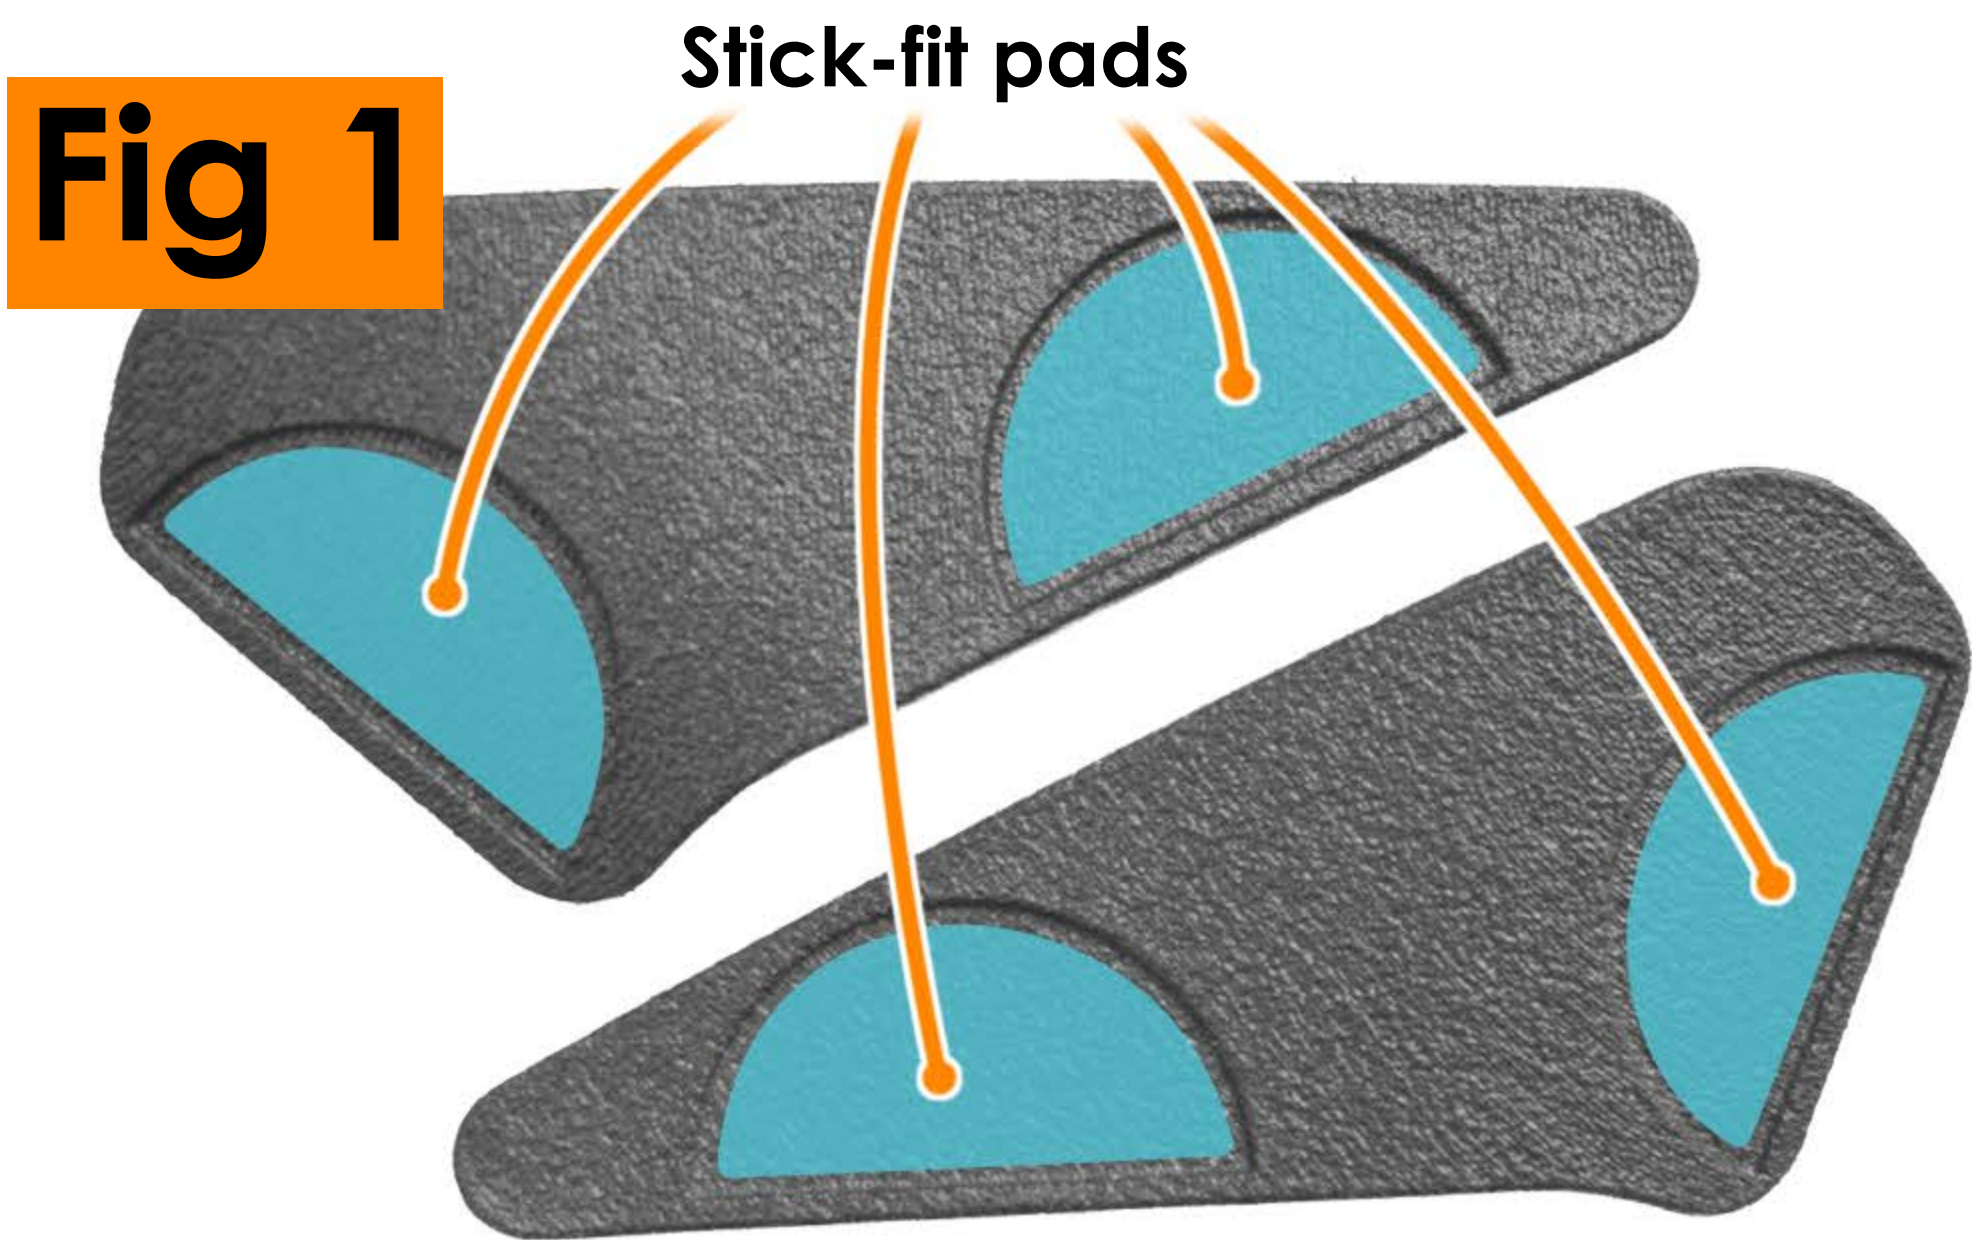

36071 **Triumph Sport 800 Fairing Emblems** **Fitting Instructions**

Kit Includes:

1.	X1	C36071A+B	Fairing Emblems
2.	X4	CTAP0053	Stick-Fit Pads (4 pads)

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by cleaning the fitment area on the motorcycle (soap and water is adequate).
- Trim and attach the supplied stick-fit pads to the fairing emblems as shown in **Fig 1**.
- Check alignment and familiarise yourself with the final position on the bike before removing the backing paper.
- Remove the backing from the stick-fit pads and attach the fairing emblems. Apply firm pressure to ensure secure adhesion.

