

812570

Yamaha XSR900 Shock Shield Fitting Instructions



Kit Includes:

1.	X1	C08061	Rubber Mudflap
2.	X1	CFK812570	Bracket
3.	X1	CFK812025B	Spacer Plate
4.	X3	CBOLM60035	M6 x 16mm Black Flanged Button Bolt
5.	X3	CWASM60001	M6 Washer
6.	X3	CNUTM60003	M6 Nyloc Nut

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk




Follow us on social media and
feel free to leave us a review!

Note: the rubber flap can easily be trimmed in any area with a pair of scissors.

Assembly Instructions

- Start by attaching the rubber mudflap to the bracket using the fittings shown in **Fig 1**. Fully tighten all three mounting points to ensure the nyloc nuts are properly engaged.
- Next, remove the pillion footpeg assembly (4x torx bolts). This is necessary to gain access to the two allen bolts holding the footrests themselves.
- Now, remove the two allen bolts which are holding the footrests and fit the shock shield between the locking nuts and the pillion footpeg assembly as shown in **Fig 2**.
- Refit the pillion footpeg assembly to the motorcycle with the shock shield now included (**Fig 2** shows the product fully fitted).
- Ensure all mounting points are fully tightened, and check the fixings periodically.

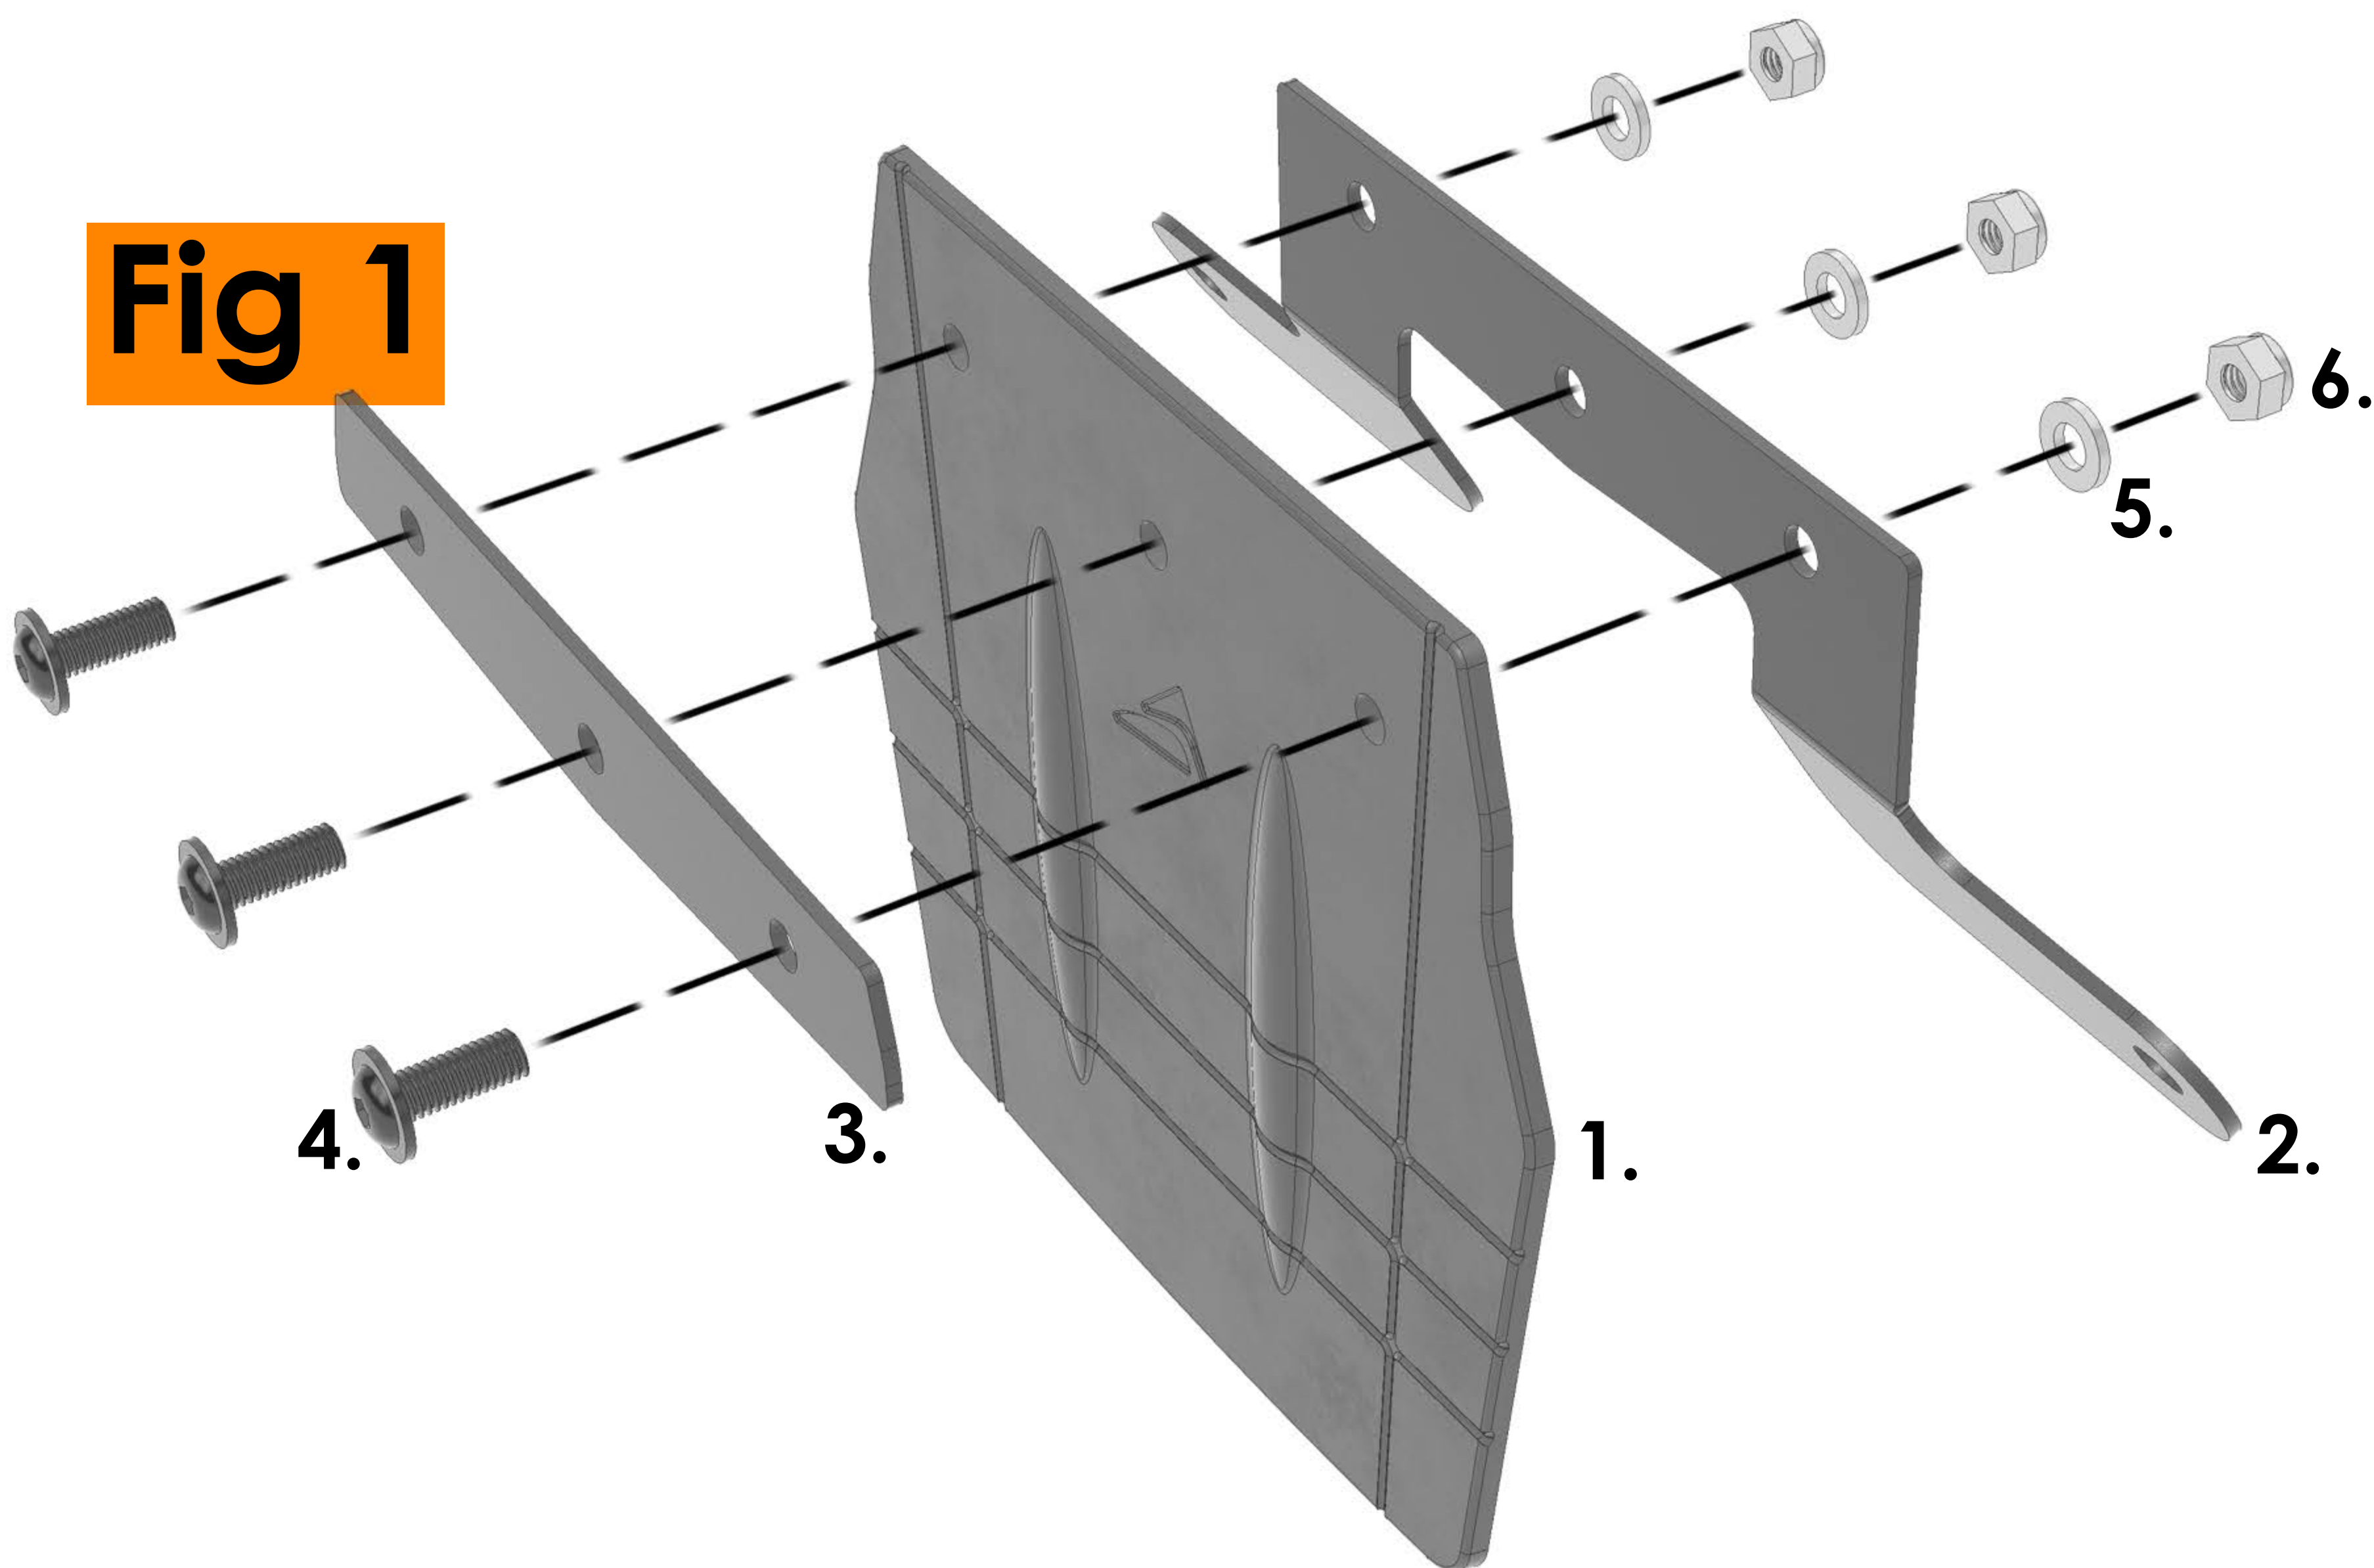

Please view these instructions on our website listing for clearer images