22595 Yamaha MT-09 Infill Panels 2024> Fitting Instructions

Kit Includes:

1.	X1	C22595A	Infill Panel (LHS)
2.	X1	C22595B	Infill Panel (RHS)

OEM Parts (From the Motorcycle):

3.	X4	M6 OEM Bolt	
4.	X2	M10 OEM Bolt	

Assembly Instructions

- Begin by removing the rider and pillion seat to gain access to the mounting points shown in '**FIG. 1**'.
- Using the M6 OEM Bolts (Item 3) loosely fit the RHS Infill Panel (Item 1) to the mounting points shown in '**FIG. 1**'.
- Using the M10 OEM Bolt (Item 4) loosely fit the RHS Infill Panel to the mounting point shown in '**FIG. 1**'.
- Once the Infill Panel is in the correct position, fully tighten all fixings.
- Repeat steps 2 - 4 for the LHS Infill Panel (Item 2).
- Once the Infill Panels have been fitted, refit the rider and pillion seat.

OEM M6 Bolts
Mounting Points

OEM M10 Bolt
Mounting Point

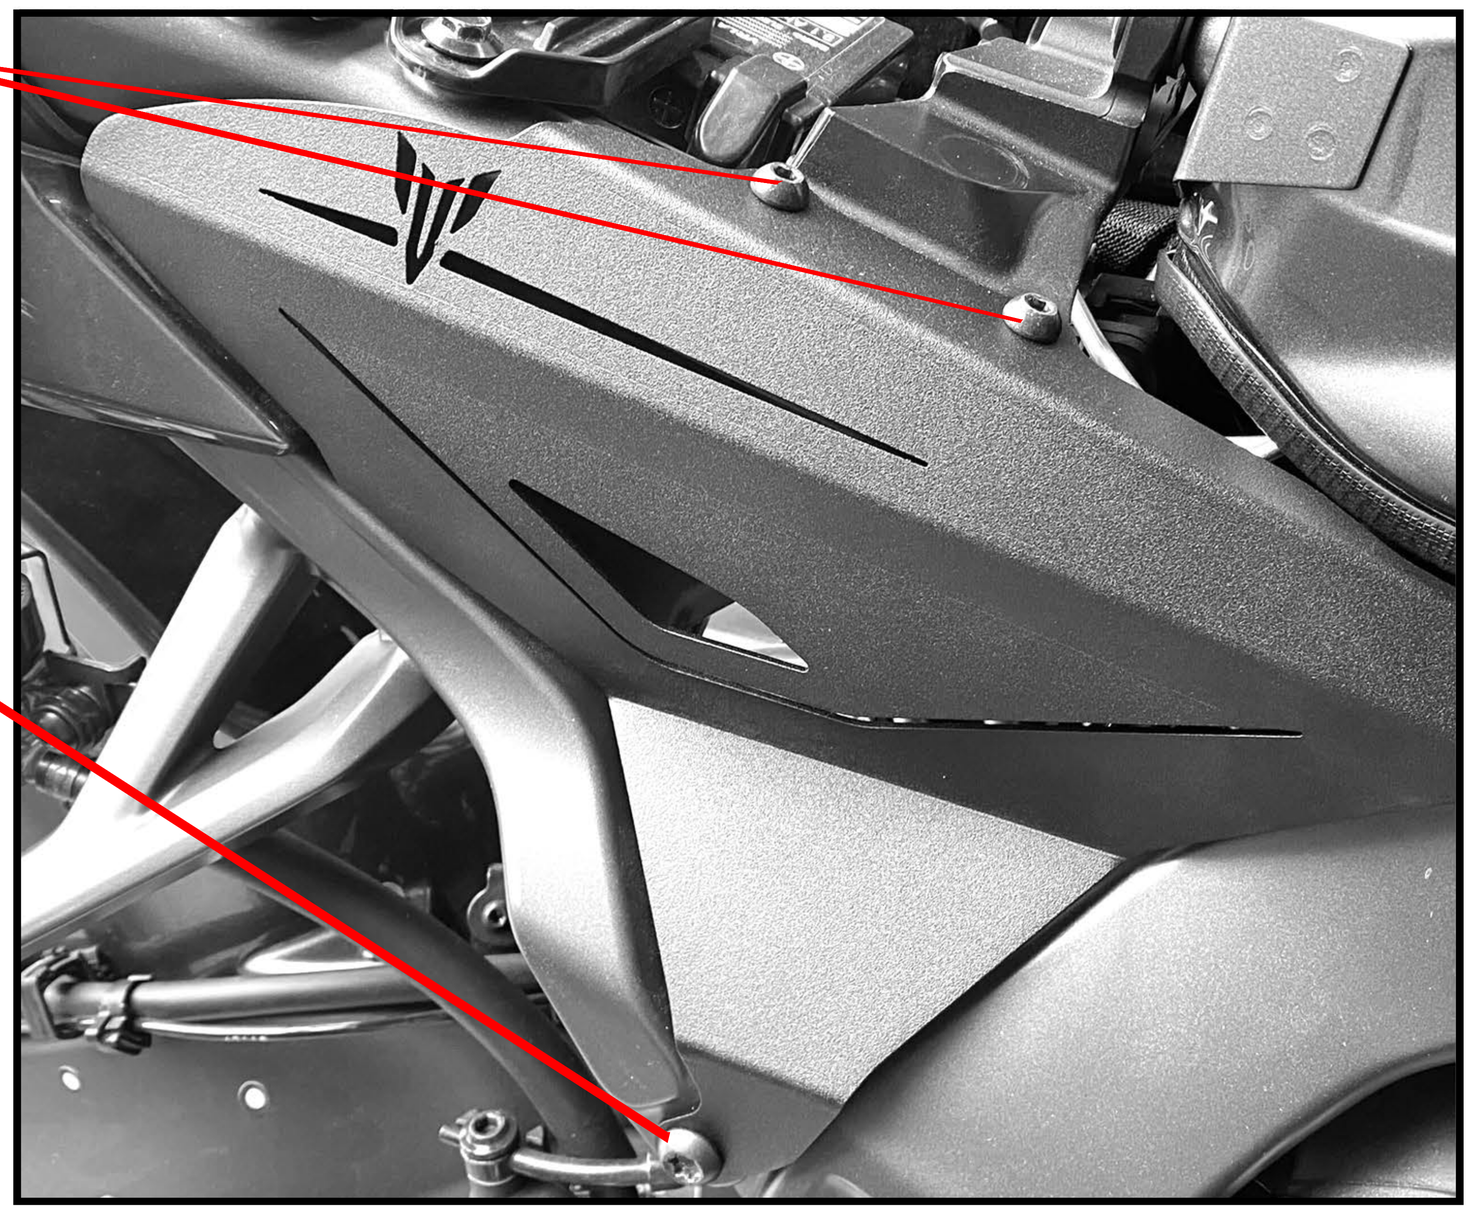

FIG. 1

Please Note:
We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

Follow us on social media and feel free to leave us a review!