

35177

Yamaha XSR900 Horn Guard Fitting Instructions



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!


Kit Includes:

1.	X1	C35177	Horn Guard
2.	X1	CBOLM60035	M6 x 12mm Black Flanged Button Bolt
3.	X1	CFOA0002	Foam Strip (100mm Length)

Assembly Instructions


- Use scissors to trim and attach the adhesive foam strip supplied with this product (shown in **Fig 1**).
- Remove the single bolt holding the horn in position - be sure to support the horn as the bolt is removed in case it drops and damages the motorcycle.
- Refit the horn with the guard incorporated using the replacement bolt supplied (see **Fig 2**).
- Fully tighten all mounting points, check fixings periodically.

Fig 1

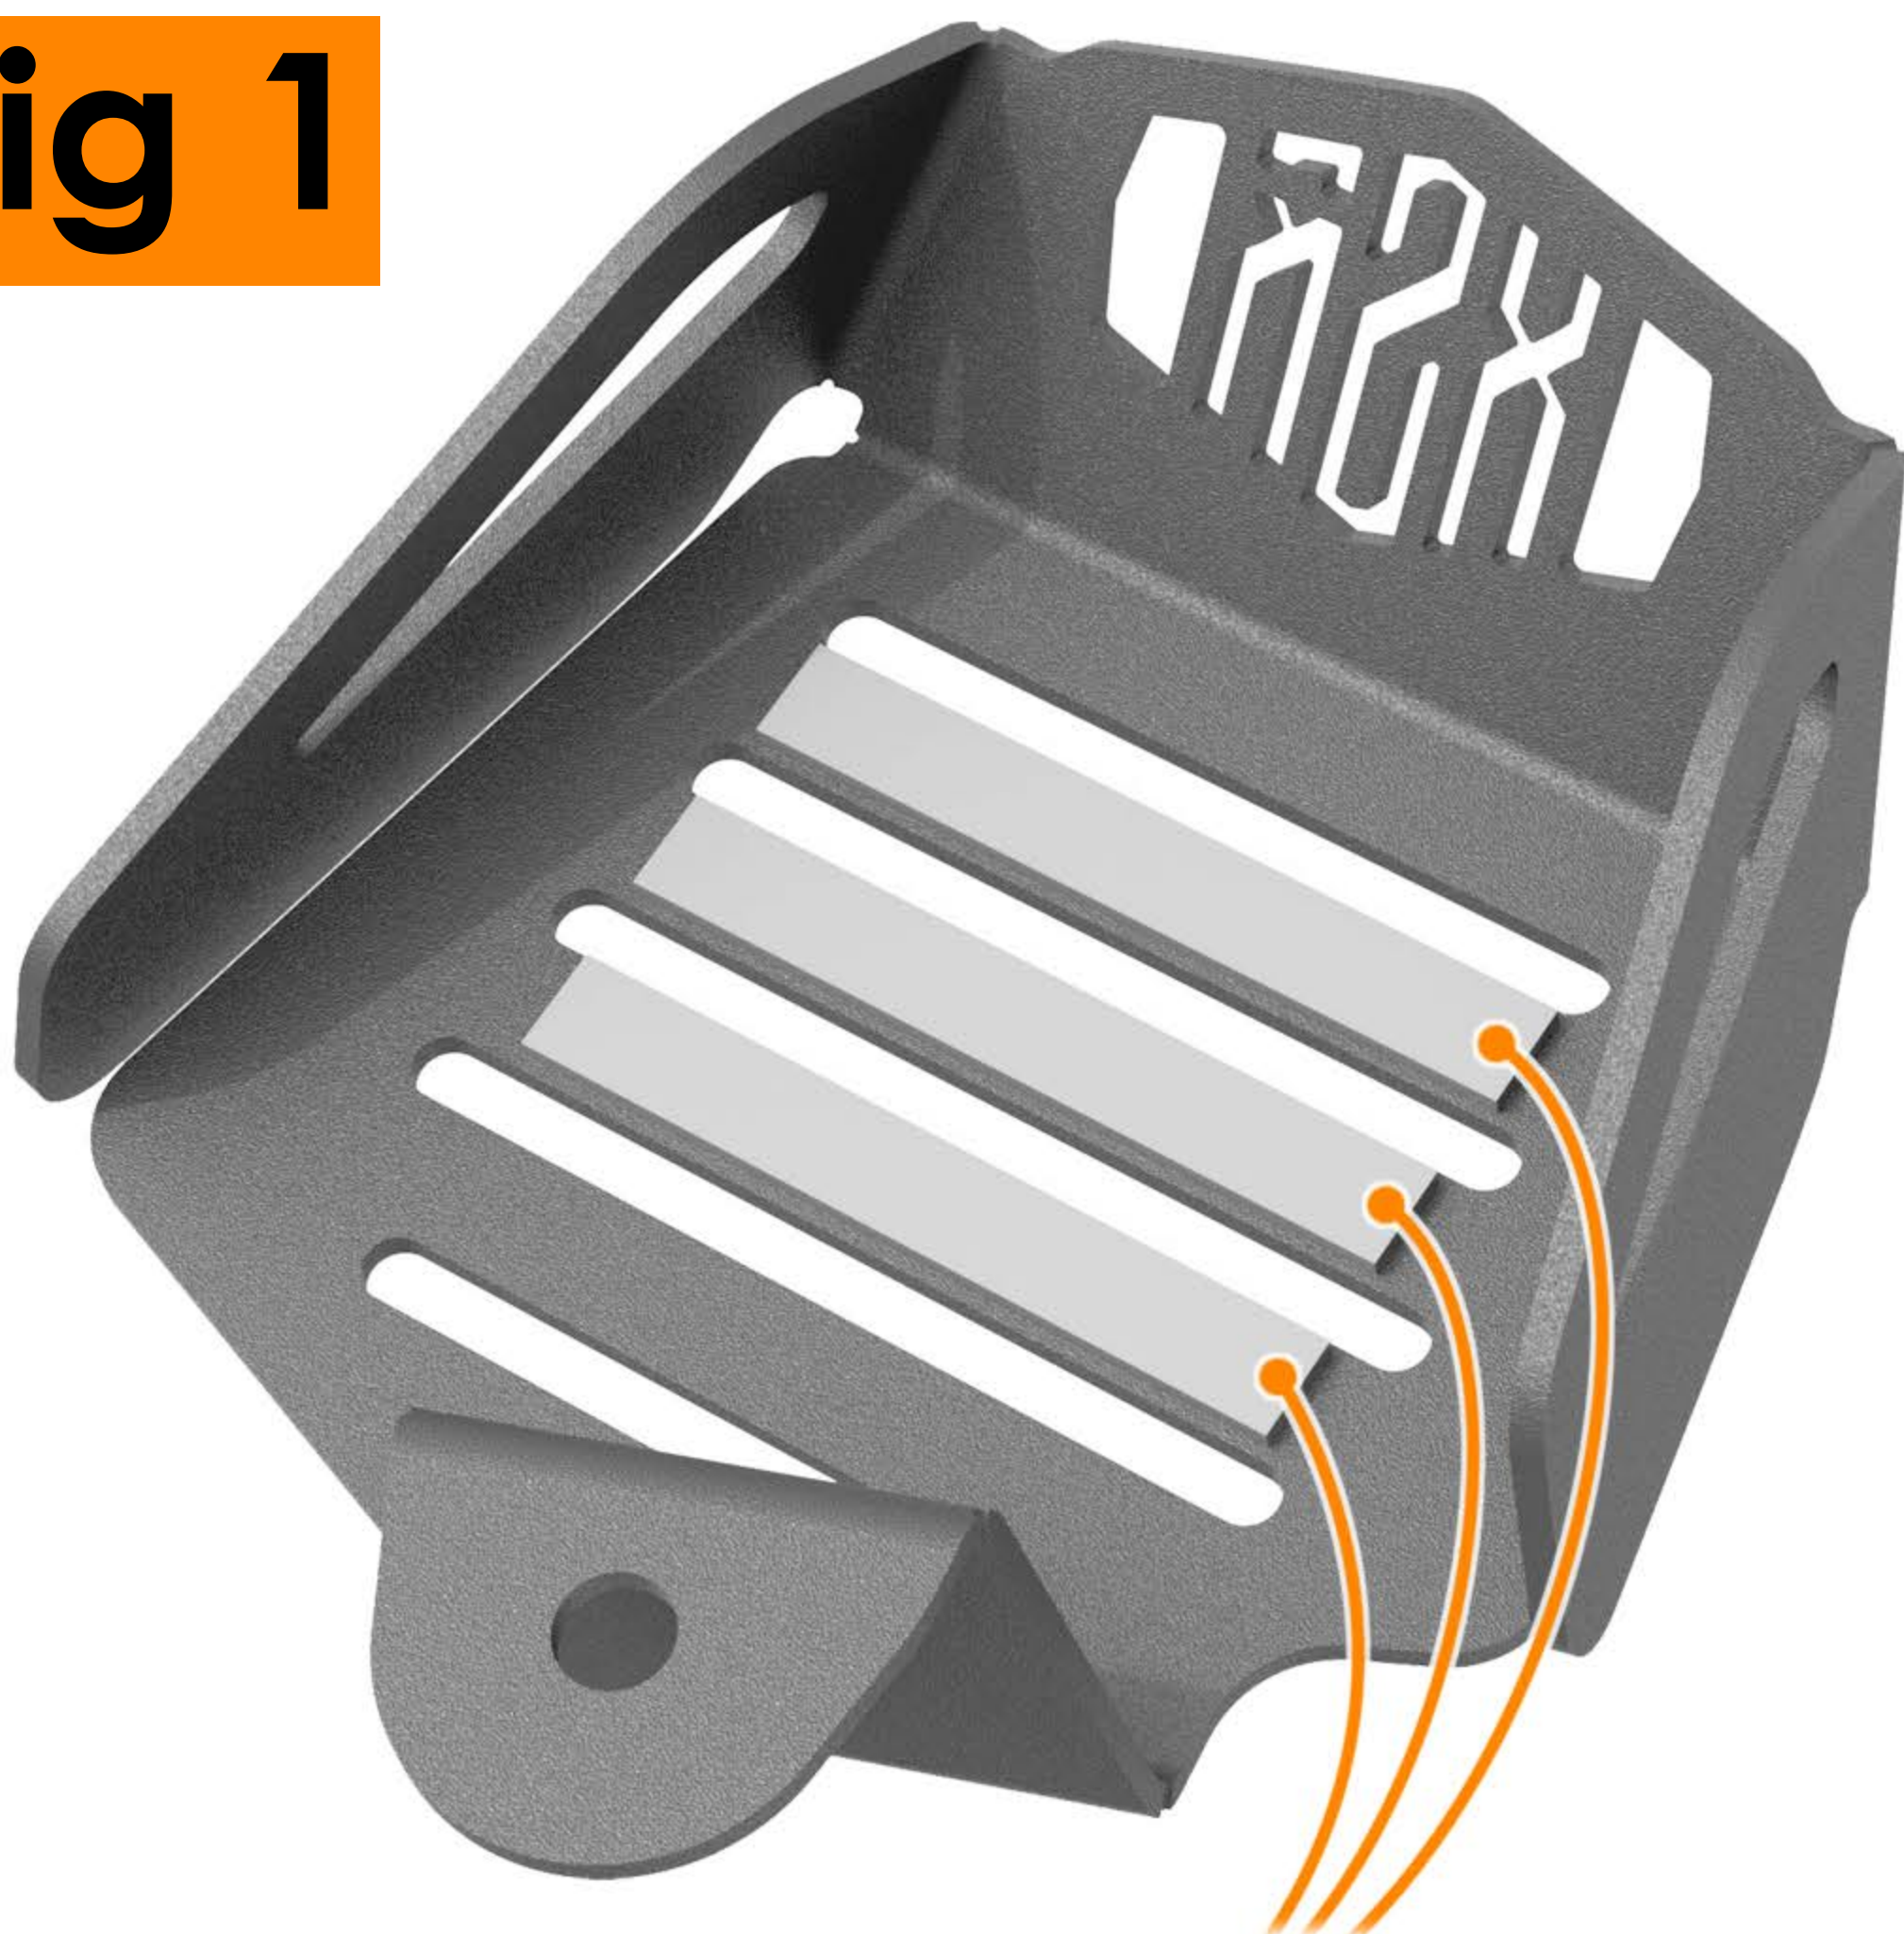


Foam strips trimmed and attached
to the inside of the Horn Guard

Fig 2

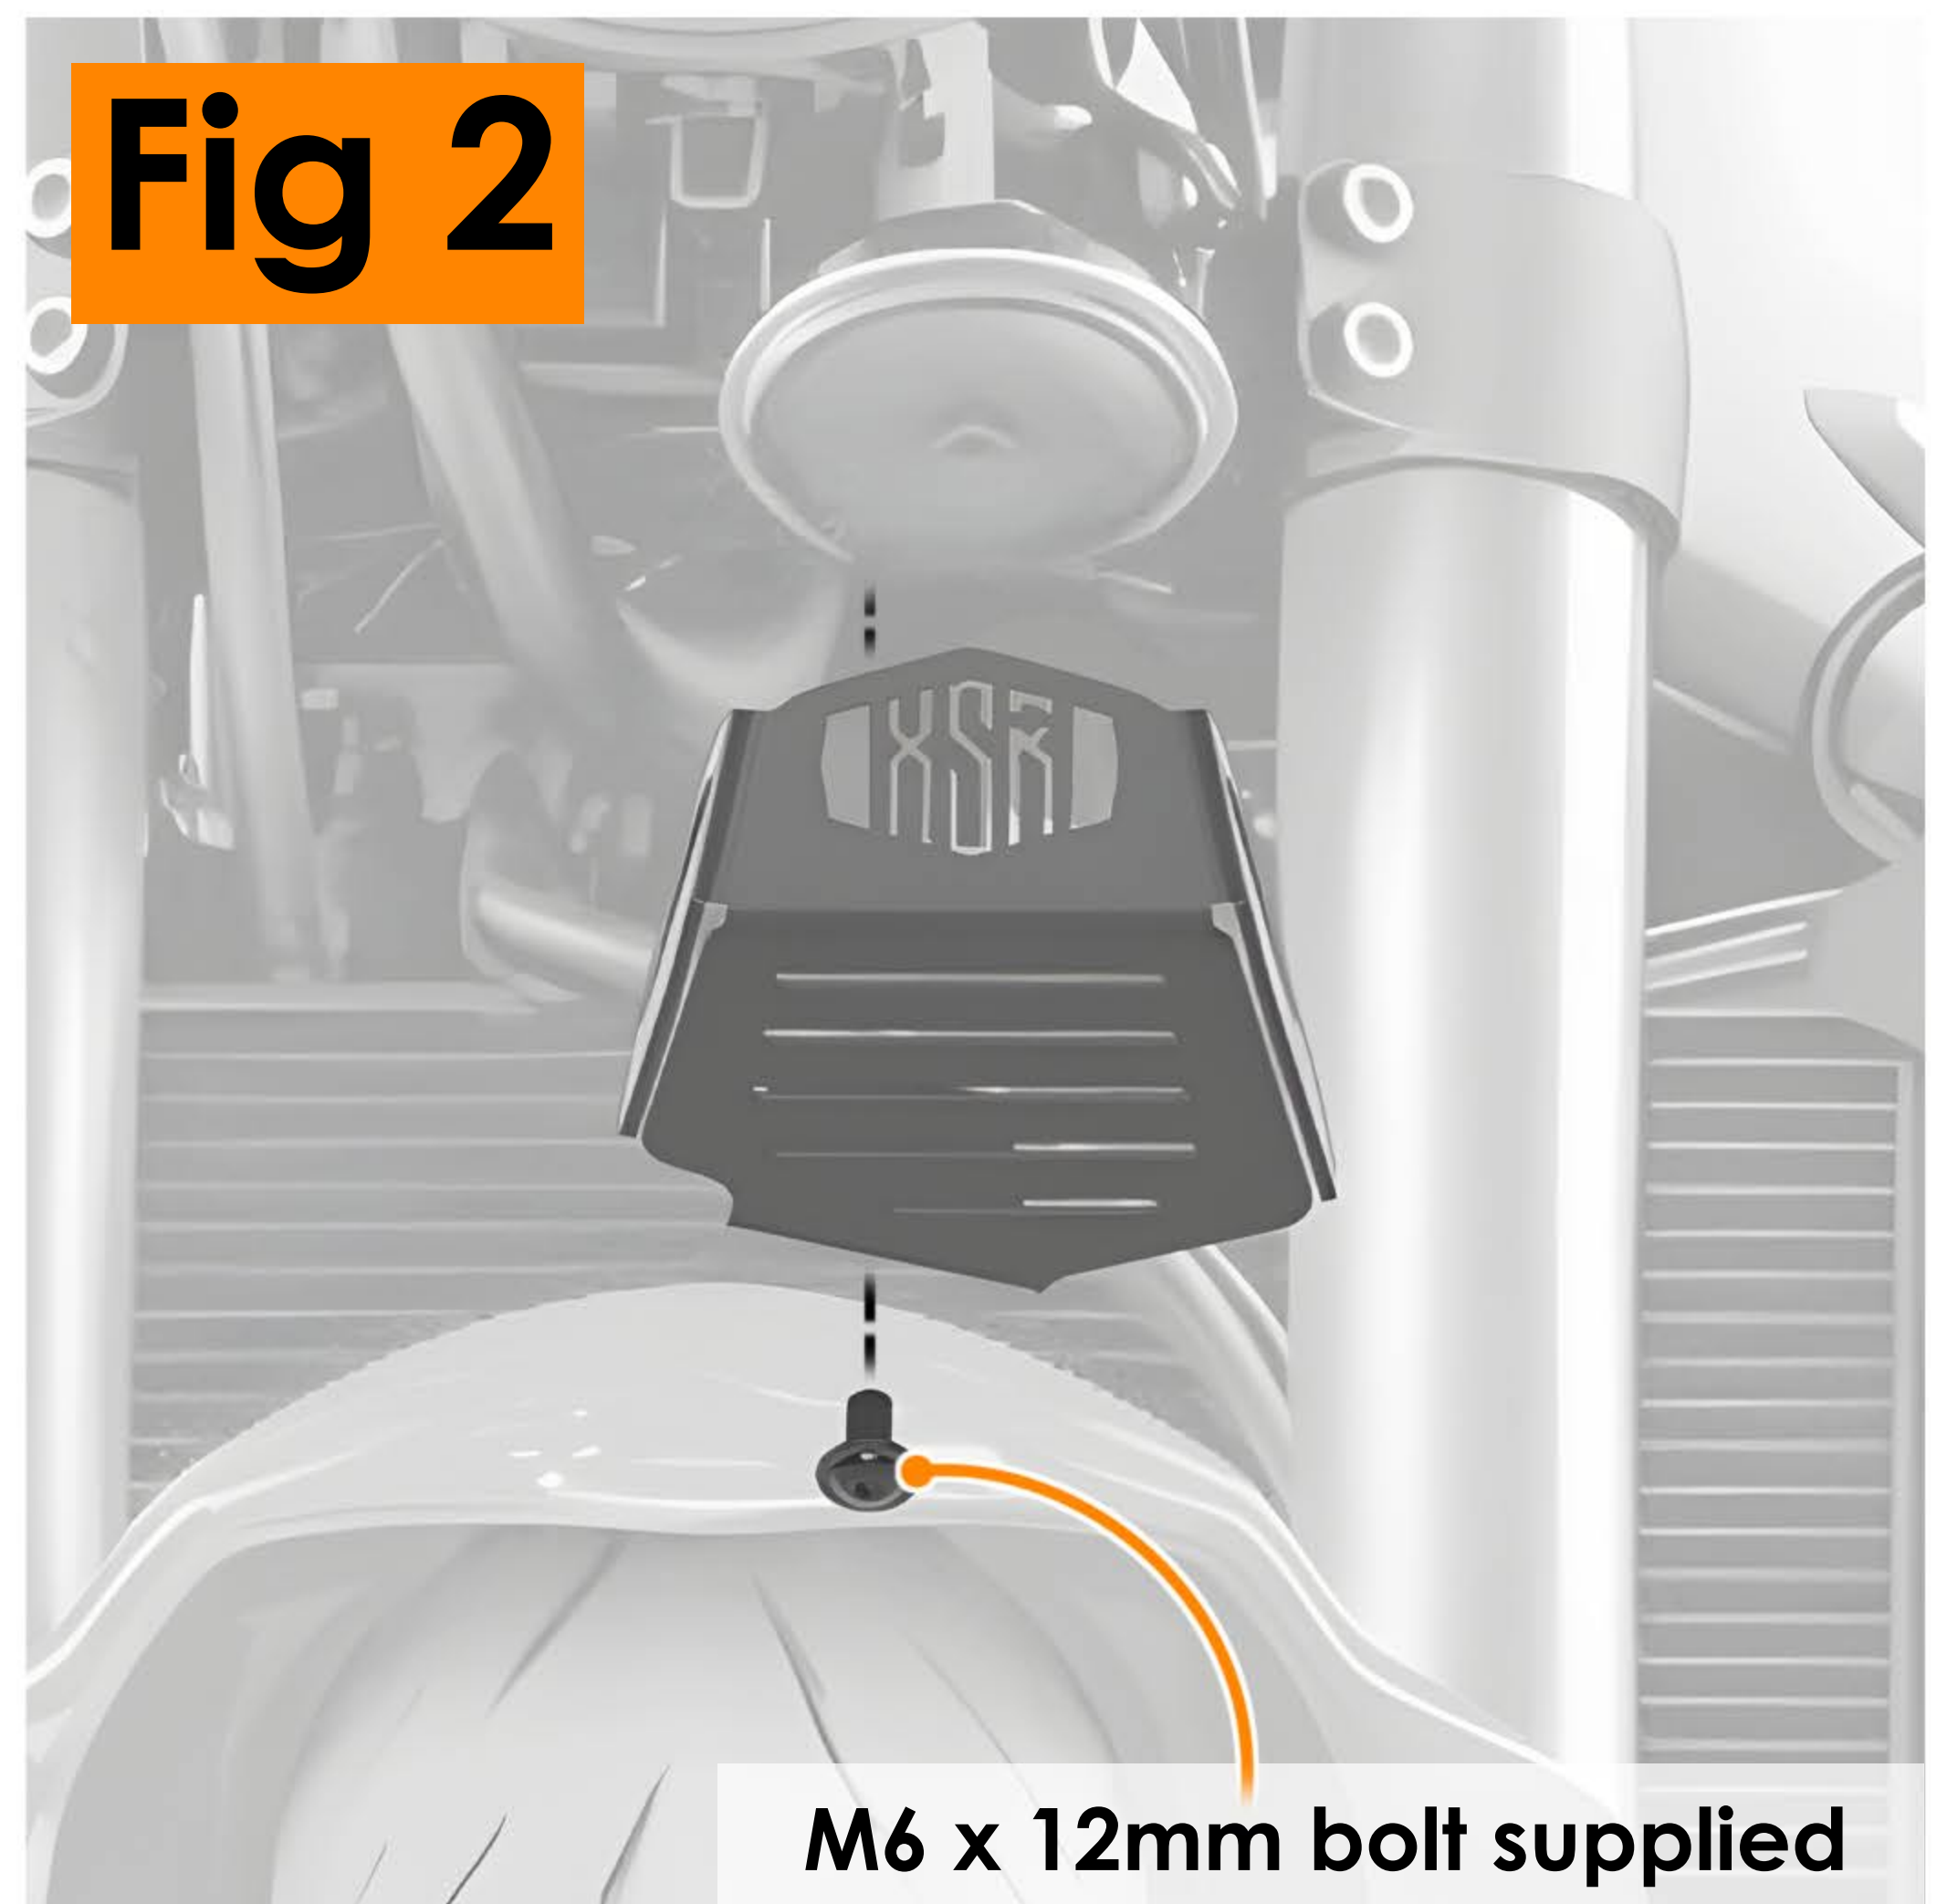

M6 x 12mm bolt supplied

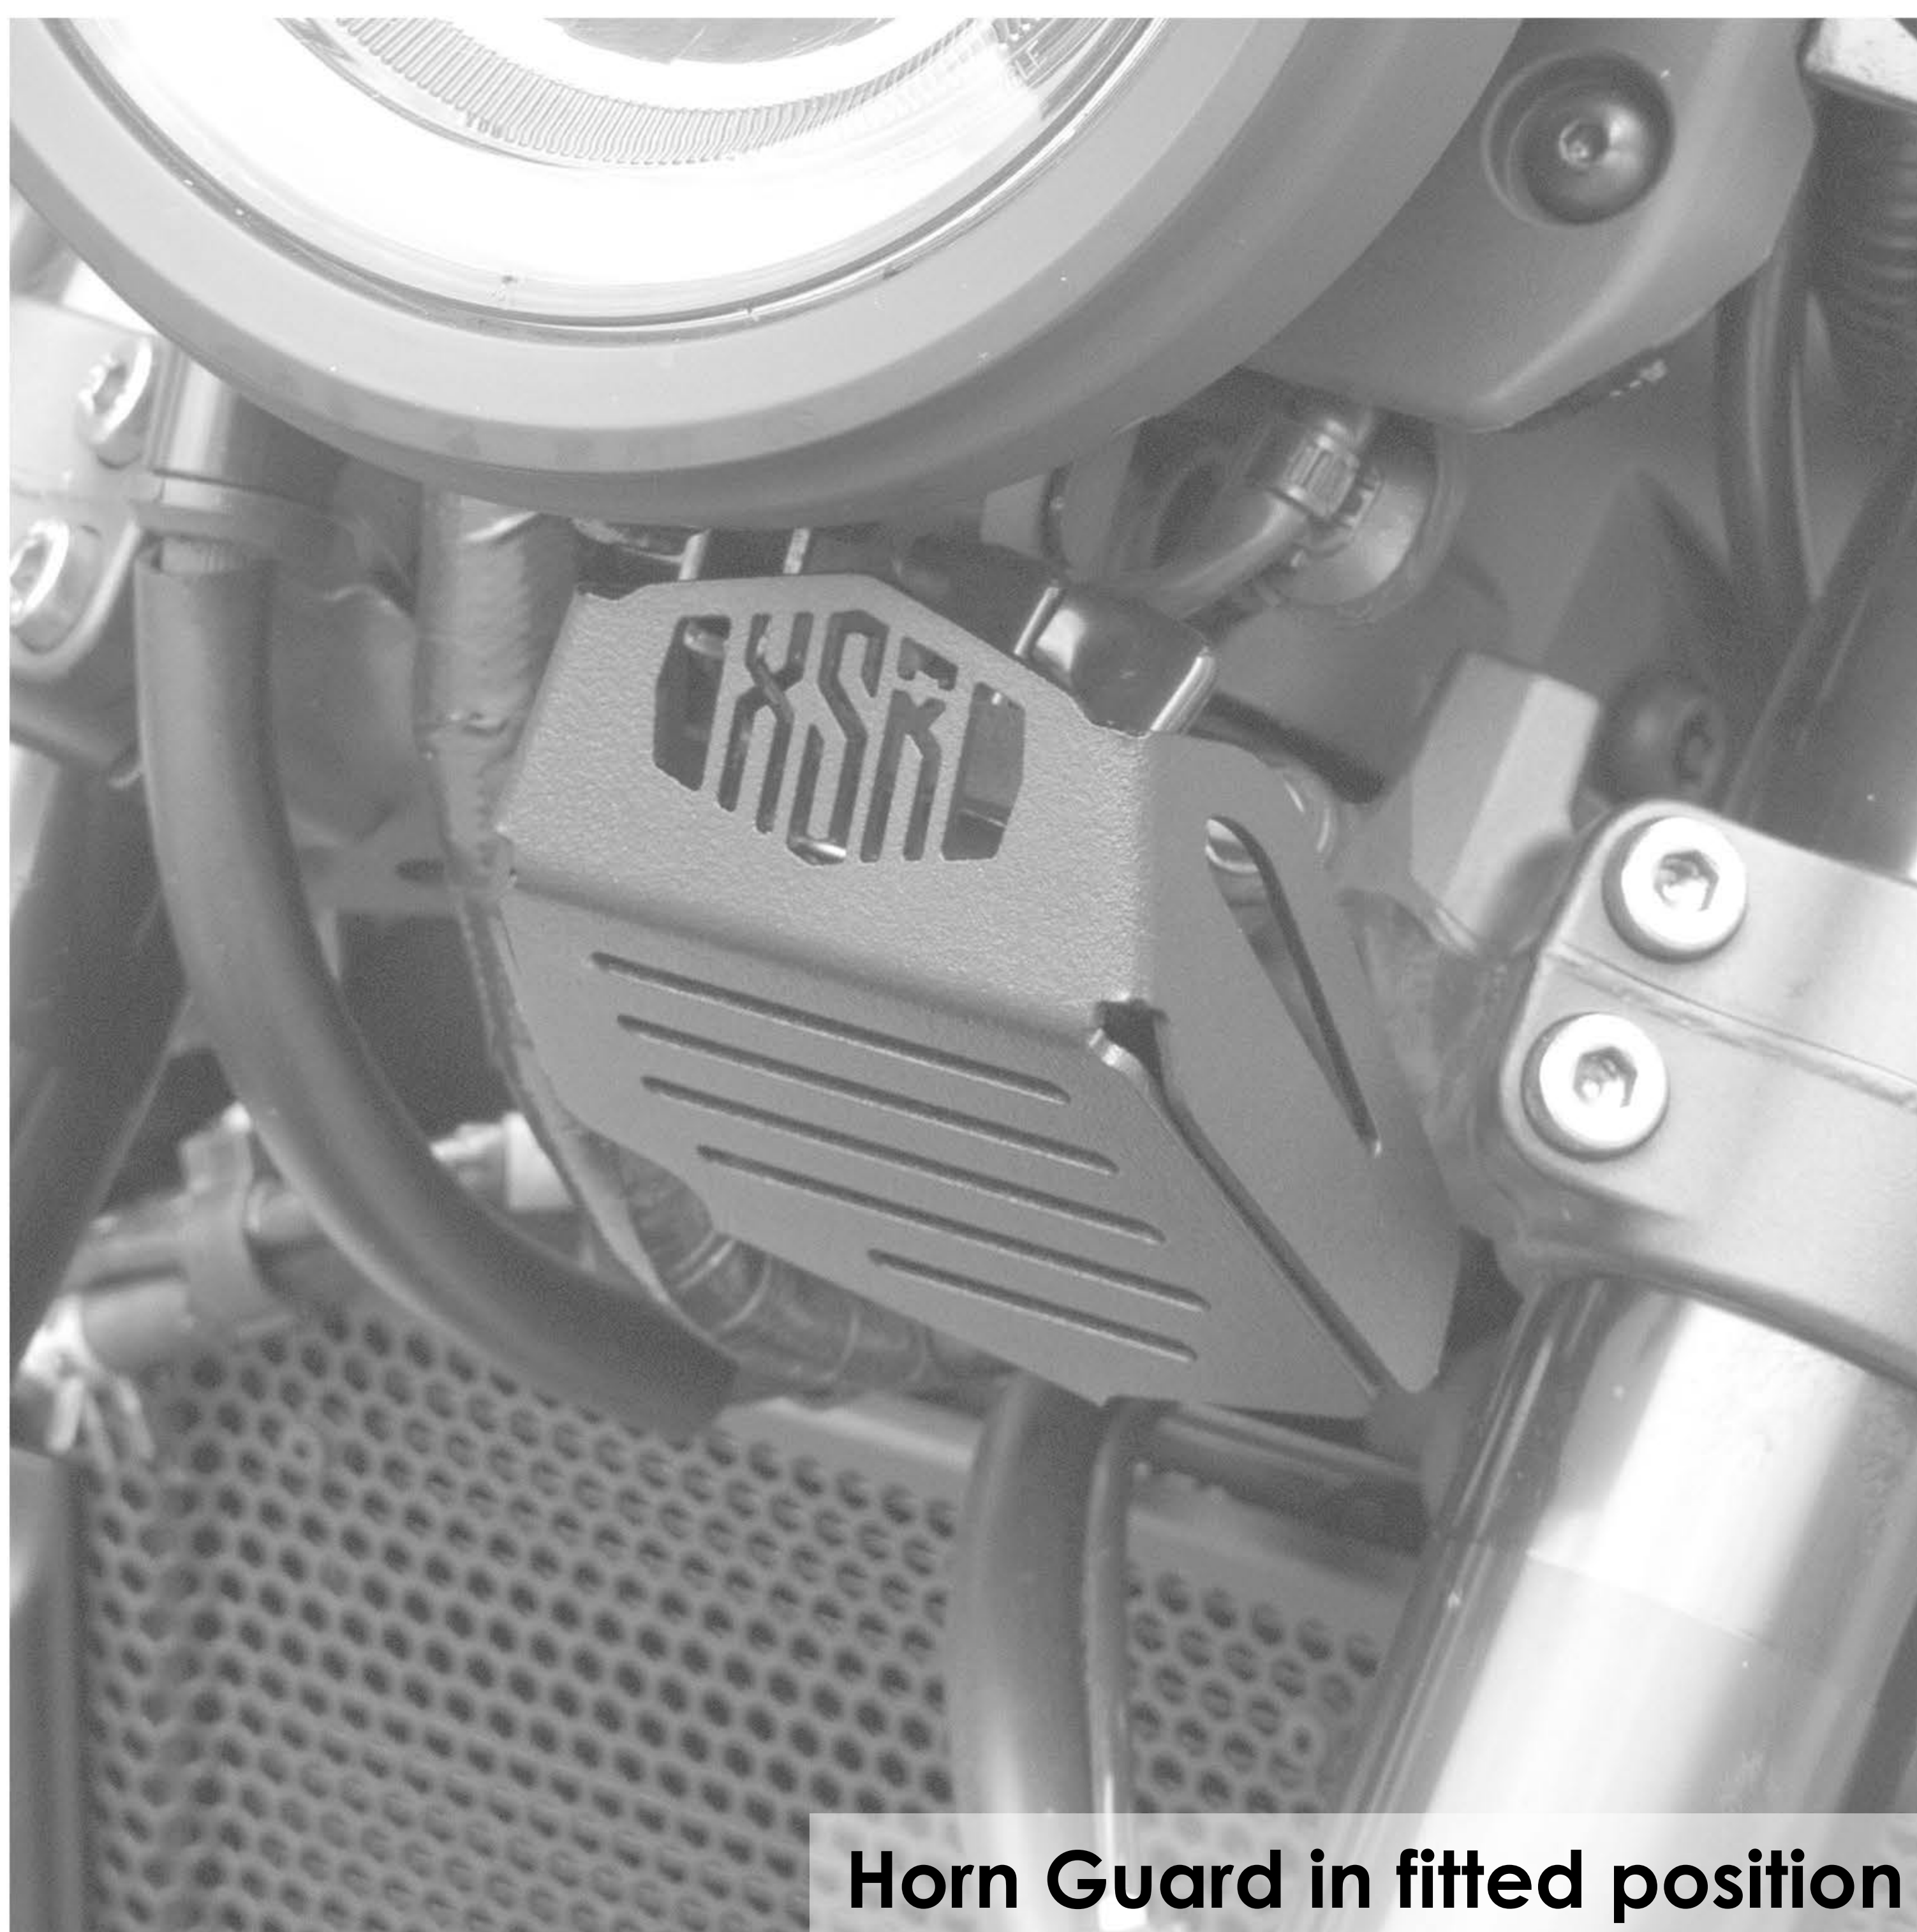

Horn Guard in fitted position