



079750 Royal Enfield Himalayan Hugger Fitting Instructions


Kit includes:

2X	M6 x 12mm Flanged Button Head Bolts	CBOL0123
2X	M6 x 20mm Button Head Bolts	CBOL0252
2X	Rubber Grommets	CGRO0013
2X	Steel Collars	CGRO0016
2X	M6 Black Plastic Washers	CWAS0221

- Remove the chainguard and unclip the brake hose line from the forward two supports. The bolts holding the two brake hose supports are to be replaced (see diagram below).
- Fit the **2X CGRO0013** & **2X CGRO0016** to the right-hand side of the Hugger.
- Now feed the Pyramid Hugger over the rear tyre and into fitting position. For fixing points **A & B** use **2X CBOL0252**, **2X CGRO0013** & **2X CGRO0016** & for fixing points **C & D** use **2X CBOL0123** & **2X CWAS0221**.

Note: The ABS supports are to be refitted on top of the Pyramid Hugger at fixing points **A & B** using the new fixings supplied. It is easier to tighten all bolts loosely before fully tightening for a final fit.

- Be sure to check all fixings periodically.

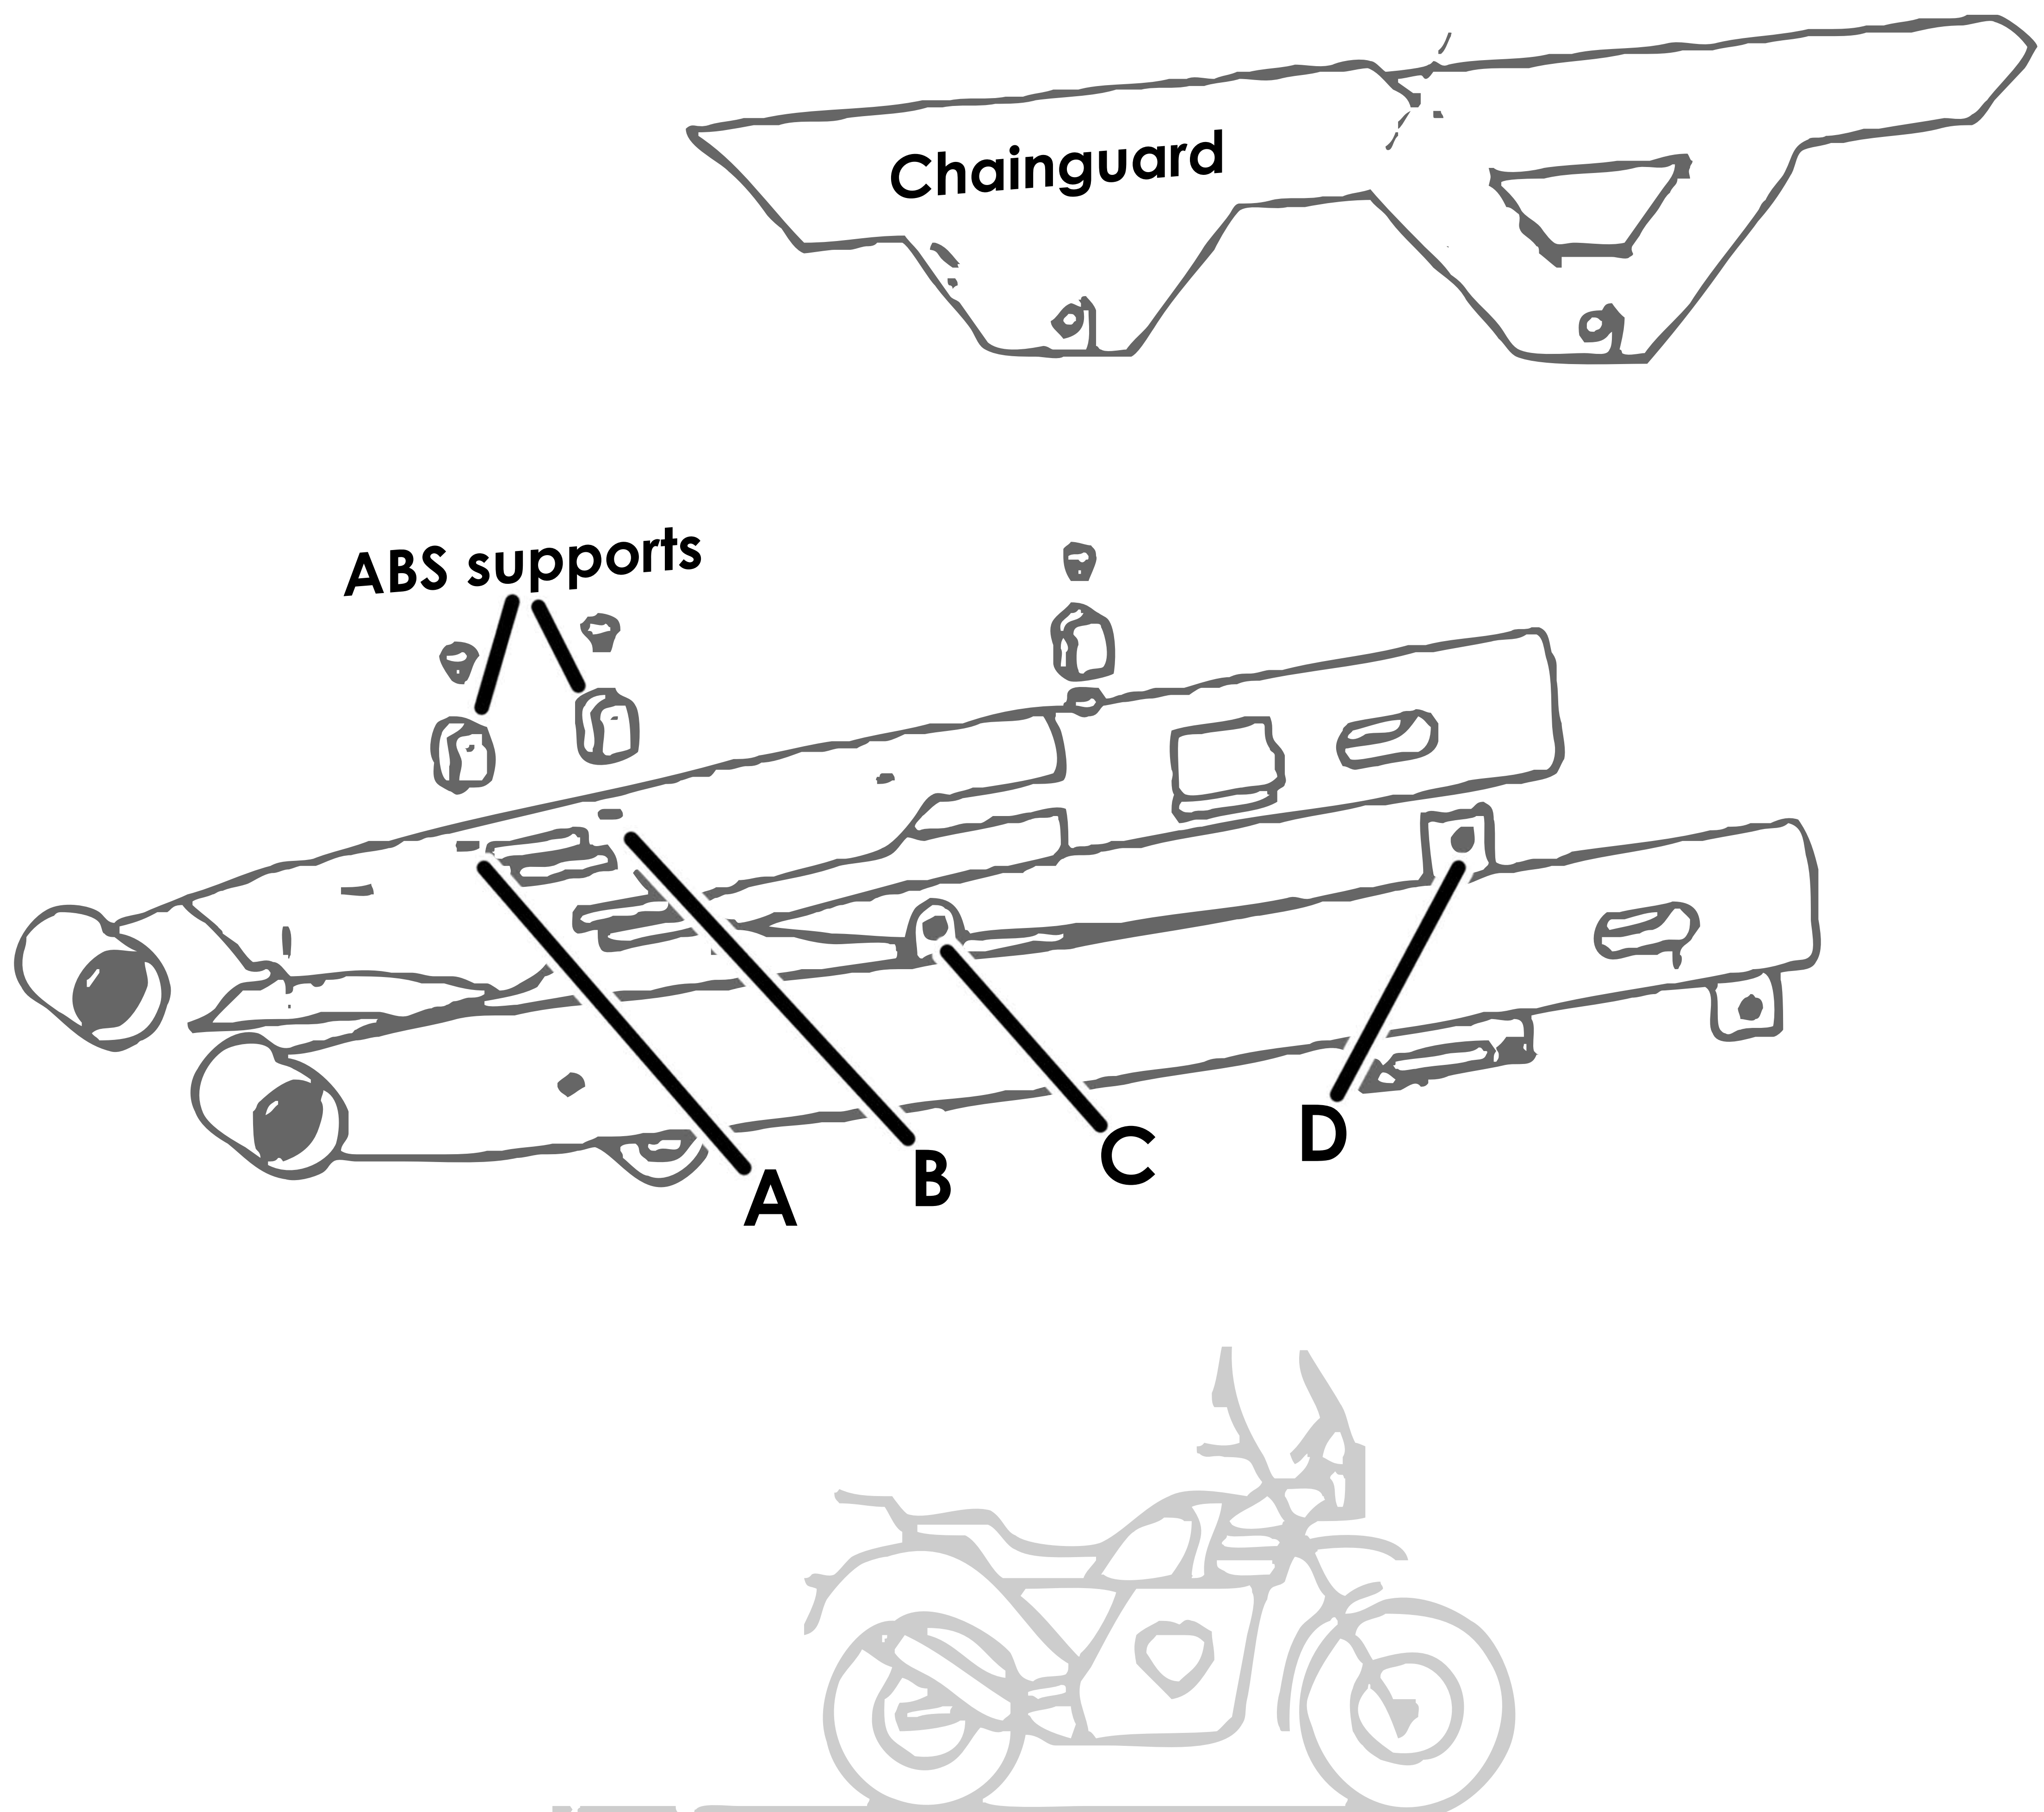

Any questions?
sales@pyramid-plastics.co.uk
01427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

