

38265 Yamaha MT-09 Side Spoilers 2024> Fitting Instructions

Kit Includes:


1.	X2	C38265	L + R Side Spoilers
2.	X2	CTAP0053	Stick-fit Pads

OEM Parts (From the Motorcycle):

3.	X4		OEM Bolt
----	----	--	----------

Assembly Instructions

- Begin by attaching the stick-fit pads provided, as shown in 'FIG. 1'. Use a pair of scissors to trim the pads where necessary to ensure they fit the mounting surface of the wings properly.
- Remove the OEM bolts from the OEM radiator panels.
- Familiarise yourself with the positioning of the Pyramid side spoilers on the radiator panels before removing the backing tape from the stick-fit pads.
- Ensure that all mounting surfaces are clean and free of debris prior to installation.
- Remove the backing tape from the stick-fit pads, and carefully position the Pyramid side spoilers. Align the mounting points precisely before applying any pressure to the pads.
- Reuse the OEM bolts (removed in step 2) to secure the Pyramid side spoilers. Once fully tightened, apply firm pressure to all the stick-fit pads to ensure proper contact and adhesion. See 'FIG 2'.

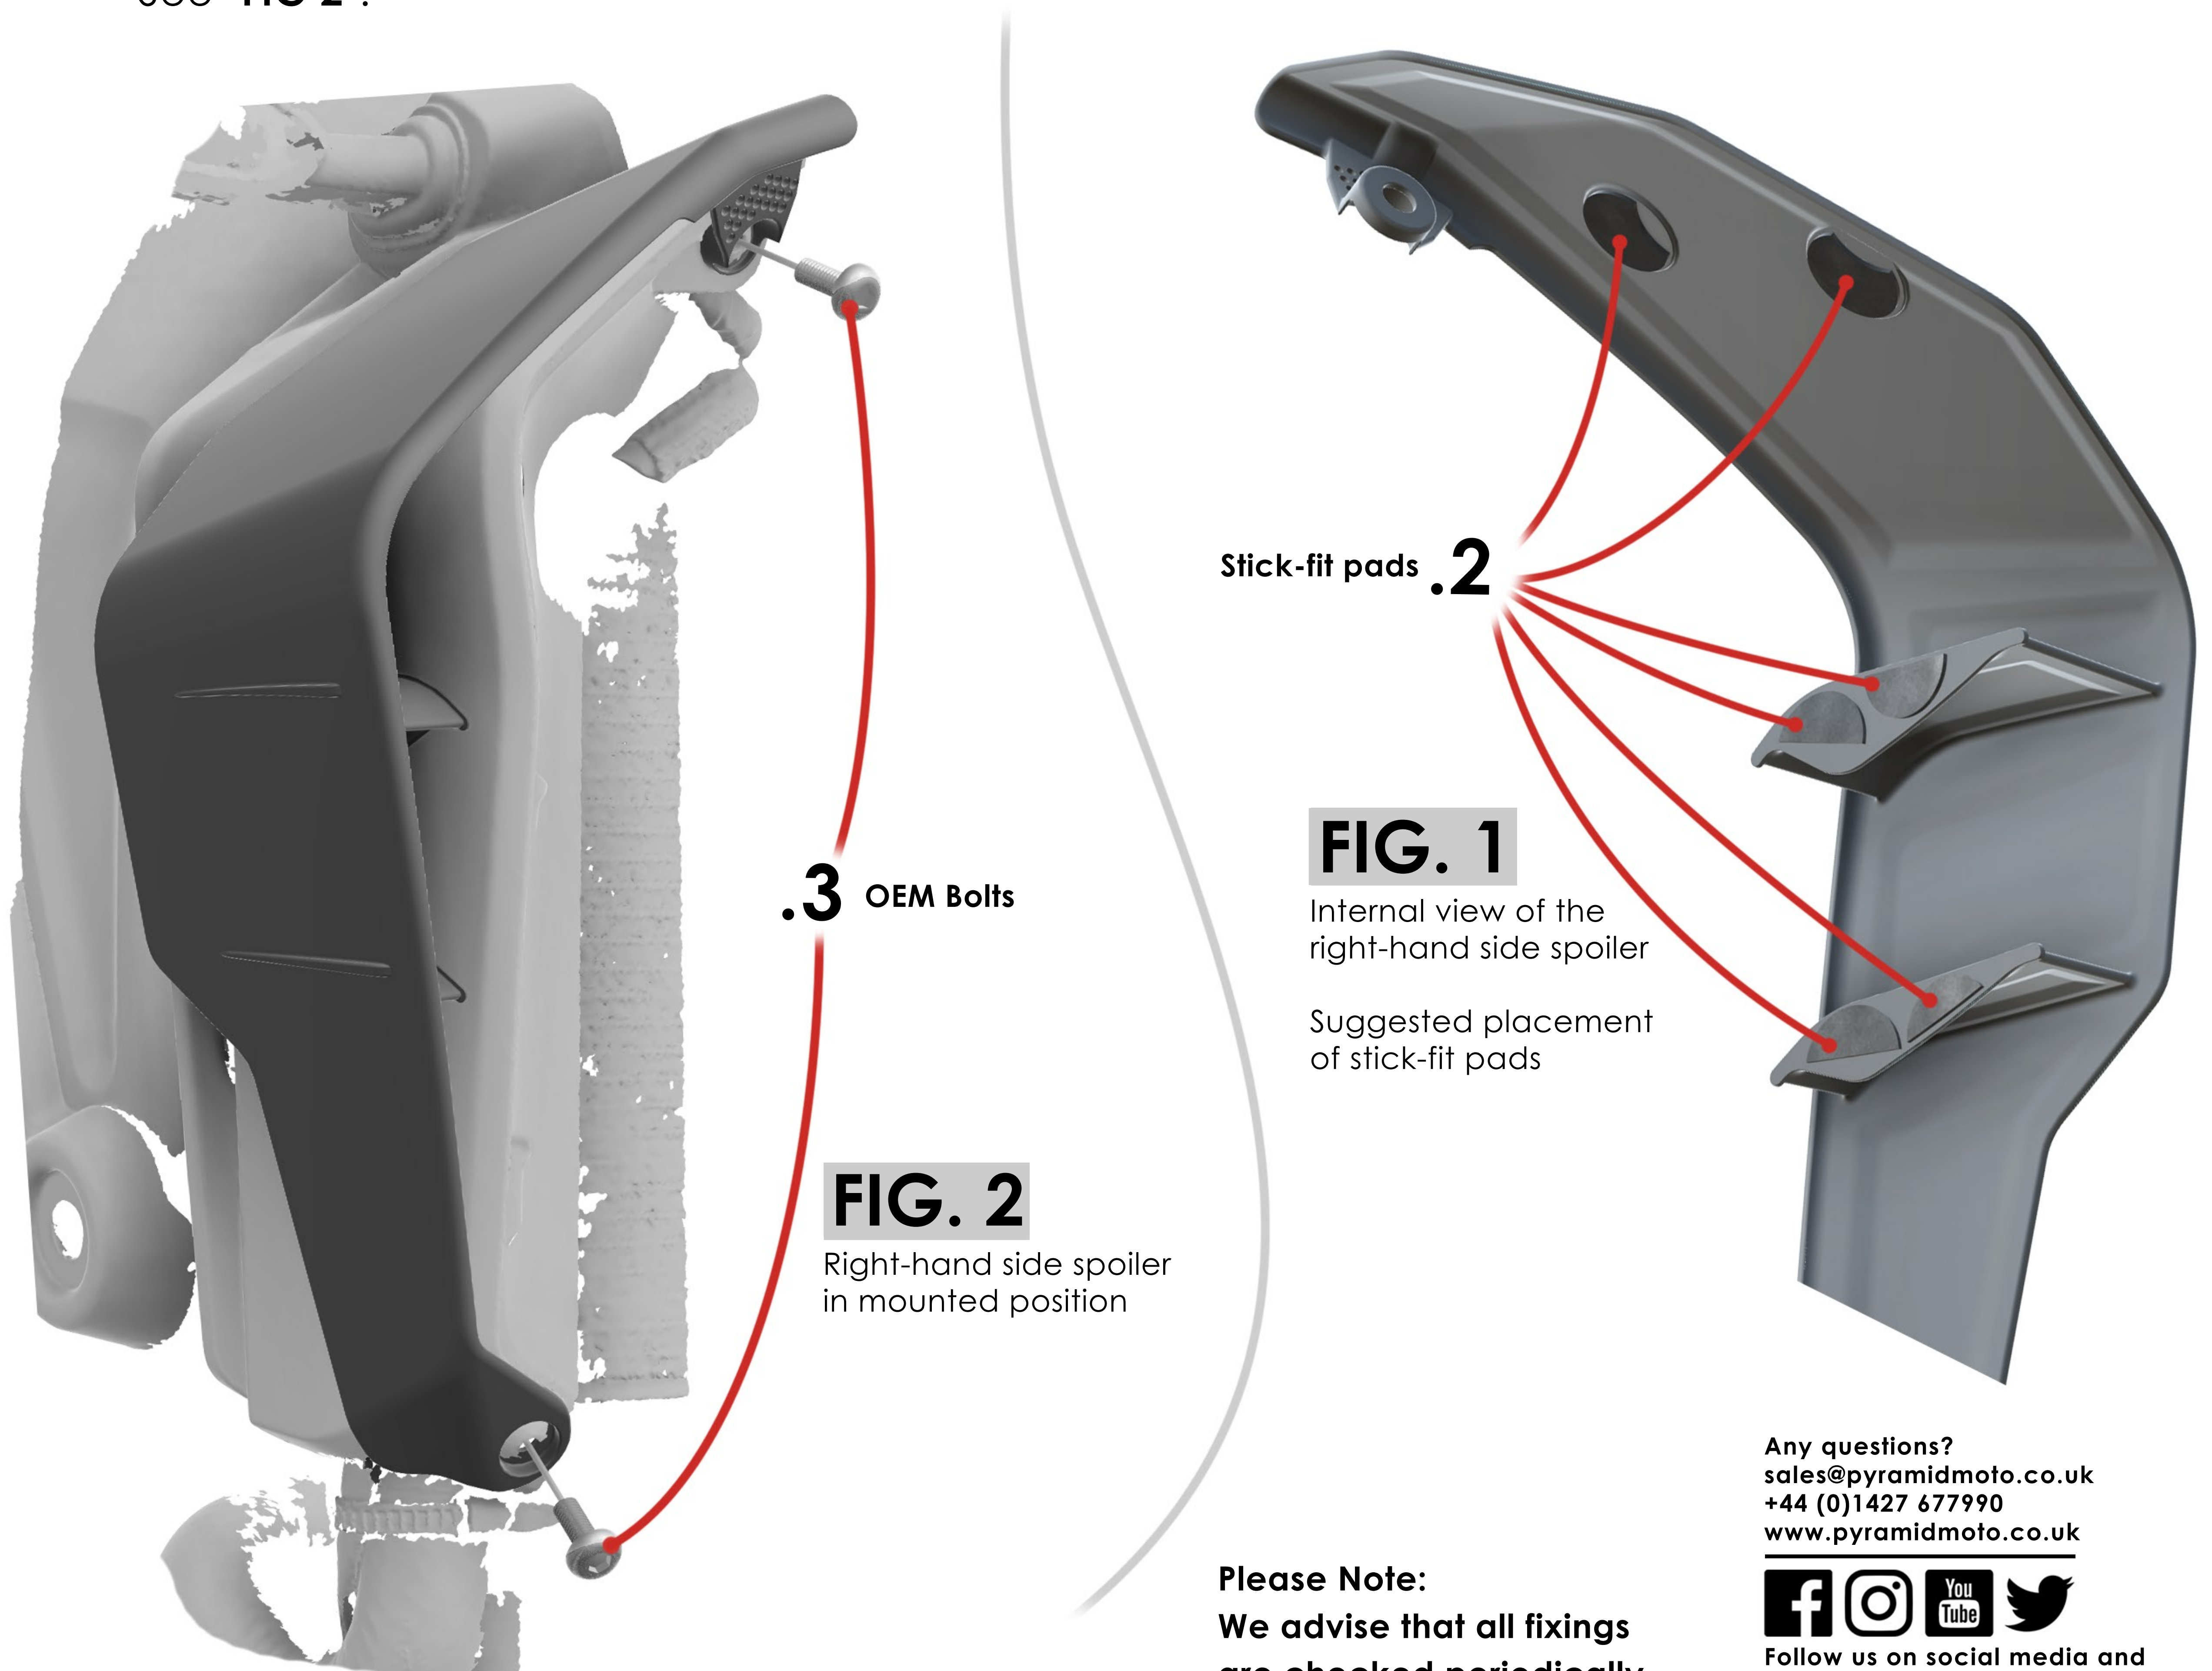

Please Note:
We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!