


Fitment to **BMW R1300-GS** **Kit 1-GS-13**

1 - IMPORTANT: Before beginning ADVance Guard Installation, to assure proper clearance with the TFT and Windshield, it is necessary that handlebar set-back risers be installed first, then the handlebars installed over them. These brands are recommended:

Touratech Offset Bar Risers **Part - # 01-035-5258-0**

Wunderlich ERGO+ Handlebar Risers **Part # WUN-13300-000**

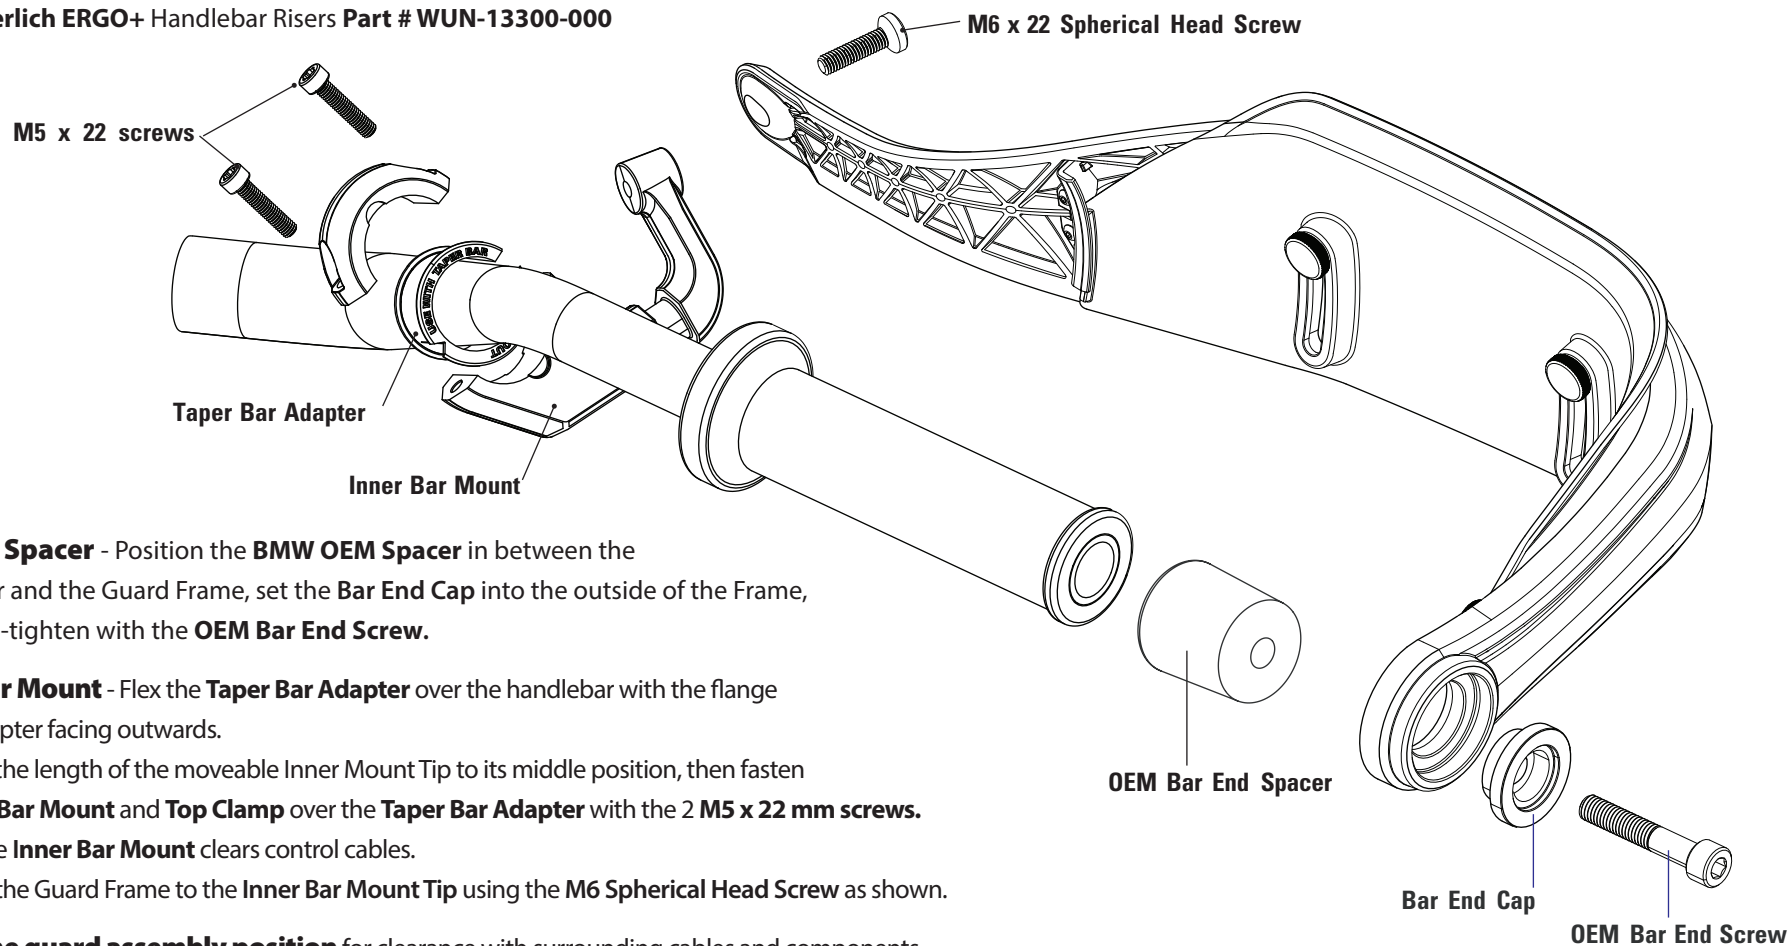

- 2 - Bar End Spacer** - Position the **BMW OEM Spacer** in between the handlebar and the Guard Frame, set the **Bar End Cap** into the outside of the Frame, then semi-tighten with the **OEM Bar End Screw**.
- 3 - Inner Bar Mount** - Flex the **Taper Bar Adapter** over the handlebar with the flange of the Adapter facing outwards.
Adjust the length of the moveable Inner Mount Tip to its middle position, then fasten the **Inner Bar Mount** and **Top Clamp** over the **Taper Bar Adapter** with the 2 **M5 x 22 mm screws**.
Be sure the **Inner Bar Mount** clears control cables.
Fasten the Guard Frame to the **Inner Bar Mount Tip** using the **M6 Spherical Head Screw** as shown.
- 4 - Check the guard assembly position** for clearance with surrounding cables and components, and adjust the Guard's position as needed - then **tighten all fasteners**.

BEFORE USE: Always **check throttle for free movement** & proper function.